

INSTRUCTION MANUAL

A preliminary draft of the User's Manual follows this page.

Text on the following page will be added to the manual.

FCC Notice To Users

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



MOTOMANUAL

 
C168

GSM

English

HELLOMOTO

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola C168 wireless phone.

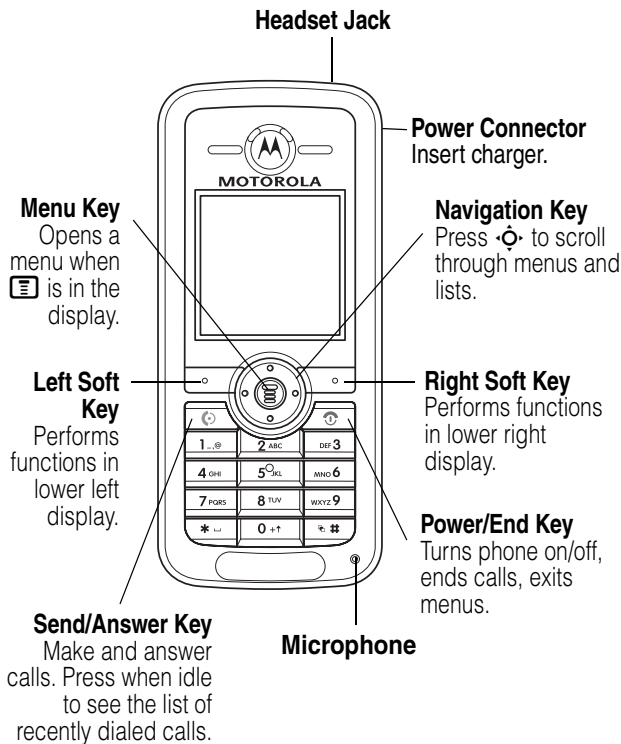

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States for hearing impaired)
1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

www.hellomoto.com

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2005.

Manual Number: UGXXXX
Cover Number: UGCGXXXX

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



the ground

Don't drop your phone.

feature locator

main menu



Phonebook



Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Erase All
- Call Time
- Call Cost
- GPRS Data Counter
- GPRS Connection Time



Messages

- Create Message
- Message Inbox
- Outbox
- Drafts
- Voicemail
- Browser Msgs
- Quick Notes
- MMS Templates



Tools

- Calculator
- Calendar
- Shortcuts
- Chat
- SIM Tool Kit *
- Lantern *



Games



Web Access

- Browser
- Web Shortcuts
- Go to URL
- Web Sessions
- Web Settings



Multimedia

- Pictures
- Sounds
- FM Radio



Alarm Clock



Settings

(see next page)

* optional features

This is the standard main menu layout. Menu organization and feature names may vary on different phones. Your phone may not have all of these features.

Settings Menu



Personalize

- Home Screen
- Color Style
- Wallpaper
- Screen Saver
- Quick Dial



Ring Styles

- Style
- (Style) Detail



Call Forward

- When Busy
- No Reply
- Not Reachable
- Not Available
- All Calls
- Cancel All



In-Call Setup

- In-Call Timer
- Call Cost Setup
- Show Number
- Call Waiting
- Anykey Answer
- Session Information
- Auto Redial



Headset & Car Settings



Initial Setup

- Time and Date
- Backlight
- Language
- Contrast
- Input Mode
- Connection Indication
- Master Reset
- Master Clear



Auto power off



Phone Status

- My Tel. Number
- Active Line
- Battery Meter



Security

- Phone Lock
- Lock Keypad
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords



Network

- New Network
- Network Setup
- Available Networks
- Service Tone



Lantern

* optional features

contents

Use and Care.	3	basics.	19
European Union Directives		display.	19
Conformance Statement 9		menus.	22
essentials	10	text entry	25
about this guide	10	navigation key.	34
SIM card	10	codes and passwords.	34
battery.	11	locking and unlocking	
battery charging	12	your phone	35
Battery tips	12	phonebook	36
turning it on and off.	13	locking the keypad	37
making a call	14	customize	38
answering a call	14	storing your name and	
adjusting the volume	15	number	38
main attractions	16	time and date	38
sending a multimedia		ring style.	38
message.	16	answer options.	39
receiving a multimedia		wallpaper	39
message.	18	screen saver	40
		display appearance	41

calls	43
active line	43
redial	43
automatic redial.	44
caller ID	44
turn off a call alert	45
emergency calls	45
international calls.	45
recent calls	46
returning calls	47
notepad	47
speed dialing	48
1-touch dialing	48
voicemail	48
call waiting	50
putting a call on hold	50
transferring a call.	50
other features	52
Specific Absorption Rate	
Data	66
index	68

 
European Union Directives Conformance Statement



[France Only]

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

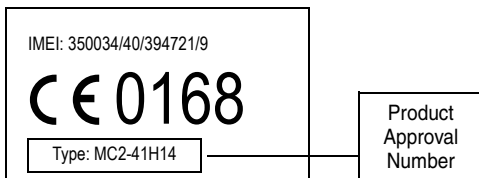

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.


essentials

about this guide

This guide shows how to locate a menu feature as follows:

Find it: Press  > **Recent Calls** > **Dialed Calls**

This example shows that, from the Home Screen, you press  to open the menu, highlight and select **Recent Calls**, and then highlight and select **Dialed Calls**.

Press  to scroll to and highlight a menu feature. Press **SELECT** to select the highlighted menu feature.



symbols	
	This means a feature depends on the network or subscription and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.

SIM card

Your *Subscriber Identity Module* (SIM) card contains your phone number, service details, and phonebook/message memory.

installing your SIM card

 
 
Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

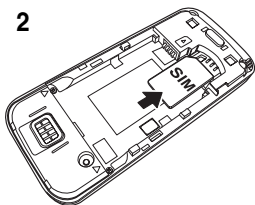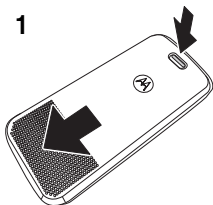

battery


battery installation

  We recommend storing batteries in their protective cases.

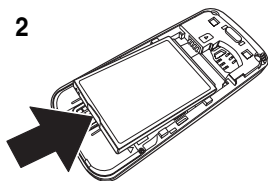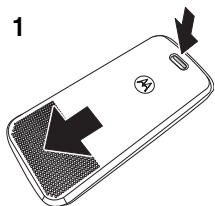

battery charging

 New batteries are shipped partially charged. Before you can use your phone, install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

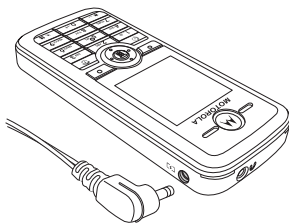

Plug the travel charger into your phone and an electrical outlet. Your phone displays **Charge Complete** when finished.

Tip: You can safely leave the travel charger connected to your phone after charging is complete. This will not damage the battery.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.



- When storing your battery, keep it uncharged in a cool, dark place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.




Contact your local recycling center for proper battery disposal.

 
Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the "Safety and General Information" section included in the gray-edged pages at the back of this guide.

turning it on and off

Press and hold  to turn on the phone. If prompted, enter your SIM card PIN code and press **OK** to unlock the SIM card.

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

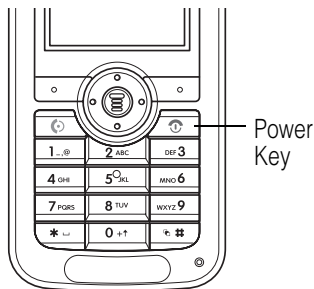

If necessary, enter your 4-digit unlock code and press **OK** to unlock the phone.

Note: The phone unlock code can be 4 to 8 digits long. The default unlock code is 1234 (default code may be different in some regions – contact customer support).

making a call


- 1 Press **1** ~ **0** to dial the phone number.
- 2 Press **☎** to make the call.
- 3 Press **☎** to end the call when you are finished.

 
answering a call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

- 1 Press **☎** or **ANSWER** to answer the call.
- 2 Press **☎** to end the call when you are finished.

adjusting the volume

Press  up to increase the volume in the earpiece or down to decrease the volume during a call.

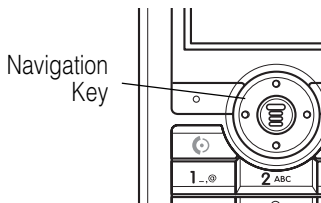


main attractions








You can do much more with your phone than make and receive calls! This section describes some of your phone's special features.









sending a multimedia message



A *Multimedia Messaging Service* (MMS) message contains one or more pages with text and embedded media objects (pictures or sounds). You can send the multimedia message to other wireless phones with MMS and to email addresses.


Find it: Press  > **Messages** > **Create Message** > **New Multimedia Msg**

- 1 Press  ~  to enter page text.
- 2 Press  to open the **MMS Menu**.
- 3 Press  to scroll to **Insert Object**.
- 4 Press **SELECT** to display a list of items you can insert.
- 5 Press  to scroll to **Multimedia**, **Quick Note**, or **Number**.
- 6 Press **SELECT** to select the file type.
- 7 Press  to highlight the item you want.
- 8 Press **SELECT** to insert the item. To add another page to the message, continue to the next step. To send the message, go to step 15.
- 9 Press  to open the **MMS Menu** to add a new page.

- 10 Press  to scroll to **Add New Page**.
- 11 **SELECT** to add a new page to the message. Repeat steps 1 through 8 to enter contents for the new page.
- 12 Press  to open the **MMS Menu** to set the subject.
- 13 Press  to scroll to **Set Subject**.
- 14 Press  ~  to enter the subject text.
- 15 Press **OK** to select the message recipient.
- 16 Press  to scroll to the recipient's number.
- 17 Press **MARK** to mark the number. Repeat steps 12 and 13 to mark additional numbers or go to the next step.
- 18 Press  **OK** to view all recipients.
- 19 Press  to view additional options:
 - New Number:** Enter a number that is not in the phonebook.
 - New E-mail Address:** Add an e-mail address.
 - Send:** Send the message.
 - Remove User:** Remove the selected recipient from the list.
 - Remove All:** Remove all recipients.
 - Sending Options:** Set the sending options.
 - From Phonebook:** Select the recipient from the phonebook.
- 20 Press **SEND** to send multimedia message.

receiving a multimedia message



When you receive a multimedia message or letter, your phone displays the  indicator and **New Message**, and sounds an alert.

Press **READ** to open the message.

Multimedia messages that you receive can contain different media objects:


- Photos and animations are displayed as you read the message.
- A sound file begins playing when its page is displayed.



basics

 See page 1 for a basic phone diagram.

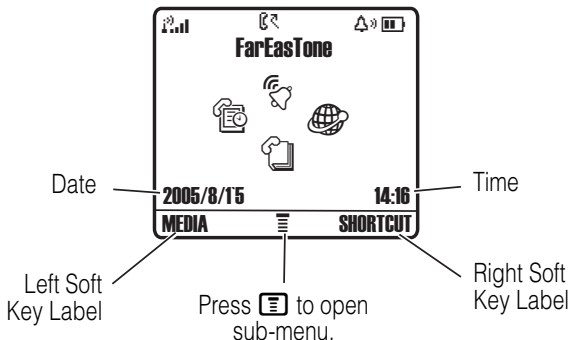

display

The *home screen* displays when you are *not* on a call or using the menu. You must be in the home screen to dial a phone number.



Press the navigation key  left, right, up, or down to select one of the menu feature icons. If you select a menu icon by mistake, press  to return to the home screen.

Note: Your home screen may look different from the display shown in the previous illustration. For example, your service provider may hide the menu icons to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide the menu icons, see page 56.

 
When the  is displayed, you can press the menu key  to enter the main menu.


 








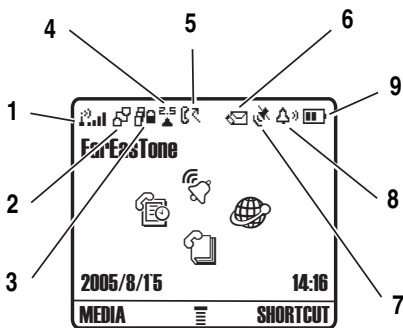




Labels at the bottom corners of the display show the current *soft key* functions. Press the left or right soft key to perform the function indicated by the label.

Your phone can display the time and date in the home screen (see page 56).


status indicators


The following illustration shows some common status indicators:



 





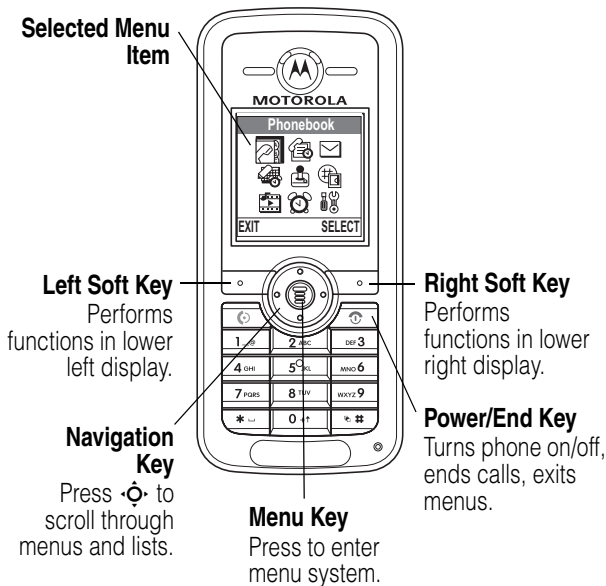 



- 1 **Signal Strength** – Vertical bars show the strength of the network connection.
- 2 **GPRS** – GPRS-net connected and GPRS packet message can be sent.
- 3 **Data Transmission** – Via network (phone-to-computer data transfer is not supported).
- 4 **Roam Indicator** – appears when your phone uses another network system outside your home network.
- 5 **Active Line** – Shows  to indicate an active call.
 -  = line 1 active
 -  = line 2 active
- 6 **Message Indicator** – Shows when you receive a new message. Indicators can include:
 -  = text message
 -  = voicemail message
 -  = voicemail & text message
 -  = active chat session
 -  = IM message
- 7 **Location Indicator** – Shows when your phone can send.  means it can send.  means it cannot send.
- 8 **Ring Style Indicator** – Shows the ring style setting.
 -  = Loud
 -  = Vibe & Ring
 -  = Soft
 -  = Silent
 -  = Vibrating
- 9 **Battery Level** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

menus

From the Home Screen, press  to enter the main menu.






Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.

icon	feature	icon	feature
	Phonebook		Web Access
	Recent Calls		Multimedia
	Messages		Alarm Clock
	Tools		Settings
	Games & Apps		

selecting a menu feature

 
The following example shows how to select a menu feature, starting from the Home Screen:

Find it: Press  > **Recent Calls** > **Dialed Calls**

This example shows that from the Home Screen, you must press , scroll to and select  **Recent Calls** from the main menu, then scroll to and select **Dialed Calls**. Press  to scroll, and use the left or right soft keys to select the functions displayed in the bottom corners of the display.

selecting a feature option

Some features require you to select an option from a list.

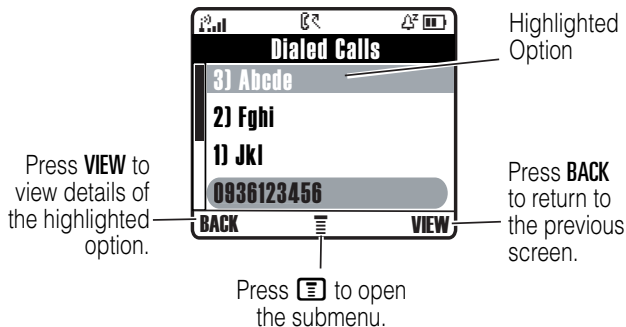


Press \leftarrow or \rightarrow up or down to highlight the option you want.


- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters and highlight the closest matching option on the list.
- When an option has a list of possible values, press \leftarrow or \rightarrow left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

text entry

 Some features require you to enter information.

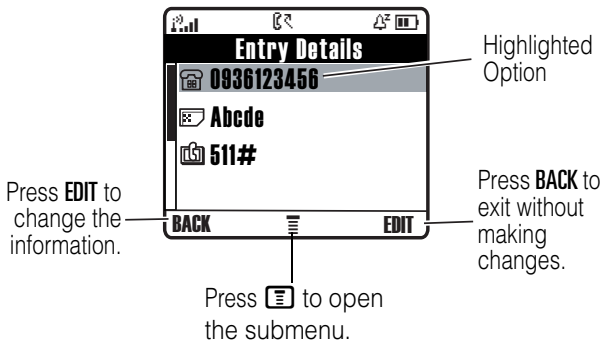

 
You can compose and send text messages in the message center. A *character counter* indicates how many more characters will fit in the message.

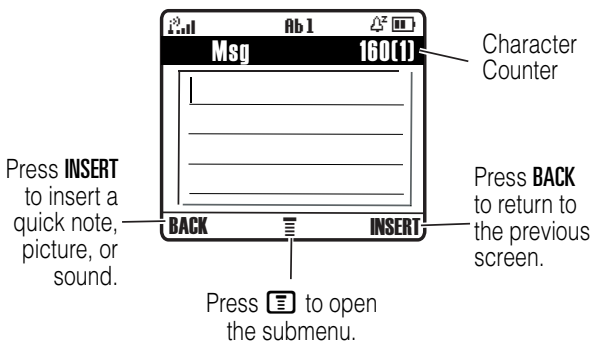


text entry method


Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Press  in any text entry screen to select one of the following entry methods:

entry mode
Primary Primary text entry method.
Symbol Enter symbols only.
123 Enter numbers only.
Secondary Secondary text entry method.

Alternatively, you can select a text entry method in any text entry screen by pressing  > **Input Mode**.

setting up a text entry method

Press  > **Input Setup** from any text entry screen. Select **Primary** or **Secondary**, and then choose from the following methods:

Primary Enter letters and numbers by pressing a key one or more times (see page 28).

Number Lets the phone predict each word as you press keys (see page 31).


Symbol Lets you use Taiwanese **BoPoMoFo** as input for Chinese characters.

Note: Only available in Taiwan and Hong Kong.

Secondary Lets you use Traditional Strokes as input for Chinese characters.

Note: Available only in the People's Republic of China.

capitalization







Press  in any text entry screen to change the text case. The following indicators show capitalization status:

abc = no capital letters **ABC** = all capital letters

Abc = capitalize next letter only

text entry indicators

When you select the **Primary** or **Secondary** text entry method, the following indicators identify the text entry setting:

primary	secondary	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalize next letter only
1↑↑	2↑↑	Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalize next letter only
		iTAP, all capital letters


The following indicators identify **Numeric** or **Symbol** entry method:

12 = numeric method **@** = symbol method

tap method

This is the standard method for entering text on your phone.

The **Tap** method cycles through the letters and numbers on the key you press. The **Tap Extended** method also cycles through additional symbols shown in the chart on page 30.

- 1** Press a keypad key one or more times to select a letter, number, or symbol.
- 2** Press keypad keys to enter remaining characters.
- 3** Press **Insert** to store the text.
- 4** Press  to switch entry modes.

 
Tip: Press **⬆** up to accept a word completion; press **⌘** to insert a space.

In a text entry screen, you can press **#** to switch the entry methods. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry method, see page 27.

When you enter text with the **Tap** or **Tap Extended** method, the soft key functions change.

Character displays at insertion point.

After 2 seconds, the character is accepted and the cursor moves to the next position.

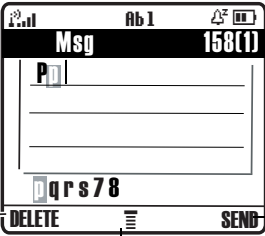


Press **DELETE** to erase the character to the left of the insertion point.

Press **#** to open the submenu.

The screenshot shows a text entry screen titled 'Msg' with a character count of 158(1). The text 'Pro' is entered. Below the text is a prediction bar showing 'p q r s 7 8'. The bottom of the screen has three soft keys: 'DELETE', a submenu icon (three horizontal lines), and 'SEND'.

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **Pro** you might see:

 Press **⬆** up to accept **Products**, or press **⌘** / **⬇** down to reject it & enter space after **pro**.

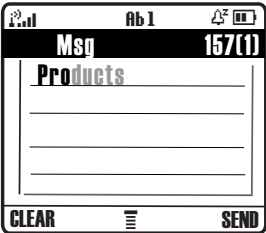

Character displays at insertion point.

Press **#** to open the submenu.

The screenshot shows a text entry screen titled 'Msg' with a character count of 157(1). The text 'Products' is entered. Below the text is a prediction bar. The bottom of the screen has three soft keys: 'CLEAR', a submenu icon (three horizontal lines), and 'SEND'.

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

character chart

Use this chart as a guide for entering characters with the **Tap Extended** method.

1	. ? ! , @ ' - _ : ; () & " ~ 1 0 ç j % £ \$ ¥ ¢ € + x * / \ [] = > < # §
2	a b c 2 á à â ã ç æ
3	d e f 3 é è ê ë
4	g h i 4 í î ï
5	j k l 5
6	m n o 6 ñ ó ò ô õ ø
7	p q r s 7
8	t u v 8 ú ù û ü
9	w x y z 9
0	change text case, for capital letters
*	enter a space (hold to enter a return)
#	change text entry method (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor, **1** first shows common characters for that editor.

tap method text entry rules

- Press a keypad key repeatedly to cycle through its characters.

- Press **←** left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized.
- If you enter or edit information and do not want to save the changes, press **⏏** to exit without saving.

iTAP[®] method

iTAP software provides a predictive text entry method that lets you enter a word using one key press per letter. This can be faster than the **Tap** method because your phone combines the key presses to predict common words.

For example, if you press **7**, **7**, **6**, **4**, the letter combinations that match your key presses display the word **Product**.

Press **SEND** to lock highlighted combination.

Press **↑** up to accept **Products**.

Press **DELETE** to delete last letter entered.

Press **→** right to highlight another combination.

Press **☰** to open the submenu.

Press ***** to enter **Prod** & a space.

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

entering words

In a text entry screen, you can press **#** to switch to a different text entry method. An indicator shows which method is active (see page 28). If the **iTAP** method is not available as the **Primary** or **Secondary** entry method, see page 27.

- 1 Press **1** ~ **#** to show possible letter combinations at the bottom of the display.
- 2 Press **◂** or **▸** left or right highlight the combination you want.
- 3 Press **SELECT** to lock a highlighted combination or you can press keypad keys to add more letters to the end of the combination.
- 4 Press ***** to enter the highlighted combination when a word appears in the display. A space is automatically inserted after the word.

If you enter a word that your phone does not recognize, the phone stores it to use as one of your word options. When you fill the available memory space for unrecognized words, your phone deletes the oldest words to add new words.

numeric mode

In a text entry screen, press **#** to switch entry methods until the **12** (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press **#** to switch to another entry method.

symbol mode



In a text entry screen, press **#** to switch the text entry methods until the @ (symbol) indicator displays.


- 1 Press **1** ~ **#** (one press per key) to show possible symbol combinations at the bottom of the display.
- 2 Press **◂** left or right to highlight the combination you want.
- 3 Press **SELECT** to lock a highlighted combination or you can press keypad keys to add more symbols to the end of the combination.
- 4 Press ***** to enter the highlighted combination.

symbol chart


Use this chart as a guide for entering characters with the **Symbol** method.


1	.?! , @ ' - _ : ; () & " ~ 1 0 ¿ ¡ % £ \$ ¥ ¢ € + x * / \ [] = > < # §
2	@ _ \ ß
3	/ : ;
4	" & '
5	() [] {}
6	¿ ¡ ~
7	< > =
8	\$ £ ¥ ¢
9	# % *
0	+ - x * / = > < # §

	enter a space (hold to enter a return)
	change text entry method (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

navigation key

 Press the *navigation key*  to scroll up, down, left, or right through the menu system, to highlight menu items, to change feature settings, and to play games.

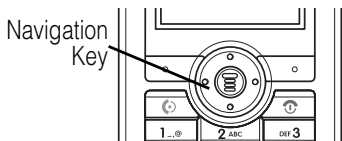

Press the left soft key to select a highlighted menu item.

codes and passwords

Your phone has a 4-digit unlock code that is set to 1234 by default. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password, if necessary.

To change a code or password:

Find it: Press  > **Settings** > **Security** > **New Passwords**


locking and unlocking your phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer calls.

You can make emergency calls on your phone even when it is locked (see page 45).

locking your phone manually

Find it: Press  > **Settings** > **Security** > **Phone Lock** > **Lock Now**

- 1 Press keypad keys to enter your unlock code.
- 2 Press **OK** to lock the phone.

unlocking your phone

Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

- 1 Press keypad keys to enter your unlock code.
- 2 Press **OK** to unlock your phone.

set your phone to lock automatically


You can set your phone to lock every time you turn it off:

Find it: Press  > **Settings** > **Security** > **Phone Lock**
> **Automatic Lock** > **On**

- 1 Press keypad keys to enter your unlock code.
- 2 Press **OK** to activate automatic lock.

if you forget a code, PIN, or password

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, perform the following actions at the **Enter Unlock Code** prompt:

- 1 Press  to display the unlock code bypass screen.
- 2 Press keypad keys to enter your security code.
- 3 Press **OK** to submit your security code.

phonebook


This section briefly describes basic **Phonebook** operations. For more information about using the **Phonebook**, see page 53.



storing a phone number

Enter a phone number in the home screen, then press **SAVE** to create a **Phonebook** entry for that number. Fill in the other fields to complete the entry.



dial a number

Press  > **Phonebook** > *desired entry*, then press .

Shortcut: Press  down to access **Phonebook** from idle screen.

If your entries are sorted by **Name**, enter the first letter of the person's name to highlight it. For example, press   for the first entry that starts with K.

sort phonebook entries



Press  > **Phonebook**, next press  > **Setting** > **Sort by**, and then select whether you want to sort the phonebook using **Alphanumeric**, **BoPoMoFo**, **Stroke**, or **Location**.

viewing entries by category

Press  > **Phonebook**, next press  > **Categories**, and then select whether you want to view **All** entries, entries in a predefined category (**Caller Group 1 ~ Caller Group 15**), or entries in a category you created.

To set the category for a phonebook entry, see page 54.

locking the keypad


In all modes, press  followed by the  to lock the keypad. Repeating this key sequence unlocks the keypad.

customize

storing your name and number



To store or edit your name and phone number information on your SIM card:

Find it: Press  > **Settings** > **Phone Status** > **My Tel. Numbers**

If you do not know your phone number, contact your service provider.

time and date

You must set the time and date to use the datebook.

Find it: Press  > **Settings** > **Initial Setup** > **Time and Date**


ring style


Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 20).

To set a ring style:

Find it: Press  > **Settings** > **Ring Styles** > **Style**


- 1 Press  to scroll to the ring style.
- 2 Press **SELECT** to select the ring style.


Each ring style consists of settings for specific event alerts: **Ring Volume, Ring Tone, Incoming Call Alert, Vibrating, Message Alert Tone, Keypad Tone Volume**. To change these settings, press  > **Settings** > **Ring Styles** > *style Detail*.

answer options

You can set the phone to answer by pressing any key.

To activate or deactivate an answer option:

 


Find it: Press  > **Settings** > **In-Call Setup**.

- 1 Press  to scroll to **Anykey Answer**.
- 2 Press **ON** to select the option.

wallpaper

You can set a photo, picture, or animation as a wallpaper (background) image on your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

Find it: Press  > **Settings** > **Personalize** > **Wallpaper**

- 1 Press  to scroll to **Picture**.
- 2 Press **SELECT** to open the picture viewer.
- 3 Press  to scroll to a picture. Scroll to **(Off)** to turn off the wallpaper image.
- 4 Press **OK** to select the image.
- 5 Press **BACK** to return to **Wallpaper** screen.
- 6 Press  to scroll to **Layout**.

- 7 Press **SELECT** to adjust the image layout.
- 8 Press **◂◃** to select a layout option. **Center** places the image in the center of the display. **Tile** fills the display with multiple copies of the image. **Fit-to-Screen** resizes the image, if necessary, to fit the display.
- 9 Press **OK** to confirm the layout setting.
- 10 Press **BACK** to save wallpaper settings.

screen saver

You can set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the phone is on and no activity is detected for a specified time. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

Tip: To extend battery life, turn off the screen saver.

Find it: Press **☰** > **Settings** > **Personalize** > **Screen Saver**

- 1 Press **◂◃** to scroll to **Picture**.
- 2 Press **SELECT** to open the picture viewer.
- 3 Press **◂◃** up or down to scroll to a picture/animation. Scroll to **(Off)** to turn off the screen saver image.
- 4 Press **OK** to select the image.
- 5 Press **BACK** to return to **Screen Saver** screen.
- 6 Press **◂◃** to scroll to **Delay**.

- 7 Press **SELECT** to set the delay interval.
- 8 Press **◂◃** to scroll to the inactivity interval that triggers the screen saver.
- 9 Press **OK** to confirm the delay setting.
- 10 Press **BACK** to save screen saver settings.

display appearance

This section explains how to adjust the display.

contrast

Find it: Press **☰** > **Settings** > **Initial Setup** > **Contrast**

Press **◂◃** right to increase the contrast. Press **◂◃** left to decrease the contrast

color

Select the color palette on your phone to display indicators, highlights, and soft key labels.


Find it: Press **☰** > **Settings** > **Personalize** > **Color Style**

- 1 Press **◂◃** to scroll to a **Color Style**.
- 2 Press **OK** to select the **Color Style**.
- 3 Press **BACK** to return to previous menu.

backlight

You can set the amount of time that the display and keypad backlights remain on.

Find it: Press  > **Settings** > **Initial Setup** > **Backlight**

- 1 Press  up or down to scroll to a **time-out** setting.
- 2 Press **OK** to select the setting.
- 3 Press **BACK** to return to previous menu.

calls

For basic instructions on how to make and answer calls, see page 14.

active line






You can change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for SIM cards enabled for dual phone lines.

Find it: Press  > **Settings** > **Phone Status** > **Active Line**

The **Active Line** indicator in the display shows which phone line is currently active (see page 20).

redial

- 1 Press  to view the dialed calls list.
- 2 Press  to scroll to the entry you want to call.
- 3 Press  to redial the number.

automatic redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

To redial the phone number:

Find it: Press  > **Settings** > **In-Call Setup** > **Auto Redial**

Your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

caller ID

incoming calls



Calling Line Identification (Caller ID) displays the phone number for incoming calls in your phone's display.

The phone displays the caller's name when the name is stored in your phonebook, or **Calling** when Caller ID information is not available.

outgoing calls



You can show or hide your phone number as an ID for the calls that you make.

Find it: Press  > **Settings** > **In-Call Setup** > **Show Number**

turn off a call alert

While the phone is ringing or vibrating:

Press **IGNORE** to cancel the incoming call.




Depending on your phone settings and/or service subscription, the call may be forwarded to your voice mail, another number, or the caller may hear a busy signal.


emergency calls

Your service provider programs one or more emergency phone numbers, such as 112, 911, or 000 that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations. Sometimes an emergency call cannot be placed due to network, environmental, or interference issues.


- 1 Press keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.


international calls




Press and hold  to insert the local international access code (+) for the country that you are calling.

recent calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from the newest to the oldest entries. When the phone's memory or SIM card is full, the oldest entries are deleted so that new entries can be added.

Tip: Press  from the home screen to view the list of dialed calls.

Find it: Press  > **Recent Calls**

- 1 Press  to scroll to **Received Calls** or **Dialed Calls**.
- 2 Press **SELECT** to select the list.
- 3 Press  to scroll to an entry. A ✓ means the call connected.
- 4 Press  to call the entry's number.

or

Press **VIEW** to view entry details.

or

Press  to open the **Last Calls Menu** to perform various operations on the entry.

The **Last Calls Menu** can include the following options:



option	
View	View the entry details
Delete	Delete the entry
Call	Call the entry

option	
Send Message	Open a new text message with the number in the To field
Save	Create a phonebook entry with the number in the No. field

returning calls


Your phone keeps a record of your unanswered calls and displays:

 X Missed Calls, where **X** is the number of missed calls

- 1 Press **VIEW** to see the list of received calls.
- 2 Press  to select a call to return.
- 3 Press  to make the call.

notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. These digits can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find it: Press  > **Recent Calls** > **Notepad**


- 1 Press  to call the number.

or



Press **SAVE** to create a phonebook entry with the number in the **No.** field

speed dialing

Each entry that you store in your phonebook is assigned a unique speed dial number.

To see an entry's speed dial number, press  > **Phonebook**, scroll to the entry, press **VIEW**.

To speed dial a phonebook entry:

- 1 Press keypad keys to enter the speed dial number for the entry you want to call.
- 2 Press  to submit the number.
- 3 Press  to call the entry.

1-touch dialing

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second. If no speed number is assigned to the digit, you will be prompted to assign number.


voicemail



Voicemail messages that you receive are stored on the network, not on your phone. To listen to your messages, you must call your voicemail phone number.

Your service provider may include additional information about using this feature.

listening to voicemail messages

Find it: Press  > **Messages** > **Voicemail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

receiving voicemail

When you receive a voicemail message, your phone displays the  indicator and **New Voicemail**.

Press **CALL** to listen to the message.

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

storing your voicemail number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually your service provider has already done this for you.

Find it: Press  > **Messages** >  > **Voicemail Setup**


- 1 Press keypad keys to enter your voicemail number.
- 2 Press **SAVE** to store the number.

You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.

call waiting



When you are on a call and a second call comes in, an alert tone sounds to indicate that you have a call waiting.

- 1 Press  to answer the new call.
- 2 Press **SWITCH** to switch between calls.

or

Press **LINK** to connect the 2 calls.

or

Press  > **End Call On Hold** to end the call on hold.

You must turn on call waiting to use this feature. To turn call waiting on or off:

Find it: Press  > **Settings** > **In-Call Setup** > **Call Waiting**

putting a call on hold

Press **HOLD** (if available) to put the call on hold.

or


Press  > **Hold**.




transferring a call



You can announce that you are transferring an active call to another party, or you can directly transfer the call.


announcing the call transfer

Find it: Press  > **Hold**

- 1 Press keypad keys to dial the number where you are transferring the call.
- 2 Press  to call the number and speak with the person who answers.
- 3 Press  to open the menu.
- 4 Press  to scroll to **Transfer**.
- 5 Press **SELECT**.
- 6 Press **OK** to confirm the transfer.

not announcing the call transfer







Find it: Press  > **Transfer**



- 1 Press keypad keys to dial the number where you are transferring the call.
- 2 Press  to transfer the call.

other features





This section helps you locate features on your phone that are not described in this guide.







advanced calling

feature	description
conference call	During a call:  > Hold , dial next number, press  , press LINK
call forwarding	Set up or cancel call forwarding:  > Settings > Call Forward
call barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring
fixed dial	When you turn on fixed dialing, you can call only numbers stored in the fixed dial list. Turn fixed dialing on or off:  > Settings > Security > Fixed Dial Use the fixed dial list:  > Tools > Dialing Services > Fixed Dial

feature	description
service dial	Dial service phone numbers:   > Tools > Dialing Services > Service Dial








phonebook

feature	description
create entry	Create a new phonebook entry:  > Phonebook >  > New Shortcut: Key in number using Keypad keys, then press SAVE > SIM/Phone Memory .
dial number	Call a number stored in the phonebook:  > Phonebook , highlight the phonebook entry, press  to call.






feature	description
set category for entry	<p>Set the category for a phonebook entry:</p> <p> > Phonebook > entry</p> <p> > Categories > category name</p> <p>Note: The Category option is not available for entries stored on the SIM card.</p> <p>Hint: You can rename your category name.</p>
set category view	<p>Set a phonebook category view:</p> <p> > Phonebook >  > Categories > <i>category view</i></p>
sort phonebook list	<p>Set the order in which phonebook entries are listed:</p> <p> > Phonebook >  > Setting > Sort by > <i>sort order</i></p>

messages




feature	description
send text message	<p>Send a text message: </p> <p> > Messages > Create Message > New Short Msg</p>








feature	description
send multimedia message	Send a multimedia message:   > Messages > Create Message > New Multimedia Msg
use MMS template	Open an MMS template with preloaded media:   > Messages > Create Message > MMS Templates
read message	Read a new text or multimedia message that you have received:  Press DETAIL .
store message objects	Go to a multimedia message page or highlight an object in a message, then:   > Store



chat

feature	description	
start chat	Start a new chat session:  > Tools > Chat	
receive chat request	When you receive a chat request: Press ACCEPT or IGNORE .	
end chat	During a chat session:  > End Chat	




personalizing








feature	description	
language	Set the menu language:  > Settings > Initial Setup > Language	
change home screen keys and icons	Change the soft key labels and menu feature icons on the home screen, and turn the date and time display on and off:  > Settings > Personalize > Home Screen > Home Keys	
enable time and date display	Turn the date and time display on and off:  > Settings > Personalize > Home Screen > Clock	

feature	description
change home screen layout	<p>Change the layout of the home screen:</p> <p> > Settings > Personalize > Home Screen > Layout</p>
color style	<p>Change the color scheme of the display:</p> <p> > Settings > Personalize > Color Style</p>
wallpaper	<p>Change the wallpaper:</p> <p> > Settings > Personalize > Wallpaper</p>
screen saver	<p>Enable or disable the screen saver:</p> <p> > Settings > Personalize > Screen Saver</p>
quick dial	<p>Assign quick dial keys to phone numbers:</p> <p> > Settings > Personalize > Quick Dial</p>
shortcuts	<p>Create a shortcut to a menu item:</p> <p>Highlight the menu item, then press and hold .</p> <p>Select a shortcut:</p> <p> > Tools > Shortcuts</p> <p>> <i>shortcut name</i></p>





feature	description
master reset	Reset all options except unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset
master clear	Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries except SIM card information:  > Settings > Initial Setup > Master Clear

phone alerts


feature	description
ring style	Change the ring alert:  > Settings > Ring Styles
ring volume	Set the ringer volume:  > Settings > Ring Styles > Loud Detail > Ring Volume
ringing tone	Set ring tone melody:  > Settings > Ring Styles > Loud Detail > Ring Tone

feature	description
incoming call alert	Set the alert style for incoming calls:  > Settings > Ring Styles > Loud Detail > Incoming Call Alert
vibrating alert	Turn the vibrating alert on and off:  > Settings > Ring Styles > Loud Detail > Vibrating
message alert tone	Set message alert:  > Settings > Ring Styles > Loud Detail > Message Alert Tone
key tone volume	Set keypad key press volume:  > Settings > Ring Styles > Loud Detail > Key Tone Volume
key tone type	Set keypad tone:  > Settings > Ring Styles > Loud Detail > Key Tone Type
reminders	Turn reminders on and off:  > Settings > Ring Styles > Loud Detail > Reminders
startup music	Turn the startup music on and off:  > Settings > Ring Styles > Loud Detail > Startup Music

miscellaneous



feature	description
auto power off	Enable the power saving feature:  > Settings > Auto power off
lantern	The Lantern feature enables you to change your phone's idle display into a flashlight. Enable the lantern:  > Settings > Lantern You can specify how long the Lantern feature lights the display when you activate it:  > Settings > Lantern >  > select timing > OK

call times and costs

Network Connection Time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.


The amount of network connection time that you track on your resettable timer may not equal the amount of

time for which you are billed by your service provider. For billing information, contact your service provider.


feature	description
call times	View call timers:  > Recent Calls > Call Time
call cost	View call cost information:  > Recent Calls > Call Cost

handsfree








Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


feature	description
auto answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Headset & Car Settings > Auto Answer

network



feature	description
network settings	View network information and adjust network settings:  > Settings > Network

personal organizer











feature	description
create datebook event	Create a new datebook event:  > Tools > Calendar Highlight the day and press SELECT . Then press  to select Add New .
view or edit datebook event	View or edit event details:  > Tools > Calendar Highlight the day and press SELECT . Then press  to select the item.
set alarm	Set an alarm:  > Alarm Clock
turn off alarm	Turn off the alarm: Press STOP or  Set 8-minute delay: Press SNOOZE
calculator	Calculate numbers:  > Tools > Calculator



feature	description
currency converter	<p>Convert currency:</p> <p> > Tools > Calculator</p> <p>Press OPTIONS.</p> <p>Scroll to exchange rate, press Select and choose Foreign unit expression or Domestic unit expression. Then enter the exchange rate.</p> <p>Enter an amount in the main calculator window, press Select, and choose either In Foreign or In Domestic to see the exchange value.</p>

security

feature	description
SIM PIN	<p>Lock or unlock the SIM card:</p> <p> > Settings > Security > SIM PIN</p> <p>Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked.</p>
lock application	<p>Lock phone applications:</p> <p> > Settings > Security > Phone Lock</p>

games

feature	description	
launch micro-browser	Start a micro-browser session:  > Web Access > Browser	
download objects from web page	Download a picture, sound, or phone theme from a Web page: Highlight the file and press SELECT . Then press STORE .	
web sessions	Select or create a Web session:  > Web Access > Web Sessions	
launch game	Launch game:  > Games Highlight the application and press SELECT . Instructions are included for each game.	
manage pictures	Manage pictures and animations:  > Multimedia > Pictures	
manage sounds	Manage ring tones and sounds that you have composed or downloaded:  > Multimedia > Sounds	

feature	description
listen to FM radio	When you insert the earpiece you can listen to FM radio through the phone:  > Multimedia > FM Radio
create ring tones	Create ring tones that you can use on your phone:  > Multimedia > Sounds > [New iMelody]

Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is **1.44 W/kg** and when worn on the body, as described in this

user guide, is **0.79 W/kg**

. (Body-worn measurements

differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

index

A

active line, changing 43

alarm clock 62

alert

 creating 65

 defined 38

 setting 38, 58

animation

 downloading 64

 screen saver 40

 viewing 64

 wallpaper 39

answering a call 39

application, locking and

 unlocking 63

automatic redial 44

B

backlight 42

barring calls 52

battery

 charging 12

 extending battery life 12,
 42

 installing 11

browser. *See* micro-browser

C

calculator 62

call

 answer options 39

 barring 52

 barring password,
 changing 34

 call waiting 50

 costs 61

 dialed calls list 46

 dialing 14

 emergency number 45

 forwarding 52

 hold 50

 international access code
 45

 making 14

 received calls list 46

 ring style 38, 58

 timers 61

 transferring 50

 unanswered call 47

Call Failed, Number Busy
 message 44

call waiting 50

caller ID 44

calling line identification.

See caller ID

category

phonebook entry 54

view 54

center select button 34

character chart 30

chat 56

clock

setting 38

codes

changing 34

default 34, 36

forgetting 36

color, setting 41

conference call 52

contrast, setting 41

D

date, setting 38

datebook 62

dialed calls list 46

dialing a number 14, 52, 53

display

backlight 42

color 41

contrast 41

description 19

home screen 19

language 56

personalizing 56

E

emergency number 45

end key 1

Enter Unlock Code
message 35

F

5-way navigation key 34

fixed dial 52

forwarding calls 52

H

headset jack 1

hold a call 50

home keys, personalizing
56

home screen
defined 19

I

incoming call

forwarding 52

Incoming Call message 44

indicators

message waiting 18

text case 28

text entry method 28

voicemail message 49

international access code
45

iTAP software 31

K

key

center select button 34

end 1

5-way navigation 34

left soft key 1, 20, 56

menu 1

power 1

right soft key 1, 20, 56

send 1

volume control 1, 15

keypad

locking, unlocking 37

volume, setting 59

L

language, setting 56

left soft key

functions 1, 20

personalizing 56

line, changing 43

lock

application 63

phone 35

SIM card 63

M

making a call 14

master clear 58

master reset 58

menu

entering text 25

icons, changing in home
screen 56

language, setting 56

using 22

menu key 1

message

chat 56

MMS template 55

MMS, defined 16

multimedia message 55

reading 55

text 54, 55

message waiting indicator
18

micro-browser

browser setup 64

using 64

Web sessions 64

MMS template 55

MMS. *See* message

multimedia message

receiving 18

sending 16, 55

multimedia messaging
service. *See*

message

my telephone number 38

N

- network settings 61
- notepad 47
- number
 - storing your number 38
- numbers, entering 32

O

- 1-touch dial
 - using 48
- optional feature, defined 10

P

- passwords. *See* codes
- phone
 - active line, changing 43
 - answer options 39
 - clear stored information 58
 - codes 34
 - date, setting 38
 - language, setting 56
 - locking 35
 - network settings 61
 - reset all options 58
 - ring style 38, 58
 - security code 34
 - time, setting 38
 - turning on/off 13
 - unlock code 34

- unlocking 14, 35
- phone number
 - active line, changing 43
 - international access code 45
 - redialing 43
 - storing in phonebook 53
 - storing your number 38
- phonebook
 - category for entry 54
 - category view 54
 - dialing a number 53
 - 1-touch dial 48
 - picture ID 44
 - sorting entries 37, 54
 - speed dial number 48
 - storing an entry 53
- photo
 - downloading 64
 - picture ID 44
- picture
 - downloading 64
 - screen saver 40
 - viewing 64
 - wallpaper 39
- picture ID 44
- PIN code
 - changing 34
 - entering 63
- PIN2 code, changing 34
- power key 1

predictive text entry 31
primary text entry method
26

R

received calls list 46
recent calls 46
redial
 automatic redial 44
 busy number 43
right soft key
 functions 1, 20
 personalizing 56
ring style, setting 38, 58
ring tone
 creating 65
 downloading 64
 managing 64
ringer volume, setting 58

S

screen saver 40
secondary text entry
 method 26
security code
 changing 34
 default 34
send key 1
service dial 53
shortcuts 57
silent alert, setting 38, 58

SIM Blocked message 13,
63

SIM card
 defined 10
 installing 10
 locking 63
 PIN code entry 13
 PIN code, changing 34
 PIN2 code, changing 34
 precautions 10
 SIM Blocked message
 13, 63

SIM PIN code
 changing 34
 entering 63
SIM PIN2 code, changing
34

soft keys
 functions 20
 illustration 1
 personalizing 56

sound
 creating 65
 downloading 64
 managing 64

speakerphone
 handsfree 61

speed dial 48
standby time, increasing 42
symbol chart 33
symbols, entering 33

T

- tap method text entry 28
- telephone number
 - storing your number 38
- text
 - capitalization, changing 27
 - character chart 30
 - entering 25
 - entry method, selecting 26
 - entry method, setup 27
 - iTAP software predictive text entry 31
 - numeric method 32
 - symbol chart 33
 - symbol method 33
 - tap method 28
- text case indicator 28
- text entry method
 - selecting 26
 - setup 27
- text entry method indicator 28
- time, setting 38
- timers 61
- transfer a call 50
- travel charger 12

U

- unlock

- application 63
- phone 35
- unlock code
 - bypassing 36
 - changing 34
 - default 34, 36
 - entering 14

V

- vibrate alert
 - setting 38, 58
- video clip
 - downloading 55
- voicemail 48
- voicemail message indicator 49
- volume
 - keypad 59
 - ringer 58
- volume keys 15

W

- wallpaper 39
- Web pages 64
- Web sessions 64

