

INSTRUCTION MANUAL

A preliminary draft of the User's Manual follows this page.
The text on the following three pages will be added to the user manual.

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.36 W/kg, and when worn on the body, as described in this user guide, is 0.86 W/kg.²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

SAR Data

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

FCC Notice To Users

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



MOTORAZR² v8




MORE HERE>>



 
HELLOMOTO

Your **MOTORAZR²**™ V8 phone is slimmer, stronger, and smarter!


- Your **phone** can recite text messages, incoming caller ID information, and menu items (page 21). An external touchscreen display puts control at your fingertips, without opening your phone, for music playback, messages, and recent phone calls (see your *START HERE* guide).
- Transfer your favorite **music** quickly with USB 2.0 high-speed technology, and easily with Microsoft® Windows® Media Player 11 (see your *START HERE* guide).
- Snap pictures automatically with your 2-megapixel multi-shot **camera** (page 37).
- Capture key moments in high-definition **video**, then upload to your blog (see your *START HERE* guide).
- Access any **Web** site just like you do on your computer, with your phone's full HTML browser (page 36).
- Check your personal **email** accounts (like Hotmail, Gmail, or Yahoo) on the Web (see your *START HERE* guide). Or read and sync your corporate email (Microsoft Outlook) with MOTOSYNC (page 47).

For more information: To read feature instructions on your phone, press **Main Menu** >  **Help**. To watch Web tutorials and learn more about your phone and accessories, go to www.hellomoto.com.

Introducing your new **MOTORAZR²™ V8** GSM wireless phone. Here's a quick anatomy lesson.

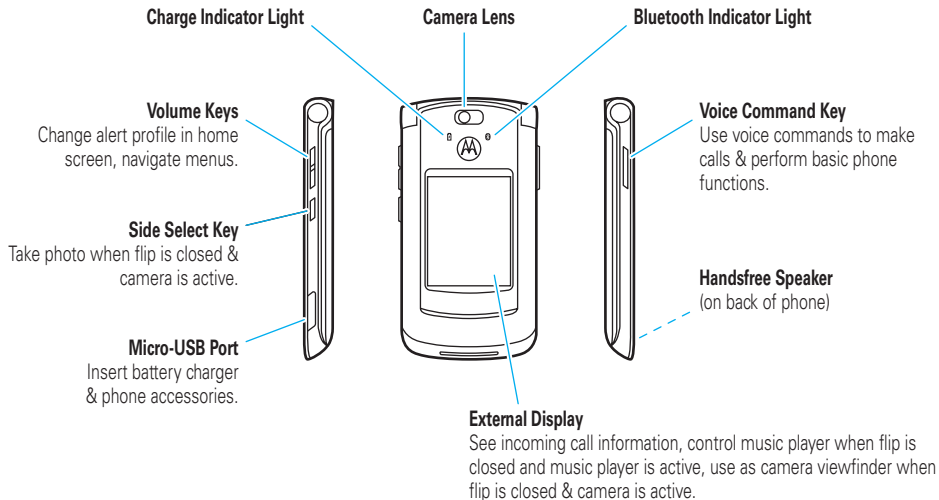


Home Screen

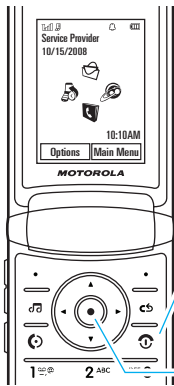 


1 Press & hold the power key  until the display lights up, to turn on your phone.

2 Press the center key  to open the **Main Menu**.

 Main Menu

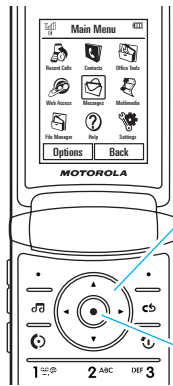

3 Press the navigation key  up/down/left/right to scroll to a menu feature.

4 Press the center key  to select it.

Note: This is the standard home screen and main menu layout. **Your phone's home screen and main menu may be different.** To change your home screen shortcuts and main menu appearance, see your *START HERE* guide.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP and Windows Media are trademarks of Microsoft Corporation. Macintosh is a registered

trademark of Apple Computer, Inc. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2007.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68XXXXX200-0

contents

Use and Care	7	lock & unlock external keys	22	entertainment	33
essentials	8	lock & unlock phone	23	music player	33
about this guide	8	personalize	24	browser	36
battery	9	profiles	24	camera	37
basics	12	time & date	26	video	40
display	12	themes	27	messages	42
text entry	14	display appearance	28	text messaging	42
volume	17	answer options	29	instant messaging	46
navigation key	18	calls	30	connections	47
side select key	18	turn off a call alert	30	MOTOSYNC	47
external display	18	recent calls	30	file manager	48
voice commands	19	redial	30	cable connections	49
talking phone	21	return a call	31	Bluetooth™ wireless	50
handsfree speaker	21	caller ID	31	phone updates	54
codes & passwords	22	emergency calls	32		
		voicemail	32		

other features	55
advanced calling	55
contacts	58
advanced personalizing	63
call times & costs	65
handsfree	66
network.	67
personal organizer.	67
security.	70
fun & games	71
service and repairs	72
SAR Data	73
EU Conformance	74
OSS Information	75
index.	76

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

essentials

CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* guide included in the box.






about this guide

This guide shows how to locate a menu feature as follows:

Find it:  >  Messages > Create Message

This means that, from the home screen:

- 1 Press the *center key*  to open the menu.

- 2 Press the *navigation key*  to scroll to  **Messages**, and press the *center key*  to select it.
- 3 Press the navigation key  to scroll to **Create Message**, and press the center key  to select it.

symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

battery

battery charging

Tip: Motorola batteries have circuitry that protects the battery from damage from overcharging.

Note: You can charge your battery by connecting a cable from your phone's micro-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. A Motorola Original USB cable and supporting software may be included with your phone. These tools also are sold separately.



Battery Use & Battery Safety

- **Motorola recommends you always use Motorola-branded batteries and chargers.**
The warranty does not cover damage caused

by non-Motorola batteries and/or chargers.

Caution: Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard. Improper battery use, or use of a damaged battery, may result in a fire, explosion, or other hazard.

- Battery usage by children should be supervised.
- **Important:** Motorola mobile devices are designed to work best with qualified batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:
 - Remove the battery and inspect it to confirm that it bears a Motorola "Original Equipment" hologram;
 - If there is no hologram, the battery is not a qualified battery;

- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Center.
- New batteries or batteries stored for a long time may take more time to charge.
- **Charging precautions:** When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging. Always take your mobile device with you when you leave your vehicle
- When storing your battery, keep it in a cool, dry place.
- It is normal over time for battery life to decrease, and for the battery to exhibit shorter runtime between charges or require more frequent or longer charging times.
- **Avoid damage to battery and mobile device.** Do not disassemble, open, crush, bend, deform, puncture, shred, or submerge the battery or mobile device. Avoid dropping the battery or mobile device, especially on a hard surface. If your battery or mobile device has been subjected to such damage, take it to a Motorola Authorized Service Center before using. Do **not** attempt to dry it with an appliance or heat source, such as a hair dryer or microwave oven.
- **Use care when handling a charged battery**—particularly when placing it inside a pocket, purse, or other container with metal objects. Contact with metal objects (e.g., jewelry, keys, beaded chains) could complete an electrical circuit (short circuit), causing the battery to become very hot, which could cause damage or injury.

Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center for proper battery disposal.

 


Warning: Never dispose of batteries in a fire because they may explode.

basics


display


The *home screen* appears when you turn on the phone.

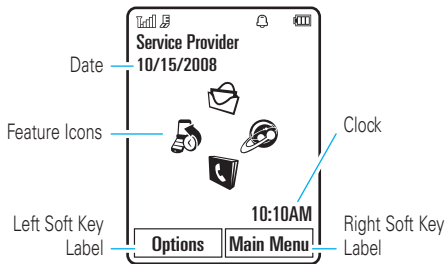


Note: Your home screen may look different, depending on your service provider.



To dial a number from the home screen, press number keys and .

Press the *center key*  or the **Main Menu** soft key to open the main menu.






Press **Options** in the home screen lock the external (side) keys, set an alarm, take a picture or send a message, change the alert profile, activate airplane mode, or customize the home screen.


Press the *navigation key*  up, down, left, or right in the home screen to open basic features. To show, hide, or change feature icons in the home screen, see your *START HERE* guide.


Tip: Want some help? Press **Main Menu** >  **Help**. Select a **Help** topic to find information about phone features.






Status indicators appear at the top of the home screen:





- 1 Signal Strength Indicator** – Show the strength of the wireless network connection.
- 2 EDGE/GPRS Indicator** – Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) network connection , or *General Packet Radio Service* (GPRS) network connection . 
- 3 Bluetooth™ Indicator** – Shows Bluetooth status:
 -  (flashing blue) = Bluetooth powered on
 -  (solid green) = Bluetooth connected



 (flashing blue) = Bluetooth discoverable mode











- 4 Messaging Presence Indicator** – Shows your instant messaging (IM) status: 

 (green) = online  = offline
 = busy  = discrete
 (gray) = invisible to IM

- 5 IM Indicator** – Shows when you receive a new IM message. 

 
- 6 Message Indicator** – Shows when you receive a new text or voice message. Other indicators can include: 

 = email message  = voicemail message


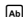
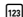

- 7 Location Indicator** – Shows  when your phone is providing location information to the network, or  when location information is turned off. 
- 8 Profile Indicator** – Shows the alert profile setting:
-  = ring only  = silent
-  = vibrate only  = vibrate then ring
- 9 Active Line Indicator** – Shows  to indicate an active call, or  to indicate when call forwarding is on. 
- 10 Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

text entry

Some features let you enter text.

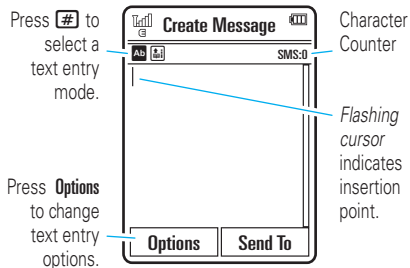





text entry modes


	"word" mode (page 15)
	"abc" mode (page 16)
	numeric mode (page 17)
	symbol mode (page 17)


To **change** text entry settings and languages:


Find it:  >  Settings > Phone Settings > Text Entry

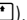

Change text case: Press  to change text case to all capital letters (), next letter capitalized (), or next letter lowercase (no symbol).

Set word learning: Your phone can learn the words you enter, to improve text prediction and completion. Press **Options > Text Entry > Set Text Prediction > Learn My Words**. Your phone shows  when word learning is active.

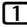

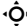Set text completion: Set your phone to complete words based on the characters you enter. Press **Options > Text Entry > Set Text Prediction > Offer Completions**. Your phone shows  when text completion is active.

Enter punctuation: Press  to enter punctuation or other characters.

Edit or delete text: Press  to move the cursor to the right of text you want to edit. Press the

 
clear/back key  to delete the character left of the cursor. Hold  to delete the entire word.

word mode

Press  in a text entry screen to switch to “word” predictive text entry mode. Your phone shows  in the display.

Word mode lets you enter words using one keypress per letter. The phone predicts each word as you enter it.

For example, if you press **7** **7** **6** **4**, your display might show:

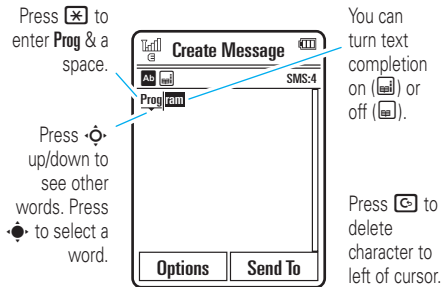


abc mode

Press **#** in a text entry screen to switch to “abc” text entry mode. Your phone shows **Ab** in the display.

To enter text, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

 For example, if you press **7** one time, your display might show:

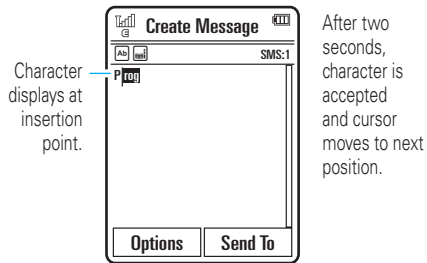

When text completion is activated, your phone tries to guess the rest of the word:

- Press **↓** to select the suggested word.
- Press **→** right to enter the suggested word and a space.
- If you want a different word, press keypad keys to enter the remaining letters.

numeric mode

Press **#** in a text entry screen until you see **123**.
Press the number keys to enter the numbers you want.

Tip: Just need one number? To enter a number quickly, press and hold a number key until the number appears.

 
symbol mode

Press **#** in a text entry screen until you see **123**. The display shows the symbol associated with each keypad key. Press **↑** up/down repeatedly to see different symbols. To insert a symbol, press its key, or scroll to it and press **◆**.



volume


Press the volume keys to:

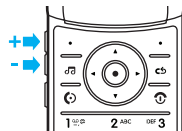 - turn off an incoming call alert
- change earpiece or speakerphone volume during a call
- change playback volume for a song or video
- set your phone's alert profile in the home screen (press the volume keys to scroll to a profile, then press **◆** or side select key to select it)




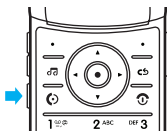 
navigation key

Press the navigation key  up, down, left, or right to scroll to menu items. When you scroll to something, press  to select it.

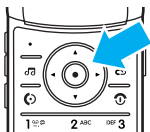

side select key

The side select key gives you another way to do things. For example, when you scroll to a menu item, you can press the side select key to select it (instead of pressing ).



Tip: From the home screen, press the side select key to activate the camera.

external display

When your phone flip is closed, the external display shows the time and indicates phone status, incoming calls, and other events. For a list of phone status indicators, see page 13.

set phone ring style in the external display

From the external display, press the external volume keys on the side of your phone to scroll to a profile, then press the side select key to select it.

return an unanswered call in the external display

Your phone keeps a record of your unanswered calls, and the external display shows **X Missed Calls**, where **X** is the number of missed calls.

Tip: Since the microphone and earpiece are hidden when the phone flip is closed, you'll



have to use a headset or other handsfree device to make and receive calls.

- 1 Press the side select key (see illustration on page 2) to see the received calls list.
- 2 Press the external volume keys on the side of your phone to scroll to an unanswered call.
 - To call the number, press and hold the side select key.
 - To exit without calling, press the side select key briefly.

voice commands

You can use voice commands to tell your phone what to do.

Note: Not all languages support voice commands.

voice dial a call

You can dial a contact list entry by speaking its name, or dial any phone number by speaking its digits.

- 1 Press and hold the external *voice command key* on the side of your phone. The phone loads the voice recognition software, then prompts you to say a command or name.
- 2 Wait for the beep, then say the name of an entry as it appears in your contact list. Your phone confirms the name and makes the call.

or

Say “Dial Number.” Your phone prompts you to speak the digits in the phone number. Speak the digits. Your phone confirms the number and makes the call.

Tips:

- You can say a contact's name and number type together. For example, say "John Smith mobile" to call the mobile number stored for John Smith.
- For voice command help, press the voice command key on the side of your phone, then press **Help**.

voice activate phone functions

You can use voice commands to open applications and perform many basic phone functions.

- 1 Press and hold the external voice command key on the side of your phone. The phone prompts you to say a command.

- 2 Wait for the beep, then say a command from the list.

voice commands
" <i>contact name</i> "
" Dial Number "
" Send Message To <i>contact name</i> "
" Check Calendar "
" Check New Message "
" Check New Email "
" Add New Contact "
" Talking Phone "
" Check Battery "
" Check Signal "
" Check Time "
" Check Date "
" Open Setup "
" Open Recent Calls "
" Open Theme "
" Open Camera "

voice commands
"Open Web Access"
"Set Airplane"
"Set Airplane Off"
"Set Ring"
"Set Normal"
"Set Vibrate"
"Set Silent"

Tip: Press and release the voice command key on the side of your phone to see the list of voice commands.

talking phone

Set your phone to recite incoming caller ID information, read the names of menu features or contact list entries, read messages you receive, and provide audio feedback for phone functions.

Find it:  >  Settings > Phone Settings > Talking Phone

Shortcut: Press and hold the external voice command key on the side of your phone. When the phone prompts you to say a command, say "Talking Phone."



handsfree speaker

During a call, press **Options** > **Speaker On** to turn on the handsfree speaker. Your display shows the speakerphone indicator until you turn it off (press **Options** > **Speaker Off**) or end the call.


Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it:  >  Settings > Security > Change Passwords

You can also change your **SIM PIN** codes or call barring password.

If you forget your unlock code: At the **Please verify the Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  to enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock external keys

You can lock the external phone keys when the phone flip is closed, to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

To **manually lock** the external keys: Close the phone flip, then press and hold the side select key. The external keys remain locked until you open the phone flip.

To **automatically lock** the external keys when the phone is idle and the phone flip is closed:

Find it:  >  Settings > Security > External Key Lock > Timer

You can set the time delay for locking the external keys (**2 seconds**, **4 seconds**, or **8 seconds**). The keys lock when you

close the phone flip, and unlock when you open the phone flip.

To **turn off** the automatic lock feature:



Find it:  >  Settings > Security > External Key Lock > Timer > Off

To **unlock** the external keys: Press and hold the side select key.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:

Find it:  >  Settings > Security > Phone Lock > Lock Now

To **automatically lock** your phone whenever you turn it off:

Find it:  >  Settings > Security > Phone Lock > Lock at Power On > On

Note: You can make emergency calls when the phone is locked (see page 32).

personalize

profiles

You can quickly change your phone's alert style or profile to match your activity or environment. Each profile uses a different set of ringtones or vibrations for incoming calls and other events. The alert profile indicator shows at the top of the home screen:



Ring Only



Silent




Vibrate Only



Vibrate then Ring

To change your profile: From the home screen, press the external volume keys on the side of your phone. Alternatively, from the home screen press **Options** > **Change Alert Style** or **Change Profile**.

The **Silent** profile silences your phone until you set another profile.

Shortcut: From the home screen, press and hold  to quickly set the profile to **Vibrate Only**.

change alert style settings

You can change the ringtones that a standard alert style uses to notify you of incoming calls and other events. Additionally, you can change the alert style's ring volume, keypad tone volume, and media playback volume settings. For dual-line-enabled SIM cards, you can set different ringtones to identify incoming calls on line 1 or line 2.

Note: You can't set a ringtone for the **Silent** alert style, or change some settings for some alert styles.

Find it:  >  **Settings** > **Profiles** > **Alert Style**
> *alert style*

- 1 Press left/right to select the **alerts** tab , **volume** tab , **messages** tab , or **settings** tab .
- 2 Press up/down to scroll to the alert or volume setting you want to change, then press right.
- 3 Select the setting value you want.
- 4 Press **Back** to exit and save your changes.

To **reset** the default settings for an alert style:

Find it: > **Settings** > **Profiles** > **Alert Style**
> *alert style*, press **Options** > **Reset**

create a new profile

To create a **new** profile with the ringtones and volume settings you specify:

Find it: > **Settings** > **Profiles** > **Alert Style**
> *alert style*

- 1 Change alert style settings as described in the previous section.
- 2 Press **Options** > **Save as Profile**.
- 3 Enter a name for the profile, then press **Save** to save it.

To create **additional** profiles:

Find it: > **Settings** > **Profiles**, press **Options**
> **Create Profile**

Note: Profile alert settings also can be set by the theme. When you apply a new theme, you can choose to apply the theme's alert settings to the current profile. Selecting this option **changes** the current profile to use the theme alert settings.

edit or delete profiles

To **edit** a profile:

Find it: > **Settings** > **Profiles**, scroll to the profile, press **Options** > **Edit**



Note: You can't edit the **Silent** profile, or change some settings for some profiles.

To **delete** a user-defined profile:

Find it:  >  Settings > Profiles, scroll to the profile, press **Options** > **Delete**

restore alert style settings

To delete all user-defined profiles and restore your phone's original alert style settings:

Find it:  >  Settings > Profiles, press **Options**
> **Restore Sound Settings**

time & date



Your phone can automatically update the time and date. It uses the time and date for the **Calendar**.



To **synchronize** time and date with the network:





Find it:  >  Settings > Phone Settings > Time & Date
> **Auto-Update Time** > **On**

To **manually** set the time and date:

Find it:  >  Settings > Phone Settings > Time & Date
> **Auto-Update Time** > **Off**, then > **Time and Date**

To adjust time and date, press  left/right to scroll to a setting, then press  up/down to change it. Press **Set** to save your settings.



To show a **12-hour or 24-hour** digital clock in the home screen:

Find it:  >  Settings > Phone Settings > Time & Date
> **Time Format** > **12 Hour Clock** or **24 Hour Clock**

To set the **date format** in the home screen:


Find it:  >  Settings > Phone Settings > Time & Date
> **Date Format**

To set your **time zone**:

Find it:  >  **Settings** > **Phone Settings** > **Time & Date**
> **Time Zone**, then select a city in your time zone

Shortcut: Press keypad keys to enter the first letters of the city you want.

themes

Use a phone *theme* to personalize the look and sound of your phone. Most themes include a wallpaper image, screensaver image, and ringtones. 

To **apply** a theme:

Find it:  >  **Settings** > **Themes** > *theme*

Alternatively, from the home screen, press **Options**
> **Customize Home** > **Change Theme**.

To **download** a theme, see page 36.


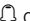



To **delete** a theme:

Find it:  >  **Settings** > **Themes**, scroll to the theme, then press **Options** > **Manage** > **Delete**

Note: You can delete only downloaded themes or custom themes you create.

modify a theme

Find it:  >  **Settings** > **Themes**, scroll to the theme, press **Options** > **Edit**

- 1 Press  left/right to select the **sounds** tab  or **images** tab .
- 2 Press  up/down to scroll to the setting you want to change, then press .
- 3 Scroll to the image or sound file you want, then select it.
- 4 Press **Save** to save your theme changes.

The **Wallpaper** appears as a background image in your home screen.

The **Screen Saver** appears in the display when no activity is detected for a specified time. To set the delay interval, see the following section.

Skins set the look and feel of your phone's display.



To **reset** the standard settings for a modified theme:

Find it:  >  Settings > Themes > *theme*, press Options > Manage > Reset

To **restore** the default theme on your phone:

Find it:  >  Settings > Themes, press Options > Manage > Restore to Default

create a new theme

Find it:  >  Settings > Themes, press Options > Create New or Create a Copy

display appearance

To set your display **brightness**:

Find it:  >  Settings > Phone Settings > Display Settings > Brightness

To save battery life, the keypad **backlight** can turn off when you're not using your phone. To set the backlight timeout delay interval:

Find it:  >  Settings > Phone Settings > Display Settings > Backlight Timeout

To save battery life, the **display** can turn off when you're not using your phone. To set the display timeout delay interval:

Find it:  >  Settings > Phone Settings > Display Settings > Display Timeout

To set the **screensaver** timeout delay interval:

Find it:  >  Settings > Phone Settings > Display Settings > Screensaver Timeout

Note: To see the screensaver, the **Display Timeout** setting must be greater than the **Screensaver Timeout** setting.

Tip: To extend battery life, turn off the screensaver.

answer options

You can use different ways to answer an incoming call.

To turn on or turn off an answer option:

Find it:  >  **Settings** > **Call Settings** > **In-Call Setup**
> **Answer Options**

options	
Any Key Answer	Answer by pressing any key.
Open to Answer	Answer by opening the phone flip.

Note: You can always press  to answer a call.


calls

turn off a call alert




Press the external volume keys on the side of your phone to turn off the ringer before answering a call.



recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

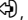

Shortcut: Press  in the home screen to see the **Dialed Calls** list.


Find it:  >  **Recent Calls**, press  to select the **Dialed Calls**, **Missed Calls**, **Answered Calls**, or **Recent Calls** list

Scroll to a call. Icons indicate if the call was incoming , outgoing , or missed . A check mark next to the icon indicates a connected call.

- To call the number, press .
- To see call details (like time and date), press .
- Press **Options** to select recent calls options, or to select call times or costs (see page 65).

redial

- 1 Press  from the home screen to see the **Dialed Calls** list.
- 2 Scroll to the number you want to call, then press .

If you hear a **busy signal** and see **Call Failed**, press  or **Retry** to redial the number. When the call goes through, your phone shows **Connected** and connects the call.



return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

When you see the **X Missed Calls** message, press  to see the **Missed Calls** list. Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your phone's display.



Your phone shows the caller's name and picture when they're stored in your contact list, or **Incoming Call** when caller ID information isn't available.

Note: Picture IDs aren't available for contacts stored on the SIM card.

Tip: Want to know who's calling without even looking at your phone? To give one of your contacts a special ringtone, see page 60.

To show or hide your phone number for the next outgoing call, enter the number you want to call, then press **Options** > **Show ID** or **Hide ID**.


To show or hide **your phone number** for all calls:

Find it:  >  **Settings** > **Call Settings** > **In-Call Setup** > **My Caller ID** > **All Calls** > **Show ID** or **Hide ID**

emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call at any time, even when your phone is locked or the SIM card is not inserted.

Note: Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Do not solely rely on your wireless phone for essential communications such as medical emergencies.


To make an emergency call: Turn your phone on, exit any open application such as games, dial the emergency number, then press the *send key*  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone display shows **New Voicemail** and the new message indicator .

To **check** voicemail messages:

Find it:  >  Messages > Call Voicemail

Shortcut: Your service provider may store your voicemail phone number in speed dial location #1. If so, you can press and hold **1** in the home screen to listen to your voicemail message(s).

entertainment

music player

For basic music player instructions, see your *START HERE* guide.

set default format and bit rate for Windows Media Player 11

Windows Media Player 11 lets you adjust format and bit rate settings to optimize sound quality or increase the number of song files you can store on your phone.

Windows Media Audio format offers the optimal balance between file size and sound quality. Song files in this format tend to require more storage space than files that use Windows Media Audio Pro format.

Windows Media Audio Pro format is designed for use in portable devices with limited storage capacity.

The format provides improved sound quality at lower bit rates.

To set the default file format and bit rate:

- 1 Insert the music CD in your computer's CD drive.
- 2 Launch Windows Media Player 11.
- 3 Select the Rip tab in Windows Media Player 11.
- 4 Click the Rip tab down arrow, then choose Format > Windows Media Audio or Windows Media Audio Pro.
- 5 Click the Rip tab down arrow again, then choose Bit Rate > *bit rate*.

convert iTunes AAC files to MP3 files on your computer


Use the iTunes desktop application to convert standard iTunes AAC files to MP3 files that are compatible with Windows Media Player 11.

 
Note: The iTunes desktop application can only convert AAC files ripped from a music CD. It can't convert music files purchased from the iTunes store.

- 1 Open the iTunes desktop application on your computer.
- 2 Select Edit > Preferences, then click the Advanced tab and click Importing.
- 3 Open the Import Using pop-up menu, then select the MP3 Encoder option. Click OK to save your settings.
- 4 Select one or more songs in your iTunes music library, then choose Advanced > Convert Selection to MP3.


The converted MP3 file copies appear in your computer's music library alongside the original AAC files.

play music (flip open)


Use the navigation key  to control song playback when the phone flip is open.

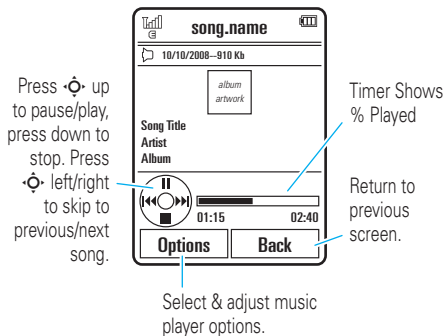

When a song is playing, press **Options** to select music player options:

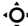options	
Hide	Hide the music player while music plays. To see the music player again, go to the home screen, then press  up.
Manage	Show song Properties , such as file name, type, and size.
Delete	Delete the song file.
Send to	Send the song in a message or email, or send it to another device over a Bluetooth connection.
Apply to	Add the song to a playlist or make it a ringtone.


options	
Use Bluetooth/	When Bluetooth power is on, select
Use Handset	Use Bluetooth to route audio to a Bluetooth headset. When a Bluetooth audio connection is active, select Use Handset to switch audio back to the phone.
	Note: This option appears only when Bluetooth power is turned on.
Setup	Customize settings.

During a song, the music player shows the song title, artist, album, and artwork, if available. To see a larger image of the **artwork**, press  (press it again to return to the music player).

customize the music player

Find it: , press **Options** > **Setup**

You can select the following options:

options	
Shuffle	Play songs in a random order.
Auto- Repeat	Replay the song or playlist when the last file finishes playing.
Stereo Effects	Set Spatial Audio and Bass Boost to customize sound.
Internet Connection	Set your Internet connection preferences. 

When you scroll to a song in a list and press **Options**, you may see additional options for the song and list, such as **Delete**, **Send to**, and **Apply to**.



browser

Use your phone's full HTML browser to surf to your favorite Web sites, upload videos to a video blog, and download files and applications to your phone. Log on

to your Internet-based email account to check your email on the go.

To **launch** the browser:

Find it:  >  **Web Access** > **Browser**

Press  up/down/left/right to scroll through Web pages. Scroll to a link and press  to select it. Press **Back** at any time to return to the previous screen.

Some Web pages may contain a text entry window for exchanging information with a Web site. Scroll to the window, select it, and enter text as usual (for more information about text entry, see page 14).

To **go to a Web page**, press **Options** > **Go to Page**, enter the Web address, then press **Go**.

To **bookmark** the current Web page, press **Options** > **Active Page** > **Add Bookmark**.

To go to a **bookmarked Web page**, press **Options** > **My Bookmarks** > *bookmark*.

To **upload** a video to a video blog site, see your *START HERE* guide.

To **download** a media file, theme, or Java™ game or application to your phone, go to the page that links to the file, scroll to the link, and select it.


To **exit** the browser, press **Options** > **Exit**.


camera




The 2-megapixel digital camera on your phone can take photos at up to 1200 x 1600 pixels resolution. Just aim and shoot to take a photo, then press **Send** to share it with your friends.

 take a photo

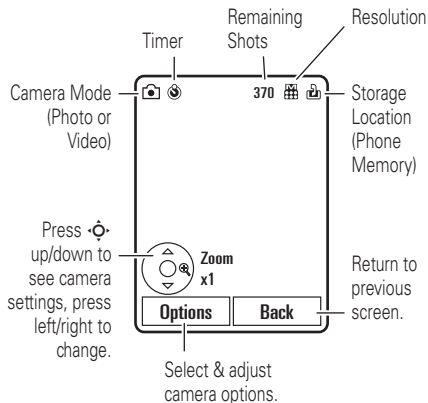Find it:  >  **Multimedia** > **Camera**



To take the photo in the viewfinder, press .

- To store the photo, press .
- To send the photo in a message, press **Send** (see page 42). 
- To discard the photo, press the clear/back key .
- To select other photo options, press **Options**. You can choose to **Save Only**, **Discard**, **Send to** (message, email, or Bluetooth connection), **Apply to** (wallpaper, screensaver, new or existing contact), **Edit**, or **Print via** (Bluetooth connection or USB connection).

auto-send

You can set up your phone to automatically send the photos you take to a list of contacts you specify.

To use auto-send, you first must activate the auto-save feature:

Find it:  >  **Multimedia** > **Camera**, press **Options** > **Camera Settings** > **Auto-Save** > **Enable**

Then activate auto-send:

Find it:  >  **Multimedia** > **Camera**, press **Options** > **Camera Settings** > **Auto-Send** > **Enable**

To specify the message recipients for the photos you take:

Find it:  >  **Multimedia** > **Camera**, press **Options** > **Camera Settings** > **Message Recipients**

Tip: To send your photo in an MMS text message, the picture resolution must be set to **X-Small**, **Small**, or **Medium**.

To set resolution, press  >  **Multimedia** > **Camera**, press **Options** > **Camera Settings** > **Picture Settings** > **Resolution**.

self portrait

When the camera viewfinder is active, you can close the phone flip to show the viewfinder image in the external display. Press the side select key (see illustration on page 2) to take a photo. Your phone automatically stores photos you take when the phone flip is closed.

camera settings

When the viewfinder is active, press **Options** to select camera options:

options	
Capture	Take a photo.
Go To My Media	See, edit, and delete stored pictures and photos.
Video Mode	Switch to the video camera.

options	
Auto-Timer	Set a timer for the camera to take a photo.
Multi-Shot	Set the camera to take multiple photos in sequence.
Camera Settings	Customize camera settings: <ul style="list-style-type: none">• Review Time• Shutter Tone• Default Name• Auto-Save• Auto-Send• Message Recipients• Picture Settings<ul style="list-style-type: none">• Resolution• Quality• Video Settings<ul style="list-style-type: none">• Resolution• Quality• Video Length

video

To record and play a video, and upload a video to a video blog Web site, see your *START HERE* guide.

set video recording options


When the video camera viewfinder is active, press **Options** to set video recording options:

options	
Capture	Begin video recording.
Go To My Media	See, edit, and delete stored videos.
Picture Mode	Switch to the photo camera.
Audio On/Off	Turn audio recording on/off.
Camera Settings	Customize camera settings (see page 39).

set video playback options

When a video is playing, press **Options** to set video playback options.

Note: Your phone's options may vary. Most options apply only to user-recorded videos, and are not available for pre-installed videos.

options	
Play Fullscreen	Show the video in full screen. (Press  to return to actual size.)
Manage	Show video Properties , such as file name, type, and size.
Delete	Delete the video.
Zoom	Show the video at actual size, or scale the video to fit the viewing area.
Send To	Send the video in a message or email, or send it to another device over a Bluetooth connection.

options	
Use Bluetooth/ Use Handset	<p>When Bluetooth power is on, select Use Bluetooth to route the audio soundtrack (if available) to a Bluetooth headset.</p> <p>When a Bluetooth audio connection is active, select Use Handset to switch audio back to the phone.</p> <p>Note: This option appears only when Bluetooth power is turned on.</p>
Setup	Adjust video settings.

messages

text messaging

send a text message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and put text and media objects on each page. You can send a message to other compatible phones, or to email addresses.





Find it:  >  Messages > Create Message

- 1 Press keypad keys to enter text on the page (for more information about text entry, see page 14).

To insert a **picture, sound, or other media object** on the page, press **Options > Insert**. Select the file type and the file. (**Note:** File size restrictions

may apply to pictures and videos sent in a text message.)

To insert **another page**, press **Options > Insert > Page**. You can enter more text and objects on the new page.

- 2 When you finish the message, press **Options > Sending Options** to set message options (such as **Subject and Priority**).
- 3 When you finish setting message options, press **Done**.
- 4 Press **Send To** to select message recipients. You can:
 - Select one or more entries from your contact list (press  to scroll to an entry, and press  to select it).


- Enter a new number or email address (press **Options** > **Enter Number** or **Enter Email**).

5 Press **Send** to send the message.

Your phone might tell you that this is a multimedia message, if it contains multiple pages or media objects. Some phones or networks don't support multimedia messages. Press **Yes** to send the message.

To save or cancel the message, press **Options** > **Save to Drafts** or **Cancel Message**.

receive a text message

When you receive a message, your phone plays an alert, and the internal display shows **New Message** with the new message indicator .



To **read** the message, press **View**. If the message contains media objects:



- Pictures and animations show as you read the message.
- Sound files play as you read the message. Press the external volume keys on the side of your phone to change the sound volume.
- Attached files are added to the end of the message. To open an attachment, select the file indicator or file name.

To **answer** the message, press **Options** > **Reply**.

additional message & email features

features

send a prewritten quick note

 >  Messages > Templates > Text Templates
> *quick note*, press **Options** > **Send**

To create a new quick note:

 >  Messages > Templates > Text Templates, press
Options > **Create Template**

set up email accounts

You can set up and use multiple email accounts on your phone:

 >  Messages > Email > **Add Account**

Note: Your display shows a separate folder for each email account.

features

send email

 >  Messages > Email

use a multimedia template

Open a multimedia template with pre-installed media:





 >  Messages > Templates > **Multimedia Templates**

read new message or email

When your display shows **New Message**, press **Read**.

read old messages

 >  Messages > **Inbox**

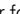Icons next to each message show if it is **read** , **unread** , **urgent** , or has an **attachment** . Press **Options** to perform various operations on a message.

features

read old email



 >  Messages > Email

Press **Options** to perform various operations on a message.

store message objects



Go to a multimedia message page, then press **Options** > **Store**.

create folder



Create a personal folder to store your messages.

 >  Messages > **My Folders**, press **Options** > **Create Folder**

features



browser messages



Read messages received by your browser:

When your display shows **New Message**, press **View**.

To activate browser messages and adjust browser message settings:

 >  Messages, press **Options** > **Settings** > **Browser Messages**

info services



Read subscription-based information services messages:

When your display shows **New Message**, press **View**.

To activate information services and adjust info services settings:

 >  Messages, press **Options** > **Settings** > **Info Services**

instant messaging

Use instant messaging to share messages with your friends in real time.

Find it:  >  Office Tools > IM, scroll to your IM account, press **Log In**

If you don't have an IM account, select **[New Account]** to create one.

To **find others** online, select **Contact List** to see a list of other users.

To **start a conversation**, scroll to a name in the **Online Contacts** list and press **Send IM**.

To **open an active conversation**, scroll to a name in the **Conversations** list and press **View**.

To end a conversation, press **Options > End Conversation**.

To **log out** from your instant messaging session, press **Options > Log Out**.

create or edit an IM account

To create a new IM account:

Find it:  >  Office Tools > IM > **[New Account]**

To edit an existing IM account:

Find it:  >  Office Tools > IM, scroll to an account, press **Options > Edit Account**

connections

MOTOSYNC

You can use several different over-the-air connection methods to synchronize information between your phone and a remote server.



MOTOSYNC with Exchange ActiveSync

Use the Internet to synchronize your phone's contact list, calendar entries, and email with an email account on a Microsoft® Exchange 2003 server.



set up Exchange ActiveSync

Confirm that the **Mobility** option is enabled on the email account, and that **data service** is activated with your phone service provider (additional fees may apply for this service).



To set up an ActiveSync partner:

Find it:  >  Office Tools > MOTOSYNC > Exchange ActiveSync

Enter your email account and server information, including **User Name**, **Password**, **Domain Name**, **Server Name**, and **Data Connection** details. If necessary, contact your system administrator to obtain the information you need, or to help you connect your phone to the server.

use Exchange ActiveSync

Schedule your phone to **automatically** synchronize data with an Exchange ActiveSync partner:

Find it:  >  Office Tools > MOTOSYNC > Exchange ActiveSync, press **Options** > **Auto Sync** > **On**, press **OK** to enter the time and days you want to synchronize

To **manually** synchronize your contacts, calendar, and email:

Find it:  >  Office Tools > MOTOSYNC
> Exchange ActiveSync > Synchronize Now

The first synchronization may take several minutes, depending on the amount of data in your contacts list, calendar, and email on the Exchange 2003 server.

MOTOSYNC with SyncML

Call a SyncML Internet server and synchronize your phone's contact list and calendar entries with the server.



To **synchronize files** with a partner you set up:

Find it:  >  Office Tools > MOTOSYNC > SyncML

If no SyncML profile is stored on your phone, the phone prompts you to create a profile. Contact your IT system administrator to obtain the information you need to set up a profile.

Note: If your phone can't connect to the server, verify that your phone's network service provider has data service activated on your phone (additional fees may apply for this service).

file manager

Access and manage music, photos, and other multimedia files stored on your phone.



Find it:  >  Office Tools > File Manager


Select a folder to see its contents.

 
To **view** a photo or video, or **play** a sound file, just scroll to the file and select it.

To **edit** a file, scroll to the file and press **Options** to delete, rename, copy, move, send, or apply it. You can't perform some operations on some copyrighted or pre-installed files.

To **copy files** between your phone and a computer, you can use a cable connection (see following section) or a Bluetooth connection (see page 51).



cable connections

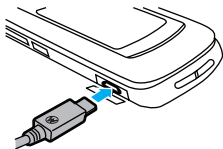

 To transfer data between your phone and a computer, insert the micro-USB connector plug from a USB cable into your phone's micro-USB port. Connect the other end of the cable to the computer.





Note: A Motorola Original USB cable and supporting software may be included with your phone. These tools also are sold separately. Check your computer to determine the type of cable you need.



To use your phone as a **modem**: Press  >  **Settings** > **Connections** > **USB Setting** > **Modem**.

To **transfer contact lists and calendar entries** between your phone and computer: Use the modem connection setting on your phone (press  >  **Settings** > **Connections** > **USB Setting** > **Modem**). You must run the optional Motorola Phone Tools accessory application on your computer. See the Phone Tools user's guide for more information.

To make **data calls** through a connected computer: Use the modem connection setting on your phone (press  >  **Settings** > **Connections** > **USB Setting** > **Modem**). Use the computer application to place or answer the call.

To create a **new data connection** on your phone, press  >  **Settings** > **Connections** > **Data Connections** > **Add a Connection**).

To **copy files** between your phone and computer, see the instructions for copying music files to the phone in your *START HERE* guide.

To **print** an image over a USB PictBridge connection: Connect your phone to a PictBridge-compatible printer, and use the print connection setting on your phone (press  >  **Settings** > **Connections** > **USB Setting** > **USB Printing**). Select the image(s) you want to print, then press **Options** > **Print via** > **USB**.

Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with an optional Bluetooth headset or Bluetooth car kit to make handsfree calls; connect with a set of Bluetooth stereo headphones to listen to music stored on your phone; connect with a computer that supports Bluetooth connections to exchange files; connect with a printer that supports Bluetooth connections to print





images; use your phone as a Bluetooth wireless modem to connect to the Internet.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

turn Bluetooth power on or off

Your phone automatically turns Bluetooth power on when you use a Bluetooth feature.

To turn Bluetooth power on or off at any time:

Find it:  >  **Settings** > **Connections** > **Bluetooth**, press **Options** > **Manage** > **Setup Bluetooth** > **Bluetooth Power** > **On**


Note: To extend battery life and maximize Bluetooth security, use this procedure to set Bluetooth power to **Off** when not in use. Your phone will not connect to another device until you use a Bluetooth feature again, or set Bluetooth power back to **On**.

use a Bluetooth headset or handsfree car kit

Before you try to connect your phone to a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the device user's guide). You can connect your phone with only one device at a time.

Find it:  >  **Settings** > **Connections** > **Bluetooth**, press **Options** > **Search For Device** > **Headset**

Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list.
- 2 Press  to connect with the highlighted device.

copy files to another device

You can copy a media file, contact, calendar event, or bookmark to another phone or computer that supports Bluetooth connections.

Note: You can't copy some copyrighted objects.

Before you try to copy a file to another device, make sure the receiving device is **on** and **ready** in discoverable mode. Also, make sure the device is not busy with another Bluetooth connection.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
 - **Send To** > **Bluetooth** for an image or sound file.
 - **Send Contact Via** > **Bluetooth** for a contact.
 - **Share Event Via** > **Bluetooth** for a calendar event.
 - **Share Page Via** > **Bluetooth** for a bookmark.
- 3 Select a recognized device name.

or




Select [**Search For All Devices**] to search for new devices, then select the device where you want to copy the object.

- 4 Press **Options** > **Send**.
- 5 If necessary, enter the device passkey (such as 0000), and press **OK** to connect to the device.

receive files from another device

Before you try to receive a file from another device, make sure your phone's Bluetooth power is **on** (see page 50).

Place your phone near the device, and send the file from the device.

If your phone and the sending device were not previously paired, place your phone in discoverable mode so the sending device can locate it (press  >  **Settings** > **Connections** > **Bluetooth**, press **Options** > **Find My Device On 3 Minutes**). The Bluetooth indicator  in the home screen flashes when your phone is in discoverable mode.

Your phone notifies you when file transfer is complete, and saves the file.

send a photo to a printer


You can send a photo to a printer that supports Bluetooth connections.

Note: You can print A4, US Letter, and 4x6 size pages. To print another size, copy the image to a linked computer and print it from there.

- 1 On your phone, take a new photo or scroll to a stored image that you want to print, then press **Options** > **Print via** > **Bluetooth**.

Note: If you see **Service Not Supported** when you try to print, select **Send To** > **Bluetooth** instead. (The **Send To** option does not print the image name or date stamp.)







- 2 Select a recognized printer name, or [Search For Printers] to search for another printer where you want to send the image.




Note: If a printer is already listed in the **My Printers** list, press  right and select **Search for All Printers** to search for another printer.

- 3 If available, modify print options.

advanced Bluetooth features

Note: A device is *recognized* after you connect to it once (see page 51).

features	
pair with recognized device	
Press  >  Settings > Connections > Bluetooth , press  left/right to select the My Devices list, press  up/down to scroll to the device name, press  to connect.	

features	
drop connection with device	
Scroll to the device name and press Options > Manage > Disconnect Device .	
remove device from device list	
Scroll to the device name and press Options > Manage > Remove Device .	
Note: You can't remove a device from the list while your phone is connected to the device.	
switch audio to Bluetooth headset or Bluetooth car kit during call	
Press Options > Use Bluetooth . To switch audio back to the phone, press Options > Use Handset .	

features

edit properties of recognized device



Scroll to the device name, press **Options**
> **Manage** > **Edit Device**.

set Bluetooth options



Press  >  **Settings** > **Connections** > **Bluetooth**,
press **Options** > **Manage** > **Setup Bluetooth**.

phone updates

Sometimes, we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated at: www.hellomoto.com/update

Note: Software updates do not affect your contact list or other personal entries or files. If you receive a software update but choose to install it later, see page 67.

other features

advanced calling

To use voice commands for calling, see page 19.

features

speed dial

Your phone can store nine phone numbers that you can call with a single keypress. To **store** a speed dial phone number:

 >  **Settings** > **Call Settings** > **Speed Dial**
> *speed dial location*

To **call** a speed dial number, press and hold the single-digit speed dial number for one second.

features

international calls



If your phone service includes international dialing, press and hold **0** to insert your local international access code (indicated by +). Then, press number keys to dial the country code and phone number.

hold a call

Press **Options** > **Hold** to put all active calls on hold.

mute a call

Press **Options** > **Mute** to put all active calls on mute.

features

call waiting



When you're on a call, you'll hear an alert if you receive a second call.

Press  to answer the new call.

- To switch between calls, press **Switch**.
- To connect the two calls, press **Link**.
- To end the call on hold, press **Options > End Call On Hold**.

To turn call waiting on or off:

 >  **Settings > Call Settings > In-Call Setup > Call Waiting > On or Off**.

make another call during a call



During a call:

Options > New Call, press **Options > Browse Contacts**

features

conference call



During a call:

Dial next number, press , press **Options > Link Calls**

transfer a call



During a call:

Options > Transfer Call, dial transfer number, press 

call forwarding



Set up or cancel call forwarding:

 >  **Settings > Call Settings > Call Forward**

call barring



Restrict outgoing or incoming calls:

 >  **Settings > Call Settings > Call Barring**

features

TTY calls



Set up your phone for use with an optional TTY device:

 >  **Settings** > **Phone Settings** > **TTY Settings**

change phone line



If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number:

 >  **Settings** > **Call Settings** > **In-Call Setup** > **Active Line**

The active line indicator shows the active phone line (see illustration on page 14).

features

fixed dial





When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

Note: You must enter your SIM PIN2 code to turn fixed dialing on or off. If you forget your PIN2 code, contact your service provider.

Turn fixed dialing on or off:

 >  **Settings** > **Call Settings** > **Fixed Dialing** > **On** or **Off**

Use the fixed dial list:

 >  **Office Tools** > **Dialing Services** > **Fixed Dial**

service dial



Dial service phone numbers stored by your service provider:

 >  **Office Tools** > **Dialing Services** > **Service Dial**

features

quick dial



Dial phone numbers stored by your service provider:

 >  Office Tools > Dialing Services > Quick Dial

DTMF tones

Activate DTMF tones:

 >  Settings > Call Settings > In-Call Setup > DTMF

Send DTMF tones during a call:

Press number keys

hyphenation

Set your phone to add hyphens to phone numbers you enter:

 >  Settings > Call Settings > In-Call Setup > Hyphenation

contacts

For basic contact list features, see your *START HERE* guide.

features


set contact storage location


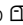



Note: You can store contacts in phone memory, SIM card memory, or both. Contacts stored on the SIM card can contain only a name and phone number. To set your default storage location:

 >  Contacts, press Options > Manage Contacts
> Contacts Settings > Default Save Location

features

add new contact

•◉ >  **Contacts**, press **Options** > **Create New Contact**

For a contact stored in phone memory: Press •◉ left/right to select the **contact details** tab , **address** tab , **picture ID** tab , **alerts** tab , or **notes** tab . Press •◉ up/down to scroll to information you want to change, then press •◉ to select it.



set contact list view

Show contacts stored in phone memory, SIM card memory, or both:

•◉ >  **Contacts**, press **Options** > **View By** > **Phone & SIM**, **SIM Card**, or **Phone Contacts**


features

call contact

•◉ >  **Contacts**, scroll to the contact, press  to call



Note: If a contact has multiple phone numbers or email addresses, press •◉ left/right to select the number or email address you want.

send message to contact

•◉ >  **Contacts**, scroll to the contact, press **Options** > **Send Message**

features

add additional phone number or email address to contact

•◂◃ >  **Contacts**, scroll to the contact, press **Options** > **Edit Contact**, press ◂◃◂◃ left/right to select the **details** tab 



Press ◂◃◂◃ up/down to scroll to an empty **Number** or **Email** field, then press ◂◃◂◃ to select it.

Note: This option isn't available for contacts stored on the SIM card.

features

set picture ID for contact

Assign a photo or picture to show in the display when you receive a call from a contact:

•◂◃ >  **Contacts** > *entry*, press **Options** > **Edit Contact**, press ◂◃◂◃ left/right to select the **picture ID** tab , > *picture*

Note: This option isn't available for contacts stored on the SIM card.

set alert(s) for contact



Assign a distinctive call alert (*ringer ID*) or message alert for a contact:

•◂◃ >  **Contacts**, scroll to the contact, press **Options** > **Edit Contact**, press ◂◃◂◃ left/right to select the **alerts** tab , > **Call Alert** or **Message Alert**

Note: This option isn't available for contacts stored on the SIM card.


features

assign contact to category

•◉ >  **Contacts**, scroll to the contact, press **Options** > **Edit Contact**, press ◉◉ left/right to select the **details** tab , > **Category**

Note: This option isn't available for contacts stored on the SIM card.

set category view

•◉ >  **Contacts**, press **Options** > **Filter By**

You can show contacts in a predefined category (**Family**, **Friends**, **Work**), or contacts in a category that you create (select **Create Category**).

features

set alert(s) or picture ID for category

Assign a distinctive call alert (*ringer ID*), message alert, or picture ID for contacts in a specified category:

•◉ >  **Contacts**, press **Options** > **Manage Contacts** > **Edit Categories** > *category*

create group mailing list

Assign contacts to a group message list or email list:

•◉ >  **Contacts**, press **Options** > **Create New** > **Message List** or **Email List**

Note: This option isn't available for contacts stored on the SIM card.

features

show contact photos

Show contacts with picture ID photos, or as a text list:

••• >  **Contacts**, press **Options** > **Manage Contacts**
> **Contacts Settings** > **Default View** > **Thumbnail** or **List**

set contact list sort order

••• >  **Contacts**, press **Options** > **Manage Contacts**
> **Contacts Settings** > **Default Sort Order** > **First Name** or **Last Name**

copy all contacts to SIM card

Copy all contacts from phone memory to the SIM card:


••• >  **Contacts**, press **Options** > **Manage Contacts**
> **Copy All to SIM Card**

features

synchronize contacts




Synchronize your contact list over-the-air direct to a corporate Microsoft® Exchange 2003 server using MOTOSYNC:

••• >  **Contacts**, press **Options** > **Manage Contacts**
> **Synchronize**

For more information, see page 47.


send contact to another device

Send a contact to another phone, computer, or device:


••• >  **Contacts**, scroll to the contact, press **Options**
> **Send Contact via** > **Bluetooth** or **Message**

features

delete contact

•◉ >  **Contacts**, scroll to the contact, press **Options**
> **Delete Contact**

delete multiple contacts

•◉ >  **Contacts**, press **Options** > **Select Multiple**, select contacts to delete, press **Options** > **Delete**

delete all contacts

•◉ >  **Contacts**, press **Options** > **Manage Contacts**
> **Delete All Contacts**

import vCard

Import contact information from a vCard electronic business card file stored on your phone.

•◉ >  **Contacts**, press **Options** > **Manage Contacts**
> **Import vCard**

advanced personalizing

features



language

Set menu language:

•◉ >  **Settings** > **Phone Settings** > **Language**

reminders

Set the reminder alert for event notifications:

•◉ >  **Settings** > **Profiles**, press •◉ left/right to select the **settings** tab , > **Reminder Alert**

clock view

Show an analog or digital clock in the home screen, or turn off the clock:

From the home screen, press **Options** > **Customize Home**
> **Clock Style**.

features

date view

Show or turn off the date in the home screen:

From the home screen, press **Options > Customize Home > Date**.

reset settings

Reset default settings for all options **except** the unlock code, security code, and lifetime timer:

 >  **Settings > Phone Settings > Reset > Reset All Settings**

features

delete data

Caution: This option **erases all information you have entered** (including contacts and calendar entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

This option does **not** delete SIM card information:

 >  **Settings > Phone Settings > Reset > Delete All Data**


features

delete SIM card information

Caution: This option **erases all information you have entered** (including contacts and calendar entries) **and content you have downloaded** (including photos and sounds) stored on your SIM card. After you erase the information, you can't recover it.

 >  Settings > Phone Settings > Reset
> Delete Memory Cards

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.



The amount of network connection time you track on your resettable timer may not equal the

amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times

See call timers:

 >  Recent Calls, press Options > Call Times



in-call timer

Show call time information during a call:

 >  Settings > Call Settings > In-Call Setup > In-Call Timer

call cost

See call cost trackers and credit information:



 >  Recent Calls, press Options > Call Costs

features

call cost setup





Set a credit limit:

 >  Recent Calls, press **Options** > **Call Costs**
> **Call Cost Setup**

data times



See data call timers:

 >  Recent Calls, press **Options** > **Data Times**

data volumes



See data volume meters:

 >  Recent Calls, press **Options** > **Data Volumes**

wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features

auto answer (headset)



Automatically answer calls when connected to a car kit or headset:

 >  **Settings** > **Phone Settings** > **Headset Settings**
> **Auto-Answer**

voice dial (headset)



Enable voice dial with headset send/end key:

 >  **Settings** > **Phone Settings** > **Headset Settings**
> **Voice Dial**

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of

network

features

network settings



See network information and adjust network settings:

 >  Settings > Network

software update



Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can install it immediately, or defer installation until later. To install a deferred software update:

 >  Settings > Phone Settings > Software Update
> Install Now

personal organizer

features


set alarm

 >  Office Tools > Alarm Clock

Shortcut: From the home screen, press press Options > Set Alarm.

turn off alarm

When the display shows an alarm:

To turn off the alarm, press **Dismiss** or .




To set an eight-minute delay, press **Snooze**.

set calendar default view

 >  Office Tools > Calendar, press Options
> Calendar Setup > Default View

features

add new calendar event

 >  **Office Tools** > **Calendar**, select the day and the start time, press , enter event details

You can set a music file, voice note, or video as a calendar event reminder. When creating a calendar event, select **Alarm Style** > *alarm type*, scroll to the file (or create a new file), press **Insert**.

see calendar event

 >  **Office Tools** > **Calendar** > *event*

To edit event details, press **Options** > **Edit**.

calendar event reminder

When the display shows and sounds an event reminder:



To see reminder details, select **Open Event**.

To close the reminder, press **Dismiss**.

features

send calendar event to another device

Send a calendar event to another phone, computer, or device:

 >  **Office Tools** > **Calendar** > *event*, press **Options** > **Share Event via** > **Bluetooth** or **Message**

manage downloaded files

Manage files and applications that you've downloaded onto your phone from the browser or over a Bluetooth™ connection:

 >  **Office Tools** > **Download Manager**

world clock

Show time and date information for multiple cities around the world:

 >  **Office Tools** > **World Clock**

features

task list

Create a checklist of tasks you need to perform, and set your phone to notify you when task deadlines arrive:

 >  Office Tools > Task List




notes

Write and store notes on your phone:

 >  Office Tools > Notes

features

record voice note

 >  Multimedia > Voice Recorder, press  to start recording, press **Stop** to stop recording

To save the voice note, press **Save**.

To perform various operations on the voice note, press **Options**.

Note: Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.

play voice note

Play back a voice note you've recorded:



 >  Office Tools > File Manager > Voice Notes
> *voice note*

features

calculator

 >  Office Tools > Calculator

currency converter

 >  Office Tools > Calculator, press **Options**
> **Set Exchange Rate**, enter exchange rate, press **Set**,
enter amount, press **Options** > **Convert Currency**

security

features

SIM PIN

Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**.

Lock or unlock the SIM card:

 >  Settings > Security > SIM Lock

lock application



 >  Settings > Security > Application Lock

features

manage certificates



Enable or disable Internet access certificates stored on your phone:

 >  **Settings** > **Security** > **Certificates**

Certificates are used to verify the identity and security of Web sites when you download files or share information.

fun & games

features

start a game or application



Start a Java™ game or application:

 >  **Multimedia** > **Games** > *game or application*

features

airplane mode

Turn off your phone's calling features in locations where wireless phone use is prohibited. This lets you use the music player and other non-network features while you are on an airplane, without interfering with airplane communications.

From the home screen, press **Options**
> **Enable Airplane Mode** > **Yes**.

To turn off airplane mode and reactivate your phone's calling features.

From the home screen, press **Options**
> **Disable Airplane Mode** > **Yes**.

service and repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was ___ W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is ___ W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to

this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

 
European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

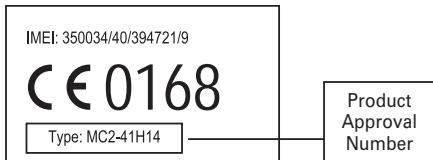

The above gives an example of a typical Product Approval Number.

OPEN SOURCE SOFTWARE INFORMATION

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device you may email your request to ossmanagement@motorola.com.

Optionally, you may choose to send your request in writing to:

MOTOROLA, INC.
OSS Management
600 North US Hwy 45
Libertyville, IL 60048
USA

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com to serve as a portal for interaction with the software community-at-large.

To see additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, follow these instructions:

- 1 From the phone Main Menu, select **Office Tools**.
- 2 From **Office Tools**, select **File Manager**.
- 3 From **File Manager**, select **OpenSource** folder.
- 4 Highlight **OpenSourceNotices.html** and press **Select**. This will launch the browser and open the notices document.

index

A

- abc mode 16
- accessories 8, 50, 66
- active line indicator 14
- active line, change 57
- airplane mode 12, 21, 71
- alarm clock 67
- alert
 - set 18, 24, 27
 - turn off 17, 30
- alert profile 24
- alert style profiles 14
- answer a call 29
- audio player 33

B

- backlight 28
- battery 9
- battery charge indicator light 2, 9
- battery indicator 14
- battery life, extend 9, 28, 29, 50
- Bluetooth indicator 13
- Bluetooth indicator light 2
- Bluetooth wireless 50
- bonding. See Bluetooth wireless
- brightness 28
- browser 36, 45, 68
- browser messages 45

C

- cables, using 49
- calculator 70

- calendar
 - add event 68
 - send event 68
 - set view 67
 - synchronize 47, 48
- call
 - answer 29
 - waiting 56
- call alert 60
- call barring 22, 56
- call forward indicator 14
- call forwarding 56
- call timers 65, 66
- caller ID 31, 60
- camera 2, 37, 40
- car kit 66
- center key 8, 18

- certificate management 71
- clear/back key 15
- clock 26, 63
- codes 22, 23
- conference call 56
- contact list
 - add entry 59
 - filter 61
 - picture ID 31
 - send contact 62
 - synchronize 47, 48, 62
 - view 61
- costs, track 65, 66
- customer support 72

D

- data call 66
- date 26, 64
- delete data 64
- delete text 15

- dial a phone number 57, 58
- dialed calls 30
- digital audio 33
- display 3, 12, 28, 63, 64
- download files 37
- download manager 68
- download media objects 45
- drafts folder 43
- DTMF tones 58

E

- earpiece volume 17
- EDGE indicator 13
- email
 - create folder 45
 - read 44, 45
 - send 44
 - setup 44
 - synchronize 47
- email address 59
- emergency number 32

- Enter Unlock Code message 22
- external display 2, 18

F

- file manager 48
- filter contacts 61
- fixed dial 57
- flip 18, 29
- forward calls 56

G

- GPRS indicator 13
- group mailing list 61

H

- handsfree speaker 2, 21
- headset 19, 66
- hold a call 55
- home screen 3, 12, 63, 64
- hyphenation 58

I

- IM 46
- IM indicators 13
- in-call indicator 14
- Incoming Call message 31
- information services 45
- instant messaging. See IM
- international access code 55

K

- keypad 29
- keypad volume, adjust 24, 25

L

- language 63
- light alert 60
- linking. See Bluetooth wireless
- location indicator 14

- lock
 - application 70
 - external keys 22
 - phone 23
 - SIM card 70
- Low Battery message 14

M

- media playback 24, 25
- media volume, adjust 24, 25
- menu 3, 12
- menu icons 12
- menu key 8
- message
 - read 43, 44
 - send 42
- message alert 60
- message indicator 13, 43
- message reminders 63
- messaging. See IM
- micro-USB port 2, 9, 49

- Missed Calls message 31
- MOTOSYNC 47, 48
- MP3 sound files 33
- multimedia message 42, 44
- music player 33
- mute a call 55

N

- navigation key 8, 18
- network settings 67
- notes 69
- numeric entry mode 17

O

- open to answer 29
- optional accessory 8
- optional feature 8

P

- pairing. See Bluetooth wireless
- passwords. See codes

- personalize 63
- phone number
 - store 59
 - your number 57
- photo 37
- picture ID 31, 60
- PIN code 22, 70
- PIN2 code 22, 57
- predictive text entry 15
- printing 50, 52
- profile indicator 14
- profiles 14, 24

Q

- quick dial 58
- quick note 44

R

- received calls 30
- recent calls 30
- redial 30

- reminders 63
- repairs 72
- reset settings 64
- resolution 39
- return a call 18, 31
- ring style 18
- ringer ID 31, 60
- ringer volume, adjust 24, 25
- ringtone 24, 27, 35

S

- screensaver 27, 28
- security code 22
- service dial 57
- side select key 2, 18, 19
- signal strength indicator 13
- silent mode 18
- silent profile 24
- SIM Blocked message 70
- SIM card 22, 57, 70
- SIM card, delete information 65

- skin 27
- smart key 18
- soft keys 12
- software update 54, 67
- speakerphone 66
- speed dial 55
- store phone numbers 59
- support 72
- symbol entry mode 17
- synchronize 47, 48

T

- task list 69
- technical support 72
- text edit 15
- text entry 14
- text entry mode 16
- text message 42
- text messaging 42
- text templates 44
- theme 27

time 26
timers 65, 66
transfer a call 56
TTY device 57

U

unlock
 application 70
 external keys 22
 phone 22, 23
 SIM card 70
unlock code 22, 23
USB cables 49

V

vibrate mode 18
vibrate profile 24
video 40
voice command key 2, 19
voice commands 19
voice dial 19, 66

voice note 69
voicemail 32
voicemail message indicator 32
volume 17, 24, 25
volume keys 2, 17

W

wallpaper 27
Web pages 36
word text entry mode 15
world clock 68

U.S. patent Re. 34,976



www.motorola.com