



MOTO™ EM325

 
User's Guide

 
HELLOMOTO

Introducing your new **MOTO™** EM325 wireless phone! It's a slim, easy-to-use music phone with a sleek design that's sure to get attention.

- **My Phone, My Way** – Customise your home screen (page 31) with personal pictures taken with your phone's **camera**, and download a chart-topping track and use as your ringtone.
- **Connect on So Many Levels** – Whether it's with work or friends, stay connected with voice (page 24) and messaging (page 47).
- **Rich Music Experience** – Use the music player (page 50) to set your playlist for your morning commute. Or, use the FM Radio (page 53) to listen to your favourite music or news programs. With a stereo wired headset or high quality **Bluetooth®** stereo headset, listening has never been easier.
- **Camera** – Capture key moments with **photos** (page 54).
- **Convenient Extras** – When you are away from your home or desk, make use of handy tools like Phonebook, Calculator, Alarm Clock, Calendar, and others (page 66).
- **Fun** – When you have a little time to spare, why not surf the web (page 58) or play a game (page 59).


Here's a quick anatomy lesson:

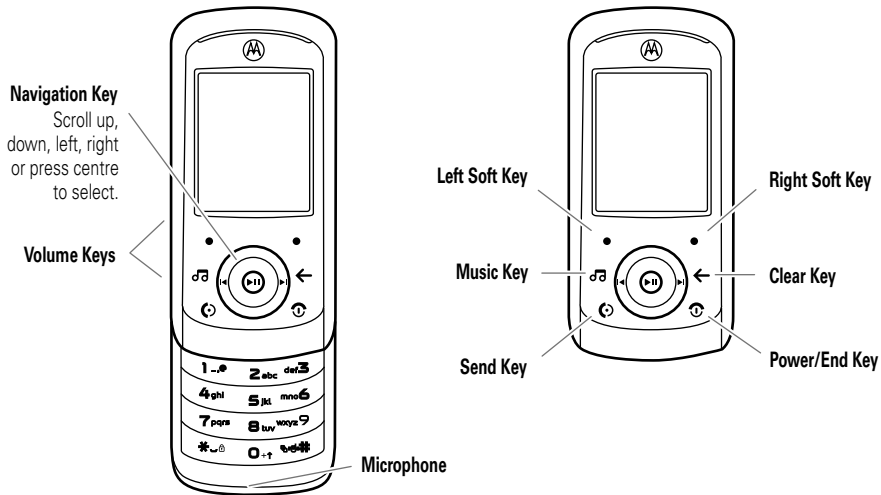

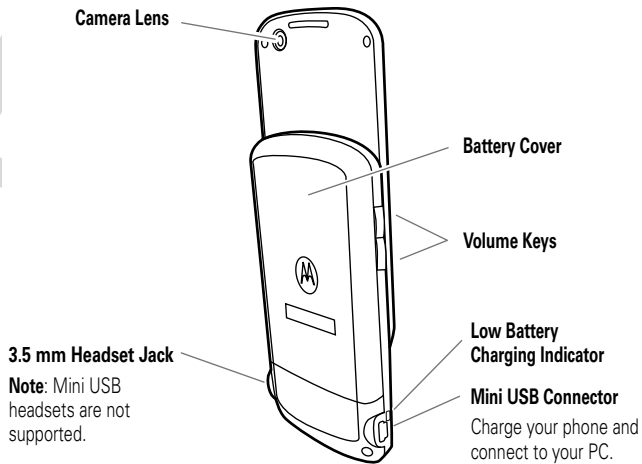

A few menu basics:

 
Home Screen

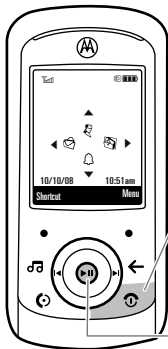



1 Press and hold the **Power Key**  for a few seconds, or until the display lights up, to turn on your phone.

 2 Press the **Centre Key** () to open the **Main Menu**.

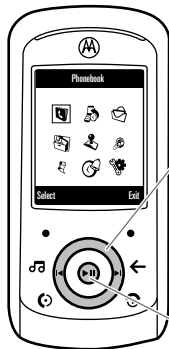Main Menu



3 Press the **Navigation Key** **up, down, left, or right** () to highlight a menu feature.

4 Press the **Centre Key** () to select it.

This is a typical home screen and main menu layout. **Your phone may be a little different.**

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft and Windows are registered trademarks

of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2008. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68XXXXX320-A




contents


menu map	8	call a stored number	25	screen saver	33
Safety Information	10	your phone number	25	colour style	33
FCC Notice	14	basics	26	backlight	33
Use and Care	15	home screen	26	more customising features .	33
EU Conformance	16	status indicators	26	master reset	34
Recycling Information	17	volume keys	27	master clear	35
get started	18	handsfree	27	calls	36
about this guide	18	memory card	27	redial a number	36
SIM card	19	codes & passwords	28	recent calls	36
memory card	19	lock & unlock phone	28	return a missed call	37
battery	20	lock & unlock keypad	29	call waiting	37
turn it on & off	24	tips & tricks	30	quick dial	37
make a call	24	customise	31	notepad	38
answer a call	24	change home screen	31	emergency calls	38
change ring alert	24	ring styles & alerts	31	call times	38
store a number	25	answer options	32	in-call menu	39
		wallpaper	32	headset	40

advanced calling	41	WebAccess	58
text entry	43	fun & games	59
set entry modes	43	connections	60
tap method	45	Bluetooth® wireless	60
iTAP™ method	45	cable connections	63
numeric method	46	USB setting	65
delete letters & words	46	tools	66
symbol method	46	personal organiser	66
messages	47	phonebook	67
send a message	47	network	67
quick text	47	service & repairs	68
receive a message	48	SAR Data	69
voicemail	48	Hearing Aids	70
more message features	49	WHO Information	71
entertainment	50	Registration	71
music player	50	Privacy and Data Security	72
FM radio	53	Driving Safety	73
camera	54	index	75
pictures	55		
voice notes	57		

menu map

main menu

-  **Phonebook**
-  **Recent Calls**
 - Received Calls
 - Dialed Calls
 - Notepad
 - Erase All
 - Call Time
 - Call Cost *
 - GPRS Data Counter
 - GPRS Connection Time
-  **Messages**
 - Create Message
 - Message Inbox
 - Outbox
 - Drafts
 - Voicemail
 - Browser Msgs
 - Quick Notes
 - MMS Templates

-  **Tools**
 - Calculator
 - Shortcuts
 - Chat *
 - SIM Toolkit *
 - Calendar
 - Lantern

-  **Games & Apps**

-  **WebAccess**
 - Browser
 - Web Shortcuts
 - Go To URL
 - History
 - Web Sessions
 - Web Settings

* Network Dependent

-  **Multimedia**
 - Camera
 - Music Library
 - Pictures
 - Voice Notes
 - FM Radio
 - My Picture

-  **Alarm Clock**

-  **Settings**
 - (see next page)

This is the standard main menu layout.
Your phone's menu may be different.

settings menu



Personalise

- Home Screen
- Colour Style
- Wallpaper
- Screen Saver
- Slide Tone
- Quick Dial



USB

- USB Modem
- USB Disk



Bluetooth Link

- Find Me
- Add Audio Device
- Setup



Ring Styles

- Style
- Style Detail



Call Forward

- When Busy
- No Reply
- Not Reachable
- Not Available
- All Calls
- Cancel All



In-Call Setup

- Dialling Prefix
- In-Call Timer
- Call Cost Setup *
- Show Number
- Call Waiting
- Anykey Answer
- Session Information
- Auto Redial



Headset & Car Setting

- Auto Answer



Airplane Mode

- Airplane Mode
- Prompt at Power Up



Initial Setup

- Time and Date
- Slide Closed
- Backlight
- Language
- Brightness
- Input Mode
- Connection Indicator
- Master Reset
- Master Clear
- Format Memory Card



Phone Status

- My Tel. Number
- Active Line *
- Battery Meter
- Storage Devices



Security

- Phone Lock
- Keypad Lock
- Lock Application
- Fixed Dial *
- Call Barring
- Call Restriction
- SIM PIN
- New Passwords



Network *

- New Network
- Network Setup
- Available Networks
- Service Tone
- Call Drop Tone



Lantern

- 30 Seconds
- 1 Minute
- 2 Minutes

* Network Dependent

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using

your mobile device with your implantable medical device, consult your healthcare provider.

Driving Precautions

The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving.

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Responsible driving practices can be found in the "Smart Practices While Driving" section in this guide (or separate guide).

Operational Warnings

Obey all posted signs when using mobile devices in public areas.







Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries & Chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see the "battery use & safety" section in the user's guide.

Keep Your Mobile Device and Its Accessories Away From Small Children

These products are not toys and may be hazardous to children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To

protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.

- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at www.motorola.com/hearingsafety (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Mar0108

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

 
European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

Approval Number from your product's label in the "Search" bar on the Web site.

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

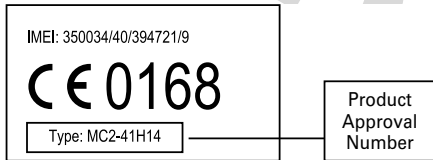

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the Product

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Device and Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling

Disposal of your Mobile Device Packaging and User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.





get started


about this guide

This guide shows how to locate a menu feature as follows:

Find it:  >  Recent Calls > Received Calls

This means that, from the home screen:

- 1 Press the *centre key*  to open the main menu.
- 2 Scroll to  **Recent Calls** and press the centre key .
- 3 Scroll to **Received Calls** and press the centre key .

Tip: Press the centre key  or **Select** to select a highlighted option.

symbols



This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

SIM card

 
Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and contacts. It can also contain your voicemail and text message settings.

If you put your SIM card in another phone, that phone uses your phone number.


Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Tip: Make sure your SIM card is fully inserted into the phone before installing the battery.


1

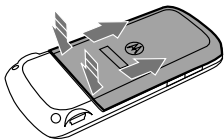

2

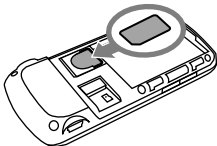 


memory card

You can use a removable microSD memory card (up to 2 GB) with your phone to store and retrieve multimedia objects, such as music and pictures. 

Note: Motorola approved SanDisk cards are recommended for cards greater than 1 GB.

 install the memory card

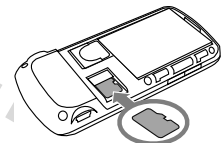To install the memory card, make sure the memory card's metal contacts are facing down. Slide the top of the memory card under the metal band and into the holder. 

remove the memory card

To remove the memory card, gently but firmly push down on the card and slide out.

battery

battery use and safety

IMPORTANT: HANDLE AND STORE BATTERIES PROPERLY TO AVOID INJURY OR DAMAGE.

Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the phone or battery come in contact with water.** Water can get into the

phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your carrier or contact Motorola even if they appear to be working properly.

- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
 - Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
 - Avoid leaving your phone in your car in high temperatures.

DOs

- **Do avoid dropping the battery or phone.**
Dropping these items, especially on a hard surface, can potentially cause damage.
- **Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.**

IMPORTANT: USE MOTOROLA ORIGINAL PRODUCTS FOR QUALITY ASSURANCE AND SAFEGUARDS. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a “Motorola Original” hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola

batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a “Motorola Original” hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Center.

Important: Motorola’s warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

PROPER AND SAFE BATTERY DISPOSAL AND RECYCLING

Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)

 
Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.




Warning: Never dispose of batteries in a fire because they may explode.

install the battery


1

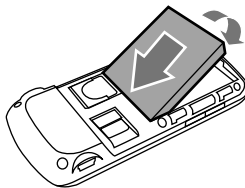

2

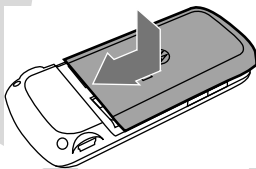 


remove the battery

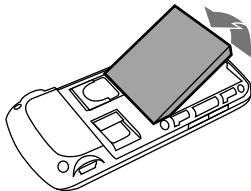 

Note: Your battery is intentionally tight fitting to ensure consistent connection.

charge the battery

 New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. The low battery charging indicator will light and remain ON,

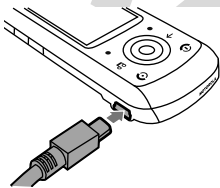

until the battery has enough charge to power up the phone display.


The phone shows **Charging Complete** when finished.

 
Notes for charging your phone's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.


Note: You can also use a PC USB port to charge your phone battery. Before connecting your phone to your PC, download and install the charging software driver from www.motorola.com/support.

turn it on & off


To turn on your phone, press and hold  for a few seconds or until the display turns on.

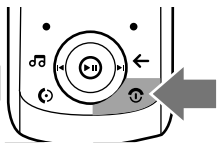


If prompted, enter your four-digit unlock code. Your phone's four-digit **unlock code** is originally set to **1234** or the last four digits of your phone number (see page 28).

To turn off your phone, press and hold  for a few seconds.


make a call


Enter a phone number and press  to make a call. See page 36 for more calling features.

To hang up, press .

Tip: Is your caller saying they can't hear you? Make sure your finger is not covering the microphone (see page 2).

answer a call

When your phone rings and/or vibrates, press  or slide open to answer. See page 32 for answer options.

To hang up, press .

change ring alert

Find it:  >  Settings >  Ring Styles

Available options are **Loud**, **Soft**, **Vibrating**, **Vibe & Ring**, or **Silent** (see page 31).


store a number

You can store up to 1000 phone numbers in **Phonebook**:

- 1 Enter a number in the home screen, and press **Save**.
- 2 Enter a name and other details for the phone number.
- 3 Press **Save** to store the number.

call a stored number

Find it:  >  **Phonebook**

- 1 Scroll to the entry.
- 2 Press  to call the entry.

Shortcut: In **Phonebook**, enter the first letters of an entry to get to it quickly.

Tip: Set the **Phonebook** icon as a **Home Screen** navigation key for even faster access (see page 31).

your phone number

Find it:  >  **Settings** >  **Phone Status** > **My Tel. Number**

 
Tip: Want to see your phone number while you're on a call? Press **Options** > **My Tel. Number**.

basics

See page 2 for a basic phone diagram.


home screen

When you turn on your phone, the *home screen* displays.

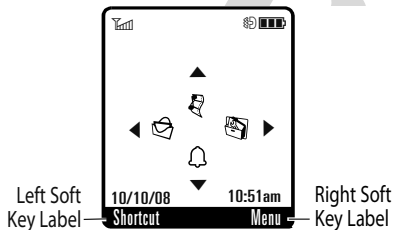


Note: Your home screen might look a little different from this example.

Soft key labels show the current soft key functions. For soft key locations, see page 2.

Press the *navigation key*  up, down, left, or right to select items in the home screen.

status indicators

 Status indicators can appear at the top of the phone:

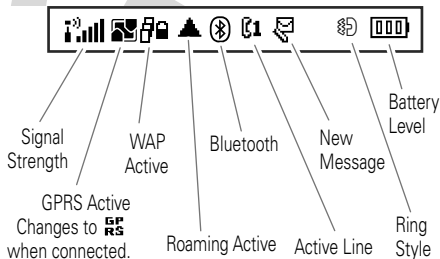

volume keys

Press the volume keys on the side of the phone to:

- Change earpiece or speakerphone volume during a call.
- Change ringtone volume (if the phone is in idle state, not in a call and not playing music).
- Change volume when playing music.

Note: When listening to music using a Bluetooth stereo device (headset or car stereo), use the volume control keys **on the device** to increase/decrease music volume

handsfree

You can use your phone's handsfree speaker to make calls without holding the phone to your ear. To turn the speaker on during a call, press **Speaker**. To turn the speaker off, press **Speaker** again.

You can also use an optional 3.5 mm wired headset, or Bluetooth® headset, to go handsfree.

Note: Mini USB headsets are not supported.




memory card

You can store multimedia content, such as songs, and photos, on your phone's internal memory or on an optional memory card.




Note: You cannot download a copyrighted file and store it on your memory card.

format memory card

You need to format a memory card, **using the phone**, before using it for the first time. This creates the necessary folders and ensures your phone can read the contents of the card. Your phone will prompt you if you need to format your memory card.

Note: To manually format the memory card press  >  **Settings** >  **Initial Setup** > **Format Memory Card**.

Caution: Formatting the memory card erases all content on the card.

Note: To access music stored on your microSD memory card, press . To access pictures stored on your microSD memory card, press  >  **Multimedia** > **Pictures** > **All Pictures**, then press **Options** > **Switch Storage** > **Memory Card**. All music files are displayed no matter where they are stored. Picture files must be stored in the memory card **mobile\Picture** folder. If there are no files stored on your memory card, your phone will automatically switch to its internal memory.

codes & passwords

Your phone's four-digit **security code** is originally set to **1234** or to the last four digits of your phone number.

Your service provider may reset this codes If not, you should change it to protect your personal information. The unlock code must contain four digits.

To change a code or password:

Find it:  >  **Settings** >  **Security** > **New Passwords**

Note: If you forget your security code, contact your service provider.

lock & unlock phone

You can lock your phone with a four-digit code to keep others from using it.

Note: You can make emergency calls on a locked phone (see page 38). A locked phone still rings or vibrates for incoming calls or messages.

To lock your phone:

Find it:  >  **Settings** >  **Security** > **Phone Lock** > **Lock Now** or **Automatic Lock**

Enter the four-digit unlock code and press **OK**. Your phone first displays **Phone Locked**, and then shows **Phone Lock Code** until the next time you unlock your phone.




To unlock your phone, enter your four-digit code and press **OK**.

To change phone lock code:


Find it:  >  Settings >  Security > New Passwords
> Phone Lock Code

lock & unlock keypad

The keypad will automatically lock **when the slider is closed**, if the **Keypad Lock Timer** is On.







To turn the timer on, press  >  Settings >  Security > Keypad Lock > Timer > 2 Seconds, 4 Seconds or 8 Seconds.




To unlock your keypad **with the slider closed**, press any key and select **Unlock** > **OK**.

To lock your keypad **with the slider open**, press and hold .

tips & tricks

From the home screen (page 26), you can use shortcuts:


To...	Do this...
take a photo	Press  >  Multimedia > Camera to activate the camera and press  to take a photo.
see recently dialled numbers	Press  .
use application shortcuts	Press the left and right soft keys or the navigation key  .
access voicemail	Press and hold  .

To...	Do this...
change ring style	Press and hold  .
access music player	Press  .
access FM radio	Press and hold  .

customise

change home screen

Find it:  >  Settings >  Personalise > Home Screen
> Home Keys

options	
Show Icons	Show or hide the home screen shortcut icons.
Up, Down, Left, Right	Choose the features that open when you press the navigation key () up, down, left, or right in the home screen.

ring styles & alerts

Your phone rings and/or vibrates to notify you of an incoming call or to signal certain other events. This ring or vibration is called an *alert*.

set a style

There are times when you want to hear your ringtone, and there are times when you don't.




Find it:  >  Settings >  Ring Styles

Choose from the pre-programmed styles, including **Vibrate** and **Silent**.

set alerts

Set alerts for different events, such as getting a message in your inbox or receiving a call.

Find it:  >  Settings >  Ring Styles

- 1 Scroll to *Style Detail* and press .
- 2 Scroll to an alert type and press .
- 3 Scroll to the desired detail setting and press .

Note: Your phone plays a sample of each highlighted setting. Ringtones play through the speakerphone, unless you're using a headset.




answer options

Set your phone to *Anykey Answer*.



Find it:  >  Settings >  In-Call Setup > *Anykey Answer*

wallpaper

Set a picture as a wallpaper (background) image in your home screen.

Find it:  >  Settings >  Personalise > Wallpaper

To select a wallpaper image:



- 1 Scroll to **Picture** and press .
- 2 Scroll to the picture you want and press .

or

Select **Off** to turn off wallpaper.

Note: Your phone shows a sample of each highlighted image.

To adjust wallpaper image layout:

- 1 Scroll to **Layout** and press .
- 2 Scroll to **Centre**, **Tile** or **Fit-to-screen**, and press .

screen saver

Set a picture as a screen saver image. The screen saver displays when there is no phone activity.

Find it:  >  Settings >  Personalise > Screen Saver

To select a screen saver:




- 1 Scroll to **Picture** or **Photo Album** and press .
- 2 Scroll to the image you want and press .

or




Select **Off** to turn off the screen saver.

Note: Your phone shows a sample of each highlighted image.

colour style

To choose a **Colour Style** (or skin) that sets the look and feel of your phone's display, press  >  Settings >  Personalise > Colour Style.

backlight

To select a time period that the backlight remains on, press  >  Settings >  Initial Setup > Backlight.

more customising features

features

ring volume

 >  Settings >  Ring Styles > *Style Detail* > Ringing Volume

slide tone

 >  Settings >  Personalise > Slide Tone

keypad volume

 >  Settings >  Ring Styles > *Style Detail* > Key Tone Volume

features

reminders

Set your phone to play reminder alerts for unread messages, missed calls, or voicemail messages that you receive:

 >  Settings >  Ring Styles > *Style Detail* >




Reminders

set time and date

 >  Settings >  Initial Setup > Time and Date

slide closed

Set your phone to continue or end a task when the slide is closed:

 >  Settings >  Initial Setup > Slide Closed

text layout

Set home screen text to be **Left Justified**, **Centered** or **Off**:

 >  Settings >  Personalise > Home Screen > Layout




features

clock view

Show or hide a digital clock on the home screen:

 >  Settings >  Personalise > Home Screen > Clock

menu language

 >  Settings >  Initial Setup > Language

master reset

features

master reset

Reset all options except unlock code, security code, and lifetime timer:

 >  Settings >  Initial Setup > Master Reset

To reset all options, you need to enter the **Security Code** (**default 1234**).

master clear

features

master clear

Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries.

This option erases all user-entered information stored in your phone memory, including Contacts entries and downloaded files. Once you erase the information, it cannot be recovered. It resets all options to their factory settings except for the unlock code, security code, and lifetime timer.



•◂ > ⚙ Settings > ⌚ Initial Setup > Master Clear

To reset all options, you need to enter the **Security Code (default 1234)**.

calls

To make and answer calls, see page 24.

redial a number

- 1 From the home screen, press  to see a list of recently dialled calls.
- 2 Scroll to the entry you want to call and press .


recent calls

Your phone keeps lists of the calls you recently received and dialled, even if the calls didn't connect. The lists are sorted from newest to oldest calls. The oldest calls are deleted as new calls are added.

Find it:  >  Recent Calls > Received Calls or Dialled Calls

- 1 Scroll to an entry.

Note: A ✓ next to a call means the call connected.

- 2 Press  to call the number.



To see call details (such as time and date), press **Options > View**.

Press **Options** (left soft key) while viewing a list of recent calls to see these options:

option	
View	View the entry.
Delete	Delete the entry.
Call	Call the entry.

option	
Send Message	Create a new text message with the number in the To field.
Save	Save the entry in the Phonebook .
Block	Block calls from a phone number.
Custom Block List	View a list of blocked phone numbers. Unblock numbers.

return a missed call

When you miss a call, your phone plays an alert, displays the  (missed call) indicator on the home screen. Press **View** to see the details and press  to call the number.

To view your missed calls at any time:


Find it:  >  **Recent Calls** > **Received Calls**

To hear a voicemail message, see page 48.

call waiting

If you **receive a second call** while you are already on a call:



- To answer the second call and put the first call on hold, press  or the **Answer** soft key. To switch between the calls, press **Switch** again.
- To send the second call to your voicemail, press **Ignore**.

quick dial

Your phone can store nine phone numbers that you can call with a single key press. To **store** a quick dial phone number:

Find it:  >  **Settings** >  **Personalise** > **Quick Dial**


To **call** a quick dial phone number, press and hold the single-digit quick dial number from the home screen.

notepad

The most recent set of digits that you entered are stored in your phone's *notepad* memory.


To retrieve a number in the notepad:

Find it:  >  Recent Calls > Notepad

Press  to call the number or press **Save** to store the number in **Phonebook**.

emergency calls


Your service provider programs emergency phone numbers (such as 112 or 911) that you can call under any circumstances, even when your phone is locked.

- 1 Enter the emergency number.
- 2 Press .

Note: Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may

not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

call times

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.







The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

features

set in-call timer

 >  Settings >  In-Call Setup > In-Call Timer




features
call cost setup 
 >  Settings >  In-Call Setup > Call Cost Setup
view call times
 >  Recent Calls > Call Time
Scroll to Last Call, Dialed Calls, Received Calls, All Calls, or Lifetime, and press Select.

in-call menu





During a call you access the in-call menu by pressing Options.

features
show available phone line
Options > My Tel Number
Scroll to a line and press Select.





features
hold the call
Options > Hold
mute the call
Options > Mute
use Bluetooth
Options > Bluetooth Link
show contacts
Options > Phonebook
make another call 
Options > New Call
show dialled calls
Options > Dialed Calls
show received calls
Options > Received Calls








features
show messages Options > Messages
show calendar Options > Calendar
change dialling prefix Options > Dialling Prefix

headset

features
<p>auto answer </p> <p>Automatically answer calls when connected to a headset:</p> <p> >  Settings >  Headset & Car Setting > Auto Answer</p> <p>Note: Both mono and stereo headsets are supported for voice only.</p>
<p>change volume</p> <p>Press volume keys on the side of the phone up or down to change the headset volume during a call.</p> <p>Note: When listening to music using a Bluetooth stereo device (headset or car stereo), use the volume control keys on the device to increase/decrease music volume</p>

advanced calling




features
international calls 
If your phone service includes international dialling, press and hold 0 to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.
call forward
Set up or cancel call forward:  >  Settings >  Call Forward

features
speed dial
Each Phonebook entry you store is assigned a unique speed dial number. To display the speed dial number allocated to a contact number:  >  Phonebook > entry To speed dial a number, enter the speed dial number and press # then  .
restrict calls 
Restrict outgoing or incoming calls:  >  Settings >  Security > Call Barring Select Outgoing Calls , Incoming Calls or Cancel All and press Select . When prompted, enter the unlock code (supplied by your service provider) and press OK .

features

airplane mode

Turn off your phone's calling features in locations where wireless phone use is prohibited. This let's you use the music player and other non-network features while you are on an airplane, without interfering with airplane communications.

 >  Settings >  Airplane Mode

To reactivate your phone's calling features, turn off airplane mode.

text entry

Some screens allow you to use the keypad to enter text, such as when you compose a message.




set entry modes

Multiple text entry modes make it easy for you to enter names, numbers, and messages:

entry mode	
Primary Secondary	Enter text using a method that you set.
Number	Enter numbers only (see page 46).
Symbol	Enter symbols only (see page 46).


To assign a Primary or Secondary text entry mode:

- 1 In a text entry screen, press **Options**.

- 2 Scroll to **Input Setup** and press .
- 3 Scroll to **Primary** or **Secondary** and press .
- 4 Scroll to one of the following choices and press .

options	
iTAP™	Let the phone predict each word as you press keys.
TAP	Enter letters and numbers by pressing a key one or more times.

To change the text entry mode:

Press  repeatedly in a text entry screen until the desired mode is displayed.

To select or edit a text entry mode:

Press **Options > Input Mode**, in a text entry screen, and select the desired entry mode.

capitalisation

Press **⌘** in any text entry screen to change the text case. These indicators show capitalisation status:

indicator	
ab	no capital letters
AB	all capital letters
Ab	capitalise next letter only

text entry mode indicators

When you select the **Primary** or **Secondary** text entry mode, the following indicators identify the text entry setting:

primary	secondary	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalise next letter
1↑	2↑	Tap, all capital letters
1□	2□	iTAP™, no capital letters
1↑	2↑	iTAP, capitalise next letter
1↑	2↑	iTAP, all capital letters

These indicators identify **Numeric** or **Symbol** entry mode:


indicator	
12	number mode
@	symbol mode

tap method

Regular **Tap** method cycles through the letters and numbers of the key you press.


- 1 Press a key one or more times to cycle through its characters.
- 2 Repeat the step above to enter all characters.

Tip: Press  to insert a space.

In a text entry screen you can press  to switch entry modes. If **Tap** is not available as the **Primary** or **Secondary** entry mode, see page 43.

iTAP™ method


The iTAP software combines your single key presses into common words, and predicts each word as you enter it. This can be faster than the **Tap** method.

- 1 Press  right or left to scroll through the possible letter combinations, and highlight the combination you want.

 
- 2 Press  to enter the highlighted combination.

You can press keys to add more letters to the end of the combination.

or

Press  to enter the highlighted combination and insert a space.

For example, if you press **7 7 6 4**, your phone displays the corresponding letter combinations:

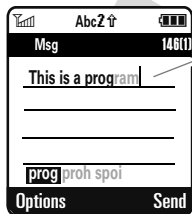

Press **⬆** up to accept **program**, press down to reject and continue.

Press **⬆** right or left to see other word suggestions.

numeric method

In a text entry screen, press **#** to switch entry methods until your phone displays the **12** (numeric) indicator.

Press keypad keys to enter numbers. When finished, press **#** to switch entry modes.

delete letters & words

Move the cursor to the right of the text you want to delete and then:

- Press **⬅** to delete one letter at a time.
- Press and hold **⬅** to delete the entire message.

symbol method

In the text entry screen, press **#** to switch entry methods until your phone displays the **@** (symbol) indicator.

- 1 Press a key one or more times to show possible symbol combinations at the bottom of the screen.
- 2 Scroll left or right to highlight a symbol and press **⬆** to enter it.

messages

You can send and receive text (SMS/EMS) and multimedia (MMS) messages, as well as access your voicemail from the Messages feature. Each message type allows you to attach different objects. The available options show in the **Insert** menu.



Note: Your phone can store a maximum of 750 SMS messages, shared between the **Inbox**, **Outbox** and **Draft** folders.


send a message

Find it:  >  Messages > Create Message


- 1 Select a message type and enter the message text.
- 2 To insert a picture, sound, or other object, press **Options** > **Insert**.

- 3 When you finish typing the message, press **Send**. Choose one or more people to send to.
- 4 Press **Send** (left soft key).

quick text

Set your home screen to access the  **Quick text** option so that you can send messages faster.

Find it:  >  Settings >  Personalise > Home Screen > Home keys > Up, Down, Left or Right > Quick TEXT

After setup you can quickly access the text entry screen by pressing the navigation key direction you set for  **Quick TEXT**.

receive a message

When you receive a message, your phone plays an alert, and displays a new message notification on the home screen. Press the **View** softkey to read the message immediately, or save it in your message inbox for viewing later. To read messages in your message inbox:

Find it:  >  **Messages** > **Message Inbox**

Scroll to the message you want to read. Press **Select** to open the message. For MMS messages, your phone displays the media object, then the message.

voicemail

Your network stores the voicemail messages you receive.



When you **receive** a voicemail message, your phone shows an indicator and **New Voicemail**. Press **Call** to call your voicemail.

To check your voicemail messages:

Find it:  >  **Messages** > **Voicemail** > 

Note: Your service provider may have assigned speed dial number **1** for calling voicemail and may provide additional information about using voicemail.

To set up voicemail

 >  **Messages** > **Options** > **Voicemail Setup**

more message features

features
use MMS template Select a preloaded multimedia template: • > Messages > MMS Templates
view sent, received and draft messages • > Messages > Message Inbox, Outbox or Drafts
erase messages Delete all messages or only messages from one folder: • > Messages > Options > Cleanup Messages Select All, Inbox, Outbox, or Drafts.
view the message memory status • > Messages > Options > Memory Meter > SMS Status or MMS Status


entertainment

music player

Use your phone to play MP3, MIDI, AAC, AMR and WAV music file types:

Find it:  >  Multimedia > Music Library > All Songs > song



Shortcut: Press  to access Music Library directly.

Note: Your phone may not play MP3 files that have a bit rate higher than 320 kbps. If you try to download or play one of these files, your phone may display an error message or ask you to delete the file.

Tip: Connect a stereo headset for high quality music playback.

From the **Music Player**, open one of the following:

tab	
Now Playing	Select the track that is currently playing.
All Songs	Select a track to show or play songs.
Playlists	Play and manage your playlists.

tab	
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.
Genres	Select a genre of music to show or play its songs.

music player controls

function	
scroll through song list	Before music playback, press up or down.
play/pause/resume	Press .
fast forward	Press & hold right (for at least two seconds).
next/previous song	Press & release right/left.

function	
rewind	Press & hold left (for at least two seconds).
hide	Press Options > Hide to minimize the music player
turn off	Press Back .

Tip: You can listen to music as you travel. Use Bluetooth® A2DP enabled devices, such as stereo headphones, for enhanced music quality and use Bluetooth AVRCP enabled devices, such as car stereos, to control playback. When listening to music using a Bluetooth stereo device (headset or car stereo), use the volume control keys **on the device** to increase/decrease music volume.

playlists

Find it: > **Multimedia** > **Music Library** > **Playlists**

- To create a new playlist, press **Create New Playlist**.
- To select and play a playlist, scroll to the playlist and press **Options > Play**.

music playlist options

option	
Play	Play a track or playlist.
Create New	Make a new playlist.
Manage	Rename or Delete a playlist.
Music Setup	Select Shuffle or Repeat .
View Free Space	View the storage space available.

get music

Copy music to your phone's memory card.

Connect:

With a memory card inserted and your phone in the home screen, insert the USB cable in your phone and your Windows™ PC.

Note: Your phone operates with Microsoft™ Windows™ XP™ and Windows™ Vista™. Other operating systems may not be compatible with your phone.

Note: For USB cable connection details, see page 63.

USB drag and drop:


- 1 Use the My Computer window to find "Removable Device".
- 2 Drag and drop music files that you want to save anywhere on the memory card.

 
Note: A file name (including the path) must be less than 255 characters. For example, if you copy songs into a folder you create that is named "MyMotoSongs," the name of any song PLUS the

name of the folder “MyMotoSongs” must be less than 255 characters..




- 3 When you're done, use the **Safely Remove Hardware** feature to finish.

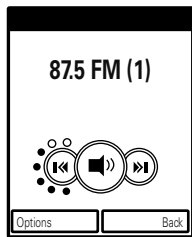

FM radio

Find it: Press and hold 




To use the **FM Radio** you need to connect a stereo headset to the **3.5 mm headset jack**.

- Press  up or down to change the frequency.
- Press  left or right to scan for preset radio stations.
- Press the up or down volume keys on the side of the phone to adjust the volume.
- Press  to mute the radio.

Tip: To set the FM radio to play as your alarm sound, press  >  **Alarm Clock** and select the **FM Radio** option to choose your favourite channel.

set radio presets

- 1 Tune in the desired frequency by pressing  up or down, or press **Options** > **Scan** to scan for all available radio stations.
- 2 Press and hold a number key to save that number as the preset.

use radio presets

From the main FM radio screen, press a key pad number to jump to a preset station.

To manage your station presets:

- 1 Press **Options** > **Manage Presets** to store, rename or delete radio presets.
- 2 Press **Up** or **Down** to select a preset.

camera

Your camera lens is on the back of your phone (see page 3). **To get the clearest pictures, wipe the lens clean with a soft dry cloth before taking a picture.**

take a photo

Press **Home** > **Multimedia** > **Camera** to access the camera, then press **Shutter** to capture your image. To save your picture, press **Save**.

Note: Slide your phone open to take photos.

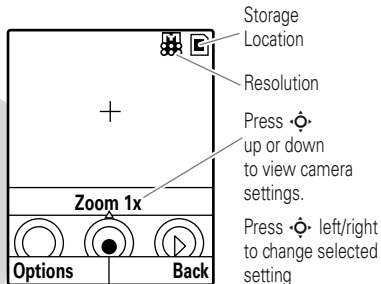 


photo options

Before you take your photo, press **Options** to open the camera menu:

options	
Go to Picture	Switch to the Pictures menu.
Auto-Timed Capture	Turn the auto-timed capture to 5 sec or 10 sec .
Camera Setup	Set the Resolution , Quality , Shutter Sound or Status Icon .
Switch Storage	Store your photos to the Phone Memory and Memory Card .
Free Space	Shows the Total Space , Used Space and Free Space on your storage device.

After you capture your photo, you can press **Options** to open the **Picture Options** menu:

options	
Store Only	Save the photo and return to the viewfinder.
Discard	Discard the photo and return to viewfinder.
Apply as	Set the photo as a wallpaper (background) image or a screen saver image.
Detail	Show the photo File Type , File Size and Resolution details.
MMS Postcard	Send your photo as an MMS.

 
pictures

Find it:  >  Multimedia > My Picture

Use the **My Picture** feature to edit or crop your photos.

edit pictures

Find it:  >  Multimedia > My Picture > Editor

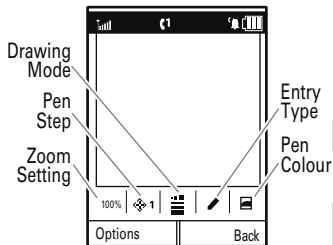

Press **Options** to open and edit your picture.

options	
Open	Open an existing picture or take a new one.
Save	Save your image with a unique file name.

options	
Pen Attribution	Change the pen mode (mode, color, size, and step).
Zoom In	Zoom in on an area of your image.
Zoom Out	Zoom out to see more of your image.
Stamp Options	Creates a small image stamp of your picture.
Rotate	Rotate your image (Clockwise 90°, Counterclockwise 90° or 180°).
Picture Size	Set the dimensions of your image.
Clear Screen	Remove the current image from the screen.

crop pictures

Find it:  >  Multimedia > My Picture > Cropper



To crop a stored picture select **Picture**. To create a new picture for cropping, select **Camera**.


Press **Options** to see the **Crop** menu.

options	
Open	Open another stored picture or take a new one with the Camera .
Save	Save your image
Crop size	Enter the crop size.
Crop shape	Select the crop shape.

voice notes

Find it:  >  Multimedia > Voice Notes

 Use the **Voice Notes** feature to record reminders or voice notes to send in a message. Press  to start and pause recording. When you have finished recording press **Stop**. Enter a name for your file and press  to save the file.

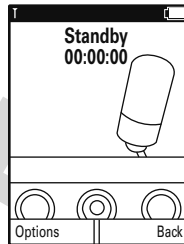



Press **Options** to open the voice notes menu.

options	
Open	Open a sound clip.
Switch Storage	Change the storage location of your clips
View Free Space	View the storage space available on the selected location.

WebAccess

Use your phone to access Web pages.


Find it:  >  WebAccess

WebAccess options


option	
Browser	Open the Web browser.

option	
Web Shortcuts	Open or create shortcut to a Web page.
Go To URL	Enter a Web page URL (address).
History	Access a list of recently viewed Web sites.
Web Sessions	Access a stored Web session.
Web Settings	Clear history, reset cache or clear cookies.

open a Web page

- 1 Scroll to **Go to URL** and press **Select**. Enter the Web address, such as www.motorola.com.
- 2 Press  when complete.

manage bookmarks

To see your bookmarks press  **WebAccess** > **Web Shortcuts**. To manage your bookmarks press **Options** to open the bookmarks menu:

options	
New bookmark	Add a new bookmark.
Edit	Edit a bookmark.
Goto	Open your bookmark.
Erase	Delete a bookmark.

fun & games

features	
play a game	
 >  Games & Apps	

features

manage pictures



 >  **Multimedia** > **Pictures**

manage music and sounds

 >  **Multimedia** > **Music Library**

manage ringtones

 >  **Settings** >  **Ring Styles**

Note: To access pictures stored on your microSD memory card, press  >  **Multimedia** > **Pictures**, then press **Options** > **Switch Storage**. Your phone will only recognise pictures stored in the **mobilePicture** folder on the memory card. If there are no files stored on your memory card then your phone will automatically switch to its internal memory.

connections


Bluetooth® wireless

Your phone supports Bluetooth wireless connections with audio devices, such as a handsfree headset or music system.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

connect to an audio device


Before you try to connect your phone with an audio device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device). 

Find it:  >  Settings >  Bluetooth Link > Add Audio Device

If Bluetooth is off, you will be prompted to turn it on. Your phone lists the devices it finds within range:

- 1 Scroll to a device in the list and press the *centre key* .
- 2 If necessary, press the **Yes** or **OK** key to connect to the device.

- 3 If necessary, enter the device passkey (default **0000**) and press the **OK** key.

When your phone is connected, the Bluetooth indicator  is highlighted in the status bar.

Note: When listening to music using a Bluetooth stereo device (headset or car stereo), use the volume control keys **on the device** to increase/decrease music volume.

Shortcut: When your phone's Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device, or move it near the phone. If the device doesn't connect, turn it off and back on.

send files to another device

You can send a media file, contacts entry, agenda event and more from your phone to a computer or other device.




Note: You can't copy some copyrighted objects.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options > Copy to Bluetooth Device** to send a picture file. Press **Options > Send via Bluetooth** to send a music file.
- 3 Select a recognised device name, or **New Device** to search for the device where you want to copy the file.

If your phone could not send the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone.




receive files from another device

If you do not see the Bluetooth indicator  in the status bar, turn on your phone's Bluetooth feature by pressing



 >  **Settings** >  **Bluetooth Link** > **Setup** > **Power On**.

- 1 Place your phone near the device, and send the file from the device.







If your phone and the sending device don't recognise each other, place your phone in discoverable mode so the sending device can locate it: and press  >  **Settings** >  **Bluetooth Link** > **Find Me**.

- 2 Press the **Grant** key on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete.

advanced Bluetooth features


Note: A device is *recognised* after you have paired or bonded with it (see page 60).

features	
change your phone's name	
 >  Settings >  Bluetooth Link > Setup > Name	
make phone visible to other devices	
Allow a Bluetooth device to discover your phone:	
 >  Settings >  Bluetooth Link > Find Me	
copy picture to a device	
Scroll to the picture, press Options > Copy to Bluetooth Device > Look for Devices , select the device name. You cannot copy some copyrighted files.	

cable connections



 You can use your phone's mini USB port to connect to a computer.

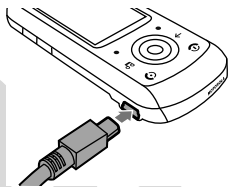

Note: Motorola Original™ USB data cables and supporting software may be sold separately. Check your computer to determine which cable you need.




If you use a USB cable connection:

- Be sure to connect the phone to a high-power USB port **on your computer** (not a low-power one, such as the USB port on your keyboard or bus-powered USB hub).

Note: If you connect your phone to a low-power USB port, the computer may not recognise your phone.

- Make sure both your phone and the computer are turned on and that the phone is in the home screen.

Note: When your phone is plugged into a computer and is being used for mass storage, it cannot be used for anything else. To restore the phone to normal use, disconnect it from the PC.

- Make sure your phone's USB setting is set to **USB Disk**: press  >  **Settings** >  **USB** > **USB Disk**.
- Your phone currently supports Microsoft® Windows™ XP and Windows Vista™. Other operating systems may not be compatible with your phone.


Attach the Motorola Original USB cable to the mini USB port on your phone and to an available USB port on your computer. The battery will start charging.



On your computer:

- 1 Open your “My Computer” window, where your phone’s memory card shows as a “Removable Disk” icon.
- 2 Click on the “Removable Disk” icon to access the memory card.
- 3 If necessary, in the “Removable Disk” (memory card) window, create one or more folders for the files you will copy onto the memory card.
- 4 To copy files between your computer and phone, drag and drop into the appropriate folders.
- 5 When you’re finished, remove the device by selecting the “Safely Remove Hardware” icon at the bottom of your computer screen, then select “USB Mass Storage Devices” and “Stop”.

Use these folders on your memory card for the file types indicated:

Note: To help manage your files, you can also create new folders in the existing folders.

- music files (MP3, MIDI, AMR, AAC and WAV): use **mobile\Music**, or place music files anywhere on the memory card (see page 52). 
- picture files (JPG, PNG, or BMP): **mobile\Picture**.

Tip: Pictures must be stored in the **mobile\Picture** folder on the memory card. To find picture files on your phone press  >  **Multimedia** > **Pictures** > **All Pictures**. Press **Options** > **Switch Storage** > **Memory Card** to switch storage location.

Note: The maximum single picture file size is 600 kB, 1280 x 1024 pixels. Also, a file name (including the path) must be less than 255 characters. For example,

if you copy songs into a folder you create that is named “MyMotoSongs,” the name of any song PLUS the name of the folder “MyMotoSongs” must be less than 255 characters

USB setting







Set your phone’s mini USB connection to function as a modem or storage device:

Find it:  >  Settings >  USB > USB Modem or USB Disk

Note: Your USB connection must be set to **USB Disk** before copying files from your PC to your phone (see page 63).


tools

personal organiser

features
add calendar event  >  Tools > Calendar Scroll to the day and press  , then scroll to [Add New] and press Select .
view and edit calendar event  >  Tools > Calendar Scroll to the day and press  , then scroll to the event and press Select .

features

event reminder

When an event reminder occurs, press  to view it. Press **Exit** to dismiss it.

copy calendar event

Copy a datebook event to another date and/or time:





 >  Tools > Calendar

Scroll to the day and press , then scroll to the event and press **Select** > **Options** > **Copy**.





set alarm





 >  Alarm Clock

Tip: Set the FM radio to play as your alarm sound.




features
calculator
 >  Tools > Calculator
convert currency
 >  Tools > Calculator Press Options and select Convert .

phonebook

features
create entry
 >  Phonebook > [New Entry]
delete entry
 >  Phonebook Scroll to the entry and press Options > Delete .

features
edit entry
 >  Phonebook Scroll to the entry and press Options > Edit to edit the entry. Scroll up or down and press  to edit fields. Press  to save your changes.

network

features
network settings
View network information and adjust network settings:  >  Settings >  Network

service & repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Centre at 1-800-331-6456 (United States), 1-888-390-6456 (TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.55 W/kg, and when worn on the body, as described in this user guide, is 0.61 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF

exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

Product Registration

Online Product Registration:

direct.motorola.com/hellomoto/Motosupport/source/registration.asp

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Privacy and Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device which updates the device's security, install it as soon as possible.
- **Erase before recycling**—Delete personal information or data from your mobile device prior to disposing of it or turning it in for recycling. For step-by-step instructions on how to delete all personal information from your device, see the section entitled "master clear" or "delete data" in this user's guide.

Note: For information on backing up your mobile device data before erasing it, go to www.motorola.com and then navigate to the "downloads" section of the consumer Web page for "Motorola Backup" or "Motorola Phone Tools."

- **Understanding AGPS**—In order to comply with emergency caller location requirements of the FCC, certain Motorola mobile devices incorporate *Assisted Global Positioning System* (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user's location—for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Smart Practices While Driving

Drive Safe, Call Smart

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to www.motorola.com/callsmart for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an



TM

inconvenient time, if possible, let your voicemail answer it for you.

- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*

- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

index

A

- add calendar event 66
- advanced
 - Bluetooth features 62
 - calling 41
- airplane mode 42
- alerts 31
- answer a call 24
- answer options 32
- automatic answer 40

B

- backlight 33
- battery 20
 - charge 23
 - cover 3
 - install 22

- remove 23
- Bluetooth 39
 - advanced features 62
 - change name 62
 - connection
 - description 60
 - indicator 61
 - copy multimedia 62
 - receive files 62
 - send files 61
 - visibility 62
- bookmarks 59

C

- cable connections 63
- calculator 67
- calendar 40

- calendar event
 - add 66
 - copy 66
 - reminder 66
 - view 66
- call
 - advanced 41
 - answer 24
 - end 24
 - forward 41
 - international 41
 - make 24
 - recent 36
 - restrict 41
 - stored number 25
 - times 38
 - view times 39

waiting 37
camera lens 3
capitalise text 44
centre key 2
change
 ring alert 24
 volume 27, 40
charge battery 23
clear 35
clear/back key 2
codes 28
colour setting 33
contacts 67
 create entry 67
 delete entry 67
 edit entry 67
 list 39
controls, music player 51
convert currency 67
copy

calendar event 66
files 61
music 52
costs, tracking 39
currency converter 67
customise 31

D

date 34
delete text 46
dial a phone number 24
dialled calls 36
 list 39
dialling prefix 40
digital clock 34
display 26
drag and drop files 52

E

edit pictures 56
emergency number 38

end a call 24
end key 2, 24
erase messages 49

F

FM radio 53
format memory card 27
forward calls 41

G

games 59
get music 52

H

handsfree 27
headset 40
hold call 39
home screen 26
 shortcuts 31

I

in-call

- cost 39
- menu 39
- timer 38

indicator

- status 26
- text entry mode 44

install

- battery 22
- memory card 19
- SIM card 19

international access code 41

iTAP text entry method 45

K

keypad

- lock and unlock 29
- volume 33

L

language menu 34

layout text 34

linking. See Bluetooth connection

lock

- keypad 29
- phone 28

M

make a call 24

make a second call 39

manage

- pictures 59
- ringtones 59
- sounds 59

master

- clear 35
- reset 34

memory card 19, 27

- format 27

install 19

remove 20

menu

- language 34

messages

- access 40
- delete text 46
- erase 49
- MMS 49
- numeric entry 46
- receive 48
- send 47
- symbol entry 46
- tap text entry 45
- text capitalisation 44
- text entry mode indicators 44
- text template 49
- view sent message 49

microphone 2

mini USB port 3

Missed Calls message 37

MMS 49

music

copy 52

player 50, 51

playlist 52

mute 39

my number 25

my picture 55

N

navigation key 2, 26

network

airplane mode 42

settings 67

notepad 38

number

redial 36

store 25

numeric entry method 46

O

object exchange 61

options, music playlist 52

P

pairing. See Bluetooth connection

passwords. See codes

personal organiser 66

phone lines 39

phone lock

change code 29

phonebook 67

create entry 67

delete entry 67

edit entry 67

photos 54

pictures 59

edit 56

playlists 51

power key 2, 24

preset radio stations 53

Q

quick text 47

R

radio 53

receive a message 48

received calls 36

list 39

recent calls 36

redial 36

reminder 34, 66

remove

battery 23

memory card 20

reset 34

restrict calls 41

return a call 37

ring

alert 24

- style, setting 31
- volume 33

ringtones 59

S

- screen saver 33
- security codes 28
- send
 - key 2, 24
 - message 47
- set
 - alerts 32
 - colour 33
 - style 31
 - text entry mode 43
 - time & date 34
- setup
 - voicemail 48
- shortcuts 30
- SIM card
 - install 19

- skin 33
- slide
 - tone 33
- slide closed 34
- soft keys 2, 26
- sound 59
- speaker
 - handsfree 27
- speed dial 41
- status indicators 26
- storage 27
- stored
 - files 59
 - number 25
- style setting 31
- symbol entry method 46

T

- tap text entry method 45
- template 49
- text

- delete 46
- entry
 - capitalisation 44
 - mode indicators 44
- layout 34
- text entry 43
- time 34
- tips & tricks 30
- turn phone on/off 24

U

- unlock
 - code 28
 - keypad 29
 - phone 28
- USB
 - cables 63
 - drag and drop 52

V

- view

calendar event 66
messages 49
voice notes 57
voicemail
 message indicator 48
 setup 48
volume
 change 40
 keypad 33
 keys 2, 27
 ring 33

W

wallpaper 32
WebAccess 58

Y

your number 25

US patent Re. 34,976

www.motorola.com

