

# Welcome

Welcome to Motorola's world leading mobile communication technology. Motorola's mobile communication equipment are designed and produced in compliance with its strict in-house standards and the international standards. They are subject to the strict quality tests including temperature test, humidity test, dust test, vibration test and drop test. We are sure that you will be highly satisfied with the Motorola products made through these processes.

Thank you again for selecting our products, and hope that you would succeed in your business with your product.

- \* Any content of this manual and any function of this product are subject to change according to situation.
- \* We suggest that you set your phone to vibration mode at a public place.

# Prohibition of illegal modification of IMEI

Removal or change of IMEI (International Mobile Equipment Identity) installed in the mobile phone manufactured and supplied by Motorola, or an attempt to reproduce and enter another IMEI in the mobile phone is strictly prohibited and subject to max. 10-year prison sentence or a fine not exceeding 20 million Won in pursuant of Article 347 of the Criminal Act.

In addition, such an illegal act may damage the software installed in the phone. Therefore, customers are required to use care not to incur any damage due to such an illegal act. The product which is illegally modified is excluded from any free or paid service warranted by Motorola.

# For your safety

Read this 'For your safety' carefully in order to secure safety of the user and to prevent damage to property.  
Please keep this manual in the place which can be accessed at any time by the user.

## CAUTION!

- Do not lend your own phone to other person inadvertently.
  - Please observe the proprieties in public places.
  - For repairs or other alter services, contact our designated service center.
  - If your phone has got lost or stolen, immediately report to the relevant telecommunications service provider.
  - You are required to refrain from using unauthorized devices.
    - Using chargers, hands-free kits, data communication cables, batteries, or equipment other than genuine ones may deteriorate this product's performance or cause malfunction, external deformation or breakage.
  - Use the accessories like an earphone cautiously.
    - If you are exposed to loud sound for long periods of time, damage to your hearing can occur.
  - Make it rule to record important data separately.
    - Input data such as telephone numbers for a mobile phone may be corrupted due to user's inadvertence or unexpected problems.
  - Make sure not to be in water or moisture.
    - If either mobile phone or battery is immersed in 'water' or 'liquid', the color of immersion-checking label affixed to the mobile phone or battery will be changed. In the case of malfunction due to such reason, free service warranted by Motorola will be rejected.
- ※ This product should not be added with any separate equipment that may cause an alteration to its original performance as described on type registration.

## To use the mobile phone safely and for a long time,



### Make sure to use authentic goods only.

Using an unauthorized battery or charger will shorten a life cycle of the mobile phone or deteriorate its performance.



### Be careful not to cause damages to the glass of mobile phone display.

- The LCD may be damaged if it is given a strong impact or is dropped to the ground.
- If the glass gets damaged, please do not touch it by hands, but contact the nearest Motorola service center immediately.



### Do not dry an immersed mobile phone with a heating apparatus.

If you dry an immersed mobile phone or battery with a heating apparatus may cause a mobile phone's explosion and external deformation or failure. Do not turn on the power while the phone is wet. Instead, separate a batter from the phone and contact a service center designated by Motorola.

# For your safety

Read this 'For your safety' carefully in order to secure safety of the user and to prevent damage to property.  
Please keep this manual in the place which can be accessed at any time by the user.

## To use the mobile phone safely and for a long time,



### Use and keep the phone at room temperature.

If a mobile phone or battery is placed at very hot places (inside a car in summer, an airtight place under the direct sunlight, near the fire, etc), it may run into a danger of explosion fire or external deformation. If it is used and kept at very cold places, it may reduce the capacity and lifetime of the battery.



### Keep the mobile phone clean.

- If there are foreign substances on a metal part of a charger or battery-charging contact, the phone may not be charged properly.
- Use smooth cloth to clean the mobile phone. Using chemicals (such as alcohol, benzene, thinner, etc.) for cleaning purpose may cause a fire.



### Do not give strong impact to the mobile phone, and do not disassemble or modify it.

Giving a strong impact or dropping the mobile phone or battery may cause the phone to run into failure or explosion. In case of disassembling or modifying the mobile phone inadvertently, a free service will be rejected.



### Do not use the phone while charging.

If you use the mobile phone while charging it with a charger or USB data cable, you may have a risk of electric shock or fire. Make sure that you use the phone after separating it from USB data cable or charger.



### Use a ground-available outlet for PC power when using an USB data cable.

If you connect the phone with PC (personal computer) via an USB data cable, you may encounter a risk of electric shock depending on the grounding state of the PC power.



### Do not place items containing magnetic components.

The magnetic strip such as a credit card, phone card or transportation ticket, can be damaged by the phone.

# For your safety

Read this 'For your safety' carefully in order to secure safety of the user and to prevent damage to property.  
Please keep this manual in the place which can be accessed at any time by the user.

## To use the mobile phone safely and for a long time,



### Make a back-up record of the input information in mobile phone.

- Input information like telephone numbers can be deleted upon user's inadvertency, upgrade, repair or unexpected problem.
- A manufacturer shall not be responsible for any information loss.



### Do not hold the antenna when the phone is in use.

If you hold it, it can affect call quality, it also may cause the phone to operate as higher power level that needed and shorten talk and standby times.



### Keep the phone out of reach of animals or children.

If children or animals suck or bite the mobile phone or battery, they may run into a risk of having an electric shock, explosion, exposure to electromagnetic wave, damaged parts (rubber stopper) stuck in the throat, and suffocation. In case a child use the phone, make sure that they are fully aware of this precaution.



### Be careful when you use a necklace or cord for the mobile phone.

Be careful that using a necklace or cord for the mobile phone may cause you to run into dangerous accidents like being caught in train, electric railway or car doors.



### Make sure to use authentic goods only.

- Paint or metallic content on the phone may cause an allergic reaction, eczema, itching, swell, and etc.
- If any of the above symptoms occurs, stop using the phone and visit a doctor.

# For your safety

Read this 'For your safety' carefully in order to secure safety of the user and to prevent damage to property.  
Please keep this manual in the place which can be accessed at any time by the user.

## Locations for using the mobile phone



### Do not use the mobile phone in a potentially explosive atmosphere.

Turn off your phone in a potentially explosive atmosphere like construction sites and military areas. Obey all the instructions and signals posted in a potentially explosive atmosphere. Construction crews often use remote control RF devices to set off explosives.



### Do not use the mobile phone in near inflammable materials.

Do not install or use accessories onto your phone in a potentially explosive atmosphere including gas station, gas leak areas, and deck on boats.



### Do not use the mobile phone in a prohibited area like air crafts and hospitals.

Using a mobile phone may cause accidents in some aircrafts and hospitals using RF equipment.



### Do not use the mobile phone near pacemakers.

- The Health Industry Manufactures Association recommends to keep a minimum of 15 cm (6 inches) from the pacemaker when the phone is switched on.
- Person with pacemaker should always use the phone in the opposite side of the pacemaker and maintain a separation of 15cm or more.

## Using the mobile phone while driving



### Refrain yourself from using the mobile phone while driving.

- Using the mobile phone in driving a car may cause direct and indirect car accidents.
- Check the laws and regulations on the use of mobile phones in the areas when you drive.  
Such an act is fined penalties and demerits under the Road Traffic Act.



### Do not install a hands-free device near air bag.

An air bag inflates with great force in a moment. Do not leave your phone or set up the hands-free kit near to the air bag. You may be seriously injured when the air bag is activated.

# For your safety

Read this 'For your safety' carefully in order to secure safety of the user and to prevent damage to property.  
Please keep this manual in the place which can be accessed at any time by the user.

## Using battery and charger



### A battery for charging is consumable.

The repetition of charge/discharge will shorten its service time gradually.



### The flicker of the lamp while charging the mobile phone and the battery means that the charge is not processed.

Check the charger to avoid the trouble that may occur to each device.



### If the temperature of the phone rises over 45°C while charging the battery, the phone stops charging and switch on the LCD screen and keypad lights.



### Mobile phone and battery cover need to be combined at all time.

If not, it may cause malfunction.



### In case of separating a battery from the mobile phone, please turn off the power.

If not, it may cause malfunction.



### Make sure to use only the TTA-authorized battery.

Using unauthorized charger may cause fatal accidents like degraded battery safety, shorter service life, explosion or fire.



### Do not expose the phone direct sunlight or use it in places with high humidity.

Store in the room between 0°C ~ +40°C. It may damage the phone and cause the phone to explode.



### Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.

It may damage the phone and cause the phone to explode.



### Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.

It may damage the phone and cause the phone to explode.

# Menu Table



1	T Service	54~63
2	Sounds	66~70
3	Display	72~77
4	Contents	80~89
5	My Moto	92~113
6	Organizer	116~124
7	Message	126~135
8	Phonebook	138~144
9	Settings	146~154

## T Service

Roaming	54
M Service Center	55
T Service	56
NATE	57
W	58
Moneta	60
WNC	62
NATE Phone P	63
T Interactive	63

## Sounds

Ringtone Style	66
Download Ringtone	66
Vibrate Style	67
Call Alert Style	67
Volume	68
Operation Effects	69
Reminder Alerts	69
System Alerts	70
My Etiquette	70

## Display

Main Display	72
Download Wallpaper	74
Download Font	74
Menu Type	75
Screen Design	75
Dialing Font	76
Backlight Control	77

## Contents

Ringtone Box	80
Wallpaper Box	80
Font Box	81
Photo/Movie Album	81
MMS Contents Box	82
@Playon	83
June Contents Box	85
Phone Decoration	88
Captured Screen	88
Memory Manager	89

## My Moto

Camera	92
Subway Map	104
Dictionary	106
E-book	108
Stopwatch	108
Enjoy Wine	109
USB Mass Storage	112

## Organizer

Morning call/Alarms	116
Calendar	118
Scheduler	119
Memo	120
Diary	121
Calculator	123
World Time	124

## Message

Message Box	126
New Message	130
Report spam/Service	133
Contents Box	134
Settings	135

## Phonebook

Search Number	138
Add New Contact	140
Edit Group	141
Edit Speed Dial	141
Call History/Time	142
Block Calls	142
Phonebook Usage	143
Automatic Backup	143
My Phone Number	144

## Settings

Phone Settings	146
Call Settings	147
NATE Settings	148
USIM Setting	148
Set Time	149
Lock/Password	150
언어/Language	151
Reset	152
Motorola Service Center	152
S/W Version	153

# Contents

Prohibition of illegal modification of IMEI	3
For your safety	4
Menu table	14

## 01 Before Using the Phone

1 Components	22
2 Parts of the phone	23
3 Muti-access	26
4 On-screen Icons	28
5 Menu move buttons	29
6 USIM card	31
Installing USIM card	31
Removing USIM card	32
7 Battery	33
Install battery	33
Remove battery	33
Charging battery	34

## 02 Basic Operation

1 Power On/Off	38
Power on	38
Power off	38
2 Placing a call	39
Placing a voice call	39
Receiving a voice call	41
In-call functions	42
3 Menu from the call history list	45
4 Missed calls	46
5 My Menu settings	46
6 Menu after entering a number	47

## 03 Entering Text

1 Entering text mode	50
Entering text mode	50
Writing Korean	50
Writing English and numbers	51
2 Using menu when entering text	52
Emoticons	52

## 04 T Service

1 Roaming	54
Select system	54
Roaming auto dial	55
2 M Service Center	55
3 T Service	56
4 NATE	57
5 W	58
June video	59
Real-time TV	59
i's box	60
tossi	60
June contents	60
6 Moneta	60
Membership & Life	61
Preference	61
Moneta home	61
7 WINC(Mobile Address)	62
8 NATE Phone P	63
9 T Interactive	63

## 05 Sounds

1 Ringtone Style	66
2 Download Ringtone	66
3 Vibrate Style	67
4 Call Alert Style	67
5 Volume	68
6 Operation Effects	69
7 Reminder Alerts	69
8 System Alerts	70
9 My Etiquette	70

## 06 Display

1 Main Display	72
Standby Screen	72
Quick function	73
2 Download Wallpaper	74
3 Download Font	74
4 Menu Type	75

## 06 Display\_continued

5 Screen Design	75
6 Dialing Font	76
7 Backlight Control	77

## 07 Contents

1 Ringtone Box	80
2 Wallpaper Box	80
3 Font Box	81
4 Photo/Movie Album	81
5 MMS Contents File	82
6 @Playon	83
7 June Contents Box	85
8 Phone Decoration	88
9 Captured Screen	88
10 Memory Manager	89

## 08 My Moto

1 Camera	92
Before using camera	92
Photo	94
Movie	97
Mobile Cyworld	100
i's box	100
NATE Photo Print	101
Settings	102
Memory Manager	103
Help	103
2 Subway Map	104
View Route Map	104
Search Route	104
My Route	105
Station Info	105
Lost Property Office	105
Settings	105
Help	105



# Contents (cont'd)

## 08 My Moto<sub>continued</sub>

- 3 Dictionary ..... 106
  - Before using the dictionary ..... 106
  - English-Korean ..... 106
  - Korean-English ..... 107
  - My Vocabulary ..... 107
  - My History ..... 107
  - Settings ..... 107
- 4 E-book ..... 108
- 5 Stopwatch ..... 108
- 6 Enjoy Wine ..... 109
  - Search ..... 109
  - Recommend wine search ..... 110
  - Wine Common Sense ..... 110
  - Cheese Story ..... 111
  - Tasting Note ..... 111
- 7 USB Mass Storage ..... 112

## 09 Organizer

- 1 Moring call/Alarms ..... 116
  - Easy Alarm ..... 116
  - Morning Call ..... 117
  - My Alarm-English ..... 117
- 2 Calendar ..... 118
- 3 Scheduler ..... 119
  - Schedule ..... 119
  - To-do ..... 119
  - Anniversary ..... 119
  - D-day ..... 120
  - Meeting planner ..... 120
- 4 Memo ..... 120
- 5 Diary ..... 121
  - Photo diary ..... 121
  - Diet diary ..... 122
- 6 Calculator ..... 123
- 7 World Time ..... 124

## 10 Message

- 1 Message Box ..... 126
- 2 New Message ..... 130
  - Letter Paper ..... 131
  - Avata ..... 131
- 3 Report Spam/Service ..... 133
- 4 Contents Box ..... 134
- 5 Settings ..... 135

## 11 Phonebook

- 1 Search Number ..... 138
- 2 Add New Contact ..... 140
  - Save by phone ..... 140
  - Save by USIM ..... 140
- 3 Edit Group ..... 141
- 4 Edit Speed Dial ..... 141
- 5 Call History/Time ..... 142
- 6 Block calls ..... 142

## 11 Phonebook<sub>continued</sub>

- 7 Memory Usage ..... 143
- 8 Automatic Backup ..... 143
- 9 My Number ..... 144

## 12 Settings

- 1 Phone Settings ..... 146
  - Sounds ..... 146
  - Display ..... 146
  - Message ..... 146
  - Camera ..... 146
  - June Setting ..... 146
- 2 Call Settings ..... 147
  - Answer Options ..... 147
  - Auto Area Code ..... 147
  - Airplane Mode ..... 147
  - Network Settings ..... 147

## 12 Settings<sub>continued</sub>

- 3 NATE Settings ..... 148
- 4 USIM Setting ..... 148
- 5 Set Time ..... 149
- 6 Lock/Password ..... 150
  - Phone Lock ..... 150
  - Privacy Lock ..... 150
  - Service Key Lock ..... 150
  - Restrict Call ..... 150
  - Change Password ..... 150
- 7 언어/Language ..... 151
- 8 Reset ..... 152
- 9 Motorola Service Center ..... 152
  - Call Center ..... 152
  - Search Service Center ..... 153
  - Self A/S ..... 153
- 10 S/W Version ..... 153

## 13 Appendix

- 1 Accessories ..... 156
- 2 Troubleshooting ..... 156
- 3 Spec and Feature ..... 157
- 4 Authentication label ..... 157
- 5 Specific Absorption Rate ..... 158
- 6 Collecting wasted-mobile phones ..... 159

# MEMO

A large, light green rectangular area with rounded corners, containing ten horizontal dotted lines for writing notes.



# 01

## *Before Using the Phone*

1 Components .....	22
2 Parts of the phone.....	23
3 Multi-access .....	26
4 On-Screen Icons .....	28
5 Menu move buttons .....	29
6 USIM card .....	31
7 Battery .....	33

# 1. Components

Before using the phone, make sure that you have received all the components.

## Mobile phone



Battery cover



Standard-type battery



Slim-type battery

Battery charge



Car charger



Multi adapter



USB data cable



Stereo earset



User's manual

\* The illustrations used in this manual are for your reference only, and may be different from actual view.

# 2. Parts of the phone

## Part names and keys

### Front view



Earpiece

LCD

Microphone

### Rear view



Camera

Battery cover

Speaker

 
### Note

Push the hold button  down to unlock the external button keys.

## 2. Parts of the phone

### Part names and keys


#### Left side

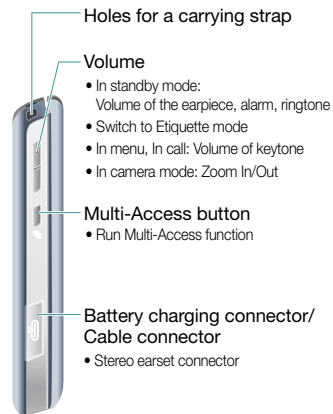

#### Open view


 
#### Right side view

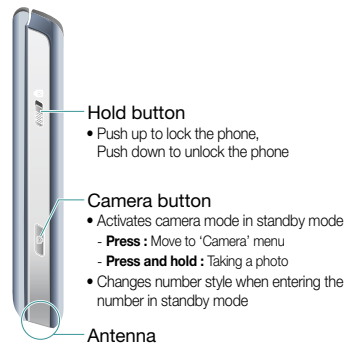

### Keypad

#### Nate/ok Button

- In menu: Selects menu options and confirms
- In standby mode: Press and hold to move to Nate menu
- Press to connect to Nate home

#### (Left)Menu Button

- In standby mode: Move to menu
- In menu: Setting My Menu
- Change the menu type

#### Moneta Button

Move to 'Moneta' menu

#### Send Button

- Dial/Answer a call
- Shows a history of calls made, received, and missed
- Press and hold to dial previous voice call number

#### \* Button

Press and hold to switch on/off 'Etiquette mode'

#### 0 Button

For international call press 0 + number

#### (Right)Phonebook Button

- In standby mode: Phonebook list
- In menu: Go back to previous screen

#### Clear Button

- Go back to previous screen
- In message: Deletes a character with each press
- Press to move to 'T-Interactive' (T-Interactive, see p.63)

#### End Button

- Power On/Off
- Reject a call
- End a call
- Switch to standby mode

#### Navigation Button

- Move up/down/left/right
- Open up the quick function menu

**Up** : Move to 'W' menu (W, see p.58)

**Down** : Move to quick function menu (Quick function, see p.73)

**Left** : Move to 'Message' menu (Message, see p.126)

**Right** : Move to 'My Menu' menu  
(My Menu Settings, see p.46)

#### # Button

Press and hold to 'Lock All'

# 3. Multi-Access

You can use Message, @Playon, June contents, Motorola features, running function, W, NATE, and voice/video phone.  
 Ex) You can place a voice call while using the internet.



Multi-Access screen



Press : To run Multi-Access  
 Press : To run the selected function  
 Press : Move and select the functions

 
## Run Multi-Access

Press Multi-Access button ▶ Move to select the feature you want ▶ Select

- When using Message, @Playon, June contents, Motorola features, running function, W, NATE, or Voice/Video call, press to use the multi-access icon on the standby screen.
- Select the function and press .

### Note

- When using Multi-Access, Help runs automatically on the standby screen. You can set on/off of viewing Help function.
- When you have turned off Help function, you can press and hold (Left) to view Help again.
- When Multi-Access function is restricted, information window displayed on the screen.
- You can only use Multi-Access functions from the system memory. (Except when the function could effect the phone's stability.)



Multi-Access screen




Setting up Help screen

## Icon description

 	Message	Move to new message and message box. (Message, see p.126~135)
	@Playon	Use the short cut key functions in @Playon menu (@Playon, see p.83)
	June contents	Move to June contents box and play the downloaded content.
	Motorola Functions	Use Organizer [Scheduler(see p.119), Memo(see p.120), World Time(see p.124), Subway Map(see p.104), Dictionary(see p.106), Calculator(see p.123), E-book(see p.108)].
	Running Functions	Using the current Multi-Access function, check the running fuctions from the list.
	W	Move to W menu and use the various functions. (W, see p.58)
	NATE	Connect to NATE or June Contents Box.
	Voice call	Use the recent call history, phonebook, and placing a call functions.

## 4. On-Screen Icons

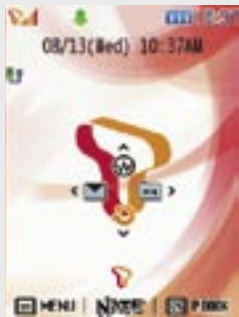


Standby

To reduce the battery consumption, the screen lights off automatically according to backlight display setting.

	Tells you the strength of the network signal.		Service is not available.
	Voice call or Nate is connected.		The stereo earset is connected.
	Phone is locked. (Lock all, Privacy, Lock service)		You have received voice or text message.
	The alarm has been set and is on. (Simple alarm, Morning call, My alarm)		The external memory card is inserted.
	External button is locked		
	Incoming calls has set to Bell mode.		Etiquette Mode
			Vibrate
			Bell & Vibrate
			Bell & Vibrate
			Louder
			Mute
			My etiquette mode
	Tells you the status of		
	Full		Low battery
	Charge needed		
	USB cable is connected. (It varies depending on the receive mode selected)		
	You have set the phone as flight mode.		The phone is charging through USB cable or car charger
	The roaming service (general) is being used. (Except WCDMA/GSM)		The roaming service (3G) is being used. (Except WCDMA/GSM)


## 5. Menu move buttons

 How to use the menu displayed on the bottom of the screen

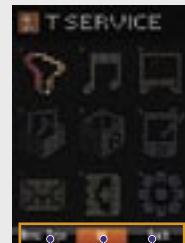


Press (Left), (Right) or (center) button

 How to move the cursor and select a menu

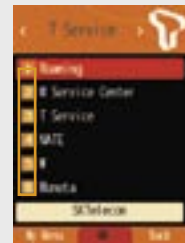

Move the cursor with or , and select by pressing

 When a scroll bar is displayed

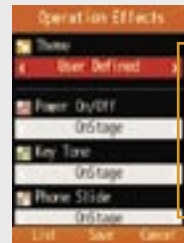




A scroll bar is displayed if there are more menu than currently displayed on the screen. Select an item with , and press

## 5. Menu move buttons (Cont'd)



 If ► is displayed on a side of the menu




If you press  or , the sub menu are displayed. Select an item by pressing  or press the matching number key.




If ◀ ► is displayed on the screen



 Select the desired item with , and press .

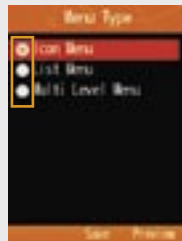If ● is displayed on the screen




Move the cursor with  or  and press  to select.

## 6. USIM card.

 Insert USIM(Universal Subscriber Identity Module) card supports from SKT in order to use the phone.

### Installing USIM card

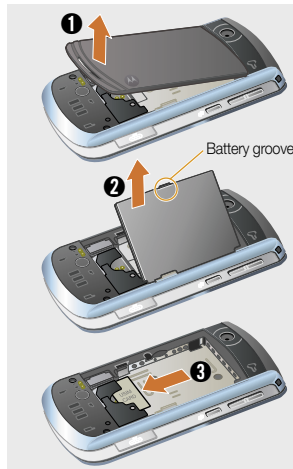

- 1 Push down the battery cover and lift the cover up as shown in the figure.
- 2 Lift to remove the battery  
- Use the battery groove as shown in the figure to lift up.
- 3 Insert and slide the USIM card into the USIM card holder.  
- Make sure that the USIM card is inserted properly and that the gold contact area on the card is facing downwards.
- 4 Push down and place the battery.
- 5 Slide the battery cover upwards.  
- Push upward until it snaps back into place.

## 6. USIM card. (Cont'd)

### Removing USIM card



- 1 Remove the battery cover and the battery. (see p.33)
- 2 Push upward to remove the USIM card.
- 3 Place back the battery and the battery cover properly. (see p.33)

- Emergency call can be made with out the USIM card.
  - Press **[\*]** (Right) and enter the emergency number and press **[Mute Off]** when USIM card is not in the phone.
- You can use menu on standby screen without USIM card.

### Note

- For your privacy, set the USIM card password before you use. (USIM preference, see p.148)
- The metal contact of the USIM card can be easily damaged by scratches.
- Be careful not to loose or transfer the ownership to the other person. The call charge fee and other service fee is charged to USIM holder.
- The battery life can be shorten when using the USIM card with the transportation card.
- Make sure the power is off before you install the USIM card.
  - The phone can not be recognized the USIM card when the power is on.
- For more details about the USIM card, please contact SKT service center.

## 7. Battery

### Installing the battery



- 1 The battery charge terminal and the phone charge terminal should be engaged as shown in the figure.
- 2 Push down the battery until it snaps.
- 3 Place the battery cover to the battery cover home, slide the battery cover upwards until it snaps.

### Removing the battery



- 1 Push and slide down the battery cover and lift up from the battery cover home as shown in the figure.
- 2 Hold and lift up the battery removal home as shown in the figure.
- 3 Separate the battery from the phone.

### CAUTION

 
- Make sure the power is off all time when removing the battery.
  - Removing the battery when the power is on could damage your phone.



# 7. Battery (Cont'd)


- ※ The battery is not fully charged when you purchase it, make sure to charge the battery before using the phone.
- ※ You must use a travel charger or a car charger in order to recharge a completely discharged battery.

## Charging the battery

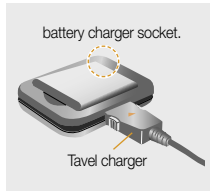

### ① Charging a battery with a battery charger

 - 1) Connect the travel charger cable to the rear port of the battery charger.
- 2) Connect the power cord of the travel charger to an electric outlet, and check if the triangular lamp on the travel charger cable jack flickers in amber. (100V~220V)
- 3) Insert the battery to the battery charger socket. (When inserting or removing a battery to/from the charger, check the direction of the battery release button on the charger.)
- 4) The charging status is displayed on the triangular lamp on the travel charger cable jack.

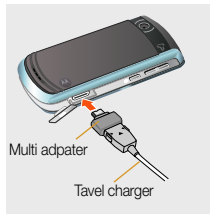


### ② Charging a battery with a charger adapter

- 1) Connect the power cord of the travel charger to an electric outlet, and check if the triangular lamp on the cable jack flickers in amber. (100V~220V)
- 2) Connect the travel charger cable jack to the port of the multi adapter.
- 3) Connect the multi adapter cable jack to the charger connector in the right side of the handset.
- 4) The charging status is displayed on the triangular lamp on the travel charger cable jack.
- 5) If the charger lamp flickers while charging the battery with the travel charger, connect the multi adapter to the handset, and then connect the travel charger.

#### Note

##### Optional travel charger

 Travel chargers are not included in the package for conservation of resources. You can purchase one from the shop or a service center.

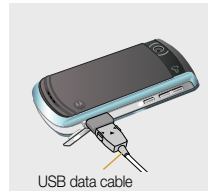

### ③ Charging a battery with a USB data cable

- 1) You can charge your phone by connecting it to the PC through a 5PIN USB data cable or a 24PIN USB data cable using a charger adapter.
  - In order to use the charging function with a 5PIN USB data cable, you should have SKT integrated USB driver in your PC.
  - A 5PIN USB data cable supports both the charging and data communication functions.
  - A 24PIN USB data cable using charger adapter only supports the charging function.

#### Note

##### Display icon when charging




- The charging icon is displayed if you charge the battery with a 5 PIN USB data cable or a car charger



- The screen when charging the battery while the phone is off



##### Battery icons when power is off

-  Charging is in progress normally /  Charging is completed
-  The power is disconnected or connected incorrectly (Connect the charger cable again)
- When charging a battery with a travel charger, the charger lamp shows if the battery is fully charged (turned into green from red)