

MEMO

A large, light green rectangular area with rounded corners, containing ten horizontal dotted lines for writing a memo.



09 Organizer







 

1 Morning call/Alarms	116
2 Calendar	118
3 Scheduler	119
4 Memo	120
5 Diary	121
6 Calculator	123
7 World Time	124

1. Morning call/Alarm

The phone provides bell or vibrates at the designated time.

Press **☐** (Left) ▶ Press **ALT MIND 6** ▶ Press **1**


Note

- If an alarm is on,  is displayed on the screen and when it is off, icon is no longer displayed on the screen.
- If the phone is set to 'Vibrate' or 'Etiquette mode', the phone vibrates instead of rings. (The phone rings for morning call.)
- When alarms set to the same time, operate in the following priority order: (Easy Alarm → Morning Call → My Alarm 1~5)
- You can turn off the alarm by opening/closing the folder when alarm rings.
 - You can also turn off the alarm by pressing  (Volume key),  (Camera),  (NATE),  (End),  (Hold),  (Right).
- If you set the morning call to repeat more than once, you must press  (Right) to turn off the morning call.

Easy Alarm

When the time reaches to the period user have set, the alarm rings once.

 Press **☐** (Left) ▶ Press **ALT MIND 6** ▶ Press **1**
▶ Press  ▶ Press  after selecting Easy Alarm

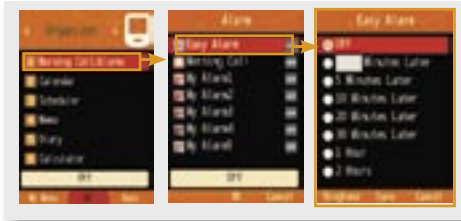








 - If the designated timer for easy alarm expires, the alarm rings once.
 - After alarm rings once, it automatically turns off.
- You can set time by 1~999min.

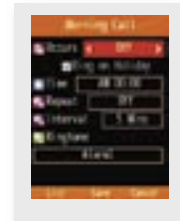Morning Call

You can set the repeat count and cycle for morning call at the required time.

Press **☐** (Left) ▶ Press **ALT MIND 6** ▶ Press **1**
▶ Press  ▶ Press  after selecting Morning Call

 



- You can set alarm at the desired day of a week by selecting a day with  (Right) and setting the desired time in the cycle field.
- If a morning call sounded with one or more repeat times previously set, you can set Morning Call Standby function by pressing .
 - If the repeat time set is ended or you do not press  (Right), the internal and external screens are waiting for Morning Call.
- Even if you open or close the slide or press  (Volume key), and  (Camera) the phone is set to Morning Call Standby and the morning call is sounded at the time of repeat previously set.
- If you press  upon Morning Call sounding, Morning Call of the day will be cleared regardless of a repeat time previously set.

My Alarm

You can set the Alarm to ring at a desired time.


Press **☐** (Left) ▶ Press **ALT MIND 6** ▶ Press **1**
▶ Press  ▶ Press  after selecting My Alarm

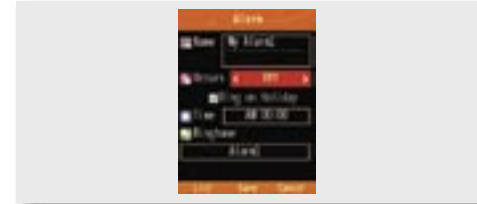

- You can set an alarm to be sounded at a desired time by setting a time and interval.
- You can enter maximum 20 Korean characters and 40 English character for memo, a message content will be displayed when an alarm is sounded.
- You can set alarm at the desired day of a week by selecting a day with  (Right) and setting the desired time in the cycle field.

2. Calendar

 If you set and save a schedule, alarm rings on a corresponding date and displays the stored content.

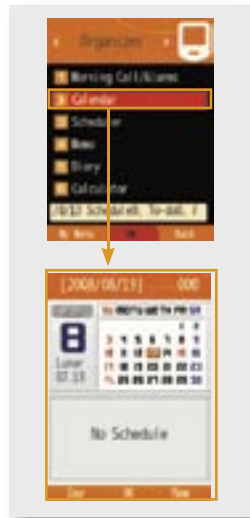

Press **Left** ▶ Press **6** ▶ Press **2**

- You can select New Schedule, New Things To-do, New Anniversary Date, New D-Day, and New Meeting Planner by pressing **Right** at a desired date. (You can add 180 items for schedule, things to do and anniversary date, 30 items for d-day and 50 items for meeting planner.)
- If you select 'Calendar top/bottom' or '3 Months top/bottom' in 'Set Standby', the current month is displayed with the scheduled dates in different color.
- When schedules set to the same time, alarm operate in the following priority order:
- D-Day → Anniversary → Schedule → Meeting Planner
- Schedule start up page is the monthly calendar.
- Press **Left** to find the schedules by Day/Month/Year.
- Press **Left** to use Month, Week, Go to a date, Delete, Delete by day or month, and Delete all.
- When setting View by week, select a day of a week and press **Micro** to check the daily schedule.

Menu description

New schedule : The phone provides the alarm and displays memo in accordance with the alarm cycle until the cycle is expired.

New to-do : The to-do item is displayed as a block from the start date to the end date.

New anniversary : The phone provides the alarm and displays memo at the designated anniversary.

New D-Day : Days remaining to or passed from a specific day is displayed on the standby screen. The alarm rings on the designated date.

 
New meeting planner : If you enter a time, the times of major cities of the world are displayed. The alarm rings and the memo appears until the end date of the selected period.

3. Scheduler

You can view or add schedule you have entered in.

Schedule

Press **Left** ▶ Press **6** ▶ Press **3** ▶ Press **1**

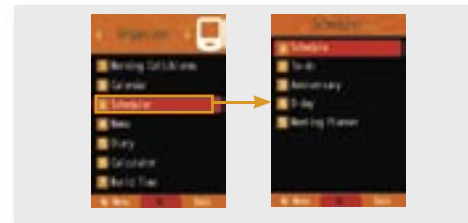

- Press **Left** to use View by month, Delete or Delete all.
- Press **Right** to add a new schedule.

To-do

Press **Left** ▶ Press **6** ▶ Press **3** ▶ Press **2**

- Press **Left** to use View by month, Delete or Delete all.
- Press **Right** to add a new to-do.

Anniversary

Press **Left** ▶ Press **6** ▶ Press **3** ▶ Press **3**

- Press **Left** to use View by month, Delete or Delete all.
- Press **Right** to add a new schedule.

3. Scheduler (Cont'd)

You can view or add schedule you have entered in.

D-day

Press **Left** ▶ Press **MNO 6** ▶ Press **DEF 3** ▶ Press **CE GH 4**

- Press **Left** to use View by month, Delete or Delete all.
- Press **Right** to to add a new d-day.
- If you select the calculation by date for D-day setting, D-day will be indicated from a current date based on the date entered. If you select the calculation by a certain date, entering remaining dates or passing dates based on the date entered will indicate D-day.

Meeting Planner

Press **Left** ▶ Press **MNO 6** ▶ Press **DEF 3** ▶ Press **5**

- Press **Left** to use View by month, Delete or Delete all.
- Press **Right** to add a new meeting plan.

4. Memo

You can store upto 50 memos in the phone.

Press **Left** ▶ Press **MNO 6** ▶ Press **4**



- Press **Right** to add a new meeting plan.
- You can enter a memo of upto 48 Korean letters or 96 English letters.
- When checking a written memo,ou can edit it by pressing **None on**.
- Press **Left** on the list to delete, protect/lock or delete all.


5. Diary

You can write the photo diary or diet diary on the phone.

Photo Diary

You can write and manage diary with the photos.

 Press **Left** ▶ Press **MNO 6** ▶ Press **5** ▶ Press **1**

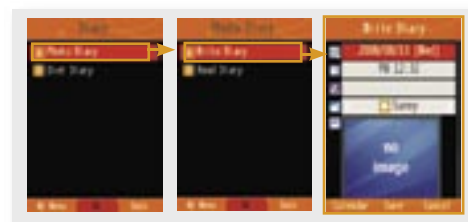

1 Write Diary

- The photos used in the photo diary are not deleted even if the same photos are deleted from 'Photo Album'.
- You can store upto 180 photo diaries and cannot duplicate diaries on the same date.
- You cannot use photos saved in the external memory.

2 Read Diary

- You can check, delete, or edit the stored photo diary.

 
5. Diary (Cont'd)

You can write the photo diary or diet diary on the phone.

Diet Diary

Set goals for weightloss, this can help from this function or diet.

Press (Left) ▶ Press ▶ Press ▶ Press

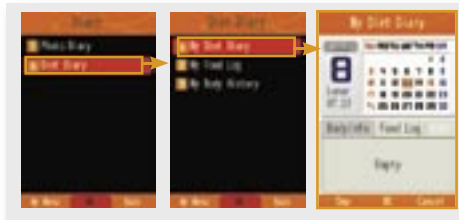

1 My Diet Diary

How to Record My Body Info

Press (Left) to select a desired date on the calendar and press to record.

Press (Right) to input the body info.

-You can check standard weight, B.M.I, and B.M.R.

How to Record Food Log

Press to select the food, press (Right) to find out the total calories.

Press (Left) to select [User Input] or [Add Food].

Note

- When searching dates on the calendar, you can search daily/monthly/yearly/records by pressing (Left).
- Dates indicating that body and meal records are kept on the calendar are displayed in color, and you can check their contents on the bottom of the screen.

2 My Food Log

- The records are displayed.
- Press to check the monthly record.
- Press (Right) to add a record.
- Press (Left) to view/delete/delete all of diet records lists and graphs.

 
3 My Body History

- The records are displayed.
- Press to check the monthly record.
- Press (Right) to add a record.
- Press (Left) to view/delete/delete all of diet records lists and graphs.

6. Calculator

You can make simple calculation with the phone.

Press (Left) ▶ Press ▶ Press

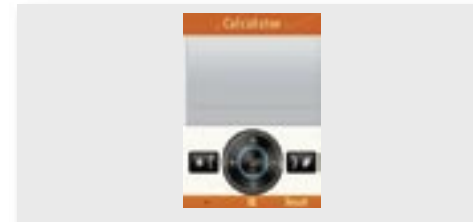

- Press (Right) to make the calculation again.
- When entering numbers or symbols, press to delete a character, press and hold to delete all.
- You can use the operators several times in a calculation.

Operators



7. World Time

You can check a current time of world main cities (50 countries) and city information, and set various functions.

Press **•** (Left) ▶ Press **6** (Left) ▶ Press **7** (Right)



Press **•** to display the country, country code, area code, emergency number/information of the selected cities.

Menu description

Summer Time(DST)	You can set summer time periods by cities.
World Clock	<ul style="list-style-type: none">The local time of your area and the selected city are displayed on the standby screen.You can change the clock type on the standby screen, and you can see preview by pressing • (Right). (However you cannot use this function if a phone theme or flash is selected.)
City Info.	You can check desired city information.




10 Message

1 Message Box	126
2 New Message	130
3 Report Spam/Service	133
4 Contents Box	134
5 Settings	135

1. Message Box

 You can view and manage the received messages.

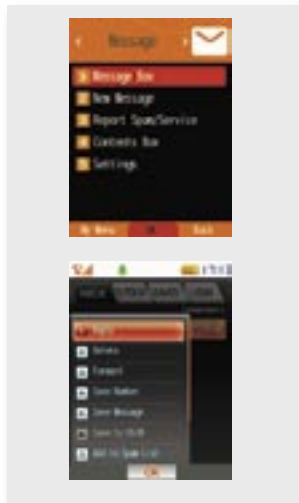

Press **[Left]** ▶ Press **[7] [Left]** ▶ Press **[1] [Left]**

 
- When you receive the message, the icon is displayed on the standby screen.
 - The information on the latest message received is shown at the top.
- When you receive the message with the phone number shown on the screen, press **[Call]** to make a call to the person who sent the message.
- If you press **[Call]** when receiving a voice message, you are connected to the voice mailbox, and you can listen to the recorded voice message.
- When checking the message, press **[Left]** to move to the previous or the next message.
 - When checking the message, press **[Right]** to move to the other message box.
 - When checking the text message, press **[Volume Key]** (Volume key) to zoom in/out the screen.

Note

- If the capacity for received message is exceeded, the oldest message deleted first.
- You can check the received message in the standby screen using the Message Alarm and Preview. (Settings, see p.135)

INBOX

Press **[Left]** ▶ Press **[7] [Left]** ▶ Press **[1] [Left]** Select INBOX

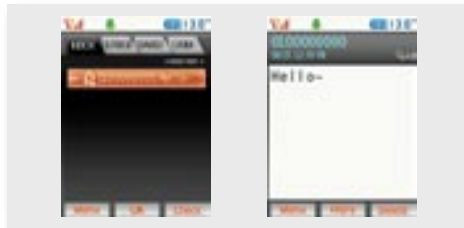

- You can check and manage the received messages. (Including voice messages)
- Select a message and press **[Enter]** to read the message.
- The content attached to the multi-mail is automatically played.

Icon description

	unconfirmed SMS Message		confirmed SMS Message
	unconfirmed MMS Message		confirmed MMS Message

Menu description

- Reply** : You can reply the message to the sender.
- Delete** : You can delete the selected message.
- Forward** : You can forward the received message to other person.
- Save Number** : You can save the phone number indicated in the message in the phonebook.
- Save Message** : You can save the selected message in SAVED box.
- Save to USIM** : If the selected message is SMS, you can save the message in USIM box.
- Add to Spam List** : Register a selected message as a spam number to block the message.
- Sort Message** : You can sort the message into name/time/size order.
- Message Search** : You can search and find the message by name/number/string.
- Delete All** : You can delete all saved message in the inbox.

1. Message Box (Cont'd)

You can view and manage the received messages.

OUTBOX

Press **Left** ▶ Press **7** ▶ Press **1**



- You can manage sent message, draft message, and failed message.
- Select the message and press **Check** to check the content of the message.
- While writing the message, press **Left** to save the message.
- You can press **Check** to continue and rewrite the message.

Icon description


	Temporary saved message
	SMS sent message
	MMS sent message

Menu description

- Delete** : You can delete the selected message.
- Forward** : You can forward the received message to other person.
- Save Number** : You can save the phone number indicated in the message in the phonebook.
- Save Message** : You can save the selected message in SAVED box.
- Delete All** : You can delete all saved message in the inbox.

SAVED

 
Press **Left** ▶ Press **7** ▶ Press **1** ▶ Select SAVED

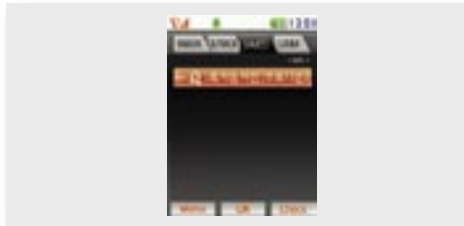

- You can move the selected messages from the inbox or outbox to the saved box.
- For outbox message, press **Left** to delete, forward, save number, save message, and delete all.
- For inbox message, press **Left** to reply, delete, forward, save number, save message, save to USIM, add to spam list, sort message, message search, and delete all.

USIM

 
Press **Left** ▶ Press **7** ▶ Press **1** ▶ Select USIM

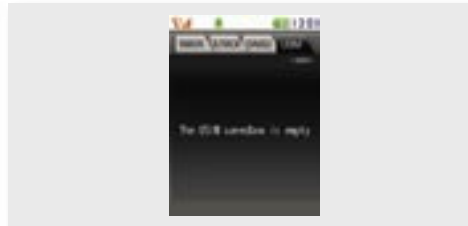

- You can manage and save the message by selecting a message in the inbox, and select the menu 'Save to USIM'.

2. New Message

 The integrated MMS function enables you to attach content to the long text message and send to the mobile phone or e-mail address.

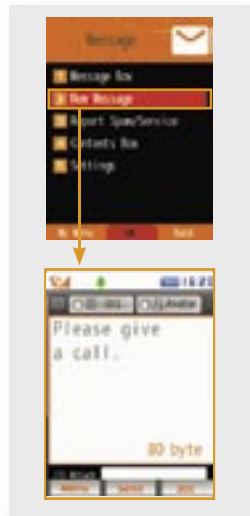

Press (Left) ► Press ► Press

- A message can be sent to upto 20 people at a time.
 - You can answer a call while you are writing a message, and return to the message screen after the call.
 - You can send 3 image files (photo or picture) and 1 music and movie file.
 - After writing a message, you can preview the message with (Right).
- * MMS is an SKT's new multimedia transmission service integrating the text message function and the color mail function.

Note

Cautions in writing messages

- Messages are sent as SMS in default. However In the following cases, they are changed to MMS and additional data fee is charged: message exceeding 40 Korean letters/80 English letters, font color changed, emoticon added, avatar added, paper set, content attached (photo, movie, background music, etc.).
- If a message is changed to MMS, a message 'Converted to MMS' is displayed on the message window.

 
MMS fee

- The same information fee is charged for long text message, changed font color, paper set, avatar set, and emoticon added between MMS and SMS. Additional service fee is charged. No data call fee is charged for sending and receiving MMS. Visit SKT T-World homepage (<http://www.tworld.co.kr>) or contact SKT Customer Center for further information.

Letter Paper

You can select the various background.

Select ► Press

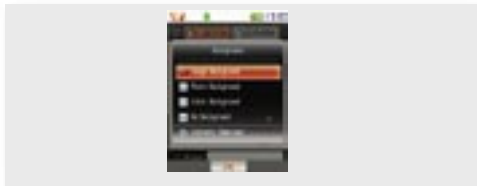


- Image Background** : You can select a image stored in the phone and set the image as a background.
- Photo Background** : You can select a photo stored in the photo album and set the photo as a background.
- Color Background** : You can select the background color of the letter paper. (Note that the content might not be identified if the letters are written on the paper of the same color.)
- No Background** : You can set the background as a white paper.
- Contents Download** : You can connect to NATE content shop and download the latest contents.

Avatar

The character or the photo of the sender is displayed on the message receiver's phone.

 Select ► Press

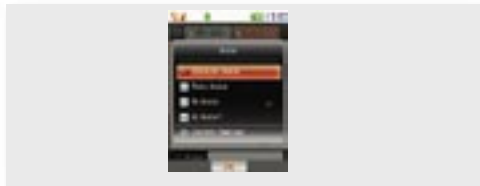

- Character Avatar** : You can set a character in the photo album as a avatar.
- Photo Avatar** : You can set the photo in the photo album as a avatar.
- No Avatar** : No avatar is displayed on the receiver's phone.
- An Avatar?** : Description on avatar is displayed.
- Contents Download** : You can connect to NATE content shop and download the latest contents.

2. New Message (Cont'd)

The integrated MMS function enables you to attach content to the long text message and send to the mobile phone or e-mail address.

Using menu in the message writing field

Press **⏏** (Right) to change the writing mode (Korean, Symbol, Number, English upper/lower case).

Menu description

Set Text Color	Use ⊙ or ⊕ to set the color of the text.
Picture Emoticon	Press ⊕ to move page, and press the number key pad to select the emoticon.
Text Emoticon	Press ⊙ to move page, and press the number key pad to select the emoticon.
Add Number	Select the phone number in the phonebook and press ⊕ to input the phone number automatically.
Used word	You can store and use the frequently used word. - You can edit the word in settings. (Settings, see p.135)
Save to Draft box	You can save the draft message in the outbox. (OUTBOX, see p.128)

Using menu in the attachment field

Press **⏏** (Left) in the **Attach** (Attachment) field

- If you select **Contents Download** and press **⏏**, you can connect to NATE content shop and download the most latest contents.
- You can check and manage contents in Attachment box.
(Contents Box, see p.134)

Menu description

Attach Photo	You can attach the photo stored in the attachment box.
Attach Video	You can attach the video stored in the attachment box.
Attach Music/Voice	You can attach the music or voice stored in the attachment box.
Attach Image	You can attach the image downloaded from NATE.
Take Photo	You can take a photo and attach in the message.
Record Video	You can take a video and attach in the message.
Record Voice	You can record a voice and attach in the message.
Delete Contents	You can delete attached contents in the message.

 
Using menu in the receiver field

You can use the various functions such as search by name, recent addresses, add group, enter e-mail, read-reply rqst, send receiver's list by pressing **⏏** (Left).

3. Report Spam/Service

To promote convenience of the user and to prevent damage caused by illegal spam, you can report the received spam messages to the spam handling center of Korea Information Security Agency.

Press **⏏** (Left) ▶ Press **7** **7** **7** **7** **7** **7** **7** ▶ Press **3** **3** **3** **3** **3** **3** **3**

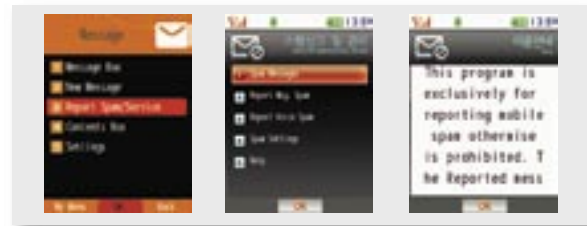

Menu description

Spam Messages	You can check received spam messages.
Report Msg. Spam	You can report spam by selecting the spam message and press ⏏ (Right).
Report Voice Spam	You can report spam by selecting the spam number and press ⏏ (Right).
Spam Settings	You can block the number or message to set as a spam.
Help	You can check the guide for spam report.

 
Note

Visit the spam handling center of Korea Information Security Agency (www.spamcop.or.kr) for further information.

4. Contents Box

You can manage and check attachment of the received MMS.

Press **Left** ▶ Press **7** (MMS) ▶ Press **4** (MMS)

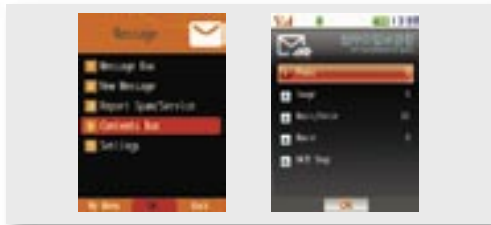

■ If you select **Contents Download** and press **Enter**, you can connect to NATE content shop and download the latest contents.

■ Press **Left** to use Send MMS, Set Background, Rename, Delete, Protect/Release, and Delete All functions.

Menu description

Photo	You can view and manage the attachable photos.
Image	You can store and manage the images downloaded from NATE.
Music/Voice	You can view and manage the attachable music, and voice files.
Movie	You can view and manage the attachable movie files.
Nate Shop	You can connect to NATE content shop and download the latest contents.

5. Settings

You can set preferences for the message functions.

Press **Left** ▶ Press **7** (MMS) ▶ Press **5** (MMS)

MMS Settings	: You can select and set various contents when writing messages. <ul style="list-style-type: none">• Background Settings : You can select the background of the message. (Letter Paper, see p.131)• Avatar Settings : You can send the character or photo with the message. (Avatar, see p.131)• Font Color Settings : You can select the font color. (Press Left or Right to select font color.)• Photo Size Settings : You can set the size of photos transmitted from the phone via wireless Web (Internet).• MMS mode change : You can set alarm when switching SMS to MMS message.
Signature Settings	: You can attach the designated sentence at the end of the message. <ul style="list-style-type: none">• Edit Signature : You can change font color or enter emoticon by pressing Left, and change letter input mode by pressing Right.• Signature Setting : You can set the designated sentence at the end of the message.
MSG Noti. Setting	: You can set ring volume, alarm type, and alarm on calls
Msg. Notification	: You can set to display the message on the standby screen when a message is received.
Sent Msg. Auto Save	: You can set auto save option on/off for sent messages.
Spam Settings	: You can block the message from the designated phone number and string. <ul style="list-style-type: none">• Number Block : You can check the number, or cancel block, add, or delete all by pressing Left.• String Block : You can check the blocked phone number and use cancel block, add, delete all by pressing Left.• Spam Setup/Release : You can set to block spam number or sentence.
Phrase Settings	: You can set the frequently used phrase.

MEMO

A large, light green rectangular area with rounded corners, containing ten horizontal dotted lines for writing a memo.




11 Phonebook

1 Search Number	138
2 Add New Contact	140
3 Edit Group	141
4 Edit Speed Dial	141
5 Call History/Time	142
6 Block Calls	142
7 Memory Usage	143
8 Automatic Backup	143
9 My Number	144

1. Search Number

You can search the saved phone number list.

 Press **⏏** (Left) ▶ Press **8** ▶ Press **1**

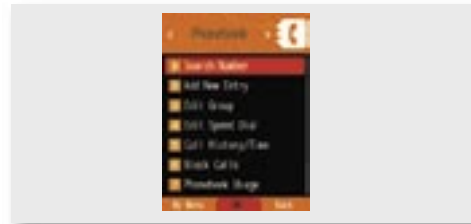

- You can check or edit phone numbers.
- If you press **⏏** (Right) on the standby screen, 'Search All', 'Group', 'Speed Dial', and 'Number' are displayed.
- Select a phone number and press **⏏** to place a call to the number.

Note

- You can see the phone number and group saved in USIM card only when USIM card is mounted in the phone.

1 Search All

Press **⏏** (Left) ▶ Press **8** ▶ Press **1** ▶ Press **1**

- Phone numbers beginning with the entered character are listed.
- If you enter the first sound of a name, all the names starting with the sound are searched.

2 Group

Press **⏏** (Left) ▶ Press **8** ▶ Press **1** ▶ Press **2**

- It is displayed in the order of groups. You can search for the phone number by moving to a group you want.
- If you enter the first sound of a name, all the names starting with the sound are searched.

3 Speed Dial

Press **⏏** (Left) ▶ Press **8** ▶ Press **1** ▶ Press **3**

- Saved speed dial number is searched when entering speed dial key.

4 Number

Press **⏏** (Left) ▶ Press **8** ▶ Press **1** ▶ Press **4**

- Pressing the number you want to search for displays the phone number including the number you entered.

Menu description

New Message	Send message to selected number.
Cyworld	Connect to the mobile homepage. (NATE Mobile Homepage, see p.63)
Send/Connect	Use e-mail, Voice Message Call, Call Me Free, Number Via Message, and Via Bluetooth functions for selected number.
Add New Contact	Save the phone number in the phonebook, if it's not saved in the USIM card.
Add Speed Dial	Assign selected number as a speed dial.
View	Set view of the number saved in the phone or USIM card. (This will affect search all and number screen.)
Move/Copy to USIM	Copy or move the saved phone number in USIM card to the phone. (You can only save the phone number and email information when copy/move USIM file. - Depends on the USIM card capacity, some data may not be stored due to available space.)
Delete	Delete all or delete the selected number.

 
* Menu may be different depends on the selection. Only available menu selection will be displayed.

2. Add New Contact

You can save phone numbers in the phone or USIM card.

Save by phone


Press **☐** (Left) ▶ Press **8** ▶ Press **2**

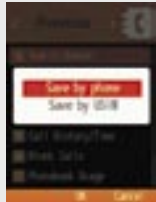

- Including mobile security numbers, you can save upto 2000 numbers.
- When saving as a new contact, you can select the saving location (phone, USIM card).
- If you select 'Add to Contact' when saving phone number on the standby screen, you can add or modify the existing phone number of the phonebook.


- Press **☐** (Left) to set the primary number, and **☐** (Right) to assign as a speed dial number.

 Icon description



Save by USIM

 Press **☐** (Left) ▶ Press **8** ▶ Press **2**

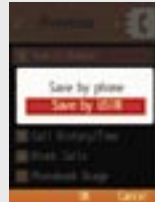

- You can save the phone number upto USIM card capacity.
- When saving as a new contact, you can select the saving location (phone, USIM card).
- If you select 'Add to Contact' when saving phone number on the standby screen, you can add or modify the existing phone number of the phonebook.

- Press **☐** (Left) to set the primary number, and **☐** (Right) to assign as a speed dial number.

- When saving by USIM, you can save name, group, mobile1, mobile2, and e-mail. Depends on the USIM card capacity, some data may not be stored due to available space.

Note

- You can visit Motorola homepage (www.mymotorola.co.kr), download PC Sync program, and save, edit, and send phone number to PC.

3. Edit Group

You can manage the groups in the phonebook.

Press **☐** (Left) ▶ Press **8** ▶ Press **3**

 


- Press **☐** (Right) to select the saving location (by phone or by USIM) and add a group.
- If you press **☐** (Left), you can use 'Edit', 'Move Members', 'Move/Copy to USIM', and 'Delete Members'.
- If you delete a group, the phone numbers in the group are moved to 'Other' group. For group saved in USIM, numbers are moved to 'None'.
- You cannot delete or rename the default groups.
 - Phone: Family, Other, Office, Friend
 - USIM: None

4. Edit Speed Dial

You can assign speed dial numbers to the frequently used phone numbers.

Press **☐** (Left) ▶ Press **8** ▶ Press **4**

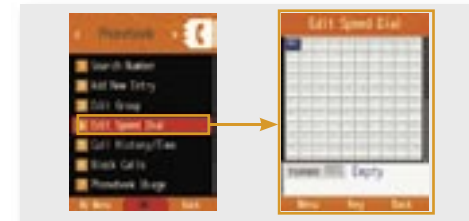


- On the standby screen, if you press the registered speed dial number, holding the last digit, the phone dials the registered phone number. (Placing a call with speed dial, see p.40)
- You can store upto 200 speed dial numbers (including mobile security numbers) in the phonebook.
- If you press **☐** (Left), you can use 'Edit Speed Dial', 'Change Speed Dial', 'View List', and 'Delete'.

5. Call History/Time

You can view the call history and time.

 Press **☐** (Left) ▶ Press **8** ▶ Press **5**

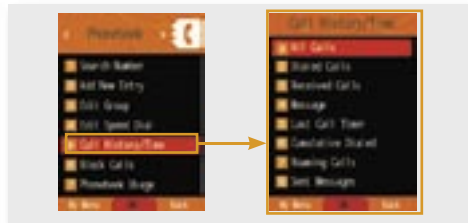

- If you press **☐** (Left) while viewing the call time, the call time is reset to zero.
- The call time is counted from the point the ringer is generated, and charging begins after the call is connected.

6. Block Calls

You can register a phone number you want to block.

Press **☐** (Left) ▶ Press **8** ▶ Press **6**



- Press **☐** (Right) to add a phone number to the block phone number list.
- Press **☐** to set/release and edit block calls.

Menu description

All Calls : You can block all incoming calls.

Hidden Numbers : You can block all restricted calls.

060* : You can block calls starting with 060 numbers.

7. Memory Usage

You can check the memory status of the phonebook.

Press **☐** (Left) ▶ Press **8** ▶ Press **7**

 


- Press **☐** (Left) to reset memory.
 - All phone numbers in the phone except mobile security are deleted.

8. Automatic Backup

The phone updates the phonebook everyday to the server.

Press **☐** (Left) ▶ Press **8** ▶ Press **8**

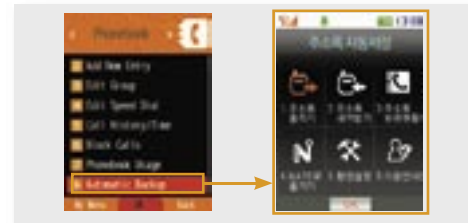

8. Automatic Backup (Cont'd)

Menu description

Upload Address Book : You can view changed address and upload to the server.

Download Address Book : You can download saved address in the server. (Additional fee is charged when downloading.)

Address Book Info : You can check the information of the most recent saved address book to the server.

Move to NATE : You can view phonebook saved in the phone or NATE web phonebook. The phonebook in the phone is synchronized with NATE.

Settings : You can set various preferences such as password, phonebook automatic backup, time, delete, and update.

Help : You can view guidelines on the phone automatic backup services.

Note

- In order to use automatic backup service, you have to register first and additional service fee is charged. Contact SKT Customer Center for further information.

9. My Number

You can view your own number.

Press (Left) ▶ Press ▶ Press



- Press to register user information in the phone.
- Press (Left) to send via message or send via bluetooth.

12

Settings

1 Phone Settings.....	146
2 Call Settings.....	147
3 NATE Settings.....	148
4 USIM Setting.....	148
5 Set Time.....	149
6 Lock/Password.....	150
7 언어/Language.....	151
8 Reset.....	152
9 Motorola Service Center.....	152
10 S/W Version.....	153

1. Phone Settings

Integrated menu for phone setting.

Sounds

You can set the sound functions in the sound menu.

Press (Left) ▶ Press ▶ Press ▶ Press

- (Sound, see p.66)

Display

You can set the display functions in the display menu.

Press (Left) ▶ Press ▶ Press ▶ Press

- (Display, see p.72)

Message

You can set the message functions in the message menu.

Press (Left) ▶ Press ▶ Press ▶ Press

- (Settings, see p.135)

Camera

You can set the camera functions in the camera menu.

Press (Left) ▶ Press ▶ Press ▶ Press

- (Camera, see p.102)

June Setting

You can set the june contents box functions in the june contents box menu.

Press (Left) ▶ Press ▶ Press ▶ Press

Play Setting : You can set the preference for content play.

Display : You can change settings for skin, preview, or recommended content.

Live screen sound : You can select the background sound when a live screen is set in the standby screen.

Memory : You can check the total space, used space, and free space of internal/external memory.

2. Call Settings

Integrated menu for call setting.

Answer Options

You can set the call answer mode.

Press (Left) ▶ Press ▶ Press ▶ Press

Open Phone : Receive a call when opening the folder.

Any Key : Receive a call when pressing any buttons except .

[Send] Key Only : Press to receive calls.

After 3 Seconds : The call is connected automatically in 3 seconds after the ringtone.

Auto Area Code

You can set an area code that you use frequently.

Press (Left) ▶ Press ▶ Press ▶ Press

- If you enter a number starting with '0' on the standby screen after setting an auto area code, the area code is not displayed and only the number you entered is displayed. (Ex : Mobile phone number, international call number, and other area codes)

- If you select 'Off' in area code list, the area code display will be cleared.

- You can enter upto 5 numbers for auto area code.

Airplane Mode

You can use all the mobile phone functions (MP3, game, organizer).
- Except the communication services (sending/receiving call/message, network communication including internet).

Press (Left) ▶ Press ▶ Press ▶ Press

Password

- Press (Left) to see the description on the plane mode.

Network Settings

You can use this setting only in international roaming.

Press (Left) ▶ Press ▶ Press ▶ Press

- You can edit/change network setting to use the phone in the foreign contry.
- You can have difficulties of using the phone regarding of phone call services if you change it within your own discretion.

3. NATE Settings

You can change NATE preferences.

Press **Menu** (Left) ▶ Press **9** ▶ Press **3**

NATE Setting Menu

Home URL : You can set the initial access address for wireless internet.

Proxy : If the service provider extends the proxy, and adds or deletes address, you can set the proxy at your own discretion.

Reset : If you correct Home URL and Proxy, you can recover them to the factory-set default.

 
Note

- Proxy is the server located between the user and the service server to speed up data transmission. When the user request a specific data, the data in the proxy, rather than the concerned server, are sent to the user.

4. USIM Setting

To prevent loss of information when lost or stolen the phone, you can set lock and PIN.

Press **Menu** (Left) ▶ Press **9** ▶ Press **4**

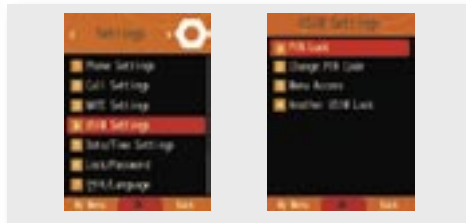

PIN Lock : You can set PIN code when turning on/off the mobile phone.

Change PIN Code : You can change PIN code.
(Set PIN lock to use this function)

Menu Access : You can lock the menu when USIM card is not mounted in the phone.
(Set PIN lock to use this function)

Another USIM Lock : You can lock and restrict the another USIM access.

 
Note

- If you have entered in wrong PIN code for 3 times, it turns to PIN unlock code (PUK). If you have entered in wrong PUK code 10 times, you have to replace USIM card.
 - PIN(Personal Identification Number) Code : This is to prevent others from using your phone.
(Upon purchasing the product, the password is '0000'.)
 - PUK(PIN Unlock Key) Code : This code is 8 digit number to reset USIM code, if you have entered in wrong PIN code for 3 times. This number can be found on the USIM card envelope or card holder.
- If you have lost PIN/PUK code, visit SKT retail center to reset the password.

5. Set Time

You can set current time in the phone.

Press **Menu** (Left) ▶ Press **9** ▶ Press **5**

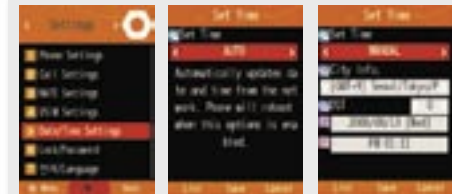

- If you set to manual, you have to input the time or select city info and summer time(DST).

Auto : Set the time automatically from service provider.

Manual : The user inputs the information manually.

 
6. Lock/Password

You can set the password of the phone to prevent unapproved use. (The default password is '0000')

Phone Lock

All the phone functions are locked. (except receiving the call)

Press **⏏** (Left) ▶ Press **9** ▶ Press **6** ▶
Password ▶ Press **1**

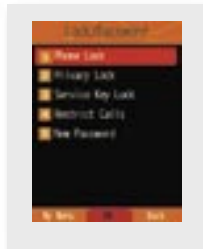

- You can set phone lock by pressing and holding **⏏** on the standby screen.
-You can still receive the call even when the phone is locked.
- The phone maintains the lock even if you switch on/off the phone.
- You can still place the emergency calls (111, 112, 113, 119, 125, 127) or use the Speed Dial 1 and 9 (Mobile Security) even when phone is locked.

- When you receive a call, the lock mode is released temporarily, and the phone returns to the lock mode after the call.
- In order to release the lock mode completely, press and hold **⏏** and enter the password, or select 'Unlock' in the Phone Lock menu.

Privacy Lock

You can select the menu and set lock.

Press **⏏** (Left) ▶ Press **9** ▶ Press **6** ▶
Password ▶ Press **2**

- If you set lock for a menu, you need to enter the password to use the selected function. This will protect your privacy.
- Press **⏏** (Left) to select all and lock all menu. In order to unlock the menu press **⏏** (Left) again.
- Press **⏏** (Right) to select and lock several menu. In order to unlock the menu press **⏏** (Right) again.
- If you select 'Hide Phonebook Name', sender names stored in phonebook are not displayed. However the calling number is displayed. (When a message is received, the 'Hide Phonebook Name' function is not applied.)

Service Key Lock

When connecting to wireless internet, you have to input the password.

Press **⏏** (Left) ▶ Press **9** ▶ Press **6** ▶
Password ▶ Press **3**

- You need to enter the password to use the one-touch dial button (NATE, W, T MAP, GXG, @Playon, etc). This will protect your privacy, and prevent from paying additional fee for unwanted wireless internet service.

Restrict Call

You can restrict origination to overseas of 700/060 numbers.

Press **⏏** (Left) ▶ Press **9** ▶ Press **6** ▶
Password ▶ Press **4**

Change Password

You can change the password.

Press **⏏** (Left) ▶ Press **9** ▶ Press **6** ▶
Password ▶ Press **5**

- Be sure not to forget your password.
- If you lose your password, you have to visit the service center in person with the ID card.
- Motorola takes no responsibility for any damage caused by leakage of password.

7. 언어/Language

You can select the language to be used in the phone.
(Language : Korean/English)

Press **⏏** (Left) ▶ Press **9** ▶ Press **7**

 


- Even if you select English, some functions are displayed in Korean.

8. Reset

You can reset the phone to default setting.

Press **⬇** (Left) ▶ Press **9** ▶ Press **8**

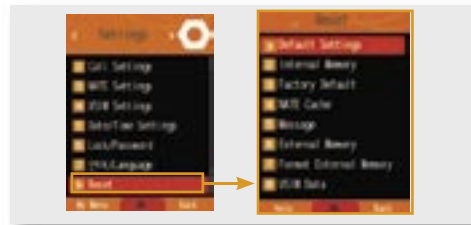

- To reset the phone, you need to input the password.
- The phone gets automatically switched off and rebooted.
- If the phone fails to reboot, press **⬆** to turn on the power.
- You can view function description of the item you wish to reset by pressing **⬇** (Left).

9. Motorola Service Center

You can receive the service guide about the phone.

Call Center

Representative number and business hours of Motorola Customer Call Center is displayed.

Press **⬇** (Left) ▶ Press **9** ▶ Press **9** ▶ Press **1**



- Press **Ⓜ** to place a call to the customer center.

Search Service Center

You can check the local customer center number and how to get there.

Press **⬇** (Left) ▶ Press **9** ▶ Press **9** ▶ Press **2**

- Press **Ⓜ** to place a call to the customer center.
- Press **⬇** (Left) to save the local customer center number.

Self A/S

You can check the solution against phone failure.

Press **⬇** (Left) ▶ Press **9** ▶ Press **9** ▶ Press **3**

10. S/W Version

You can check the S/W version of the phone.

Press **⬇** (Left) ▶ Press **9** ▶ Press **0**

S/W upgrade

If you wish to upgrade the software to the recent version, or if you need to upgrade software due to a bug, you can visit Motorola homepage (www.mymotorola.co.kr) and easily upgrade it with the Moto Upgrade program without having to visit a Motorola service center.

- Visit the Motorola homepage, sign up and log in.
- Select 'MOTOPRODUCT INFORMATION' and click Version Upgrade.
- Before starting the Moto Upgrade program, make sure to read 'Prerequisites', and run the program in accordance with the procedure. (Some software versions require you to visit the service center for free Moto Upgrade.

Contact the Motorola Customer Center (1588-6633) for details.

MEMO

A large, light green rectangular area with rounded corners, containing ten horizontal dotted lines for writing.




13

Appendix

1 Accessories	156
2 Troubleshooting	156
3 Spec and Feature	157
4 Authentication label	157
5 Specific Absorption Rate	158
6 Collecting wasted-mobile phones...	159

1. Accessories

 You can purchase optional items at the nearest Motorola service center or accessory shop. Contact the service provider or visit Motorola homepage (www.mymotorola.co.kr) for details.

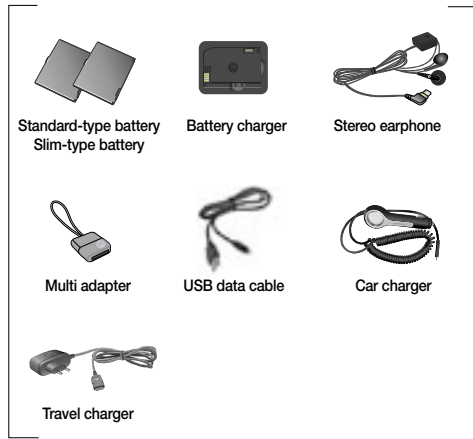

2. Troubleshooting



Nothing is displayed on the screen

- Check the battery.

No antenna bar is displayed on the screen

- Move to other place and then attempt a call again.

It sounds 'Toot-Toot' when a call is placed

- There is no communication channel available or your phone has failed in communicating with a base station. Press  to clear the call and press  to redial the number.

The charging lamp of the charger blinks in red

- Check the battery position or clean the terminals before reattempting charging. If the lamp keeps blinking, contact the nearest service center.

Battery operating time does not comply with the User Manual

- The battery operating time reduces slowly as the battery repeats charging and discharging. The operating time reduces rapidly if the battery is left in a cold or hot place for a long time.

Malfunction or failure to power On

- Remove the battery and reinstall it, and then turn the power on.

3. Spec and Feature

	Wireless communications service
Transmit frequency	1942.8~1977.2MHz
Receive frequency	2132.8~2167.2MHz
TX power	200mW
Number of channel	8CH
Type of emission	G7W
Modulation system	QPSK
Communication mode	duplex operation system
Transformer	PLL
Power	DC 3.7V
Exterior, weight	Standard battery : 49.5mmX105mmX15.9mm, 126g
Relative humidity	-20°C~+50°C, 0%~95%

4. Authentication label

1. Name of the model : Wireless communications service device
2. Authentication number : MOT-W-VE70-0808
3. Authentication Trade name : Motorola Korea Inc.
4. The date of manufacture: 2008. . .
5. Manufacturer/country : Motorola Korea Inc. / China

5. Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 w/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use

only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada.

The highest SAR value for this model phone when tested for use at the ear is 1.12 W/kg, and when worn on the body, as described in this user guide, is 0.79 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

6. Collecting wasted-mobile phones

The collected wasted-mobile phones are utilized as resources and the residues are treated ecologically. Motorola is willing to do its best to protect environment not only today but in the future also. We kindly inviting you to participate in this movement for the protection of environment.

Motorola phone collecting centers



Recycling of wasted-mobile phone

- Return the old one to the distributor when you purchase a new phone.
- Visit a near-by representative of the manufacturer or A/S center.
- Return your mobile phone to a representative of mobile service provider.
- Utilize a collecting bag with no charger (arranged in provincial office, distributor, representative)

Guidelines for collecting discarded Motorola mobile phones



Please think of environment when you discard your phones and accessories. Do not discard old mobile phones or accessories such as battery pack, battery charger, etc. together with household waste. In some countries and areas, they have established a system to treat useless electronic and electrical products and batteries. Please contact your area for more information. If there is no appropriate system available, please send useless mobile phone and accessories to a near-by Motorola service center.

FCC Notice to User

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:IHDP6JH1 on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

European Union Directives Conformance Statement




Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC.
- All other relevant EU Directives

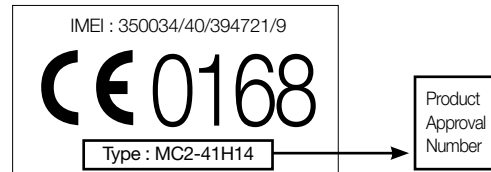

The above gives an example of a typical Product Approval Number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.

 
MEMO

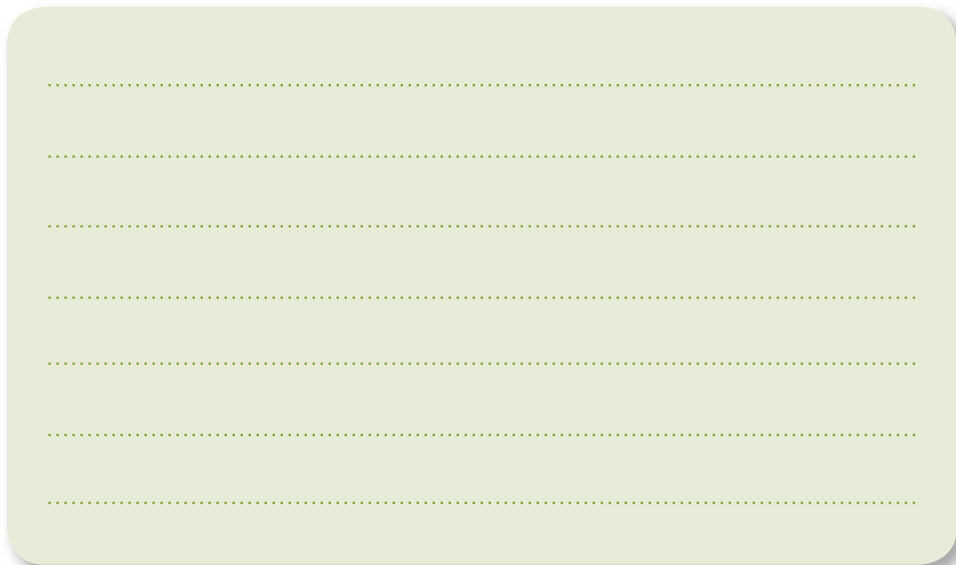




Dictionary

- English-Korean : ● (Left)[Menu] ▶ S ▶ S ▶ 1
- Korean-English : ● (Left)[Menu] ▶ S ▶ S ▶ 2
- My Vocabulary : ● (Left)[Menu] ▶ S ▶ S ▶ S
- Previous Key Word : ● (Left)[Menu] ▶ S ▶ S ▶ S ▶ 4
- Settings : ● (Left)[Menu] ▶ S ▶ S ▶ S

Photo Capture

- In standby screen, press and hold  (Camera) for a while.

Movie Capture

- In standby screen, press and hold  (Camera) ▶  ▶ 

Summary Table

Messages

- Checking message : ► 1
- Writing message : ► 2

Saving Phone Number

- Save number from menu : (Right)[Phonebook] ►
 (Right)[Add New]
- Save number in standby screen: Enter number ►
 (Right)[Save]

Searching Phone Number

- Save number in standby screen : Enter number ► (Right)[Save] ►

Main Menu Setting

- Sounds : (Left)[Menu] ► 9 ► 1 ► 1
- Display : (Left)[Menu] ► 9 ► 1 ► 2
- Message : (Left)[Menu] ► 9 ► 1 ► 3
- Camera : (Left)[Menu] ► 9 ► 1 ► 4
- June setting : (Left)[Menu] ► 9 ► 1 ► 5

One-Touch Dial

- Set/Release Etiquette : In standby screen, press and hold
- Lock/Unlock : In standby screen, press and hold
- W : In standby screen, press
- Function Menu : In standby screen, press
- Moneta : In standby screen, press
- Message : In standby screen, press
- My Menu : In standby screen, press
- NATE : In standby screen, press and hold
- Operation Effects : In standby screen, press (Volume)
- T interactive : In standby screen, press and hold

Warranty Policy

Thank you for purchasing a Motorola product. This product has passed a strict quality control and inspection of the Motorola Technology Team. If a defect is found in your product during the warranty period, it will be repaired free of charge at a Motorola Service Center.

Warranty Period

- Terminal Equipment : 1 year
- Lithium ion battery : 6 months
- Other Accessories : 1 year

Free Warranty Service

Free warranty service will be provided for one year (warranty period) after purchasing.

Type of defects or trouble	Compensation		
	Under warranty	After expiry of warranty	
Critical repair service request resulting from performance and function failures occurred in normal operation within 10 days after purchasing	Exchange or refund	N/A	
Critical repair service request resulting from performance and function failures occurred in normal operation within 1 month after purchasing	Exchange or repair		
Critical repair service request within 1 month of exchange. Exchange the product is impossible	Refund		
Repairable	Performance and function failures occurred	Free service	Paid service
	Three times of repair and four times of detects resulting from the same reason Four times of repair and five times of detects resulting from the different reasons	Exchange or refund	Paid service
Non-repairable	A/S parts are available but repair is impossible	Exchange or refund	Refund the price deducted by the depreciation amount
	Repair is impossible because A/S parts are not in stock.		Refund the price deducted by the depreciation amount and added by its 10%
lost of repair request product by the user	Exchange or refund	Refund the price deducted by the depreciation amount and added by its 10%	

Model		Serial No.	
Purchase Date	Year Month Day	Customer	
Distributor		Price	

※ When you purchase the product, please fill the blanks on the Warranty Policy and keep it together with the receipt in order to obtain more beneficial service.

Paid Service

- Reasons other than defects
Service requests for symptoms other than defects will be charged after expiry of the warranty period. Carefully read the User's Manual before you visit a service center.
- Defects resulting from user's errors
 - Defects caused by careless handling (soaking, impact) or improper repairing and remodeling.
 - Defects caused by using improper power supply.
 - Defects caused by repairs done at a place other than the Motorola Service Centers.
 - Defects caused by using accessories not provided by Motorola. (hands free, quick charger, charger, battery, stereo headset, battery cover, etc.)
 - Defects or damages resulting from dropping while moving the product.
- Others
 - Defects resulting from natural disasters such as fire, earthquake, flood, etc.
 - Expiry of life time of consumables (battery, stereo headset, external memory, antenna, and various accessories)



Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.