



 
# MOTO™ Nevis

 
**User's Guide**




# HELLOMOTO

Introducing your new **MOTO™** Nevis GSM wireless phone. Here's a quick anatomy lesson.

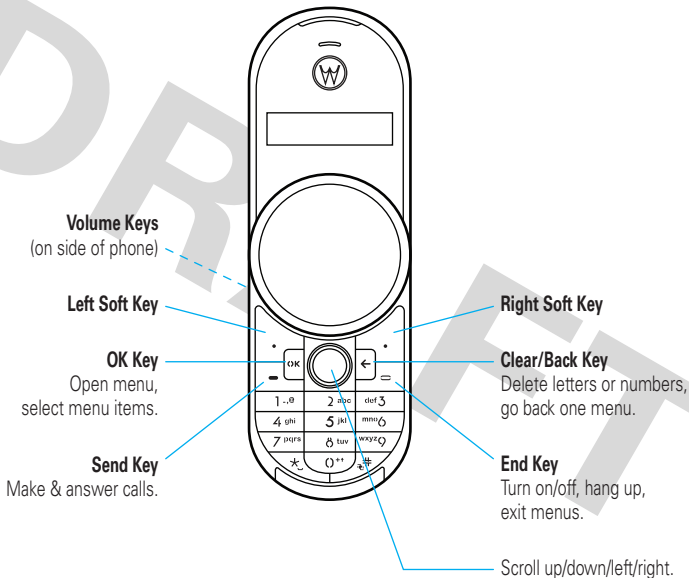

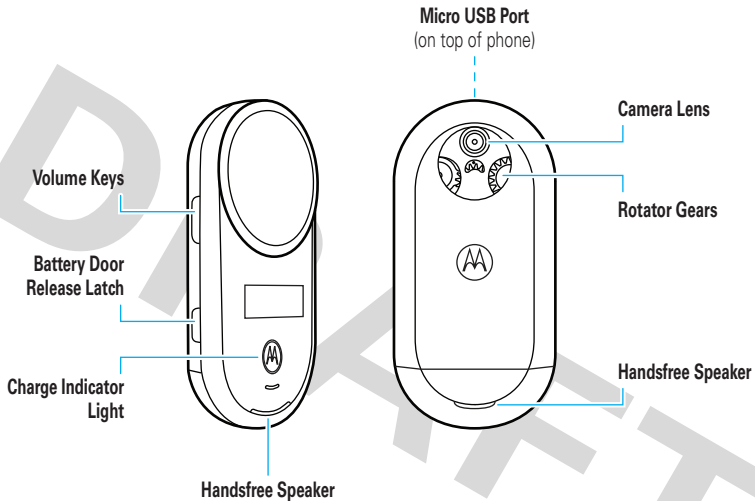


## Home Screen

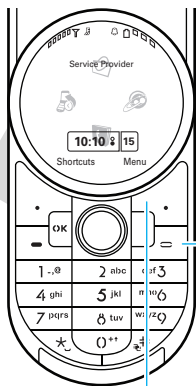 

1 Press & hold  until the display lights up, to turn on your phone.

2 Press the **Menu** soft key to open the main menu.

## Main Menu

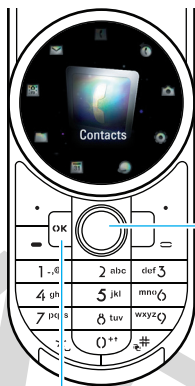 

3 Press  left/right to scroll to a menu feature.

4 Press  to select it.

**Note:** This is the standard home screen and main menu layout. **Your phone's home screen and main menu may be different.** To change your home screen shortcuts and main menu appearance, see page 34.

Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196  
[www.hellomoto.com](http://www.hellomoto.com)

1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States for hearing  
impaired)  
1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP and Windows Media are trademarks of Microsoft Corporation. Macintosh is a registered trademark of Apple Computer, Inc. iTunes is a trademark of Apple Computer, Inc.,

registered in the U.S. and other countries. All rights reserved. All other product or service names are the property of their respective owners.

© 2008 Motorola, Inc. All rights reserved.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

### **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68XXXX350-A

# contents

---

<b>menu map</b> .....	<b>7</b>	codes & passwords .....	27
<b>Use and Care</b> .....	<b>9</b>	lock & unlock phone .....	27
<b>EU Conformance</b> .....	<b>10</b>	lock your SIM card or applications ...	28
<b>essentials</b> .....	<b>11</b>	<b>personalize</b> .....	<b>29</b>
about this guide .....	11	profiles .....	29
insert your SIM card .....	12	time & date .....	31
battery .....	13	themes .....	32
turn phone on & off .....	17	home screen shortcuts .....	34
make a call .....	17	wallpaper .....	34
answer a call .....	17	screensaver .....	35
end a call .....	18	display appearance .....	35
store a phone number .....	18	clock style .....	35
call a stored number .....	18	date .....	35
your phone number .....	19	more personalizing features .....	36
shortcuts .....	20	<b>calls</b> .....	<b>38</b>
<b>basics</b> .....	<b>21</b>	turn off a call alert .....	38
display .....	21	recent calls .....	38
volume .....	24	redial .....	39
voice commands .....	24	return a call .....	39
talking phone .....	26	caller ID .....	39
handsfree speaker .....	26	(continued next page)	

<b>calls (continued)</b>			
emergency calls	40	<b>tools</b>	<b>77</b>
handsfree	40	phonebook	77
answer options	41	personal organizer	80
call times & costs	41	<b>connections</b>	<b>84</b>
more calling features	43	sync	84
<b>text entry</b>	<b>47</b>	file manager	85
word mode	48	cable connections	86
abc mode	49	Bluetooth® wireless	88
numeric mode	50	phone software updates	92
symbol mode	50	<b>service &amp; repairs</b>	<b>93</b>
<b>entertainment</b>	<b>51</b>	<b>SAR Data</b>	<b>94</b>
camera	51	<b>OSS Information</b>	<b>95</b>
videos	54	<b>index</b>	<b>96</b>
music player	58		
browser	68		
fun & games	71		
<b>messages</b>	<b>72</b>		
voicemail	72		
text messages	72		
instant messaging	74		
more message features	74		



# menu map

## main menu



### Phonebook



### Recent Calls



### Camera



### Settings

- (see next page)



### Web Access

- Browser
- My Bookmarks
- My Web Pages
- History
- Go to URL
- Browser Setup



### Calendar



### Office Tools

- World Clock
- Alarm Clock
- Calculator
- Sync
- IM
- Download Manager
- File Manager
  - My Blog \*
  - Music and Sounds
  - Pictures
  - Videos
  - Voice Notes
  - Application Downloads
  - Unrecognizable Files
  - My Documents
- SIM Applications \*
- Dialing Services
- Task List
- Notes
- Help



### Multimedia

- Media Finder
- Games
- Video Camera
- Radio
- Voice Recorder
- Pictures
- Video




### Messages

- Create Message
- Inbox
- My Folders
- Templates
- Drafts
- Outbox
- Create Postcard \*
- Email
- Call Voicemail

This is the standard main menu layout. **Your phone's menu may be different.**

To change your home screen shortcuts and your main menu appearance, see page 34.

**Tip:** Press  to exit the current menu, or press  to exit all menus.

\* optional features

# settings menu

- **Profiles**
  - **Themes**
  - **Home Screen**
    - Icons
    - Wallpaper
    - Clock Style
    - Date
  - **Connections**
    - Bluetooth®
    - USB Setting
      - Media
      - Synchronization
      - Extended Memory
      - Modem
      - USB Printing
    - Voice Networks \*
    - Data Connections
      - Add a Connection
      - Edit a Connection
      - Remove a Connection
  - **Call Settings**
    - Speed Dial
    - Call Forward
    - In-Call Setup
      - Hearing Aid
      - My Caller ID
      - In-Call Timer
      - Answer Options
      - In-Call Message Alert
      - Roam Alert
      - Call Waiting
      - Auto-Redial
      - Call Drop Tone
    - Dialing Setup
      - My Caller ID
      - DTMF
      - Search Mode
      - Dialing Prefix
    - Call Barring \*
    - Fixed Dialing
    - My SIM number
    - Active Line \*
  - **Phone Settings**
    - Display Settings
      - Display Timeout
      - Screensaver
      - Brightness
    - Airplane Mode
    - Battery Meter
    - Battery Save
    - Time & Date
    - Language
    - **(continued next column)**
  - **Phone Settings (continued)**
    - Talking Phone
    - Text Entry
    - Reset
      - Reset All Settings
      - Delete All Data
      - Delete Memory Cards
    - View Memory
    - Properties
    - Legal Notices
    - Java™ System
    - OTA Updates
    - Headset Settings
      - Auto-Answer
      - Voice Dial
    - TTY Settings
  - **Security**
    - Phone Lock
    - Application Lock
    - SIM Lock
    - Change Passwords
    - Certificates
  - **Network**
    - Current Network
    - Scan Avail. Networks
    - Find New Network
    - My Network List
    - Search Setup
    - Service Tone
- \* optional features

# Use and Care

---

To care for your Motorola phone, please keep it away from:



## liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



## dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



## extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



## cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



## microwaves

Don't try to dry your phone in a microwave oven.



## the ground

Don't drop your phone.

# European Union Directives Conformance Statement

---



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte). To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

# essentials




**CAUTION:** Before using the phone for the first time, read the *Important Safety and Legal Information* guide included in the box.



## about this guide

This guide shows how to locate a menu feature as follows:

**Find it:** Menu >  Messages > Create Message

This means that, from the home screen:

- 1 Press the **Menu** soft key to open the menu.
- 2 Press the *navigation key*  to scroll to  Messages, and press  to select it.

- 3 Press  to scroll to **Create Message**, and press  to select it.

This guide uses the following symbols:

### symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

# insert your SIM card

 
Your *Subscriber Identity Module* (SIM) card stores your phone number and other information.

**Caution:** Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.


1



2

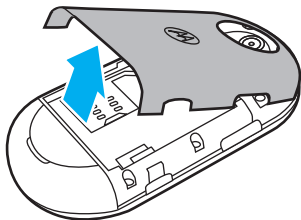

3

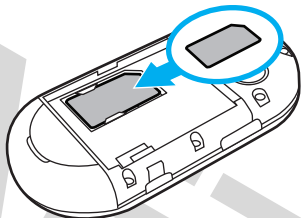 

# battery

## battery use & safety

### **IMPORTANT: HANDLE AND STORE BATTERIES PROPERLY TO AVOID INJURY OR DAMAGE.**

Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

#### **DON'Ts**

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the phone or battery come in contact with water.** Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your carrier or contact Motorola, even if they appear to be working properly.
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
  - Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
  - Avoid leaving your phone in your car in high temperatures.

## DOs

- **Do avoid dropping the battery or phone.** Dropping these items, especially on a hard surface, can potentially cause damage.
- **Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.**

### **IMPORTANT: USE MOTOROLA ORIGINAL PRODUCTS FOR QUALITY ASSURANCE AND SAFEGUARDS.**

To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a “Motorola Original” hologram.

### **Motorola recommends you always use Motorola-branded batteries and chargers.**

Motorola mobile devices are designed to

work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a “Motorola Original” hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Center.

**Important:** Motorola’s warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

**Warning:** Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.



## PROPER AND SAFE BATTERY DISPOSAL AND RECYCLING

Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- [www.motorola.com/recycling](http://www.motorola.com/recycling)
- [www.rbrc.org/call2recycle/](http://www.rbrc.org/call2recycle/)  
(in English only)

 
**Disposal:** Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.




**Warning:** Never dispose of batteries in a fire because they may explode.

## insert the battery

1

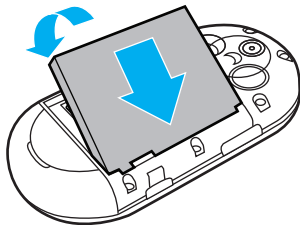


2

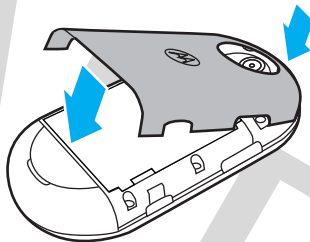 

## charge the battery

 New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. The battery charge indicator light on your phone shows when the battery is charging. The display shows **Charge Complete** when finished.

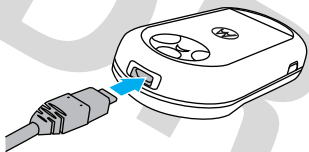

### Notes for charging your phone's battery:





- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.

- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.


**Note:** You can charge your battery by connecting a cable from your phone's micro USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. A Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately.

 


## extend battery life


- To turn off **Bluetooth®** power when you're not using it, press **Menu**  
>  **Settings** > **Connections** > **Bluetooth**,  
press **Options** > **Setup Bluetooth**  
> **Bluetooth Power** > **Off**.
- To make your **display** turn off sooner, press **Menu** >  **Settings**  
> **Phone Settings** > **Display Settings**  
> **Display Timeout** > **5 Seconds**.
- To turn off your **screensaver**,  
press **Menu** >  **Settings** > **Phone Settings**  
> **Display Settings** > **Screensaver** > **Off**.
- To reduce the display **brightness**,  
press **Menu** >  **Settings** > **Phone Settings**  
> **Display Settings** > **Brightness**, and select a lower number setting.

## turn phone on & off

Open the rotator, then press and hold the *power/end key*  for a few seconds, or until the display turns on or off.

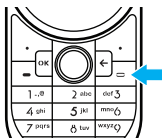


## make a call


Open the rotator, then enter a phone number and press the *send key* .

**Tip:** To **voice dial** a call, see page 24.

## answer a call

When your phone rings and/or vibrates, open the rotator or press  to answer.

## end a call

To hang up, close the rotator or press .

## store a phone number

You can store a phone number in your **Phonebook**.

**Note:** You can store a new contact in **phone memory**, or store the contact both in phone memory and on your **SIM card**. When you choose to store a contact to both locations, only the contact's name and phone number are stored on the SIM card.

To store a phone number:

- 1 Enter a phone number in the home screen.
- 2 Press **Save**.
- 3 Enter a name for the phone number, and enter other information as desired.

- 4 If you want to save the number on your SIM card in addition to storing it in phone memory, select **Save to SIM Card**.

- 5 Press **Save** to store the contact.

To edit or store additional information about the contact, see page 78.

 
## call a stored number

To call a phone number stored in your **Phonebook**:

From the home screen, press keypad keys to enter the first letters of the contact name (one keypress per letter). The phone shows the contact name(s) that match your

keypresses. For example, if you press the letters d-a-n, your display might show:

Press the letters d-a-n  
(keys **3**-**2**-**6**) on the keypad.

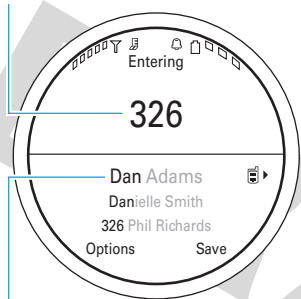

Press **↑** up/down to scroll to the contact you want. Press **☎** to call. Press **✉** to send a message.

**Note:** If you've got contacts stored on your SIM card, but the contacts aren't visible when you open the phonebook, you need to copy the contacts into phone memory.

Press **☰** > **Phonebook**, press **Options**

> **Import Contacts** > **SIM Card**, press **Options** > **Select All**, then press **Import**.

## your phone number

To see your phone number:

**Find it:** **Menu** > **Settings** > **Call Settings**  
> **My SIM Number**

To see your phone number while you're on a call, press **Options** > **My Tel. Numbers**.

To store or edit your name and phone number on your SIM card, select the field you want to edit. If you don't know your phone number, contact your service provider.

# shortcuts

Your phone provides shortcuts to some frequently-used features. You can use the following shortcuts from the home screen.

## **Send a text message:**

Press **Shortcuts** > **Create Message**.

## **Take a picture:**

Press **Shortcuts** > **Take Picture**.

## **Set an alarm:**

Press **Shortcuts** > **Set Alarm**.

## **Change clock (closed rotator display):**

Press **Shortcuts** > **Change Clock**.

## **Create a new contact:**

Press **Shortcuts** > **Create Contact**.

## **Change the alert profile to vibrate only:**

 
Press and hold .

## **Go to the dialed calls list:** Press


# basics

## display

The *home screen* appears when you turn on the phone.

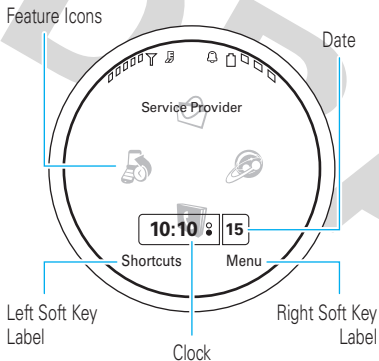



**Note:** Your home screen may look different, depending on your service provider.

To dial a number from the home screen, press number keys and .

 
Press the **Menu** soft key in the home screen to open the main menu.




Press **Shortcuts** to access some frequently-used phone features.

Press the *navigation key*  up, down, left, or right in the home screen to open basic features. To show, hide, or change feature icons in the home screen, see page 34.

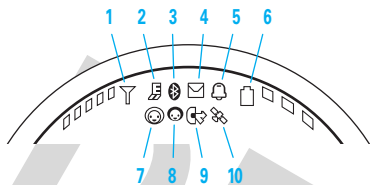


**Tip:** Want some help? Press **Menu** >  **Office Tools** > **Help**. Select a **Help** topic to find information about phone features.

Status indicators appear at the top of the home screen:




- 1 Signal Strength Indicator** – Show the strength of the wireless network connection.
- 2 EDGE/GPRS Indicator** – Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) network connection , or *General Packet Radio Service* (GPRS) network connection . 

- 3 Bluetooth Indicator** – Shows Bluetooth status:

-  (solid blue) = Bluetooth power on
-  (solid green) = Bluetooth connected
-  (flashing blue) = Bluetooth discoverable mode


- 4 Message Indicator** – Shows when you receive a new text or voice message. Other indicators can include:


-  = text message
  -  = voicemail message
  -  = email message
- 





**5 Profile Indicator** – Shows the alert profile setting:

 = ring only

 = ring and vibrate


 = vibrate only


 = vibrate then ring

 = silent


**6 Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.


**7 Messaging Presence Indicator** – Shows your instant messaging (IM) status:


 (green) = online



 = offline

 = busy

 = discrete


 (gray) = invisible to IM


**8 IM Indicator** – Shows when you receive a new IM message. 

**9 Active Line Indicator** – Shows  to indicate an active call, or  to indicate when call forwarding is on. Indicators for dual-line-enabled SIM cards can include:

 = line 1 active




 = line 2 active

 = line 1

 = line 2


call forward on


call forward on

**10 Location Indicator** – Shows  when your phone is providing location information to the network, or  when location information is turned off. 

# volume

 Press the *volume keys* to:

- turn off an incoming call alert
- change earpiece or speakerphone volume during a call
- change playback volume for a song or video
- set your phone's alert profile in the home screen (press the volume keys to scroll to a profile, then press  to select it)

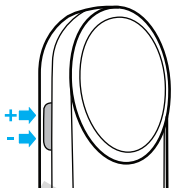


# voice commands

You can use voice commands to tell your phone what to do.

**Note:** Not all languages support voice commands.

## voice dial a call

You can dial a contact list entry by speaking its name, or dial any phone number by speaking its digits.


- 1 Press and hold . The phone loads the voice recognition software, then prompts you to say a command or name.
- 2 Wait for the beep, then say the **full name** of the contact as it appears in your phonebook. Your phone confirms the name and makes the call.

**or**

Say “Dial Number.” Your phone prompts you to speak the digits in the phone

number. Speak the digits. Your phone confirms the number and makes the call.

### Tips:

- You can say a contact's name and number type together. For example, say "John Smith mobile" to call the mobile number stored for John Smith.
- For voice command help, press and hold , then press **Help**.

## voice activate phone functions

You can use voice commands to open applications and perform many basic phone functions.

- 1 Press and hold . The phone prompts you to say a command.

- 2 Wait for the beep, then say a command from the list.

voice commands
"contact name"
"Dial Number"
"Send Message To contact name"
"Check Calendar"
"Check New Message"
"Check New Email"
"Add New Contact"
"Talking Phone"
"Check Battery"
"Check Signal"
"Check Time"
"Check Date"
"Open Setup"
"Open Recent Calls"
"Open Theme"
"Open Camera"
"Open Web Access"
"Set Normal"
"Set Vibrate"

## handsfree speaker

During a call, press **Options** > **Speaker On** to turn the handsfree speaker on. Your display shows the speakerphone indicator until you turn it off (press **Options** > **Speaker Off**) or end the call.

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


<b>voice commands</b>
"Set Silent"
"Set Ring"
"Set Airplane"
"Set Airplane Off"

**Tip:** Press and hold  to see the list of voice commands.

## talking phone

You can set your phone to recite caller ID information for incoming messages, read the names of menu features or phonebook entries, read messages you receive (in English only), and provide audio feedback for phone functions.

**Find it:** Menu >  Settings > Phone Settings  
> Talking Phone


**Shortcut:** Press and hold . When the phone prompts you to say a command, say "Talking Phone."

## codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

**Find it:** Menu >  Settings > Security > Change Passwords

You can also change your **SIM PIN** codes or call barring password.

**If you forget your unlock code:** At the **Please verify the Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  to enter your six-digit security code instead.

**If you forget other codes:** If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

## lock & unlock phone

You can lock your phone to keep others from using it. You must enter the four-digit unlock code to lock or unlock your phone.

To **manually lock** your phone:

**Find it:** Menu >  Settings > Security > Phone Lock > Lock Now

To **automatically lock** your phone whenever you turn it off:

**Find it:** Menu >  Settings > Security > Phone Lock > Lock at Power On > On

# lock your SIM card or applications


**Note:** You must enter your SIM PIN code to lock or unlock the SIM card. If you forget your PIN code, contact your service provider.

**Caution:** If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**.

To **lock or unlock your SIM card**:

**Find it:** Menu >  Settings > Security > SIM Lock

To **lock an application** (such as Messages):

**Find it:** Menu >  Settings > Security  
> Application Lock


You must enter the four-digit unlock code to see the applications list. Select an application and choose **Lock** to lock it.

# personalize

## profiles

You can quickly change your phone's alert style or profile to match your activity or environment. Each profile uses a different set of ringtones or vibrations for incoming calls and other events. The alert profile indicator shows at the top of the home screen).


 Ring Only

 Ring and Vibrate


 Vibrate Only

 Vibrate then Ring

 Silent

**To change your profile:** From the home screen, press the volume keys on the side of your phone. Use the volume keys to scroll to a profile, then press  to select it.

The **Vibrate Only** and **Silent** alert styles silence your phone until you set another alert style.










**Shortcut:** From the home screen, press and hold  to quickly set the profile to **Vibrate Only**.

## change alert style settings

You can change the ringtones that a standard alert style uses to notify you of incoming calls and other events. You can also change the alert style's ring volume, keypad tone volume, and media playback volume settings. For dual-line-enabled SIM cards, you can set different ringtones to identify incoming calls on line 1 or line 2.

**Note:** You can't set a ringtone for the **Silent** alert style, or change some settings for some alert styles.

**Find it:** Menu >  Settings > Profiles > Alert Style > *alert style*

- 1 Press   left/right to select the **alerts** tab , **volume** tab , **messages** tab , or **settings** tab .
- 2 Press   up/down to scroll to the alert or volume setting you want to change, then press .
- 3 Select the setting value you want.
- 4 Press **Back** to exit and save your changes.

To **reset** the default settings for an alert style:

**Find it:** Menu >  **Settings** > **Profiles** > **Alert Style**  
> *alert style*, press **Options** > **Reset**

## create a new profile

To create a **new** profile with the ringtones and volume settings you specify:

**Find it:** Menu >  **Settings** > **Profiles** > **Alert Style**  
> *alert style*

- 1 Change alert style settings as described in the previous section.
- 2 Press **Options** > **Save as Profile**.

## 30 personalize

- 3 Enter a name for the profile, then press **Save** to save it.

To create **additional** profiles:

**Find it:** Menu >  **Settings** > **Profiles**, press **Options** > **Create Profile**

**Note:** Profile alert settings also can be set by the theme. When you apply a new theme, you can choose to apply the theme's alert settings to the current profile. Selecting this option **changes** the current profile to use the theme alert settings.

## edit or delete profiles

To **edit** a profile:

**Find it:** Menu >  **Settings** > **Profiles**, scroll to the profile, press **Options** > **Edit**

**Note:** You can't edit the **Silent** profile, or change some settings for some profiles.

To **delete** a user-defined profile:

**Find it:** Menu >  **Settings** > **Profiles**, scroll to the profile, press **Options** > **Delete**



## restore alert style settings

To delete all user-defined profiles and restore your phone's original alert style settings:

**Find it:** Menu >  Settings > Profiles, press Options > Restore Sound Settings

## time & date



Your phone can automatically update the time and date. It uses the time and date for the Calendar.

To **synchronize** time and date with the network:


**Find it:** Menu >  Settings > Phone Settings > Time & Date > Auto-Update Time > On

To **manually** set the time and date:

**Find it:** Menu >  Settings > Phone Settings > Time & Date > Auto-Update Time > Off, then > Time and Date

To adjust time and date, press  left/right to scroll to a setting, then press  up/down to change it. Press **Set** to save your settings.

To show a **12-hour or 24-hour** digital clock in the home screen:

**Find it:** Menu >  Settings > Phone Settings > Time & Date > Time Format > 12 Hour Clock or 24 Hour Clock

To set the **date format** in the home screen:

**Find it:** Menu >  Settings > Phone Settings > Time & Date > Date Format

To set your **time zone**:

**Find it:** Menu >  Settings > Phone Settings > Time & Date > Time Zone, then select a city in your time zone

**Shortcut:** Press keypad keys to enter the first letters of the city you want.



# themes

Use a phone *theme* to personalize the look and sound of your phone. Most themes include a wallpaper image, screensaver image, and ringtones.



To **apply** a theme:

**Find it:** Menu >  Settings > Themes > *theme*

To **download** a theme, see page 68.


To **delete** a theme:



**Find it:** Menu >  Settings > Themes, scroll to the theme, press Options > Manage > Delete

**Note:** You can delete only downloaded themes or custom themes you create.

## preview ringtones

To preview the ringtones on your phone, and choose the ringtone a theme uses to notify you of incoming calls:



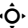

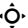

**Find it:** Menu >  Settings > Themes, press Options > Edit > Ringtone > Ringtones > Sounds & Ringtones > Preloaded Ringtones

- 1 Press  up/down to scroll and listen to each ringtone in turn.
- 2 Press  to select the highlighted ringtone.
- 3 Press **Save** to save your selection.

## apply a photo as wallpaper

Use one of your photos as a background *wallpaper* image in the home screen:

**Find it:** Menu >  Settings > Themes, press Options > Edit

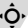

- 1 Press  right to select the **images** tab .
- 2 Press  down to scroll to **Wallpaper**, then press  to select it.
- 3 Press  down to scroll to **Preloaded Wallpaper**, then press  to select it.



4 Scroll to the photo you want to use, then press **Select**.

5 Press **Save** to save your selection.

Photos that you copy to your phone from another device may not scale correctly when applied as wallpaper images. To **resize a wallpaper photo** so it displays at the correct size:

**Find it:** Menu >  Settings > Themes, press Options > Edit

1 Press  right to select the **images** tab .




2 Press  down to scroll to **Wallpaper Layout**, then press  to select it.



3 Scroll to **Fit-to-Screen**, then press **Select**.

4 Press **Save** to save the setting.

## modify a theme

**Find it:** Menu >  Settings > Themes, scroll to the theme, press Options > Edit

1 Press  left/right to select the **sounds** tab  or **images** tab .

2 Press  up/down to scroll to the setting you want to change, then press .

3 Scroll to the image or sound file you want, then select it.

4 Press **Save** to save your theme changes.

The **Wallpaper** appears as a background image in your home screen.

The **Screensaver** appears in the display after a specified period of inactivity.

**Skins** set the look and feel of your phone's display.

To **reset** the standard settings for a modified theme:

**Find it:** Menu >  Settings > Themes > *theme*, press Options > Manage > Reset

To **restore** the default theme on your phone:

**Find it:** Menu >  Settings > Themes, press Options > Manage > Restore to Default

## create a new theme

**Find it:** Menu >  Settings > Themes, press Options > Create Theme or Create a Copy

## home screen shortcuts

From the home screen, you can press the navigation key left, right, up, or down as shortcuts to your favorite features. You can change the shortcuts to suit your needs.


To **change** navigation key shortcut icons in the home screen:

**Find it:** Menu >  Settings > Home Screen > NavKey Shortcuts > Left, Right, Up, or Down

Select a direction, then choose the feature you want to open when you press the navigation key in that direction.

To **show or hide** navigation key shortcut icons in the home screen:

**Find it:** Menu >  Settings > Home Screen > NavKey Shortcuts > Icon Display > Show or Hide

**Note:** You can press  to select the features in the home screen even when the icons are hidden.

## wallpaper

Change the background wallpaper image in the home screen:

**Find it:** Menu >  Settings > Home Screen > Change Wallpaper > Wallpaper & Graphics > Preloaded Wallpaper, scroll to an image, press Select

The new wallpaper is applied to the current theme.

## screensaver

Change the screensaver image that appears in your phone's display after a period of inactivity:

**Find it:** Menu >  Multimedia  
> Wallpapers and Graphics > Preloaded Wallpaper, scroll to an image, press Options > Apply to > Screensaver

The new screensaver is applied to the current theme.

**Tip:** To extend battery life, turn off the screensaver.

## display appearance

To set the display **brightness**:

**Find it:** Menu >  Settings > Phone Settings  
> Display Settings > Brightness

To save battery life, the **display** can turn off when you're not using your phone. To set the display timeout delay interval:

**Find it:** Menu >  Settings > Phone Settings  
> Display Settings > Display Timeout

To turn the display **screensaver** on or off:

**Find it:** Menu >  Settings > Phone Settings  
> Display Settings > Screensaver > On or Off

**Tip:** To extend battery life, turn off the screensaver.

## clock style

Change the clock style that appears in the display when the rotator is open or closed:

**Find it:** Menu >  Settings > Home Screen  
> Clock Style > Digital or Analog

## date

Show or turn off the date in the home screen:

**Find it:** Menu >  Settings > Home Screen > Date  
> On or Off

# more personalizing features

## features




### language

Set menu language:

Menu >  Settings > Phone Settings > Language

### reminders

Set the reminder alert for event notifications:

Menu >  Settings > Profiles, press  left/right to select the **settings** tab ,  
> Reminder Alert

### reset settings

Reset default settings for all options **except** the unlock code, security code, and lifetime timer:

Menu >  Settings > Phone Settings > Reset  
> Reset All Settings

## features

### delete data

**Caution:** This option **erases all information you have entered** (including contacts and calendar entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

This option does **not** delete SIM card information:

Menu >  Settings > Phone Settings > Reset  
> Delete All Data

## features

### delete SIM card information

**Caution:** This option **erases all information you have entered** (including contacts and calendar entries) **and content you have downloaded** (including photos and sounds) stored on your SIM card. After you erase the information, you can't recover it.

Menu >  Settings > Phone Settings > Reset  
> Delete Memory Cards


# calls

## turn off a call alert


Press the volume keys on the side of your phone to turn off the ringer before answering a call.


## recent calls




Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.



**Find it:** Menu >  Recent Calls

**Shortcut:** Press  in the home screen to go to the **Dialed Calls** list.

- 1 Press  left/right to select a call list:  
**All Calls**, **Dialed Calls**, **Answered Calls**, **Missed Calls**,  
or **Frequent Calls**.



- 2 Press  up/down to scroll to a phone number.


Icons indicate if the call was incoming , outgoing , or missed . A check mark next to the icon indicates a connected call.

- To call the number, press .
- To check if a missed call left you a voicemail message, see page 72.
- To see call details (like time and date), press .
- Press **Options** to perform other operations on the number (send a message, save to contacts), or to set recent call options.



## redial



- 1 Press  from the home screen to see the **Dialed Calls** list.
- 2 Scroll to the number you want to call, then press .

If you hear a **busy signal** and see **Call Failed**, press  or **Retry** to redial the number. When the call goes through, your phone shows **Connected** and connects the call.



## return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

When you see the **X Missed Calls** message, press  to see the **Missed Calls** list. Scroll to the call you want to return, then press .

## caller ID

*Calling line identification* (caller ID) shows the phone number for an incoming call in your phone's display.



Your phone shows the caller's name and picture when they're stored in your contact list, or **Incoming Call** when caller ID information isn't available.

**Note:** Picture IDs aren't available for contacts stored on the SIM card.

**Tip:** Want to know who's calling without even looking at your phone? To give one of your contacts a special ringtone, see page 78.

To show or hide your phone number for the next outgoing call, enter the number you want to call, then press **Options** > **Show ID** or **Hide ID**.

To show or hide **your phone number** for all calls:

**Find it:** Menu >  Settings > Call Settings


> Dialing Setup > My Caller ID > All Calls

> Show ID or Hide ID

## emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call at any time, even when your phone is locked or the SIM card is not inserted.

**Note:** Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Do not solely rely on your wireless phone for essential communications such as medical emergencies.

**To make an emergency call:** Turn your phone on, exit any open application such as games, dial the emergency number, then press  to call the emergency number.

## handsfree

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

### features

#### auto answer (headset)



Automatically answer calls when connected to a car kit or headset:

Menu >  Settings > Phone Settings

> Headset Settings > Auto-Answer

## features

### voice dial (headset)



Enable voice dial with headset  
send/end key:

Menu >  Settings > Phone Settings  
> Headset Settings > Voice Dial

## answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

**Find it:** Menu >  Settings > Call Settings  
> In-Call Setup > Answer Options


## options

**Any Key** Answer by pressing any key.


**Answer**

**Open to** Answer by opening the

**Answer** rotator.

**Note:** You can always press  to answer a call.

## call times & costs

**Network connection time** is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.


**The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.**

## features

### call times



See call timers:

Menu >  Recent Calls, press Options > Call Times

## features

### in-call timer



Show call time information during a call:

Menu >  Settings > Call Settings > In-Call Setup > In-Call Timer

### call cost




See call cost trackers and credit information:

Menu >  Recent Calls, press Options > Call Costs

### call cost setup




Set a credit limit:

Menu >  Recent Calls, press Options > Call Costs > Call Cost Setup

### data times



See data call timers:

Menu >  Recent Calls, press Options > Data Times

## features

### data volumes



See data volume meters:

Menu >  Recent Calls, press Options > Data Volumes


# more calling features

To use voice commands for calling, see page 24.

## features

### speed dial

Your phone can store nine phone numbers that you can call with a single keypress. To **store** a speed dial phone number:


Menu >  Phonebook, press Options > Setup > Speed Dial List > *speed dial location*

To **call** a speed dial number, press and hold the single-digit speed dial number for one second.

## features

### international calls



If your phone service includes international dialing, press and hold  to insert your local international access code (indicated by +). Then, press number keys to dial the country code and phone number.

### hold active call(s)

During a call, press Options > Hold

### mute active call(s)

During a call, press Options > Mute

### hearing aid

Use your phone with a hearing aid that operates in telecoil mode:

Menu >  Settings > Call Settings > In-Call Setup > Hearing Aid > Telecoil On

## features

### call waiting



When you're on a call, you'll hear an alert if you receive a second call. Press

 to answer the new call.

- To switch between calls, press **Switch**.
- To connect the two calls, press **Link**.
- To end the call on hold, press **Options > End Call On Hold**.

To turn call waiting on or off:

**Menu >  Settings > Call Settings > In-Call Setup > Call Waiting > On or Off**


### make another call during a call



During a call, press **Options > New Call**, press **Options > Browse Contacts**

### conference call




During a call, dial next number, press , press **Options > Link Calls**

## features

### transfer a call



During a call, press **Options > Transfer Call**, dial transfer number, press 

### call forwarding




Set up or cancel call forwarding:

**Menu >  Settings > Call Settings > Call Forward**

### call barring



Restrict outgoing or incoming calls:

**Menu >  Settings > Call Settings > Call Barring**

### TTY calls



Set up your phone for use with an optional TTY device:

**Menu >  Settings > Phone Settings > TTY Settings**

## features

### change phone line

If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number:

Menu >  Settings > Call Settings > In-Call Setup > Active Line

The active line indicator shows the active phone line (see illustration on page 23).

### network settings

See network information and adjust network settings:

Menu >  Settings > Network

## features

### fixed dial

When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

**Note:** You must enter your SIM PIN2 code to turn fixed dialing on or off. If you forget your PIN2 code, contact your service provider.

Turn fixed dialing on or off:

Menu >  Settings > Call Settings > Fixed Dialing > On or Off

Use the fixed dial list:

Menu >  Office Tools > Dialing Services > Fixed Dial

### service dial

Dial service phone numbers stored by your service provider:

Menu >  Office Tools > Dialing Services > Service Dial

## features

### DTMF tones

Activate DTMF tones:

Menu >  Settings > Call Settings > Dialing Setup  
> DTMF

To send DTMF tones during a call, just press the number keys.

 


# text entry

Some features let you enter text.

Press **#** to select a text entry mode.

Character Counter

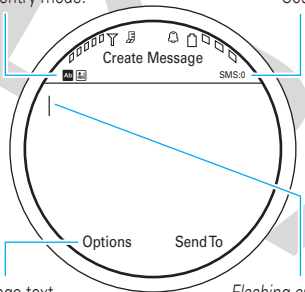

Change text entry options.

Flashing cursor indicates insertion point.

## text entry modes


<b>Ab</b>	“word” mode (see page 48)
<b>Ab</b>	“abc” mode (see page 49)
<b>123</b>	numeric mode (see page 50)
<b>☺</b>	symbol mode (see page 50)

To **change** your global text entry settings or languages:

**Find it:** Menu >  Settings > Phone Settings > Text Entry

**Change text case:** In a text entry screen, press **0** to change text case to all capital letters (**A**), next letter capitalized (**a**), or next letter lowercase (no symbol).


**Set word learning:** Your phone can learn the words you enter, to improve text prediction and completion. In a text entry screen, press **Options** > Text Entry




> **Set Text Prediction** > **Learn My Words**. Your phone shows  when word learning is active.

**Set text completion:** Set your phone to complete words based on the characters you enter. In a text entry screen, press **Options**



> **Text Entry** > **Set Text Prediction** > **Offer Completions**.

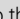Your phone shows  when text completion is active.


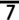
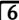

**Enter punctuation:** In a text entry screen, press  to enter punctuation or other characters.


**Edit or delete text:** In a text entry screen, press  to move the cursor to the right of text you want to edit. Press the *clear/back key*  to delete the character left of the cursor. Hold  to delete word by word.


## word mode



To switch to “word” predictive text entry mode, press  in a text entry screen until you see  in the display.


Word mode lets you enter words using one keypress per letter. The phone predicts each word as you enter it.

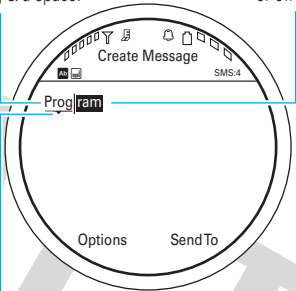
For example, if you press    , your display might show:




Press  to enter Prog & a space.

You can turn text completion on () or off ().

Press  up/down to see other words.

Press  to select a word.

Press  to delete character to left of cursor.


## abc mode

 To switch to “abc” text entry mode, press **#** in a text entry screen until you see **ABC** in the display.

To enter text, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press **7** one time, your display might show:

Character displays at insertion point.

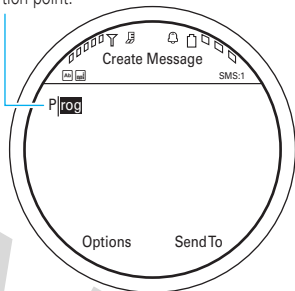



After two seconds, the character is accepted and the cursor moves to the next position.

When text completion is activated, your phone tries to guess the rest of the word:

- Press **OK** to select the suggested word.
- Press **⦿** right to enter the suggested word and a space.





- If you want a different word, press keypad keys to enter the remaining letters.

## numeric mode

Press  in a text entry screen until you see . Press the number keys to enter the numbers you want.

**Tip:** Just need one number? To enter a number quickly, press and hold a number key until the number appears.

## symbol mode

Press  in a text entry screen until you see . The display shows the symbol associated with each keypad key. Press  up/down repeatedly to see different symbols. To insert a symbol, press its key, or scroll to it and press .

# entertainment

 
## camera

Just aim and shoot to take a photo, then press **Send** to share it with your friends.


### take a photo

**Find it:** Menu >  Camera

The phone display acts as the camera *viewfinder*.

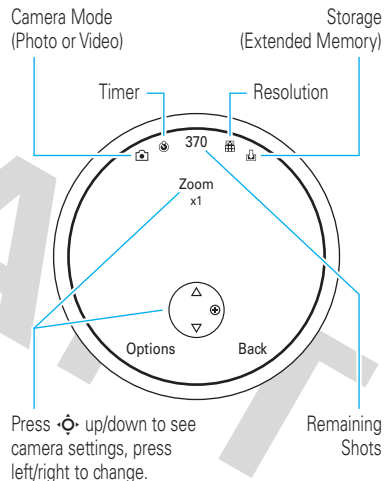

Use the viewfinder to compose your scene, then press **OK** to take the photo.

- To store the photo, press **OK**.
- To send the photo in a message, press **Send** (see page 72). 
- To discard the photo, press **⏪**.
- To select other photo options, press **Options**. You can choose to **Save Only**, **Discard**, **Send to** (message, email, or Bluetooth connection), **Apply to** (wallpaper, screensaver, new or existing contact), **Edit**, or **Print via** (Bluetooth connection or USB connection).




**Tip:** To send your photo in an MMS text message, the picture resolution must be set to **X-Small**, **Small**, or **Medium**. To set resolution, press **Menu** >  **Camera**, press **Options** > **Camera Settings** > **Picture Settings** > **Resolution**.




## view a photo

To view a stored photo that you've taken:

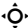**Find it:** **Menu** >  **Multimedia** > **Pictures** > **Captured Pictures** > *photo*

## camera settings

When the camera viewfinder is active, you can use the navigation key  to adjust the following camera settings. Press  up or down to scroll to a setting, then press  left or right to change it:

settings	
<b>Zoom</b>	Press  right to zoom in, press left to zoom out.
<b>Styles</b>	Press  left/right to select <b>Color</b> , <b>Black &amp; White</b> , <b>Antique</b> , <b>Negative</b> , <b>Reddish</b> , <b>Greenish</b> , or <b>Bluish</b> .
<b>Scene</b>	Press  left/right to select <b>Automatic</b> , <b>Night</b> , or <b>Manual</b> .

When the camera viewfinder is active, press **Options** to select the following camera options:

<b>options</b>	
<b>Capture</b>	Take a photo.
<b>Go To My Media</b>	See, edit, and delete stored pictures and photos.
<b>Video Mode</b>	Switch to the video camera.
<b>Auto-Timer</b>	Set a timer for the camera to take a photo.
<b>Multi-Shot</b>	Set the camera to take multiple photos in sequence.

 
<b>options</b>	
<b>Camera Settings</b>	Customize camera settings: <ul style="list-style-type: none"><li>• <b>Review Time</b></li><li>• <b>Default Name</b></li><li>• <b>Storage Location</b></li><li>• <b>Picture Settings</b><ul style="list-style-type: none"><li>• <b>Resolution</b></li><li>• <b>Shutter Tone</b></li><li>• <b>Quality</b></li></ul></li><li>• <b>Video Settings</b><ul style="list-style-type: none"><li>• <b>Resolution</b></li><li>• <b>Capture Tone</b></li><li>• <b>Quality</b></li><li>• <b>Video Length</b></li></ul></li></ul>

# videos





## record a video

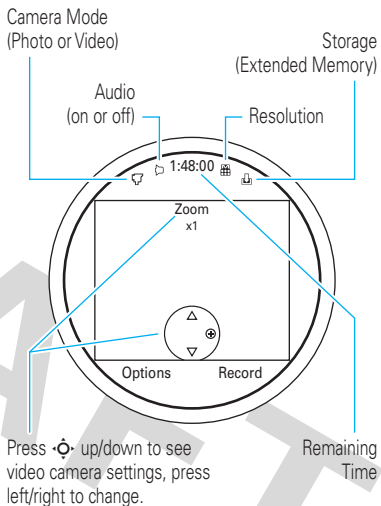
**Find it:** Menu >  Multimedia > Video Camera

The phone display acts as the video camera *viewfinder*.





- 1 To begin video recording, press .
- 2 Press **Stop** to stop video recording.
  - To store the video, press .
  - To send the video in a message, press **Send**. 
  - To discard the video, press .
  - To select other video options, press **Options**. You can choose to **Save Only**, **Discard**, **Send to** (message, email, or Bluetooth connection), or **Preview** the video.

**Tip:** To send your video in an MMS text message, the video length must be set to **MMS Short** or **MMS Long**. To set length, press **Menu** >  **Multimedia** > **Video Camera**, press **Options** > **Camera Settings** > **Video Settings** > **Video Length**.



When the video camera viewfinder is active, press **Options** to set video recording options:

options	
Capture	Begin video recording.

options	
Go To My Media	See, edit, and delete stored videos.
Picture Mode	Switch to the still camera to take a photo.
Audio On/Off	Turn audio recording on/off.
Camera Settings	Customize video camera settings (see page 53).

## upload video to a blog

Upload a video you've recorded to your video blog site:

- 1 Press **Menu** >  **Web Access** > **Browser** to open your phone's browser.
- 2 Go to a video blogging service Web site.
- 3 Log in to your account.
- 4 Scroll to **Upload Videos** and press .

5 Follow the browser prompts to scroll to the video you want to upload, then press **OK**.


6 Scroll to **Upload** and press **OK**.

 
Your phone uploads the video to the blog.

## play a video

**Find it:** Menu >  Multimedia > Video > video

Press **OK** to pause/play video.

Press  left/right to skip to previous/next video.

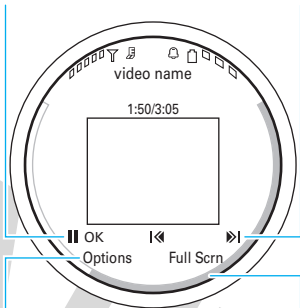

Select video playback options.

Timer Shows % Played

When a video is playing, press **Options** to select video playback options.

**Note:** Your phone's options may vary. Most options apply only to user-recorded videos, and are not available for pre-installed videos.

options	
<b>Play Fullscreen</b>	Show the video in full screen. (Press <b>OK</b> to return to actual size.)
<b>Manage</b>	Show video <b>Properties</b> , such as file name, type, and size.
<b>Delete</b>	Delete the video.
<b>Zoom</b>	Show the video at actual size, or scale the video to fit the viewing area.
<b>Send To</b>	Send the video in a message or email, or send it to another device over a Bluetooth® connection.

options	
<b>Use Bluetooth/ Use Handset</b>	To send the audio soundtrack to a Bluetooth® headset, turn on Bluetooth power, then select <b>Use Bluetooth</b> to connect to a recognized Bluetooth headset or search for a new headset.  When a Bluetooth audio connection is active, select <b>Use Handset</b> to drop the Bluetooth connection and switch the audio back to the phone.  <b>Note:</b> This option appears only when Bluetooth power is turned on.
<b>Setup</b>	Adjust video settings.

## supported video formats

Before you copy video files to your phone, make sure the files are in a format the phone recognizes: MPEG4 + AMR-NB, MPEG4 + AMR-WB, MPEG4 + AAC/AAC+/Enhanced AAC+, H.263 + AMR-NB, H.263 + AMR-WB, H.263 + AAC/AAC+/Enhanced AAC+, Real Audio + Video, H.264 + AMR-NB, H.264 + AMR-WB, H264 + AAC/AAC+/Enhanced AAC+. WMV 9 + WMA v9 L2 (also WMA v3, v7, v8).

## music player

Copying and syncing music between your phone and computer has never been easier, with Microsoft® Windows® Media Player 11.

To listen to music on your phone, you need to:

- 1 Load music on your computer.
- 2 Transfer music from the computer to your phone.
- 3 Use the music player to play and manage music files on your phone.

**Note:** The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right

to copy any material, please contact your legal advisor.

## 1. load music on your computer

To create a music library on your computer, you can purchase Microsoft Windows Media DRM-protected music files from supported on-line music stores (such as Urge, Yahoo, and Napster).

You can also **load song files from a music CD** onto your computer:

- 1 Insert the music CD in your computer's CD drive.
- 2 Open Windows Media Player 11.
- 3 Copy the music CD to the media player library (also called *ripping* the CD).

If your computer is connected to the Internet, the media player may retrieve CD information such as song titles, album name, artist name, and album artwork. This

information will display in your phone's music player.

## set the default song format and bit rate for Windows® Media Player 11

Windows Media Player 11 lets you adjust format and bit rate settings, to optimize sound quality, or to increase the number of song files you can store on your phone.

**Windows Media Audio** format offers the optimal balance between file size and sound quality. Song files in this format tend to require more storage space than files that use Windows Media Audio Pro format.

**Windows Media Audio Pro** format is designed for use in portable devices with limited storage capacity. The format provides improved sound quality at lower bit rates.

**MP3** format is the most popular format for distributing music on the Web. This format offers high sound quality at a reasonable file size.

To set the default file format and bit rate:

- 1 Insert the music CD in your computer's CD drive.
- 2 Open Windows Media Player 11.
- 3 Select the Rip tab in Windows Media Player 11.
- 4 Click the Rip tab down arrow, then choose Format > Windows Media Audio, Windows Media Audio Pro, or mp3.
- 5 Click the Rip tab down arrow again, then choose Bit Rate > *bit rate*.

**Tip:** To maximize the number of songs you can store on your phone, set the bit rate to 128 Kbps or lower. Use the lowest bit rate that provides an acceptable sound quality.

## convert iTunes AAC files to MP3 files on your computer

Use the iTunes desktop application to convert standard iTunes AAC files to MP3 files that are compatible with Windows Media Player 11.

**Note:** The iTunes desktop application can only convert AAC files ripped from a music CD. It can't convert music files purchased from the iTunes store.

- 1 Open the iTunes desktop application on your computer.
- 2 Select Edit > Preferences, then click the Advanced tab and click Importing.
- 3 Open the Import Using pop-up menu, then select the MP3 Encoder option. Click OK to save your settings.
- 4 Select one or more songs in your iTunes music library, then choose Advanced > Convert Selection to MP3.

The converted MP3 file copies appear in your computer's music library alongside the original AAC files.

## 2. transfer music to your phone

Use Windows Media Player 11 to transfer music from the computer to your phone.

**Note:** Please use Windows Media Player 11 with your phone. Using previous versions of Windows Media Player may compromise your music experience. If necessary, you can download Windows Media Player 11 at [www.microsoft.com/windowsmedia](http://www.microsoft.com/windowsmedia).

**Note:** Windows Media Player 11 requires Windows XP™ or later to run. If you are using an earlier version of Windows OS on your computer, see page 65 to manually transfer music to your phone.

**Note:** Windows Media Player 11 can only be used to copy music files to your phone. You can't use Windows Media Player 11 to copy pictures or videos to the phone.

## on your phone

Press **Menu** >  **Settings** > **Connections** > **USB Setting** > **Media Synchronization**

Attach the Motorola Original USB cable to the micro USB port on your phone and to an available USB port on your computer. A Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately.



**Note:** Some phone functions are temporarily unavailable when a USB connection is active.

## on your computer

Open Windows Media Player 11. Your phone appears in the upper right corner of the Windows Media Player 11 screen. The phone's music files are listed on the left side of the screen.

- 1 Select the Sync tab in Windows Media Player 11.

- 2 Drag and drop songs or playlists onto the Sync List on the right side of the Windows Media Player 11 screen.
- 3 Click Start Sync to copy the songs onto the phone.
- 4 When you finish, disconnect your phone from the computer.

### 3. play music

 
**Tip:** Use the phone's built-in speaker to play your music out loud, or optional Bluetooth® stereo headphones to enjoy your music in private!

To play music on your phone:

**Find it:** Menu >  Multimedia > Media Finder > Music Library > category > song name

Select a song or playlist from the following categories: **Recently Played**, **Shuffle Songs** (play all songs in random order), **All Songs**, **Playlists**, **Artists**, **Albums**, **Genres**, or **Composers**.

When a song or playlist starts to play, use the following keys to control song playback:

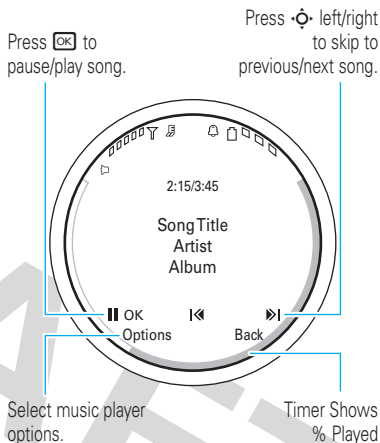


During a song, the music player shows the song title, artist, album, and artwork, if available.

**If you receive a call during a song**, the song pauses until the call is over.



When a song is playing, press **Options** to select music player options:

options	
<b>Hide</b>	Hide the music player while music plays. To see the music player again, go to the home screen, then press  up.
<b>Manage</b>	Show song <b>Properties</b> , such as file name, type, and size.
<b>Remove</b>	Delete the song file.
<b>Send to</b>	Send the song in a message or email, or send it to another device over a Bluetooth® connection.
<b>Apply to</b>	Add the song to a playlist or make it a ringtone.


options	
<b>Use Bluetooth/ Use Headset</b>	To send the audio to a Bluetooth® headset, turn on Bluetooth power, then select <b>Use Bluetooth</b> to connect to a recognized Bluetooth headset or search for a new headset.  When a Bluetooth audio connection is active, select <b>Use Headset</b> to drop the Bluetooth connection and switch the audio back to the phone.  <b>Note:</b> This option appears only when Bluetooth power is turned on.
<b>Setup</b>	Customize settings.

## use Bluetooth® stereo headphones


Connect your phone with optional Bluetooth stereo headphones to listen to music stored on your phone.



**To connect your phone to a set of Bluetooth stereo headphones for the first time**, make sure the headphones are **on** and **ready** in *pairing* or *bonding* mode (see the device user's guide).

**Find it:** Menu >  Settings > Connections > Bluetooth, press Options > Search For Device > Headset

Your phone lists the Bluetooth audio devices it finds within range.

- 1 Scroll to the stereo headphones in the list.
- 2 Press  to connect with the stereo headphones.

## adjust audio settings

You can adjust audio settings to optimize the sound quality when listening to music through the phone speaker, stereo headphones, or headset.

To change **playback volume**, press the volume keys on the side of your phone.

To change the **equalizer setting**, press Options > Setup > Equalizer > *music type*.




To set **stereo separation**, press Options > Setup > Stereo Effects > Spatial Audio > *separation level*.

To set **bass boost**, press Options > Setup > Stereo Effects > Bass Boost > *bass level*.

**Note:** The equalizer and stereo effect settings are best experienced using stereo headphones. Your phone cannot produce stereo effects through the built-in monaural speaker.


## do other tasks while playing music

To take **pictures** or record **videos** while playing music:


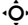
- 1 From the music player screen, press **Back** until you return to the main menu.
- 2 From the main menu, select  **Camera** or  **Multimedia** > **Video Camera**.
- 3 Press  to take a photo or record a video.

**Note:** Music playback pauses while you record a video, and may pause momentarily when you take a picture.

To use the **browser** while playing music:

- 1 From the music player screen, press **Back** until you return to the main menu.
- 2 From the main menu, select  **Web Access** > **Browser**.

To return to the **music player** from another application:

- 1 Press  to exit the application and return to the home screen.
- 2 From the home screen, press  up to return to the music player screen.

## manually transfer music to your phone

Without using Windows Media Player 11, you can manually copy or sync music files from the computer to your phone.

### supported audio formats

Before you copy audio files to your phone, make sure the files are in a format the phone recognizes: AMR-NB, AMR-WB, AAC (MPEG4 AAC-LC), AAC+, Enhanced AAC+, MP3, 8-bit Linear PCM, 16-bit Linear PCM, 8-bit A-law PCM, 8-bit mu-law PCM, WMA v9 L2 (also WMA v3, v7, v8), Real Audio LBR (Cook), Real Audio Sipro (ACELP®.net), Real Audio 10.

## on your phone

Press **Menu** >  **Settings** > **Connections** > **USB Setting**  
> **Extended Memory**

Attach the Motorola Original USB cable to the micro USB port on your phone and to an available USB port on your computer. A Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately.



## on your computer

When your phone is connected to the computer in extended memory mode, the phone's basic memory and extended memory appear as two separate removable disks on the computer.

- 1 Find where your phone's basic memory and extended memory appear as Removable Disk icons. On a Windows PC, this is the My Computer window.

On a Macintosh® computer, it's on the desktop.

- 2 Double-click the Removable Disk icon for your phone's extended memory.
- 3 To copy the desired files onto the phone, drag and drop them onto the removable disk icon.
- 4 When you finish, remove the phone safely from your computer:
  - **If you are using a PC**, click the Safely Remove Hardware icon in the system tray at the bottom of your computer screen, then select "Safely Remove USB Mass Storage Device."
  - **If you are using a Mac**, select and drag the Removable Disk icon to the Trash.

## create a playlist

### create a playlist on your computer


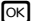
Use Windows Media Player 11 to create a playlist of music files stored on the computer.



On your phone, press **Menu** >  **Settings**  
> **Connections** > **USB Setting** > **Extended Memory**.

Connect your phone to the computer through a USB cable connection, then drag and drop the playlist onto the phone.

### create a playlist on your phone

**Find it:** **Menu** >  **Multimedia** > **Media Finder**  
> **Music Library** > **Playlists**, press **Options**  
> **Create New Playlist**

- 1 Enter a name for the playlist, and press **Save**.
- 2 Scroll to the playlist you created, and press  to select it.
- 3 Scroll to **Add Songs**, and press  to select it.

- 4 Scroll to **All Songs**, **Artists**, **Albums**, **Genres**, or **Composers**, and press  to select it.
- 5 Scroll to the songs you want to add, and press  to select them.
- 6 Press **Add** to add the selected songs to the playlist.
- 7 Repeat the procedure to add more songs, or press **Back** to return to the **Playlists** menu.


## play a playlist

**Find it:** **Menu** >  **Multimedia** > **Media Finder**  
> **Music Library** > **Playlists**, scroll to the playlist, press **Options** > **Play**

## customize the music player


**Find it:** **Menu** >  **Multimedia** > **Media Finder**  
> **Music Library**, press **Options** > **Setup**

You can select the following options:


options	
<b>Shuffle</b>	Play songs in a random order.
<b>Auto-Repeat</b>	Replay the song or playlist when the last file finishes playing.
<b>Spatial Audio</b>	Set separation level for a stereo headset or headphones.
<b>Bass Boost</b>	Set the bass level.
<b>Internet Connection</b>	Set your Internet connection preferences. 

When you scroll to a song in a list and press **Options**, you may see additional options for the song and list, such as **Delete**, **Send to**, and **Apply to**.

## close the music player



From the music player screen or home screen, press  to close the music player.

## browser

Use your phone's full HTML browser to surf to your favorite Web sites, upload videos to a video blog, and download files and applications to your phone. Log on to your Internet-based email account to check your email on the go. 

To **open** the browser:


**Find it:** Menu >  Web Access > Browser

Press  up/down/left/right to scroll through Web pages. Scroll to a link and press  to select it. Press **Back** at any time to return to the previous screen.

Some Web pages may contain a text entry window for exchanging information with a Web site. Scroll to the window, select it, and

enter text as usual (to enter text, see page 47).

To **go to a Web page**, press **Menu**

>  **Web Access** > **My Bookmarks** > **Go to URL**, enter the Web address, then press **Go**.

To **bookmark** the current Web page, press **Options** > **Active Page** > **Add Bookmark**.

To go to a **bookmarked Web page**, press **Options** > **My Bookmarks** > *bookmark*.

To **change the homepage** that appears when you open the browser, go to the Web page you want to use, then press **Options** > **Active Page** > **Use as Homepage**.

To **upload** a video to a video blog site, see page 55.

To **download** a media file, theme, or Java™ game or application to your phone, go to the Web page that links to the file, scroll to the link, and select it.

To **exit** the browser, press **Options** > **Exit**.






## perform a Google search

Use your phone's browser to perform a Web search using the Google Web site.

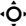

**Note:** You must have browser service activated on your phone to use this feature.

**Find it:** **Menu** >  **Web Access** > **Browser**

- 1 Press **Options** > **My Bookmarks**.
- 2 Press  to scroll to the **Google** bookmark, and press  to select it.
- 3 Press  to select the Google text entry window.
- 4 Enter a search topic in the text entry window.
- 5 Press  down to scroll to the **Google Search** button, and press  to select it.

The browser shows the results of your search.

## check your email

Check your personal Web-based **email** account (such as Hotmail, Gmail, or Yahoo).



**Note:** You must have browser service activated on your phone to use this feature.

**Find it:** Menu >  Web Access > My Bookmarks > Go to URL

Enter the URL for your Web-based email account, then press **Go**.

## manage certificates

Enable or disable Internet access certificates stored on your phone.



**Find it:** Menu >  Settings > Security > Certificates

Certificates are used to verify the identity and security of Web sites when you download files or share information.

## browser settings

To use your phone's browser, the browser must be configured with the appropriate settings for Internet access, and you must have data service activated for your account with your cellular service provider (additional fees may apply for this service).

If necessary, you can get the required Internet browsing settings for your phone by contacting your service provider directly, or by visiting the following Web site:

<https://hellomoto.wdsglobal.com/site/phonefirst>

**Note:** Not all service provider settings may be available yet through this Web site.



# fun & games

## features

### start a game or application



Start a Java™ game or application:

Menu >  Multimedia > Games > *game or application*

### airplane mode


Turn off your phone's Bluetooth wireless features and calling features in locations where wireless phone use is prohibited. This lets you use the camera, music player, and other non-network features while you are on an airplane, without interfering with airplane communications.

Menu >  Settings > Phone Settings  
> Airplane Mode > On


To reactivate your phone's calling features, turn off airplane mode.

# messages

## voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number. 

**Note:** Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone display shows **New Voicemail** and the new message indicator .


To **check** voicemail messages:

**Find it:** Menu >  Messages > Messages  
> Call Voicemail

**Shortcut:** Your service provider may store your voicemail phone number in speed dial location #1. If so, you can press and hold **1** in the home screen to listen to your voicemail message(s).

## text messages

### send a message

A message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message and put text and media objects on each page. You can send a message to other compatible phones or to email addresses. 

**Find it:** Menu >  Messages > Messages  
> Create Message



**Shortcut:** From the home screen, press Shortcuts > Create Message.

- 1 Press keypad keys to enter text on the page (to enter text, see page 47).

To insert a **picture, sound, or other media object** on the page, press **Options** > **Insert**. Select the file type and the file.

(**Note:** File size restrictions may apply to pictures and videos sent in a message.)




To insert **another page**, press **Options** > **Insert** > **Page**. You can enter more text and objects on the new page.

- 2 When you finish the message, press **Options** > **Sending Options** to set message options (such as **Subject** and **Priority**).
- 3 When you finish setting message options, press **Done**.
- 4 Press **Send To** to select message recipients. You can:
  - Select one or more entries from your contact list (press  to scroll to an entry, and press  to select it).
  - Enter a new number or email address (press **Options** > **Enter Number** or **Enter Email**).
- 5 Press **Send** to send the message.


Your phone might tell you that this is a multimedia message, if it contains

multiple pages or media objects. Some phones or networks don't support multimedia messages. Press **Yes** to send the message.

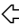To save or cancel the message, press **Options** > **Save to Drafts** or **Cancel Message**.

Messages that you send are stored in the **Outbox**. Icons next to each message show if the message was **sent** , if the send attempt was **successful** , or if the send attempt **failed** . Press **Options** to perform various operations on a message.

## receive a message

When you receive a text message, your phone plays an alert and shows **New Message**. The text message indicator  appears at the top of the home screen.

To **read** the message, press **View**. If the message contains media objects:

- Pictures and animations show as you read the message.

- Sound files play as you read the message. Press the volume keys on the side of your phone to change the sound volume.
- Attached files are added to the end of the message. To open an attachment, select the file indicator or file name.

To **answer** the message, press **Options > Reply**.

## instant messaging

Use instant messaging to share messages with your friends in real time.

**Find it:** Menu >  Office Tools > IM, scroll to your IM account, press **Log In**

If you don't have an IM account, select **[New Account]** to create one.

To **find others** online, select **Contact List** to see a list of other users.

To **start a conversation**, scroll to a name in the **Online Contacts** list and press **Send IM**.

To **open an active conversation**, scroll to a name in the **Conversations** list and press **View**.

To end a conversation, press **Options > End Conversation**.

To **log out** from your instant messaging session, press **Options > Log Out**.

## more message features

### features

#### send a prewritten quick note

Menu >  Messages > Messages > Templates > Text Templates > *quick note*, press **Options > Send**

To create a new quick note:

Menu >  Messages > Messages > Templates > Text Templates, press **Options > Create Template**

## features

### send email



Menu >  Messages > MobileMail

### use a multimedia template



Open a multimedia template with pre-installed media:

Menu >  Messages > Messages > Templates > Multimedia Templates

### read new message or email







When your display shows **New Message**, press **Read**.

### read old messages



Menu >  Messages > Messages > Inbox

Icons next to each message show if it is **read** , **unread** , **urgent** , or has an **attachment** . Press **Options** to perform various operations on a message.

## features

### read old email



Menu >  Messages > MobileMail

Press **Options** to perform various operations on a message.

### store message objects



Go to a multimedia message page, then press **Options** > **Store**.

### create folder



Create a personal folder to store your messages.

Menu >  Messages > Messages > My Folders, press **Options** > **Create Folder**

## features

### browser messages



Read messages received by your browser:

When your display shows **New Message**, press **View**.

To activate browser messages and adjust browser message settings:

**Menu** >  **Messages**, press **Options** > **Settings**  
> **Browser Messages**


### info services



Read subscription-based information services messages:

When your display shows **New Message**, press **View**.

To activate information services and adjust info services settings:

**Menu** >  **Messages**, press **Options** > **Settings**  
> **Info Services**



# tools


## phonebook

You can store a new contact in **phone memory**, or store the contact both in phone memory and on your **SIM card**. When you choose to store a contact to both locations, only the contact's name and phone number are stored on the SIM card.

### features


#### call a contact



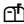




Menu >  Phonebook, scroll to the contact, press  to call

**Note:** If a contact has multiple phone numbers or email addresses, press  left/right to select the number or email address you want.

### features
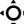
#### add new contact

Menu >  Phonebook, press Options > Create Contact

Press  left/right to select the **details** tab , **address** tab , **ID** tab , or **notes** tab . Press  up/down to scroll to information you want to change, then press  to select it.

#### send message to contact

Menu >  Phonebook, scroll to the contact, press Options > Send Message

## features

### add another phone number or email address to contact

Menu > Phonebook, scroll to the contact, press Options > Edit, press ⬅️ left/right to select the **details** tab **H**, press ⬅️ up/down to scroll to an empty **Number** or **Email** field, press **OK** to select it

### set picture ID for contact

Assign a photo or picture to show in the display when you receive a call from a contact:

Menu > Phonebook, scroll to the contact, press Options > Edit, press ⬅️ left/right to select the **ID** tab **I**, press ⬅️ up/down to scroll to **Picture ID**, press **OK** to select it

## features

### set ring ID for contact

Assign a distinctive call alert (*ring ID*) for a contact:

Menu > Phonebook, scroll to the contact, press Options > Edit, press ⬅️ left/right to select the **ID** tab **I**, press ⬅️ up/down to scroll to **Ring ID**, press **OK** to select it

### assign contact to category

Menu > Phonebook, scroll to the contact, press Options > Edit, press ⬅️ left/right to select the **details** tab **H**, press ⬅️ up/down to scroll to **Category**, press **OK** to select it

### set category view

Menu > Phonebook, press Options > Filter By

You can show contacts in a predefined category (**Email**, **Family**, **Friends**, **Work**), or contacts in a category that you create (select **Create Category**).



## features

### create group mailing list

Assign contacts to a group message list or email list:

Menu > Phonebook, press Options > Create List > Message or Email

### show contact photos

Show contacts with picture ID photos, or as a text list:

Menu > Phonebook, press Options > Setup > Default View > Thumbnail or List

### set contact list sort order

Menu > Phonebook, press Options > Default Sort Order > First Name or Last Name

## features

### create and use private contacts

Identify one or more contacts as private contacts. You must enter your six-digit security code to access the private contacts on your contact list.

Menu > Phonebook, press Options > Setup > Private Contacts

### import contacts to phone memory

Import all contacts to phone memory, from the SIM card or from another location:

Menu > Phonebook, press Options > Import Contacts > SIM Card or File Manager

### manage SIM card contacts

Menu > Phonebook, press Options > Setup > SIM Card Manager

Delete contacts stored on your SIM card, or import contact to the SIM card from phone memory, or from another location.

## features

### send contact(s) to another device

Send one or more contacts to another phone, computer, or device:

**Menu** >  **Phonebook**, scroll to the contact, press **Options** > **Share**, press  to select the current contact, press  up/down to scroll to **Bluetooth**, **Messaging**, or **Email** transfer method, press **Select** to select it

To send multiple contacts, press **Options** > **Share** > **Multiple Contacts** (instead of the current contact).

## features

### delete contact(s)

Delete one or more contacts from your contact list:

**Menu** >  **Phonebook**, scroll to the contact, press **Options** > **Delete**, press  to select the current contact, press **Yes** to confirm deletion

To delete multiple contacts, press **Options** > **Delete** > **Multiple Contacts** (instead of the current contact).

## personal organizer

## features

### set alarm


**Menu** >  **Office Tools** > **Alarm Clock**

**Shortcut:** From the home screen, press **Shortcut** > **Set Alarm**.

## features

### turn off alarm

When the display shows an alarm:



To turn off the alarm, press **Dismiss** or .

To set an eight-minute delay, press **Snooze**.

### set calendar default view

Menu >  **Calendar**, press **Options**  
> **Calendar Setup** > **Default View**

### add new calendar event

Menu >  **Calendar**, scroll to the day and/or start time, press , enter event details

You can set a sound file, voice note, or video as a calendar event reminder. When creating a calendar event, select **Alarm Style** > *alarm type*, scroll to the file (or create a new file), press **Insert**.

### see calendar event

Menu >  **Calendar** > *event*

To edit event details, press **Options** > **Edit**.

## features

### calendar event reminder


When the display shows and sounds an event reminder:

To see reminder details, select **Open Event**.

To close the reminder, press **Dismiss**.

### send calendar event to another device

Send a calendar event to another phone, computer, or device:

Menu >  **Calendar** > *event*, press **Options**  
> **Share via** > **Bluetooth** or **Message**

### manage downloaded files

Manage files and applications that you've downloaded onto your phone from the browser or over a Bluetooth® connection:

Menu >  **Office Tools** > **Download Manager**

## features

### world clock

Show time and date information for multiple cities around the world:

Menu >  Office Tools > World Clock

### task list

Create a checklist of tasks you need to perform, and set your phone to notify you when task deadlines arrive:

Menu >  Office Tools > Task List



### notes

Write and store notes on your phone:

Menu >  Office Tools > Notes

## features

### record voice note

Menu >  Multimedia > Voice Recorder, press  to start recording, press **Stop** to stop recording

To save the voice note, press **Save**.

To perform various operations on the voice note, press **Options**.

**Note:** Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.

### play voice note

Play back a voice note you've recorded:


Menu >  Office Tools > File Manager > Voice Note > *voice note*

## features

### calculator

Menu >  Office Tools > Calculator

To use the calculator as a currency converter:

Menu >  Office Tools > Calculator, press **Options**  
> **Set Exchange Rate**, enter exchange rate,  
press **Set**, enter amount, press  
**Options** > **Convert Currency**

# connections

## sync

You can use several different over-the-air connection methods to synchronize information between your phone and a remote server.



### Exchange ActiveSync



Use the Internet to synchronize your phone's contact list, calendar entries, and email with an email account on a Microsoft® Exchange 2003 server.



#### set up Exchange ActiveSync

Confirm that the **Mobility** option is enabled on the email account, and that **data service** is activated with your phone service provider (additional fees may apply for this service).



To set up an ActiveSync partner:

**Find it:**  >  Office Tools > Sync > Exchange ActiveSync



Enter your email account and server information, including **User Name**, **Password**, **Domain Name**, **Server Name**, and **Data Connection** details. If necessary, contact your system administrator to obtain the information you need, or to help you connect your phone to the server.

#### use Exchange ActiveSync

Schedule your phone to **automatically** synchronize data with an Exchange ActiveSync partner:

**Find it:**  >  Office Tools > Sync > Exchange ActiveSync, press **Options** > **Edit** > **Auto Sync** > **On**, press **OK** to enter the time and days you want to synchronize

To **manually** synchronize your phonebook contacts, calendar, and email:

**Find it:**  >  Office Tools > Sync > Exchange ActiveSync press **Options** > **Sync**

The first synchronization may take several minutes, depending on the amount of data in your contact list, calendar, and email on the Exchange 2003 server.

## SyncML

Call a SyncML Internet server and synchronize your phone's contact list and calendar entries with the server.



To **synchronize files** with a partner you set up:

**Find it:**  >  Office Tools > Sync > SyncML

If no SyncML profile is stored on your phone, the phone prompts you to create a profile. Contact your IT system administrator to obtain the information you need to set up a profile.

**Note:** If your phone can't connect to the server, verify that your phone's network service provider has data service activated on your phone (additional fees may apply for this service).

## file manager

Access and manage photos, videos, music, and other files stored on your phone.

**Find it:** Menu >  Office Tools > File Manager

Select a folder to see its contents.

To **play** a song file or voice note, or **view** a photo or video, just scroll to the file and select it.

 
To **edit** a file: Scroll to the file and press **Options** > **Manage** to copy, move, or rename it.

Other options let you delete, send, or apply the file. You can't perform some operations on some copyrighted or pre-installed files.

To **copy files** between your phone and a computer, you can use a cable connection (see following section) or a Bluetooth® connection (see page 89).

## cable connections


To transfer data between your phone and a computer, insert the micro USB connector plug from a USB cable into your phone's micro USB port. Connect the other end of the cable to the computer.

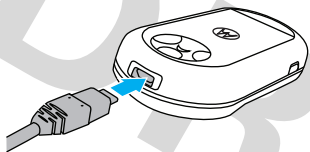


**Note:** A Motorola Original USB cable and supporting software may be included with your phone. These tools are also sold separately. Check your computer to determine the type of cable you need.


**Note:** Some phone functions are temporarily unavailable when a USB connection is active.



To use Windows Media Player 11 to **sync music files** from a computer to your phone: Press **Menu** >  **Settings** > **Connections** > **USB Setting** > **Media Synchronization**, then connect your phone to the computer. For more information, see page 61.


To manually **transfer pictures, videos, and music** between your computer and phone: Press **Menu** >  **Settings** > **Connections** > **USB Setting** > **Extended Memory**, then connect your phone to the computer. For more information about manually transferring music files, see page 65.

To use your phone as a **modem**: Press **Menu** >  **Settings** > **Connections** > **USB Setting** > **Modem**, then connect your phone to the computer.

To **transfer contact lists and calendar entries** between your computer and phone: Press **Menu** >  **Settings** > **Connections** > **USB Setting** > **Modem**, then connect your phone to the computer. Open the optional Motorola Phone Tools accessory application on the computer. You can also use the Motorola



Phone Tools application to transfer and sync music files from the computer to your phone. See the Motorola Phone Tools user's guide for more information.

To make **data calls** through a computer: Press **Menu** >  **Settings** > **Connections** > **USB Setting** > **Modem**, then connect your phone to the computer. Use the computer application to place or answer the call.

To **print** an image over a USB PictBridge connection: Press **Menu** >  **Settings** > **Connections** > **USB Setting** > **USB Printing**, then connect your phone to a PictBridge-compatible printer. Select the image(s) you want to print, then press **Options** > **Print via** > **USB**.

## end a USB connection

**Caution:** Do not disconnect your phone from the computer while files are being transferred.

### **On a PC running Windows XP™ or later:**

When file transfer is complete, remove the USB cable from your phone and computer.

### **On a PC running an earlier version of**

**Windows OS:** Click the Safely Remove Hardware icon in the system tray at the bottom of your computer screen, then select "Safely Remove USB Mass Storage Device." Remove the USB cable from your phone and computer.

**On a Macintosh® computer:** Select and drag the Removable Disk icon to the Trash. Remove the USB cable from your phone and computer.

## Bluetooth® wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with an optional Bluetooth headset or Bluetooth car kit to make handsfree calls, or with a set of Bluetooth stereo headphones to listen to music stored on your phone. Connect your phone with a device that supports Bluetooth connections to exchange files, connect with a printer that supports Bluetooth connections to print images, or use your phone as a Bluetooth wireless modem to connect to the Internet.


**For maximum Bluetooth security**, you should always connect Bluetooth devices in a safe, private environment.



## turn Bluetooth power on or off

Your phone automatically turns Bluetooth power on when you use a Bluetooth feature.


To turn Bluetooth power on or off at any time:

**Find it:** Menu >  Settings > Connections  
> Bluetooth, press Options > Setup Bluetooth  
> Bluetooth Power > On


**Note:** To extend battery life and maximize Bluetooth security, use this procedure to set Bluetooth power to **Off** when not in use. Your phone will not connect to another device until you use a Bluetooth feature again, or set Bluetooth power back to **On**.

## use a Bluetooth headset or handsfree car kit

**Before you try to connect your phone to a handsfree device for the first time**, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the device user's guide). You can connect your phone with only one device at a time.

**Find it:** Menu >  Settings > Connections > Bluetooth, press Options > Search For Device > Headset

Your phone lists the Bluetooth audio devices it finds within range.

- 1 Scroll to a device in the list.
- 2 Press  to connect with the highlighted device.

## copy files to another device

You can copy a media file, contact, calendar event, or bookmark to another phone or computer that supports Bluetooth connections.

**Note:** You can't copy some copyrighted objects.

**Before you try to copy a file to another device**, make sure the receiving device is **on** and **ready** in discoverable mode. Also, make sure the device is not busy with another Bluetooth connection.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
  - **Send To > Bluetooth** for an image or sound file.
  - **Share > contact > Bluetooth** for a contact.
  - **Share Via > Bluetooth** for a calendar event or bookmark.

- 3 Select a recognized device name.

or

Select **[Search For Devices]** to search for new devices, then select the device where you want to copy the object.


- 4 Press **Options > Send**.
- 5 If necessary, enter a mutually agreed upon passkey (such as **0000**) on your phone and the device, then press **OK** to connect to the device.

Your phone shows **Sending** while the file is transferred. When file transfer is complete, the phone shows **Send Successful**, and prompts you to press **OK** to continue.

## receive files from another device

**Before you try to receive a file from another device**, make sure your phone's Bluetooth power is **on** (see page 88).

Place your phone within range (approximately 10 meters/30 feet) of the other Bluetooth device, and send the file from the device.

If your phone and the sending device were not previously paired, place your phone in discoverable mode so the sending device can locate it. Press **Menu > Settings > Connections > Bluetooth**, press **Options > Discoverable On 3 Minutes**. The Bluetooth indicator  in the home screen flashes when your phone is in discoverable mode.

Your phone shows **Incoming Transfer** while the file is transferred. When file transfer is complete, the phone shows **Successful**, and tells you where the file was stored.

## send a photo to a printer

You can send a photo to a printer that supports Bluetooth connections.

**Note:** You can print A4, US Letter, and 4x6 size pages. To print another size, copy the image to a linked computer and print it from there.

- 1 On your phone, take a new photo or scroll to a stored image that you want to print, then press **Options > Print via > Bluetooth**.

**Note:** If you see **Service Not Supported** when you try to print, select **Send To > Bluetooth** instead. (The **Send To** option does not print the image name or date stamp.)


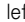

- 2 Select a recognized printer name, or press **Options > Search For Printers** to search for another printer where you want to send the image.
- 3 If available, modify print options.

## more Bluetooth features

**Note:** A device is *recognized* after you connect to it once (see page 89).

### features

#### pair with recognized device

Press **Menu > Settings > Connections > Bluetooth**, press  left to select the **My Devices** tab, press  up/down to scroll to the device name, press  to connect.

#### drop connection with device

Scroll to the connected device name and press  to disconnect.

#### remove device from device list

Scroll to the device name and press **Options > Manage > Remove Device**.

**Note:** You can't remove a device from the list while your phone is connected to the device.

## phone software updates

Sometimes, we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated at:

**[www.hellomoto.com/update](http://www.hellomoto.com/update)**

Your service provider can send updated phone software over-the-air to your phone. When your phone receives a software update, you can install it immediately, or defer installation until later. To install a deferred software update:

**Find it:** Menu >  Settings > Phone Settings > OTA Updates > Update Software

### features

#### switch audio to Bluetooth headset or Bluetooth car kit during call


Press **Options** > **Use Bluetooth**.

To switch audio back to the phone, press **Options** > **Use Handset**.

#### edit properties of recognized device

Scroll to the device name, press **Options** > **Manage** > **Edit Device**.

#### set Bluetooth options

Press **Menu** >  **Settings** > **Connections** > **Bluetooth**, press **Options** > **Manage** > **Setup Bluetooth**.

# service & repairs

---

If you have questions or need assistance, we're here to help.

Go to [www.motorola.com/support](http://www.motorola.com/support), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

# Specific Absorption Rate Data

---

## This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is **0.43 W/kg**, and when worn on the body, as described in this user guide, is **0.76 W/kg**. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.



# FCC Notice to Users

---

**The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.**

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Safety and General Information

---

**This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.**

## Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

## Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: [www.motorola.com](http://www.motorola.com).

## RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

# OPEN SOURCE SOFTWARE INFORMATION

---

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device you may send your request in writing to:

MOTOROLA, INC.  
OSS Management  
600 North US Hwy 45  
Libertyville, IL 60048  
USA

The Motorola website [opensource.motorola.com](https://opensource.motorola.com) also contains information regarding Motorola's use of open source.

Motorola has created the [opensource.motorola.com](https://opensource.motorola.com) to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please select "Legal Notices" from Phone Settings.

# index

---

## A

- abc mode 49
- accessories 40, 64, 88
- active line indicator 23
- active line, change 45
- airplane mode 26, 71
- alarm clock 80, 81
- alert
  - set 29, 32
  - turn off 24, 38
- alert profile 29
- alert style profiles 23
- answer a call 17, 41
- audio file formats 65
- audio player 58

## B

- battery 16
- battery charge indicator
  - light 16

- battery door release latch 2
- battery indicator 23
- battery life, extend 13, 35, 88
- blog 55
- Bluetooth indicator 22
- Bluetooth wireless 64, 88
- bonding. See Bluetooth wireless
- brightness 35
- browser 68, 69, 70, 76, 81
- browser messages 76

## C

- cables, using 86
- calculator 83
- calendar 81
  - add event 81
  - send event 81
  - synchronize 84, 85
- call
  - answer 17, 41
  - end 17, 18
  - make 17, 18
- call alert 78
- call barring 27, 44
- call forward indicator 23
- call forwarding 44
- call timers 41, 42
- call waiting 44
- caller ID 39, 78
- camera 2, 51, 54
- car kit 40
- center key 11
- certificates 70
- charge indicator light 2
- clear/back key 1, 48
- clock 31, 35
- codes 27
- conference call 44
- costs, track 42

## D

data call 42  
date 31, 35  
delete data 36  
delete text 48  
dial a phone number 17, 18,  
45  
dialed calls 38  
display 3, 21, 35  
download files 69  
download manager 81  
download media objects  
75  
drafts folder 73  
DTMF tones 46

## E

earpiece volume 24  
EDGE indicator 22  
email  
read 75  
send 75  
synchronize 84

email address 18, 77  
emergency number 40  
end a call 17, 18  
end key 1, 17, 18  
Enter Unlock Code  
message 27

## F

feature icons 34  
file manager 85  
filter contacts 78  
fixed dial 45  
forward calls 44

## G

GPRS indicator 22  
group mailing list 79

## H

handsfree speaker 2, 26  
headset 40  
hearing aid 43  
hold a call 43  
home screen 3, 21, 34

## I

IM 74  
IM indicators 23  
in-call indicator 23  
Incoming Call message 39  
information services 76  
instant messaging. See IM  
international access code  
43

## K

keypad 41  
keypad volume, adjust 29,  
30

## L

language 36  
line 1 and line 2 23  
linking. See Bluetooth  
wireless  
location indicator 23

lock  
    applications 28  
    phone 27  
    SIM card 28  
Low Battery message 23

## M

make a call 17, 18  
media playback 29, 30  
media volume, adjust 29, 30  
menu 3, 21  
menu icons 21  
menu key 11  
message  
    read 73, 75  
    send 72  
message indicator 22, 73  
message reminders 36  
messaging. See IM  
micro USB port 2, 16, 86  
Missed Calls message 39

multimedia message 72, 75  
music player 58  
mute a call 43

## N

navigation key 1, 11  
network settings 45  
notes 82  
numeric entry mode 50

## O

OK key 1  
open to answer 41

## P

pairing. See Bluetooth wireless  
passwords. See codes  
phone number  
    store 18, 77  
    your number 19, 45

phonebook  
    add entry 18, 77  
    dial entry 18  
    filter 78  
    picture ID 39  
    search 18  
    send contact 80  
    synchronize 84, 85

photo 51  
picture ID 39, 78  
PIN code 17, 27, 28  
PIN2 code 27, 45  
power key 1, 17  
predictive text entry 48  
printing 87, 91  
profile indicator 23  
profiles 23, 29

## Q

quick note 74

## R

received calls 38  
recent calls 38  
redial 39  
reminders 36  
reset settings 36  
resolution 53  
return a call 39  
ring ID 78  
ringer volume, adjust 29,  
30  
ringtone 29, 32, 63  
rotator 41

## S

screensaver 32, 35  
security code 27  
send key 1, 17  
service dial 45  
shortcuts 20  
signal strength indicator 22  
silent profile 29  
SIM Blocked message 28

SIM card 12, 17, 27, 28, 37,  
45  
skin 32  
soft keys 1, 21  
software update 92  
speakerphone 40  
speed dial 43  
stereo headphones 64  
store phone numbers 18,  
77  
store your phone number  
19  
symbol entry mode 50  
synchronize 84, 85

## T

talking phone 26  
task list 82  
text edit 48  
text entry 47  
text entry mode 49  
text message 72  
text templates 74

theme 32  
time 31  
timers 41, 42  
transfer a call 44  
TTY device 44  
turn on/off 17

## U

unlock  
    applications 28  
    phone 17, 27  
    SIM card 28  
unlock code 27  
USB cables 86

## V

vibrate profile 29  
video 54  
video blog 55  
video file formats 58  
voice command key 24  
voice commands 24  
voice dial 24, 41

voice note 82  
voicemail 72  
voicemail message  
    indicator 72  
volume 24, 29, 30  
volume keys 1, 2, 24

## W

wallpaper 32, 34  
Web pages 68, 69, 70  
word text entry mode 48  
world clock 82

## Y

your phone number 19

U.S. patent Re. 34,976





[www.motorola.com](http://www.motorola.com)

