



MOTO™ WX290

Getting Started Guide

accessories & more
www.motorola.com


CJB31BBALAAA
68000202695-A

congratulations

Congratulations on your purchase of the stylish Motorola WX290 phone. Whether you're a talker, a texter, or just love listening to the music on the move, your new phone does it all. We've crammed all the main features of your phone into this handy guide—you can even take the guide with you. If you'd like even more information about how to use your new phone, visit www.motorola.com/support. So, let's go.

Note: Your phone may not appear exactly as the images in this manual.

your phone

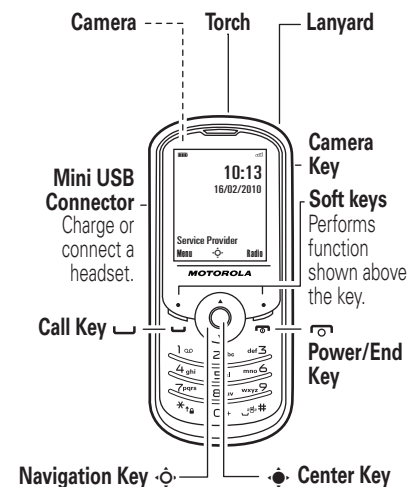

calls

make & answer calls

Enter a number and press . When your phone rings or vibrates, press .

end a call

Press .

emergency calls

To call an emergency number, enter the emergency number and press . Your service provider programs emergency phone numbers, (such as 112 or 911), that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

messages

send messages

- Press > > Messages > Create text message.
- Enter your message.
Tip: Press > to switch text entry modes. Press to switch capitalization modes. Press to enter a space. Press > to change language.
- Press .
- Select **Add number**, enter a number and press , or select **Add from directory** and scroll to a contact. Press to select a contact.
- Press to send.

read messages

When you receive a message you will see 1 on your screen. Press > to open the message. You can reply to the message by pressing > .

tips & tricks

ring style

To quickly switch your ring style, press and hold from the home screen.

keypad lock

To quickly lock your keypad, press and hold from the home screen. Press and hold , then to unlock.

torch on

To quickly turn on your torch, press and hold from the home screen.

voicemail

Press and hold 1. If your voicemail number is pre-set, you will connect.

recent calls

To see your dialed, received and missed calls, press from the home screen.

music player

To use the music player, insert a micro SD memory card, which is an optional accessory. The music player supports music files formats, such as MP3, MIDI, and AMR.

play music

From the home screen, press > > Music player > All songs.

music player controls

function	
play/pause	Press .
fast forward	Press & hold right.
skip to next/ previous song	Press right or left.
rewind	Press & hold left.
volume	Press up or down.

Note: To transfer songs to/from your memory card, use an optional microSD memory card reader on your computer to drag & drop files to the "Audios > Music" folder.

main menu

- Games & Apps**
 - Music Player
 - Games
- Call Register**
 - Call memory *
 - My numbers
 - Billing *
 - Call settings
- Directory**
- Messages ***
 - Messages
 - Voice message
 - Voicemail
 - Settings
- WAP ***
 - Homepage
 - Bookmarks
 - Recent pages
 - Offline pages
 - Go to URL
 - Profiles
- Profiles**
 - General
 - Vibration
 - Loud
 - Silent
 - Antenna off mode
- FM Radio**
- Camera**
- Bluetooth**
- My settings**
 - Color
 - Display
 - Clock
 - Keys
 - More settings
- Services ***
- Tools**
 - Organizer
 - Alarm
 - Calculator
 - Fake call
 - Converter
 - File manager
 - Voice memo
 - Memory status
 - My shortcuts

This is a standard main menu layout. Your phone's menu may be a little different.

* Network Dependent

let's go

- cover off
- SIM in
- microSD in
- battery in
- cover on
- charge up

basics

turn it on & off

Press and hold for a few seconds to turn the phone on/off.

menu navigation

- Press the center key to open the Main Menu.
- Press the navigation key up, down, right or left to highlight a menu option.
- Press to select the highlighted option. Press to display the menu options.

contacts

save contacts

- Enter the number on the home screen and press .
 - Enter the contact details and press .
- Tip:** Press > > > to choose where to save your contacts (To SIM or To phone).

call contacts

- Press > .
- Press or , to scroll through the list to highlight the contact's number.
Tip: Press or to change category (General, Most called, SIM directory, Phone directory or Group).
- Press .

personalize

set your wallpaper

Change the wallpaper to make you happy.
Find it: > > >

set time & date

Find it: > > >

set ringtone and volume

Find it: >
Choose from the pre-programmed profiles: General, Vibration, Loud, Silent, and Antenna off mode. Press to edit a profile.

create shortcuts

Go to features with a single key press from the home screen:
Find it: > > > > >

photos

- Press > > .

- Tip:** To quickly turn on your camera, press on the side of your phone.
- Press to take your photo, then to:
 - Set as your wallpaper press up.
 - Send by Bluetooth press down.
 - Send by MMS press left.
 - Assign as contact press right.
 - Delete press .
 - Return to the viewfinder press .

Tip: To set where your photos are stored press > > or .

To transfer photos to/from your memory card, use an optional microSD memory card reader on your computer to drag & drop files to the "Images" folder.

radio

listen to the radio

- Plug a mini-USB headset into your phone.
Note: The FM radio works only when the headset is plugged in.
- Press > from the home screen.


To tune in a station, press left or right. To adjust volume, press up or down. To turn off the radio, press > .

store favorite stations

When listening to a station, press > > . Select a channel number and press to store it. Press > to see your stored stations. Press keys through to select a stored station.

home screen

The home screen displays when you turn on the phone. Status indicators can appear across the top of the home screen:

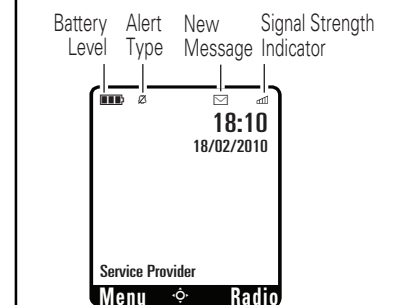

Note: Your phone's home screen may be different than the one shown.

