 


on the right tell you about phone status. Flick the bar down to show notification details.

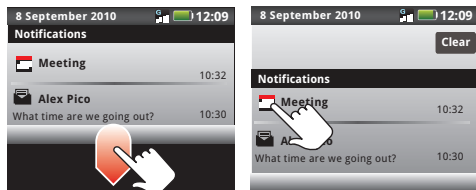

	GSM network (full signal)		downloading
	voicemail message		USB connection
	Bluetooth™		sync active
	Wi-Fi™ active		airplane mode
	vibrate mode		silent mode
	microphone mute		speakerphone active
	firewall active		alarm set
	battery (full charge)		battery (charging)

Tip: To see today's date, touch and hold the status indicators. You can also touch Menu > **More** > **Notifications** to show your notifications.

APP MENU

all your apps in one place

QUICK START: APP MENU

The app menu shows you all of your applications. To open it from the home screen, touch . To close it, touch Home . Flick up and down to see all of your apps. Any new apps that you download (see page “**APPS FOR ALL**” on page 36) are added to the app menu.

Note: Your app menu may vary.

RECENT APPS


Touch and hold Home to see the last few apps you used. Touch **Recent**, then **All apps** or **Downloaded** to change the list. Touch Home to return to the home screen.

SOCIAL NETWORKING

my life, your life

ADD ACCOUNTS

When you add your **Kaixin001**, **RenRen**, **51**, **Qzone**, or **Sinamicroblog** social networking accounts, friends appear in your phone's **Contacts**, and status updates appear in **My Social Status** and **Social Networking** widgets.

Find it: Menu  > **More** > **Settings** > **Accounts** > **Add account**

Sign into your social networking account with the user name or email and password that you set up on that account (the same as on your computer). If you don't have social networking accounts, you can visit their websites to set them up.

Note: Your network or other factors might affect the speed of widget updates. To download updates faster, see "**Wi-Fi**" on page 46.

UPDATE YOUR STATUS

 
After you add a social networking account, you can update your status in a **My Social Status** widget.

To add a **My Social Status** widget, touch and hold an empty spot on your home screen, then touch **Motorola widgets**.

To update your status, just touch a **My Social Status** widget and enter text. If you have more than one account, you can use the pull-down menu to limit which accounts are updated. When you open the widget, a number on the right side means you have unread status comments (touch it to open them).

VIEW ACCOUNT UPDATES & FEATURES


After you add a social networking account, you can open and respond to friends' updates with a **Social Networking** widget.

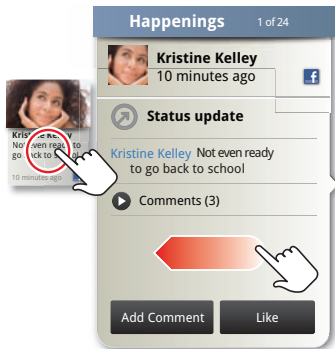


To add a **Social Networking** widget, touch and hold an empty spot on your home screen, then touch **Motorola widgets**.

To open the **Social Networking** widget, touch it. Then:

- Touch a person's name to open their info.
- Touch the widget title to open a list view.

- Touch  to open the full update, then touch the social network's icon to open its website.

To change which accounts or contacts appear in a **Social Networking** widget, open the widget and touch Menu . Then, choose **Services** (accounts), or **Show updates for** (contacts).

EDIT & DELETE ACCOUNTS

Find it: Menu  > **More** > **Settings** > **Accounts**

 
Touch and hold an account, then touch **Open account** to edit it, or touch **Remove account** to remove it (along with its contacts and messages).

CALLS

it's good to talk

QUICK START: CALLS

Find it:  **Dialer**

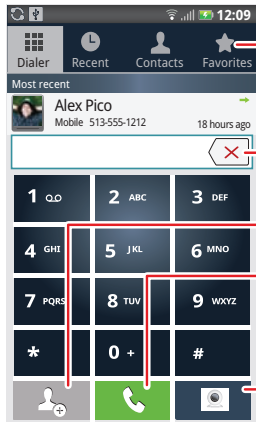

Touch to open, **Recent**, **Contacts**, or **Favorites** lists.

Delete

Touch to delete a digit you entered.

Add Contact



Voice Call


Enter number, then touch to make a voice call.


Video Call


Enter number, then touch to make a video call.

VOICE & VIDEO CALLS



To make a **voice call**, touch  **Dialer** and enter a number, then touch  to make the call.

Tip: When you enter a number to dial, touch Menu  to add a pause (pauses two seconds), or wait (waits for your confirmation).

To answer a voice call, touch **Answer** or drag  to the right.

To ignore a voice call, touch **Ignore** or drag  to the left.

 
To end a voice call, touch **End call**.

To make a **video call** and see each other while you talk, you'll both need a 3G video phone. If your phone is roaming on a non-3G network, video calls will not work. To make a video call, touch  **Dialer**, enter a number, then touch .


To answer a video call, touch **Accept**.

To ignore a video call, touch **Reject**.

Touch **Accept as voice call** to answer a video call as a voice call.

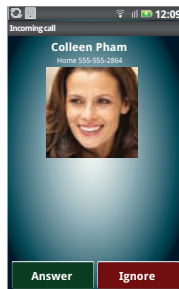

To end a video call, touch **End**.

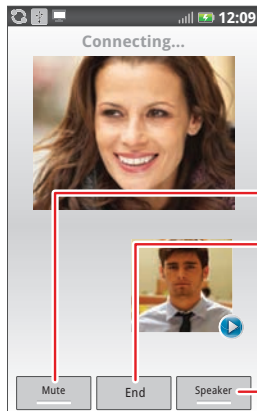 


Mute Call
Touch to mute.

End Call
Touch to hang up.

Speaker
Touch to turn the speaker on or off.

 IN-CALL OPTIONS

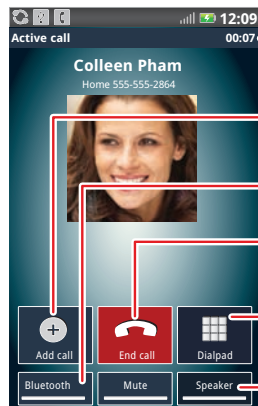

Call Timer

Add call
Touch to start a conference call.

Bluetooth
Use a Bluetooth device.

End Call
Touch to hang up.

Dialpad
Touch to enter numbers during a call.


Speaker
Touch to turn the speaker on or off.

During a call, touch Menu  to choose **Hold**.

Tip: You can touch Home  or Back  to hide the active call display. To reopen it, touch  **Dialer**.

FAVORITES

Find it:  **Dialer** > **Favorites**

- To call a number, touch it.
- To search, add, or delete entries, touch Menu .

HANDSFREE


Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

During a call:

- To use the speakerphone, touch **Speaker**.
- To use a Bluetooth™ device, touch **Bluetooth**.

MUTE, HOLD & RECORD

During a call:



- To mute the current call, touch **Mute**.
- To put a call on hold, touch Menu  > **Hold**.

ENTER NUMBERS DURING A CALL

To enter numbers during a call, touch **Dialpad**.

RECENT CALLS


Find it:  **Dialer** > **Recent**

- To call a number, touch  on the right.
- To send a text message, store the number, video call, add to speed dial, or other options, touch and hold an entry.
- To filter the list, touch the view name (like **All calls**) at the top.
- To delete a call from the list, touch and hold the entry, then touch **Remove from list**.
- To clear the list, touch Menu .

CONFERENCE CALLS


To start a conference call, call the first number. After they answer, touch **Add call** and call the next number. When the next number answers, touch **Merge**.

YOUR PHONE NUMBER

Find it: Menu  > **More** > **Settings** > **About phone** > **Status**


The status page lists your phone number.

YOUR CALLER ID


To hide your number from the people you call, touch Menu  > **More** > **Settings** > **Call settings** > **Additional settings** > **Caller ID**.

CALL FORWARDING & WAITING

You can forward calls all the time, or only when your phone is busy, unanswered, or unreachable (not on the network).


Find it: Menu  > **More** > **Settings** > **Call settings** > **Call forwarding**

When you're on a call and a second call comes in, call waiting lets you answer it. You can turn off call waiting, to send second calls straight to your voicemail.

Find it: Menu  > **More** > **Settings** > **Call settings** > **Additional settings** > **Call waiting**

RESTRICT OUTGOING CALLS

To restrict your phone so that it can only dial a few numbers:

Find it: Menu  > **More** > **Settings** > **Call settings** > **Fixed dialing number**


- To turn fixed dialing on, touch **FDN disabled** > **Enable FDN**.
- To add or delete the allowed numbers, touch **Manage FDN list**.

COOL DOWN

In very limited circumstances, such as where your phone has been exposed to extreme heat, "Cool Down" message screens will appear. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in "Cool Down" mode, only emergency calls can be made.

EMERGENCY CALLS

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Open the phone, then touch  **Dialer** (if your phone is locked, touch **Emergency Call**).
- 2 Enter the emergency number.
- 3 Touch **Call** to call the emergency number.

 
Note: Your mobile device can use AGPS satellite signals to help emergency services find you ("GPS & AGPS" on page 59).

CONTACTS

contacts like you've never had before

QUICK START: CONTACTS

Find it: > **Contacts**

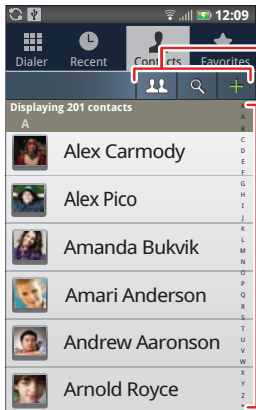

Touch to group, search for or add contacts.

Contacts List

Touch a contact to call or text. Touch & hold to edit, delete, and more.

Menu Options

Touch Menu to add, display options, and more.

TRANSFER CONTACTS

You can merge your contacts from your social networking and email accounts into one phonebook.

All you need to do is add your accounts, and your phone will handle the rest!

- To add your social networking contacts, see “**ADD ACCOUNTS**” on page 11.
- To add your email contacts, see “**SET UP MESSAGING**” on page 21.

Tip: If you add a **Corporate Sync** account, you can send messages to your coworkers, even if you don't have them stored in your contacts.

- To import contacts from your SIM card (if that didn't happen automatically), touch Menu > **Import/Export** > **SIM card** or **SD card**.
- To get more options and help, touch Menu > **Import/Export** > **Help importing contacts**.

CALL, TEXT, OR EMAIL CONTACTS



Find it: > **Contacts**

For **Call contact**, **Text contact**, **Video call contact**, **View contact**, or other options, touch and hold the contact.


VIEW & USE CONTACTS

With your MOTOROLA **MT870**, you'll know what everybody's up to and when.

 
Find it: > **Contacts**

- To filter the contacts by group, touch Menu  > **Display options** > **Local**, **USIM/SIM**, **Email** and so on. Touch the filter name you want then touch **Save**.
- To find a contact, touch Search  and just type the name.

Touch a contact to open their details. To start a voice call, send a message, or start a video call, just touch an icon on the right.

- To send a contact's details in a message or over a Bluetooth connection, touch the contact. Then, Menu  > **Share**.

Tip: To add a shortcut to one of your contacts, touch and hold a blank spot on your home screen and then touch **Motorola widgets** > **Contact quick tasks**.

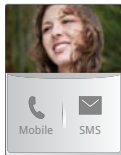

EDIT OR DELETE CONTACTS

Find it:  >  **Contacts**

To edit or delete contacts, touch and hold the contact, then touch **Edit contact** or **Delete contact**. You can set a ringer, address, and other details that will be saved on your phone.

Where are contacts edited or deleted? Your phone edits the contacts in its memory. Your changes won't affect your SIM card.


ONLINE CONTACTS


PIM is a service provided by China Mobile to synchronize your contacts, calendar, and tasks.

Find it:  >  **PIM**

 
CREATE CONTACTS




Find it:  >  **Contacts**

To create a contact, touch  or Menu  > **Add contact**.

Where are contacts saved? Your phone saves new contacts in its memory, and other accounts you select: In **Contacts**, touch Menu  > **More** > **Settings** > **Contact storage** to choose which accounts get updated. You'll need to choose where to save new contacts: **Local**, **USIM/SIM** or **Motorola Services**.

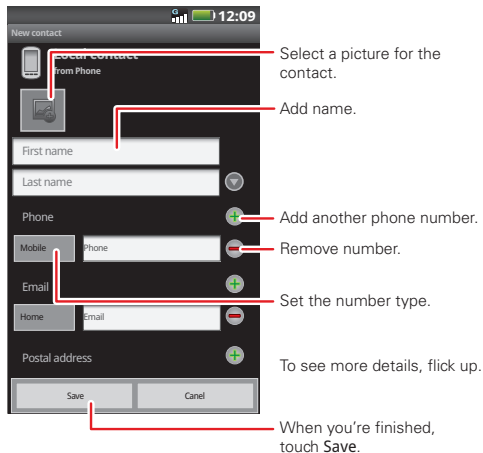Enter the contact name and details, then touch **Save**.



To create a group in your contacts, touch  > Menu  > **New group**. Enter a group name, then touch **Ok**, and select people. To add members to the group, touch it, then touch Menu  > **Add member**.

GROUPS

You can put your contacts into groups that you create (like "friends," "family," or "work"). Then, you can find contacts faster by showing one group at a time.