 


Pinch to zoom out.

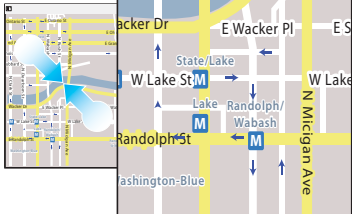

Key tips

Menu, home, back & search

Menu Key 


Touch to open menu options.


Search Key 

Touch for text search or hold for voice search.



Home Key 

Back Key 



Touch Home  to close any menu or app and return to the home screen. In the home screen, touch and

hold Home  to show the last few apps you used, then touch an app to open it.

Touch Search  for text search.

Touch Menu  to open menu options, or touch Back  to go back.

Sleep & wake up

To save your battery, prevent accidental touches, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power . To wake up the touchscreen, just press Power  again.

To change how long your phone waits before the screen goes to sleep automatically, touch Menu  > **Settings** > **Display** > **Screen timeout**.

Power key menu

Press and hold Power  to open the power key menu, where you can turn off the phone (**Power off**), or turn **Silent mode** or **Airplane mode** on or off.

Adjust volume

Press the volume keys to change the ringer volume (in the home screen), or the earpiece volume (during a call).



Rotate the screen

The touchscreen can spin to stay right-side up when you rotate your phone:


Find it: Menu  > **Settings** > **Display**
> **Auto-rotate screen**

 
DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION

Home screen

quick access to the things you need most

Quick start: Home screen

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. It's basically like this:

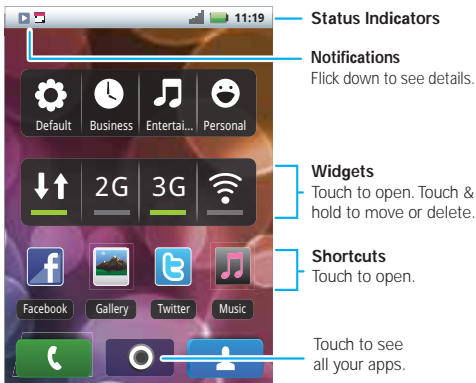

Use the widgets, shortcuts, and panels to show what's important to you—whether it's home, work or play.

Use & change your home screen

On your home screen, *shortcuts* are icons that open your favorite apps, web bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates.


Flick the home screen left or right to open other *panels* of shortcuts and widgets.

- To **open** something, touch it. Home  to return to the home screen.

Tip: When you open a widget, touch Menu  to show any options or settings.




- To **add** something or change your **wallpaper**, touch and hold an empty spot until you see the **Add to Home screen** menu.

You can add a folder to organize your shortcuts.

- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another spot, another panel, or the trash  at the bottom of the screen.

Running multiple apps

No need to close an app before opening another one. Your phone runs multiple apps, all at once.

You can open a new app while running another. Touch Home  to return to the home screen, touch  to open the main menu, then touch the app you want. To switch from one running app to another, touch and hold Home  to see what apps are already open, then touch the one you want.

 
 
Search









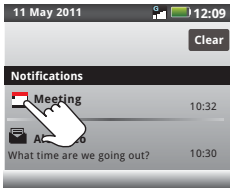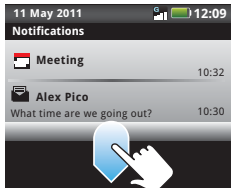







To search, touch Search  on the front of the phone, or touch the search widget in the app menu.

Phone status & notifications

At the top of the screen, icons on the left notify you about new messages or events (notifications). Icons

on the right tell you about phone status. Flick the bar down to show notification details.



	CDMA network (full signal)		GSM network (full signal)
	voicemail message		USB connection
	Bluetooth™ active		Bluetooth connected
	Wi-Fi™ active		airplane mode
	vibrate mode		silent mode
	mute call		speakerphone active
	firewall active		alarm set
	battery (full charge)		battery (charging)

 
Calls

it's good to talk

Quick start: Calls

Dialing options

From the home screen, touch  **Dialer**.

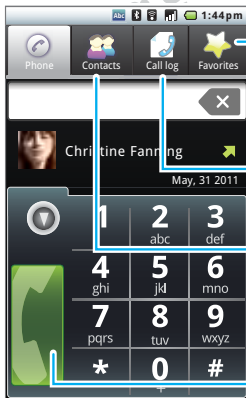

Favourites

Touch to open frequent calls, then touch an entry to call.

Delete

Touch to delete a digit you entered.


Recent Calls

Touch to open, then touch an entry to call.

 
Open Your Contacts

Call

Enter a number, and touch here to call it.

When you enter a number to dial, touch Menu  to add a pause (pauses two seconds), or wait (waits for your confirmation).

In-call options

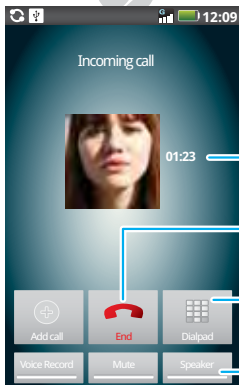

01:23 **Call Timer**

End Call



Touch to hang up.

Dialpad

Touch to open a dialpad, to enter numbers during a call.

Speakerphone



Touch to turn the speakerphone on or off.


During a call, touch Menu  to choose **Bluetooth** (to use a wireless headset). Your touchscreen goes dark to avoid accidental touches. To wake it up, press Power .

Tip: You can touch Home  or Back  to hide the active call display. To reopen it, touch  **Dialer**.

Make, answer & end calls

To make a call, touch  **Dialer**, enter a number, then touch .

 

To answer a call, touch  or drag  to the right.


To end a call, touch .

To ignore a call, touch **Ignore** or drag  to the left.

Make, answer & end calls

To make a call, touch  **Dialer**, enter a number, then touch .

To answer a call, touch  or drag  to the right.


To end a call, touch .

To ignore a call, touch **Ignore** or drag  to the left.

Tip: To enter the international dialing code, touch and hold .

Favorites


Find it:  **Dialer** > **Favorites**

- To call a number, touch it.
- To search, add, or delete entries, touch Menu .

Handsfree

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

During a call:

- To use the speakerphone, touch **Speaker**.
- To use a Bluetooth™ device, touch Menu  > **Bluetooth**.

Mute, hold & record

During a call:


- To mute the current call, touch **Mute**.
- To record the current call, touch **Voice Record**.

Enter numbers during a call

To enter numbers during a call, touch **Dialpad**.

Recent calls

Find it:  **Dialer** > **Call log**

- Touch and hold an entry to call it, send a text message, view call details or add the number to your contacts.
- To delete the calls from the list, touch Menu  > **Clear call log**.

Conference calls

To start a conference call, call the first number. After they answer, touch **Add call** and call the next number. When the next number answers, touch **Merge calls**.

Your phone number

Find it: Menu  > **Settings** > **About phone** > **Status** > **CDMA status** or **GSM status**


The status page lists your phone number.

Your caller ID

To hide your number from the people you call, touch Menu  > **Settings** > **Call settings** > **Additional settings** > **Caller ID**.

Call forwarding & waiting

You can forward calls all the time, or only when your phone is busy, unanswered, or unreachable (not on the network):

Find it: Menu  > **Settings** > **Call settings** > **Call forwarding**

When you're on a call and a second call comes in, call waiting lets you answer it. You can turn off call waiting, to send second calls straight to your voicemail: