Find it: Menu 📳 > Settings > Call settings > Additional settings > Call waiting

Restrict outgoing calls

To restrict your phone so that it can only dial a few numbers:

Find it: Menu 🔡 > Settings > Call settings > Fixed Dialing Numbers

- To turn fixed dialing on, touch FDN activation.
- To add or delete the allowed numbers, touch FDN list.

Cool down

In very limited circumstances, such as where your phone has been exposed to extreme heat, "Cool Down" message screens will appear. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in "Cool Down" mode, only emergency calls can be made.

Emergency calls

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country.

Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Open the phone, then touch Dialer (if your phone is locked, touch Emergency Call).
- 2 Enter the emergency number.
- 3 Touch Call to call the emergency number.


Note: Your mobile device can use AGPS satellite signals to help emergency services find you (" GPS & MOTOROLA CONFIDENTIAL NOTOROLA CONFIDENTIAL AGPS" on page 65).

Contacts

contacts like you've never had before

Quick start: Contacts

Find it: Contacts

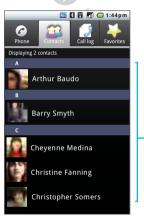

Contacts List

Touch - open.

Touch & hold - call, text & more.

Tip: To search the list, type a name. When you flick or drag the list, drag the scroll bar that appears to move the list faster.

Import contacts from your SIM

If you need to import the contacts from your SIM card, touch Contacts, then touch Menu > Import/Export > Import from SIM card.

View, edit or delete contacts

Find it: Contacts

To View contact, Add to favorites, Text contact or Call contact, touch and hold the contact.

Create contacts

Find it: Contacts > Menu > New contact

Touch any entry area to open the touchscreen

louch any entry area to open the touchscree keyboard.

When you're finished, touch **Done**.

Messaging

sometimes it's best to text or email...



Find it: Messaging



Tip: To see more messages, flick or drag up.

Read & reply to messages

- To open a message and all of its replies, touch it.
- To respond to a message, just open it and enter your response in the text box at the bottom.
- To open options, touch the checkbox next to the message.

Create messages

Find it: O > Messaging > Compose New

Message

Enter the recipient and message, Touch Menu 🔡 for options like Insert smiley or Attach.

Send & receive attachments

To send a file in a message, open a new message and touch Menu 🔠 > Attach.

When you receive a message with an attachment. open the message and touch the file name to download it. Then, touch the name again to open it. Some file formats can be converted to HTML for faster. viewing, and your phone will show **Get HTML version**.

While viewing the attachment, touch it to save it, share it and more

Tip: To send and receive large attachments faster, use a Wi-Fi™ connection, in "Wi-Fi™" on page 52.

Set up messaging

To add email accounts, touch Menu 🔡 > Settings > Accounts > Add account.

Corporate Sync is for Microsoft™ Exchange server work email accounts. Enter details from your IT administrator.

Email is for most personal and other accounts that aren't on a Microsoft™ Exchange Server. For account details, contact the account provider and for setup see "Email" on page 29.

Fmail

Set up an account

Find it: O > Email

The email setup wizard will guide you through setting up your email account. For account details, contact the account provider.

Create a new email

Find it: Email > Menu 🔡 > Compose

Enter the recipient email address and message, then touch **Send**

Tip: Touch Menu 🔡 for options, like Attach or Add Cc

Voicemail

When you have a new voicemail, oo shows at the top of your screen. To hear the voicemail, touch Dialer, then touch

If you need to change your voicemail number, in the home screen touch Menu 🔛 > Settings > Call settings > Voicemail settings.

Text entry

keys when you need them

Typing tips

To	
Enter alternate characters	From the number keyboard, touch Alternate ALT. Touch again to return to numbers.
Enter one capital letter	Touch Shift ♀.
Enter only capital letters, until you touch Shift 🛊 again	Touch Shift ① twice. Touch again to revert to lowercase.
Cut or Copy selected text	Touch and hold text, then touch Cut or Copy .
Paste cut or copied text	Touch and hold location to paste then touch Paste .
Delete a character (hold to delete more)	Touch Delete 🔞.

To change your text entry settings and see the dictionary of terms you've used, from the home screen, touch Menu 📆 > Settings > Language & keyboard.

Text input settings

Find it: Menu > Settings > Language & keyboard

- To edit your dictionary, touch User dictionary.
- To change the language and the style for your touchscreen keyboard, touch Select language.
- Keypa Keypa Control Roll Control To change the device keypad settings, touch Device kevboard.

Tips & tricks

a few handy hints

Shortcuts

To	
Return to the home screen	Touch Home 🝙.
See recently dialed numbers	Touch Dialer > Call log.
Sleep/wake your phone	Press Power ① .
Turn airplane mode on/off	Press and hold Power ① > Airplane mode.
Turn phone sounds on/off	Press and hold Power ① > Silent mode.
Set screen timeout	Touch Menu 📳 > Settings > Display > Screen timeout.
Turn Bluetooth™ power on/off	Touch Menu 📆 > Settings > Wireless & networks > Bluetooth.
Turn Wi-Fi on/off	Touch Menu 🔡 > Settings > Wireless & networks > Wi-Fi.

To	
Add a shortcut on your home screen	Touch and hold an open area on your home screen to open the Add to Home screen menu, then touch Shortcuts . Choose an application, bookmark, or shortcut to add.
Move a shortcut or widget	Touch and hold the shortcut or widget until you feel a vibration, then drag it to where you want.
Delete a shortcut or widget	Touch and hold the shortcut or widget until you feel a vibration, then drag it to the trash at the

Battery tips

Your phone is like a small computer, giving you a lot of information and apps, at 3G speed, with a touch display! Depending on what you use, that can take a lot of power. So, if you want to save battery life between charges, you could reduce:

top of the screen.

 recording or watching videos, listening to music, or taking pictures.

- Bluetooth™ use: touch Menu 📳 > Settings
 > Wireless & networks > Bluetooth (turn off).
- Wi-Fi use: touch Menu Settings > Wireless
 & networks > Wi-Fi (turn off).
- GPS use: touch Menu : Settings > Location & security > Use GPS satellites (deselect).
- display brightness: touch Menu Settings
 > Display > Brightness > (dimmer setting).
- imeout RANKER CONFIDENTIAL display timeout delay: touch Menu 📳 > Settings > Display > Screen timeout > (shorter setting).