 


Web

surf the web with your phone

Quick start: Browser

Find it:  >  **Browser**

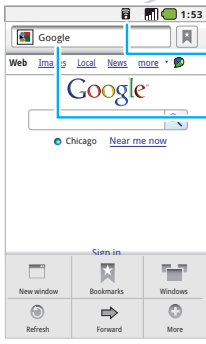

Connection


Over the air:

Mobile Network: **G, E**, 


Wi-Fi: 

 
Web Address

Touch to enter a URL.

Touch Menu  for browser options.

CONFIDENTIAL

To enter a web page address in the browser or your home screen, just touch Search .

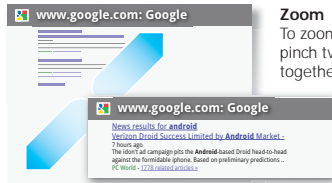

Zoom

To zoom in or out, pinch two fingers together or apart.

Note: If you can't connect, contact your service provider.

Connect

Your phone uses the mobile phone network (over the air) to automatically connect to the web.

Note: Your service provider may charge to surf the Web or download data.

To use a wireless network, touch Menu  > **Settings** > **Wireless & networks**. Touch **Wi-Fi** to turn it on, then touch **Wi-Fi settings** to search for nearby wireless networks. Touch a network to connect. There's more in "Wi-Fi™" on page 52.

Photos & videos

see it, capture it, share it!

Photos

Take & share photos

Take that family photo, and post it online for everyone to see.

Find it: Press the Camera Key .

Tip: You can also touch  > **Camera**.

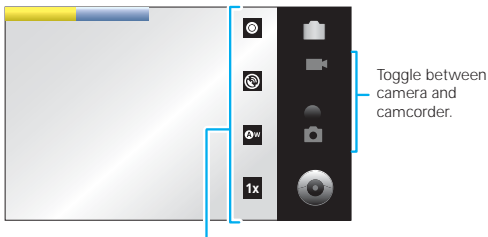 



Photo Capture Settings

Adjust for greater creative control.

Note: Photos are stored on your microSD memory card. **Picture resolution** is **Widescreen** or **5MP**, unless you change it.

To take the photo, press the Camera Key  halfway to lock the focus, then press all the way to take the photo.

The photo you've just taken is shown on the screen. Touch the photo, then:

 
- To **set** the photo as a wallpaper, or contact photo, touch **More > Set as**.
- To **send** the photo in a message or post it online, touch **Share**. For more info on sharing your photos, see "Share photos & videos" on page 49.
- To **delete** the photo, touch **Delete**.
- To **edit** the photo, touch **More > Crop, Rotate Left or Rotate Right**.

Videos

Record & share videos



Find it:  >  **Camcorder**

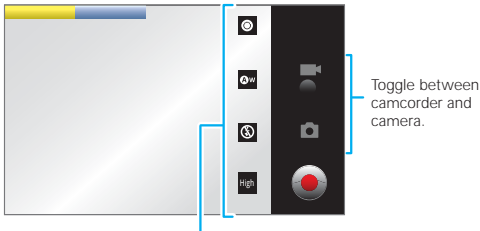Note: To get the clearest videos, wipe the lens clean with a soft, dry cloth before you record a video.




Video Settings

Adjust for greater creative control.

To record the video, press the Camera Key . To stop the video recording, press the Camera Key  again.

 
The video you've just taken is shown on the screen. Touch the video, then:

- To **send** the video in a message or post it online, touch **Share**. For more info on sharing your videos, see "Share photos & videos" on page 49.

- To **play** the video, touch .
- To **delete** the video, touch **Delete**.

View photos & videos

Find it:  > **Gallery**

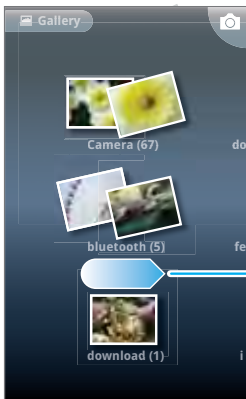

Flick left & right to view more folders.

Touch a folder to display all of its photos or videos.

- **Camera**—All of the captured photos and videos on your phone.

- **Bluetooth**—Photos and videos received on a bluetooth connection.
- **Download**—Photos and videos grouped by the downloaded off the web onto your phone.
- **Pics**—All photos, no groupings.
- **Videos**—All videos, no groupings.

Note: To see the controls while the video is playing, touch the display.

DRAFT - MOTOROLA CONFIDENTIAL
PROPRIETARY INFORMATION

Music

 
when music is what you need...


Note: Copyright—do you have the right? Always follow the rules. See “Content Copyright” in your legal and safety information.


Quick start: Music

Find it:  > **Music**

Touch, touch, play—instant music. Just open your music library, then select what you want to play.

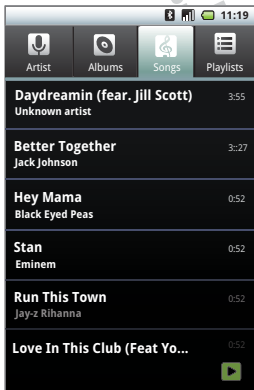

Tip: When a song is playing, you can add it to a playlist by touching Menu  > **Add to playlist.**

 
To listen to music during a flight, turn off all your network and wireless connections: Press and hold Power/Lock  > **Airplane mode.**

Note: When you select airplane mode, all wireless services are disabled. You can then turn Wi-Fi and/or Bluetooth back on, if permitted by your airline. Other wireless voice and data services (such as calls and text messages) remain off in airplane mode. Emergency calls to your region's emergency number (e.g., 911) can still be made.


UNCLASSIFIED - MOTOROLA CONFIDENTIAL
PROPRIETARY INFORMATION

Music player

Just touch a song or playlist to get going.

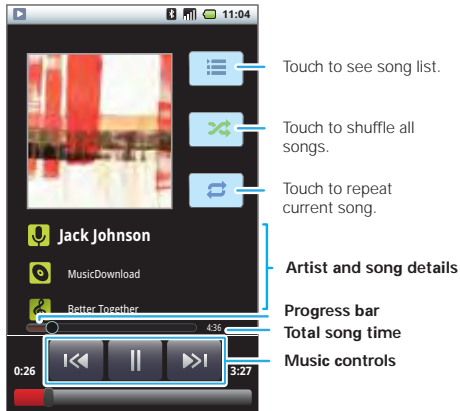



Music player controls

controls	
play/pause	Touch  .
previous/next	Touch  .

controls

volume Press the side volume keys.


add to playlist Touch Menu  > **Add to playlist.**


use as ringtone Touch Menu  > **Use as ringtone.**

delete Touch Menu  > **Delete.**

Hide, wake, turn off


Touch Home  to use another app. Your music continues to play.

When you see  in the status bar a song is playing, flick down to see details. Touch the song to return to the music controls.

To turn off your music touch .

Playlists

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist, or touch **New** to create a new playlist.

To add a song to the playlist you're playing, touch Menu  > **Add to playlist** in the music player.

To edit, delete and rename playlists, touch and hold the playlist in the music library.

FM Radio

Plug in a 3.5mm headset and surf the airwaves for fresh music.

Find it:  > **FM Radio**

DRAFT - MOTOROLA CONFIDENTIAL
& PROPRIETARY INFORMATION