

MOTOROLA **SPICE**<sup>™</sup> key

LIFE.  POWERED.



# CONGRATULATIONS

Your MOTOROLA SPICE™ key (XT316) phone is loaded with features, including videos, music, Web access, a powerful set of business tools, and more—all in a stylish phone design.

- **Mobile video:** Record and watch videos, download or stream videos to watch on your phone.
- **Photos:** Take and share great photos with a high performance camera.
- **Web:** Get more from the Web, with support for Adobe® Flash® Player. Search, browse, everything you want to do, all made easier.

**Note:** Certain apps and features may not be available in all countries/carriers.

**Caution:** Before assembling, charging, or using your phone for the first time, please read the important legal and safety information at the back of this guide.

## WANT MORE?

- **Support:** Online help and more at [www.motorola.com/support](http://www.motorola.com/support).
- **Accessories:** Find accessories for your phone at [www.motorola.com/products](http://www.motorola.com/products).

# YOUR PHONE

*the important keys & connectors*



**Note:** Your phone might look a little different.

# CONTENTS

<b>LET'S GO</b> .....	<b>5</b>
<b>TOUCHSCREEN &amp; KEYS</b> .....	<b>8</b>
<b>HOME SCREEN</b> .....	<b>13</b>
<b>CALLS</b> .....	<b>17</b>
<b>CONTACTS</b> .....	<b>22</b>
<b>MESSAGING</b> .....	<b>24</b>
<b>TEXT ENTRY</b> .....	<b>28</b>
<b>TIPS &amp; TRICKS</b> .....	<b>30</b>
<b>WEB</b> .....	<b>33</b>
<b>LOCATION</b> .....	<b>35</b>
<b>PHOTOS &amp; VIDEOS</b> .....	<b>38</b>
<b>MUSIC</b> .....	<b>40</b>
<b>PERSONALIZE</b> .....	<b>43</b>
<b>CONNECTIONS</b> .....	<b>46</b>
<b>SECURITY</b> .....	<b>51</b>
<b>TROUBLESHOOTING</b> .....	<b>53</b>
<b>SAFETY, REGULATORY &amp; LEGAL</b> .....	<b>54</b>

# LET'S GO

*let's get you up and running*

## ASSEMBLE & CHARGE

1 Cover off



2 SIM in



3 microSD in (may already be inserted)



4 Battery in



5 Cover on




6 Charge up




**Caution:** Please read “**BATTERY USE & SAFETY**” on page 54.

**Tip:** To save battery life, see “**BATTERY TIPS**” on page 31.


## TURN IT ON & OFF

To turn on your phone, press Power/Lock key  (on the top right).


To turn off your phone, press and hold Power/Lock key , then touch **Power off**.

**Note:** This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

## UNLOCK

To unlock your phone, drag  to the right.

## SOUNDS OFF & ON

To turn phone sounds off, drag  to the left.

## WI-FI™ CONNECT

You can use a Wi-Fi™ connection for even faster Internet access. Touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings**. Touch **Wi-Fi**





to turn it on and search for nearby wireless networks. Touch a network to connect. There's more in "**WI-FI NETWORKS**" on page 48.

# TOUCHSCREEN & KEYS

## TOUCHSCREEN ON/OFF

*a few essentials*

Your touchscreen is on when you need it and off when you don't.

- To make your touchscreen sleep or wake up, just press Power/Lock key .
- When you hold the phone to your ear during calls, your touchscreen sleeps to prevent accidental touches.
- To let the touchscreen adjust brightness automatically, touch Menu  > **Settings** > **Display** > **Brightness** and check **Automatic brightness**.

## TOUCH TIPS

Here are some tips on how to navigate around your phone.

### TOUCH

To choose an icon or option, *touch* it.

