



- Touch and hold an entry to call it, send a text message, view call details or add the number to your contacts.
- Touch Menu  > **Clear call log** to clear the list.


CONFERENCE CALLS

To start a conference call, call the first number. After they answer, touch **Add call** and call the next number. When the next number answers, touch **Merge calls**.


YOUR PHONE NUMBER


To show your phone number, touch Menu  > **Settings** > **About phone** > **Status** > **My phone number**

YOUR CALLER ID


To hide your number from the people you call, touch Menu  > **Settings** > **Call settings** > **Additional settings** > **Caller ID**.

CALL FORWARDING & WAITING

To forward calls, touch Menu  > **Settings** > **Call settings** > **Call forwarding**. You can forward calls all the time, or only when your phone is busy, unanswered, or unreachable (not on the network)

To turn on call waiting, touch Menu  > **Settings** > **Call settings** > **Additional settings** > **Call waiting**. Call waiting lets you answer new calls when you're already on a call. If call waiting is off, new calls go straight to your voicemail.

RESTRICTED CALLS

To restrict your phone so that it can only dial a few numbers, touch Menu  > **Settings** > **Call settings** > **Fixed Dialing Numbers**.

- To turn fixed dialing on, touch **FDN activation**.
- To add or delete the allowed numbers, touch **FDN list**.



COOL DOWN

In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see "Cool Down" messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in "Cool Down" mode, only emergency calls can be made.

EMERGENCY CALLS

Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked.

Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.



- 1 Open the phone, then touch  >  **Phone** (if your phone is locked, touch **Emergency Call**).
- 2 Enter the emergency number.
- 3 Touch **Call** to call the emergency number.

 
Note: Your mobile device can use AGPS satellite signals to help emergency services find you (“**LOCATION SERVICES (GPS & AGPS)**” on page 64).







CONTACTS

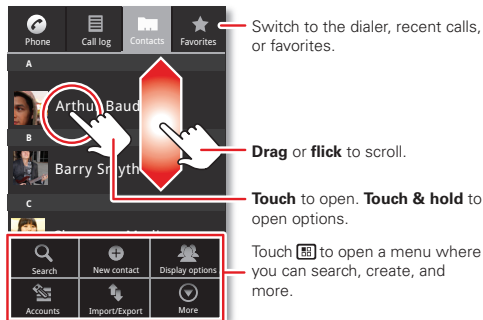

contacts like you've never had before

QUICK START: CONTACTS

From the home screen, touch  >  **Contacts**.



- To **create** a contact, touch  >  **Contacts** > Menu  > **New contact**, choose where you want to store the contact, then enter details (to close the display keyboard, touch Back ).
- To **open** a contact's details, touch  >  **Contacts**, then touch the contact.

- To **edit** or **text** a contact, touch  >  **Contacts**, then touch and hold the contact.

SIM AND MEMORY CARD CONTACTS



When you create a new contact you can choose to store it in your Google™ account, phone memory, or your SIM card.

 
If you need to import or export contacts on your SIM or memory card, touch  >  **Contacts**, then touch Menu  > **Import/Export**.

MESSAGING

sometimes it's best to text or email...


QUICK START: TEXT MESSAGING

From the home screen, touch  >  **Messaging**.

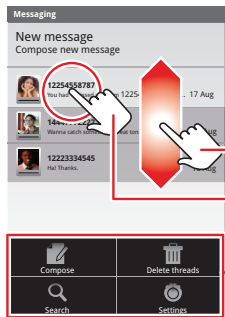



Drag or **flick** to scroll.


Touch to open. **Touch & hold** to open options.



Touch  to open a menu where you can change settings and more.

Tip: To see more messages, flick or drag up.




- To **create** a text message, touch  >  **Messaging** > **New message**. For options, touch Menu .

- To **open** text messages, touch  >  **Messaging**, then touch the sender's name.

When you see  in the status bar at the top of your screen, flick down the status bar and touch the new message to open it.

- To **respond** to a text message, just open it and enter your response in the text box at the bottom.
- To **forward, copy**, and more, touch  >  **Messaging**, touch the sender's name, then touch and hold the message.


ATTACHMENTS






To send a file in a text message, touch  >  **Messaging** > **New message**, then touch Menu  > **Attach**.

When you open a message with an attachment, touch **Download** to download it. Touch the downloaded attachment to open it, then touch it again to save it, share it, and more.


Tip: To send and receive large attachments faster, use “**WI-FI NETWORKS**” on page 48.





EMAIL


- To **set up Gmail** or **Corporate** Microsoft™ Exchange server accounts, touch Menu  > **Settings** > **Accounts & sync** > **Add account**. For details, contact the account provider.

To set up a standard email account, touch  >  **Email** and follow the wizard. To add more standard accounts, open  **Email** and touch Menu  > **Accounts** > Menu  > **Add account**. For details, contact the account provider.




- To **open** email, touch  >  **Email** or  **Gmail**. Touch a message to open it.

Tip: Touch Menu  for options like **Refresh** or **Search**.

- To **create** an email, touch  >  **Email** or  **Gmail**, then touch Menu  > **Compose**.

Tip: Touch Menu  for options like **Attach** or **Add Cc/Bcc**.

VOICEMAIL





When you have a new voicemail,  shows in the status bar at the top of your screen. To hear voicemails, touch  >  **Phone** then touch and hold **1**.

If you need to change your voicemail number, in the home screen touch Menu  > **Settings** > **Call settings** > **Voicemail settings**.


TEXT ENTRY


keys when you need them

TYPING TIPS


To...	
Enter alternate characters	From the number keyboard, touch Alternate  . Touch again to return to symbols/numbers.
Enter one capital letter	Touch Shift  .
Enter only capital letters, until you touch Shift  again	Touch Shift  twice. Touch again to revert to lowercase.
Cut or copy selected text	Touch and hold text to select, then touch and hold to Cut or Copy .
Paste cut or copied text	Touch and hold location to paste then touch Paste .

To...

Delete a character (hold to delete more) Touch Delete .

To change your text entry settings and see the dictionary of terms you've used, from the home screen, touch Menu  > **Settings** > **Language & keyboard**.

TEXT INPUT SETTINGS









Find it: Menu  > **Settings** > **Language & keyboard**



- To edit your dictionary, touch **User dictionary**.
- To change the language and the style for your touchscreen keyboard, touch **Select language**.
- To change the device keypad settings, touch **Built-in keyboard**.

TIPS & TRICKS

a few handy hints







SHORTCUTS

To...	
Return to the home screen	Touch Home  .
See recently dialed numbers	Touch  >  Phone > Call log .
Sleep/wake your phone	Press Power/Lock key  .
Turn airplane mode on/off	Press and hold Power/Lock key  > Airplane mode .
Turn phone sounds on/off	Press and hold Power/Lock key  > Silent mode .
Set screen timeout	Touch Menu  > Settings > Display > Screen timeout .
Turn Bluetooth™ power on/off	Touch Menu  > Settings > Wireless & networks > Bluetooth .

To...	
Turn Wi-Fi on/off	Touch Menu  > Settings > Wireless & networks > Wi-Fi .
Add a shortcut on your home screen	Touch and hold an open area on your home screen to open the Add to Home screen menu, then touch Shortcuts . Choose an application, bookmark, or shortcut to add.
Move a shortcut or widget	Touch and hold the shortcut or widget until you feel a vibration, then drag it to where you want.
Delete a shortcut or widget	Touch and hold the shortcut or widget until you feel a vibration, then drag it to the trash  at the top of the screen.

BATTERY TIPS



Your phone is like a small computer, giving you a lot of information and apps, at 3G speed, with a touch display! Depending on what you use, that can take a lot of power. So, if you want to save battery life between charges, you could reduce:

 
- recording or watching videos, listening to music, or taking pictures.
- widgets that stream information to your home screen, like news or weather (“**USE & CHANGE YOUR HOME SCREEN**” on page 14).
- Bluetooth™ use: touch Menu  > **Settings** > **Wireless & networks** > **Bluetooth** (turn off).
- Wi-Fi use: touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi** (turn off).
- GPS use: touch Menu  > **Settings** > **Location & security** > **Use GPS satellites** (deselect).
- network searching: if you are out of coverage, to keep your phone from looking for networks, press and hold Power/Lock key  > **Airplane mode**.
- display brightness: touch Menu  > **Settings** > **Display** > **Brightness** > *(dimmer setting)*.
- display timeout delay: touch Menu  > **Settings** > **Display** > **Screen timeout** > *(shorter setting)*.

WEB

surf the web with your phone

QUICK START: BROWSER

From the home screen, touch  >  **Browser**

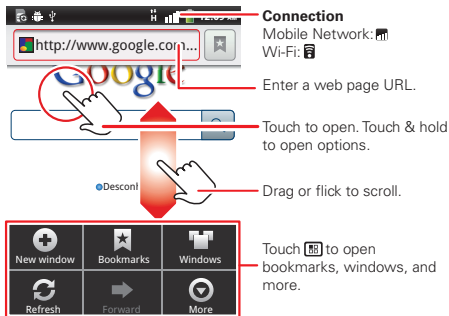

- To enter a **web page address** in the browser or your home screen, just touch Search .