



- Touch and hold an entry to call it, send a text message, view call details or add the number to your contacts.
- Touch Menu  > **Clear call log** to clear the list.


Conference calls

To start a conference call, call the first number. After they answer, touch **Add call** and call the next number. When the next number answers, touch **Merge calls**.

Your phone number


To show your phone number, touch Menu  > **Settings** > **About phone** > **Status** > **My phone number**

Your caller ID


To hide your number from the people you call, touch Menu  > **Settings** > **Call settings** > **Additional settings** > **Caller ID**.

Call forwarding & waiting

To forward calls, touch Menu  > **Settings** > **Call settings** > **Call forwarding**. You can forward calls all the time, or only when your phone is busy, unanswered, or unreachable (not on the network)

To turn on call waiting, touch Menu  > **Settings** > **Call settings** > **Additional settings** > **Call waiting**. Call waiting lets you answer new calls when you're already on a call. If call waiting is off, new calls go straight to your voicemail.

Restricted calls

To restrict your phone so that it can only dial a few numbers, touch Menu  > **Settings** > **Call settings** > **Fixed Dialing Numbers**.


- To turn fixed dialing on, touch **Enable FDN**.
- To add or delete the allowed numbers, touch **FDN list**.

Cool down

In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see “Cool Down” messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.

Emergency calls

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.



- 1 Open the phone, then touch  **Phone** (if your phone is locked, touch **Emergency Call**).
- 2 Enter the emergency number.
- 3 Touch **Call** to call the emergency number.

 
Note: Your mobile device can use AGPS satellite signals to help emergency services find you (“**Location Services (GPS & AGPS)**” on page 65).

Contacts

contacts like you've never had before

Quick start: Contacts

 
From the home screen, touch  >  **Contacts**.

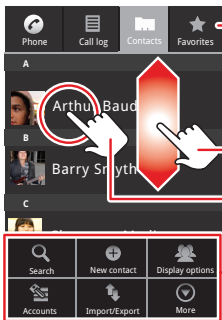









Switch to the dialer, recent calls, or favorites.

Drag or **flick** to scroll.

Touch to open. **Touch & hold** to open options.

Touch  to open a menu where you can search, create, and more.

- To **create** a contact, touch  >  **Contacts** > Menu  > **New contact**, choose where you want to store the contact, then enter details (to close the display keyboard, touch Back ).
- To **open** a contact's details, touch  >  **Contacts**, then touch the contact.

- To **edit or text** a contact, touch  >  **Contacts**, then touch and hold the contact.

SIM and Memory Card Contacts



When you create a new contact you can choose to store it in your Google™ account, phone memory, or your SIM card.

If you need to import or export contacts on your SIM or memory card, touch  >  **Contacts**, then touch Menu  > **Import/Export**.

Messaging

sometimes it's best to text or email...


Quick start: Text Messaging

From the home screen, touch  >  **Messaging**.








Drag or **flick** to scroll.


Touch to open. **Touch & hold** to open options.



Touch  to open a menu where you can change settings and more.

Tip: To see more messages, flick or drag up.




- To **create** a text message, touch  >  **Messaging** > **New message**. For options, touch Menu .

- To **open** text messages, touch  >  **Messaging**, then touch the sender's name.

When you see  in the status bar at the top of your screen, flick down the status bar and touch the new message to open it.

- To **respond** to a text message, just open it and enter your response in the text box at the bottom.
- To **forward, copy**, and more, touch  >  **Messaging**, touch the sender's name, then touch and hold the message.


attachments






To send a file in a text message, touch  >  **Messaging** > **New message**, then touch Menu  > **Attach**.

When you open a message with an attachment, touch **Download** to download it. Touch the downloaded attachment to open it, then touch it again to save it, share it, and more.


Tip: To send and receive large attachments faster, use “**Wi-Fi Networks**” on page 49.





Email


- To **set up Gmail** or **Corporate** Microsoft™ Exchange server accounts, touch Menu  > **Settings** > **Accounts & sync** > **Add account**. For details, contact the account provider.

To set up a standard email account, touch  >  **Email** and follow the wizard. To add more standard accounts, open  **Email** and touch Menu  > **Accounts** > Menu  > **Add account**. For details, contact the account provider.



- To **open** email, touch  >  **Email** or  **Gmail**. Touch a message to open it.

Tip: Touch Menu  for options like **Refresh** or **Search**.

- To **create** an email, touch  >  **Email** or  **Gmail**, then touch Menu  > **Compose**.

Tip: Touch Menu  for options like **Attach** or **Add Cc/Bcc**.

Voicemail






When you have a new voicemail,  shows in the status bar at the top of your screen. To hear voicemails, touch  then touch and hold **1**.


If you need to change your voicemail number, in the home screen touch Menu  > **Settings** > **Call settings** > **Voicemail settings**.

Text entry


keys when you need them

Typing tips

To...	
Enter alternate characters	From the number keyboard, touch Alternate  . Touch again to return to symbols/numbers.
Enter one capital letter	Touch Shift  .
Enter only capital letters, until you touch Shift  again	Touch Shift  twice. Touch again to revert to lowercase.
Cut or copy selected text	Touch and hold text, then touch Cut or Copy .
Paste cut or copied text	Touch and hold location to paste then touch Paste .
Delete a character (hold to delete more)	Touch Delete  .

To change your text entry settings and see the dictionary of terms you've used, from the home screen, touch Menu  > **Settings** > **Language & keyboard**.

Text input settings








Find it: Menu  > **Settings** > **Language & keyboard**

- To edit your dictionary, touch **User dictionary**.
- To change the language and the style for your touchscreen keyboard, touch **Select language**.
- To change the device keypad settings, touch **Built-in keyboard**.

Tips & tricks

a few handy hints

Shortcuts

To...	
Return to the home screen	Touch Home  .
See recently dialed numbers	Touch  Phone > Call log .
Sleep/wake your phone	Press Power  .
Turn flight Mode on/off	Press and hold Power  > Flight Mode .
Turn phone sounds on/off	Press and hold Power  > Silent mode .
Set screen timeout	Touch Menu  > Settings > Display > Screen timeout .
Turn Bluetooth™ power on/off	Touch Menu  > Settings > Wireless & networks > Bluetooth .

To...

Turn **Wi-Fi**
on/off

Touch Menu  > **Settings**
> **Wireless & networks** > **Wi-Fi**.


Add a shortcut
on your home
screen

Touch and hold an open area on
your home screen to open the
Add to Home screen menu,
then touch **Shortcuts**. Choose an
application, bookmark, or
shortcut to add.

Move a
shortcut or
widget







Touch and hold the shortcut or
widget until you feel a vibration,
then drag it to where you want.

Delete a
shortcut or
widget

Touch and hold the shortcut or
widget until you feel a vibration,
then drag it to the trash  at the
top of the screen.

Battery tips



Your phone is like a small computer, giving you a lot of information and apps, at 3G speed, with a touch display! Depending on what you use, that can take a lot of power. So, if you want to save battery life between charges, you could reduce:

 
- recording or watching videos, listening to music, or taking pictures.
- widgets that stream information to your home screen, like news or weather (“**Use & change your home screen**” on page 14).
- Bluetooth™ use: touch Menu  > **Settings** > **Wireless & networks** > **Bluetooth** (turn off).
- Wi-Fi use: touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi** (turn off).
- GPS use: touch Menu  > **Settings** > **Location & security** > **Use GPS satellites** (deselect).
- network searching: if you are out of coverage, to keep your phone from looking for networks, press and hold Power  > **Flight Mode**.
- display brightness: touch Menu  > **Settings** > **Display** > **Brightness** > (*dimmer setting*).
- display timeout delay: touch Menu  > **Settings** > **Display** > **Screen timeout** > (*shorter setting*).


Web

surf the web with your phone

Quick start: Browser

From the home screen, touch  >  **Browser**

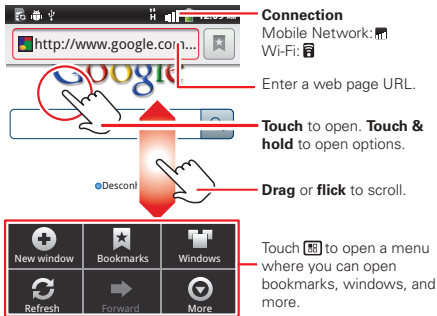

- To enter a **web page address** in the browser or your home screen, just touch Search .

- To **zoom** in or out, pinch two fingers together or apart.



Note: Your phone automatically uses your mobile phone network to connect to the web. Your

service provider may charge to surf the web or download data. If you can't connect, contact your service provider.

 
Tip: You can connect to the web with “**Wi-Fi Networks**” on page 49.

Downloads

To download files in your browser, touch a file link or touch and hold a picture to choose **Save image**.

To show the files you downloaded, touch  **Browser** >  > **More** > **Downloads**. Touch and hold an item to open it, see details, or remove it from the list.

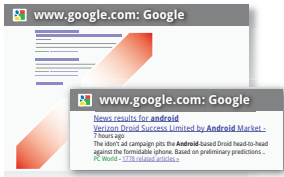

You can download “**App menu**” on page 15.

 


Location


where you are, and where you're going


Quick Start: Location


From the home screen, touch  >  **Maps**

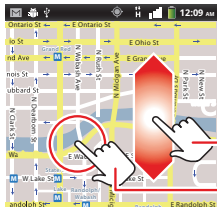

Drag or **flick** to scroll.

 Touch to open, then touch  to add to **Starred Places**.





Touch  to open a menu where you can get directions, open your starred places, windows, and more.

Google Maps™ offers powerful, user-friendly mapping technology and local business information—including business locations, contact information, and driving directions.

- To find an address, enter it in the search bar at the top. The map moves to show the address.

Tip: You can touch and hold a spot on the map to show the nearest address.

- To find stores, restaurants, and other places near you, touch **My Location** to see details.
- To get directions, find an address on the map, touch it, then touch Menu  > **Directions**.
- For help, touch Menu  > **More** > **Help**.

Google Maps Navigation™

Google Maps Navigation is an Internet-connected GPS navigation system with voice guidance.


To open navigation, touch  >  **Navigation**. Follow the prompts to speak or type your destination.

For more, go to www.google.com/mobile/navigation.

Latitude






Latitude lets you see where your friends and family are on Google Maps™. Plan to meet up, check that they got home safely, or just stay in touch. Don't worry, your location is not shared unless you agree to it. After you join Latitude, you can invite your friends to view your location, or accept their invitations.

Touch  >  **Maps** and then:

- To **join** Latitude, touch Menu  > **Join Latitude**. Read the privacy policy and, if you agree with it, choose to continue.

- To **add friends** touch Menu  > **Latitude** > Menu  > **Add friends**.

Touch **Select from Contacts** or **Add via email address**, then touch a contact and **Add friends**. Your friend will receive an email notice.

 
- To **remove friends** touch Menu  > **Latitude** to show your friends list. Touch a name, then touch **Remove this friend**.
- To **share your location** when you receive a request, you can choose **Accept and share back** (show your location and see theirs), **Accept, but hide my location** (hide your location, but see theirs), or **Don't accept** (hide both locations).
- To **hide your location** touch Menu  > **Latitude** to show your friends list. Touch your contact name, then touch Menu  > **Settings** > **Do not detect your location**.
- To **sign out of** Latitude, touch Menu  > **Latitude** to show your friends list. Touch Menu  > **Settings** > **Sign out of Latitude**.

Photos & videos

see it, capture it, share it!

Quick Start: Photos & Videos

From any screen, press the **Camera Key** on the right side of the phone to open the camera.

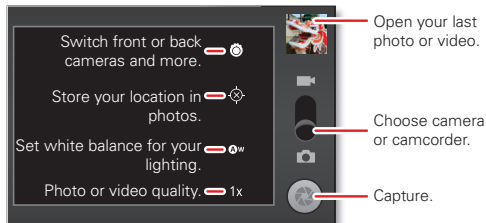

Tip: For the clearest photos and videos, clean the lens with a soft, dry cloth.

- To take a **photo**, open the camera, then press the **Camera Key**.
- To record a **video**, open the camera, then touch the camcorder icon to switch to the camcorder. Press the **Camera Key** to start and stop recording.