

MOTOROLA **i440**

LIFE.  POWERED.

# CONGRATULATIONS

## MOTOROLA I440

Get the convenience of push-to-talk calls together with a sleek design in an affordable package.

- **Private Calls:** Stay in touch with your family, friends, and colleagues with the simple touch of a button.
- **FM Radio:** Listen to your favorite stations wherever you go.
- **My Phone, My Way:** It's your phone—make it that way. Customize your home screen with personal pictures, and change wallpapers and ringtones.

**Caution:** Before assembling, charging or using your phone for the first time, please read the important legal and safety information packaged with your product.

## MORE INFORMATION

**On your computer**—Go to [www.motorola.com/support/](http://www.motorola.com/support/).

# YOUR PHONE

*the important keys & connectors*



CONFIDENTIAL



CONFIDENTIAL  
INFORMATION

**Note:** Your phone might look a little different.

# CONTENTS

<b>MENU MAP</b> .....	<b>5</b>
<b>LET'S GO</b> .....	<b>9</b>
<b>BASICS</b> .....	<b>11</b>
<b>CALLS</b> .....	<b>14</b>
<b>PUSH-TO-TALK</b> .....	<b>17</b>
<b>SDG CALLS</b> .....	<b>19</b>
<b>WEB</b> .....	<b>20</b>
<b>TEXT ENTRY</b> .....	<b>21</b>
<b>CONTACTS</b> .....	<b>23</b>
<b>MESSAGING</b> .....	<b>24</b>
<b>PERSONALIZE</b> .....	<b>27</b>
<b>CAMERA</b> .....	<b>29</b>
<b>MEDIA CENTER</b> .....	<b>30</b>
<b>FM RADIO</b> .....	<b>31</b>
<b>BLUETOOTH™ WIRELESS</b> .....	<b>32</b>
<b>TOOLS</b> .....	<b>34</b>
<b>SECURITY</b> .....	<b>37</b>
<b>SAFETY, REGULATORY &amp; LEGAL</b> .....	<b>39</b>

# MENU MAP

## MAIN MENU



### Call Alert



### Bluetooth

- Hands Free
- Link to Devices
- Device History
- Setup
- Find Me



### Settings

- (see **settings** menu)



### Ring Tones

- Vibrate All: On/Off
- Ringtones
- Vibrate
- Silent



### Java Apps

- Java System
- FM Radio



### GPS

- Position
- Privacy
- Interface



### Media Center



### Camera



### Net



### My Info

- My name
- Line 1
- Line 2
- Private ID
- Group ID
- Carrier IP
- IP1 Address
- IP2 Address



### Datebook



### VoiceRecord

- [New VoiceRec]



### Memo



### Recent Calls



### Shortcuts

- [Help]
- 1) Shortcuts
- 2) Cntcs[New Contact]
- 3) Recent Calls
- 4) Contacts
- 5) Datebook
- 6) Messages
- 7) VoiceRecord
- 8) Net
- 9) Call Forward

## MAIN MENU (CON'T.)

### **Contacts**

- [New Contact]
- [New SDG List]
- [New Msg Group]

**Note:** Your service provider may not offer the Message Group feature.

### **Call Forward**

### **Quick PTT**

### **Profiles**

- [New Profile]
- Standard
- Car
- Meeting
- Office
- Outdoors
- Headset
- PRVT Only
- CNTCS Only
- Surveillance

### **Call Timers**

- Last Call
- Phone Reset
- Phone Lifetime
- Prvt/Grp Reset
- Prvt/Grp Life
- Kbytes Reset

### **PT Manager**

- Quick PTT
- Send Message
- Send Picture
- Send Event
- Send My Info
- Send Contact
- Configure

### **Messages**

- [Create Message]
- Voice Mail
- Inbox
- Drafts
- Outbox
- Fax Mail
- Net alert
- Sent Items

### **FM Radio**

**Note:** Your service provider may not offer the FM Radio feature.

This is the standard main menu layout.

**Your phone's menu may be different.**

## SETTINGS MENU

### Display/Info

- Wallpaper
- Text Size
- Theme
- Home Icons
- Backlight
- Clock
- Menu View
- Large Dialing
- Language

### Phone Calls

- Set Line
- Any Key Ans
- Auto Redial
- Call Waiting
- Auto Ans
- Flip Activation
- Minute Beep
- Call Duration
- TTY
- Hearing Aid
- Notifications
- DTMF Dialing
- Prepend

### 2-Way Radio

- Tkgrp Silent
- Tkgrp Area
- One Touch PTT
- Alert Type
- PTT Quick Notes
- On/Off PTT
- Store Rcvd Info

### Personalize

- Menu Options
- Up Key
- Down Key
- Left Key
- Right Key
- Center Key
- Left Softkey
- Right Softkey
- Power Up

### Volume

- Line 1
- Line 2
- Messages
- Earpiece
- Speaker
- Keypad
- Java Earpiece
- Java Spkr
- Data



## SETTINGS MENU (CON'T.)

### Security


- Phone Lock
- Keypad Lock
- SIM PIN
- GPS PIN
- Change Passwds

### Advanced


- Alert Timeout
- Headset/Spkr
- Connectivity
- Reset Defaults
- Return to Home
- Transmitters
- Phone Only
- Baud Rate

**Caution:** Please read “**BATTERY USE & SAFETY**” on page 39.

## TURN IT ON & OFF

To turn on your phone, press and hold End/Power  for a few seconds or until the display turns on. If prompted, enter your four-digit unlock code.




**Note:** If you press End/Power  for more than four seconds, the phone will turn on in **Transmitters Off** mode.

To turn off your phone, press and hold End/Power .

## ENABLE SECURITY

You will need to enable security the first time you turn on your phone or within 10 days of using your phone.

- 1 Press **Ok**.
- 2 You are prompted to enable security. Press **Yes** and follow the on-screen instructions.
- 3 Press End/Power  to return to the home screen.





# BASICS

## ABOUT THIS GUIDE

This guide shows how to locate a menu feature as follows:

**Find it:** Menu  >  **Settings** > **Phone Calls**

This means that, from the home screen:

- 1 Press the Menu key  to open the main menu.
- 2 Press the navigation keys to scroll to the  **Settings** menu option, and press the center key  to select it.
- 3 Press the navigation keys to scroll to **Phone Calls**, and press the center key  to select it.

## HOME SCREEN









 



Your phone shows the *home screen* when you are not on a call or using the menu.



**Note:** Your home screen might look different from the one shown, depending on your service provider.

*Soft key labels* in the home screen show the current soft key functions.

Indicators at the top of your phone's display provide important status information.

Indicators	
 Signal Strength	 No Service
 Active Phone Line	 New Message
 Speaker On	 Packet Data
 Speaker Off	 Battery Level
 Ringer Off	 Bluetooth™ On
 Vibrate All	 New Voicemail

## ADJUST VOLUME

Press the volume keys up or down to:

- change the earpiece volume during calls
- change the ringer volume from the home screen
- turn off a call alert before answering the call

Volume Keys



**Tip:** While on the home screen, press and hold the volume key down until your phone vibrates to set your ringer to **Vibrate All**.

## NAVIGATION KEY

Press the navigation key up, down, left, or right to scroll to items in the display. When you highlight the desired item, press **OK** to select it.



## TRANSMITTERS

Consult airline staff about the use of the **Transmitters Off** feature during a flight. Turn off your phone whenever instructed to do so by airline staff.

**Find it:** Menu  >  **Settings** > **Advanced** > **Transmitters** > **Off**

**Transmitters Off** turns off your phone's calling and Bluetooth features in situations where wireless phone use is prohibited. You can use the phone's other non-calling features when the transmitters are turned off.

**Note:** When you select **Transmitters Off**, all wireless services are disabled. Emergency calls to your region's emergency number (e.g., 911) can still be made.

# CALLS

*it's good to talk*

## MAKE & ANSWER CALLS

Enter a number, then press Talk .

To answer a call, press Talk .


To end a call, press End/Power .




## HANDSFREE



**Note:** Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

During a call:

- To use the speakerphone, press **Spkr**.
- To connect a Bluetooth device, press Menu  > **Use Bluetooth**.

## RECENT CALLS

**Find it:** Menu  >  **Recent Calls**


**Tip:** When you're in the home screen, you can press Talk  to go to **Recent Calls**. When the phone is closed, press the Smart Key  to go to **Recent Calls**.



The recent calls list contains information associated with the last 20 calls you have made and received.

To display call details, highlight an entry and press .

## EMERGENCY CALLS

**Note:** Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency numbers may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Enter the emergency number.
- 2 Press Talk  to call the emergency number.

**Note:** Emergency calls can't be placed while the keypad is locked, or if the phone is displaying a No Service message. To unlock the keypad, press Menu  > .

**Note:** Your mobile device can use AGPS satellite signals to help emergency services find you (see “**GPS & AGPS**” on page 50).

## **COOL DOWN**

In very limited circumstances, such as where your phone has been exposed to extreme heat, “Cool Down” message screens will appear. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.

DRAFT - MOTOROLA CONFIDENTIAL  
& PROPRIETARY INFORMATION