

MOTOROLA SCREEN™ MINI

LIFE.  POWERED.



SAR This product meets the applicable SAR limits of 1.6 W/kg (FCC) and 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the legal and safety information packaged with your product.

Note: When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

68016088001-A

WELCOME

Whether you're a talker, a texter, or just love listening to music on the move, MOTOROLA SCREEN MINI (EX132) does it all.

Your phone is splash and dust resistant, because life happens fast, be ready for whatever it throws at you.

Note: Always make sure that the battery door cover and connector cover are closed and secure. Damage caused by failing to properly secure the phone's splash resistant covers is not covered by the warranty.

If you'd like even more information about how to use your new MOTOROLA SCREEN MINI (EX132) visit www.motorola.com/support.

So, let's go.

Note: Certain apps and features may not be available in all countries/carriers.

 
Caution: Before assembling, charging, or using your phone for the first time, please read the important safety, regulatory and legal information in this guide.

YOUR PHONE




LET'S GO


1 Cover off



2 SIM in

 

3 microSD in

 


4 Battery in



5 Cover on



 6 Charge up



BASICS

Turn it on & off

Press and hold **⏻** (on top of the phone) for a few seconds to turn the phone on/off.

Touch tips

- **Touch:** To choose an icon or option.
- **Touch & hold:** To open special options.
- **Drag/Flick:** Scroll/move slowly (drag) or quickly (flick).

Menu navigation

Touch **☰** to open the main menu.

Press Home **🏠** to close any menu or app and return to the home screen.

Touch Back **⬅** to go back.

Flick the menu screen left or right to view more panels.

PERSONALIZE

Profiles

Your phone has different profiles. You can customize ringtones, alerts, and volumes for each profile.

Touch **☰** > **⚙ Settings** > **Profiles**, then select from these profiles:

- **General:** Standard profile default setting.
- **Silent:** Ringtone is off, vibrate is off.
- **Meeting:** Vibrate is on, ringtone is off.
- **Outdoor:** Ringtone and key tone volume set to maximum.
- **Flight mode:** Turn off all wireless connections.

Display settings

To set display settings such as wallpaper, and screen saver, touch **☰** > **⚙ Settings** > **Display**.

Date & time

Set date, time, time zone, and formats:

touch **☰** > **⚙ Settings** > **Date and time**.

MESSAGES

Send an SMS or MMS

- 1 Touch **Message** > **New message**.
- 2 Enter your message.
- 3 Add pictures, videos, and more using options at the bottom of the screen.
- 4 Touch **😊 Add recipient** > *select a contact*.
- 5 Touch **Send**.

Read messages

When you receive a message, your phone plays an alert and shows the new message indicator **✉** at the top of the screen.

To read the new message, touch **View**. To read messages stored in your inbox, touch **Message** > **Inbox**.

CALLS

Make calls

From the home screen, touch **☎** then enter a number and touch **☎**.

Answer calls

When your phone rings or vibrates, touch **Answer**.

End a call

Touch **End call**.

In-call options

During a call, touch **Loudspeaker**, **Keypad**, **Mute**, **New call**, **Contacts** or **Hold**.

Redial number

- 1 Touch **☎** > **Call log**.
- 2 Touch and hold the contact you want to call, then touch **Call**.

Emergency calls

To call an emergency number, enter the emergency number and touch **Call**.

Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

TIPS & TRICKS

Recent calls

To see your **Missed**, **Received** and **Dialled** calls, touch **☎** > **Call Log**.

Voicemail

From the home screen, touch **☎**, then touch and hold **1**. If your voicemail number is preset, you will connect.

Backlight time

To set how long your backlight stays on, touch **☰** > **⚙ Settings** > **Display** > **Backlight time-out**.

Battery tips

Want to extend your battery life? Try these:

- Turn off Bluetooth™ power: Touch **☰** > **Bluetooth** > **Off**.
- Turn off the screen saver: Touch **☰** > **⚙ Settings** > **Display** > **Screensaver** > **Off**.

MUSIC

To use the music player, insert a microSD memory card (optional). The music player supports MP3, MIDI, AAC, AMR and WAV music formats.

Play music

Touch **☰** > **🎵 Music player**

controls

function	
play/pause	Touch ▶/⏸
next/previous song	Touch ⏪/⏩
volume	Press the side volume keys up or down .

Tip: To access music stored on your microSD memory card, touch **☰** > **My Files** > **Memory Card**. To transfer music to/from your memory card, plug your USB cable into your phone & computer, then drag & drop files to the 'Music' folder.

MENU MAP

Call log

- All
- Missed
- Received
- Dialled
- Delete All

Active mode

- Music
- Radio
- Camera
- Video
- Stopwatch

Organiser

- Alarm clock
- To-do list
- Calculator
- Countdown timer
- Stopwatch
- Notes
- World clock
- Unit converter

Browser

Email

Contacts

This is a standard main menu layout. Your phone's menu may be a little different. Flick the menu screen left or right to view more panels.

* Network/Carrier dependent.

Settings

Music player

Radio

Recorder

Photos

Camera

My Files

Message

Bluetooth

Media

Twitter*

Facebook*

MySpace*

YouTube*

Google Search*

Gmail

MEDIA

Photos & videos

- Photos: Touch **☰** > **📷 Camera**. To take the photo, press **📷**.
- Videos: Touch **☰** > **📷 Camera**, then drag **●** down. Press **📷** to start/stop.

After you've taken the photo, touch **📷**, then:

- To **send** in a message, or via Bluetooth, touch **Send**.
 - To assign to a contact, touch **Attach to contact**.
- To see the photos and videos you've taken, touch **☰** > **My Files** > **Images** or **Video clips**.

SOCIAL NETWORKS

Use your phone to access your favourite social network sites.

Note: If you don't have a social network account, you can visit the web site to set it up.

Update your status

After you set up an account, you can sign in, update and see your current status, and see and respond to friends' updates.

CONTACTS

 
Create contacts

Touch **☎** > **Contacts** > **+**, enter the contact name and details, then touch **Save**.

Tip: Touch > **More** > **Memory in use** to choose where to save your contacts (**Phone memory**, **SIM card** or **Phone and SIM card**).

Call contacts

Touch and hold a contact, then touch **Call**.

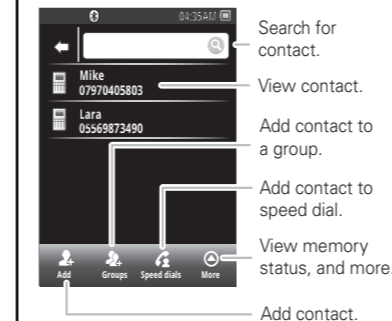

BLUETOOTH™

Turn on or off

Touch **☰** > **Bluetooth** > **On** or **Off**

When Bluetooth power is on, the Bluetooth indicator **📶** appears in the home screen.

 
Connect new devices

To connect with a new device, you need to pair with it. You only need to do this once for each device.

- 1 Make sure the device you are pairing with is in discoverable mode (see device instructions).
- 2 Touch **☰** > **Bluetooth** > **Paired devices** > **New**.
- 3 Your phone lists the devices it finds within range. Select a device to connect.
- 4 If necessary, enter the device passkey (like **0000**) to connect to the device.

HOME SCREEN

The home screen is what you see when you turn on the phone or touch Home **🏠** from a menu. It's basically like this:

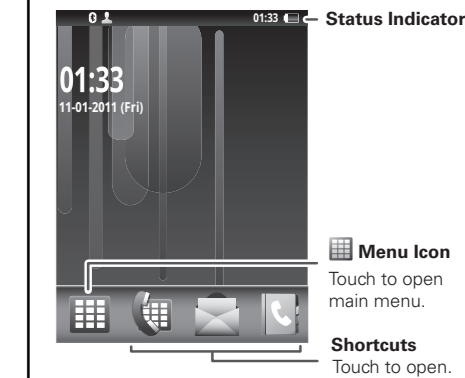

Note: Your home screen might look a little different.

