

EX139
GSM
GSG
8/29/11

Dummy Page - To be discarded before printing

ITC Notes:

Use this template with A7MotoQSG StructApps.

Congratulations

The MOTO Avon TV is a phone with several premium features including personalization, music, photo, video, browsing, mobile TV and more...all in a streamlined touch screen design.

- **Personalization:** Unify your work and personal life with calendar, email and contacts.
- **Photo:** Use a 2MP camera to take photos and send them to your friends.
- **Dual SIM slot:** Enable you to use two SIM cards at the same time without changing them.

We have crammed all the main features of your phone into this handy guide, and in a matter of minutes we'll show you just how easy your phone is to use. You may be surprised at what you discover.

 
If you'd like to get more information about how to use your new phone, please visit www.motorola.com.

Caution: Before using your phone for the first time, please read the important **legal and safety information** at the back of the *Getting Started Guide*.

Contents

My Phone	3
Home Screen	4
Menu Map	5
Let's Go	8
Basics	9
Calls	11
Contacts	15
Customize	16
Text Entry	19
Messages	20
E-mail	21
Bluetooth	23
Mobile TV	25
Camcorder	26
Audio Player	28
FM Radio	30
Web	32
Personal Organizer	33
Security	34
Troubleshooting	35
Legal, Safety & Regulatory	36

My Phone

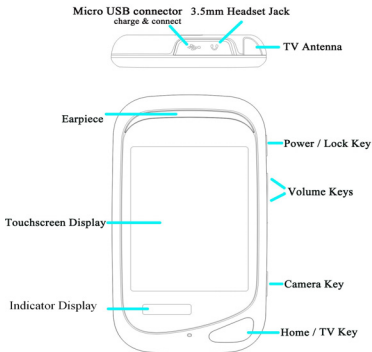


 Note: All the illustrations, simulated screen and related images used in this manual are for reference only. There may be slight difference between the phone and keys and content of display used in this manual and those of your phone. Please refer to your phone for actuality.







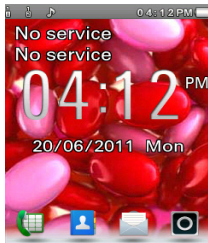



Home Screen

Keep you updated at all times...

The home screen appears when you turn on the phone. It gives you all your latest information in one place. Status indicators can appear at the top of the home screen.



Status indicators

	Signal Strength		General Profile
	Active Voice Call		Meeting Profile
	Headset		Outdoor Profile
	Alarm Lock		Silent Profile
	Roaming Service		Bluetooth
	New Messages		Battery

Note: Your home screen may look different.

 
Menu Map

Main menu 1



- World clock
- Alarm
- Event
- Currency converter
- File manager
- Calendar
- Tasks
- Notes
- Calculator
- Unit changer
- Stop watch
- Ebook
- Settings

Main menu 2

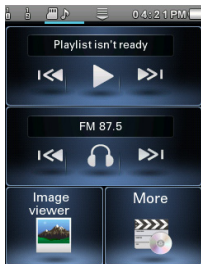


- Playlist
- FM Radio
- Image viewer
- Camera
- Video player
- Sound recorder
- Photo editor
- Audio player

* Flick the menu screen right or left to view more panels.

* Touch and hold an icon to change a shortcut in a menu.


Menu Map

 Main menu 3

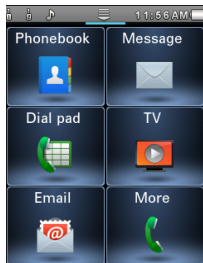

- Phonebook
- Message
- Dial pad
- TV
- Email
- Call log

 
Main menu 4

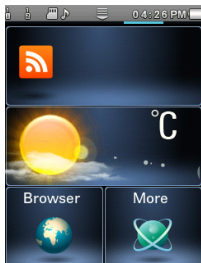

- RSS
- Weather
- Browser


Menu Map

 Main menu 5

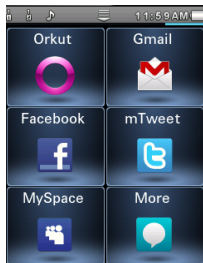

- Orkut
- Gmail
- Facebook
- mTweet
- MySpace
- YouTube
- Google Search
- Yahoo
- Twitter
- MotoID
- Java

 Setup menu

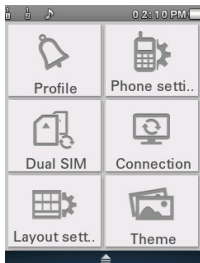

- Profile
- Phone settings
- Dual SIM
- Connection
- Layout settings
- Theme

Let's Go

1 open cover



2 SIM card slot



3 microSD



4 battery



5 replace cover



6 charge



remove battery





remove microSD



Note: Your battery is intentionally tight fitting.


Here's a few essentials:

About this guide

Touch the Menu icon  to open the Main Menu. Flick the menu screen to change pages of menus, then touch the icon to select the item. Touch the Right Soft Key  on the screen to go back to the previous level.

This guide shows how to locate a menu as follows:

Find it: Touch **Menu icon** > **More** > **Call log** > **Received calls**.

- 1 Touch the Menu icon  to open the Main Menu.
- 2 Touch the icon of **Call log**.
- 3 Touch **Received calls** to select the received calls.

Turn it on/off

Touch and hold the Power Key for a few seconds to turn the phone on/off. If prompted, enter your unlock code to turn it on.

Activate SIM cards



Your phone supports the Dual SIM cards mode, enabling you to use two SIM cards at the same time without changing them.

When two SIM cards are both installed, you can activate both SIM cards or one of them except in the flight mode.

Find it: Touch **Menu icon** > **Flick the menu screen to Menu 1** > **More** > **Settings** > **Dual SIM settings**.

Note: If only one SIM card is installed, this SIM card would be activated as default.

Access the main menu

- 1 From the home screen, touch the Menu icon  to open the Main Menu.
- 2 You can flick the menu screen to change pages of menu among Menu1, Menu2, Menu3, Menu4 and Menu5.
- 3 You can touch the Right Soft Key  on screen to move up to the previous level. You can also press the Home Key to return to the home screen anytime.

Calls

It's good to talk.

Make calls

From the home screen, Touch  to open a virtual keypad. Enter a number and touch the Call/Answer Key .

Note: If the Dual SIM Open mode is activated, you must choose which SIM card as voice call.


Answer calls

Touch the Call/Answer Key on screen when your phone rings or vibrates.

End a call

Touch the End Key on screen when your phone rings or vibrates.

Redial a number

- 1 From the home screen, touch the Menu icon to open the Main Menu.
- 2 Touch the  icon of call log to view the history of calls. You can select to redial a number from Missed, Dialed or Received calls.

Calls

Note: If the Dual SIM Open mode is activated, you must choose which SIM card as call history and voice call.

Go handsfree

During an active call, touch the icon of handsfree to turn the handsfree speaker on. To turn the handsfree speaker off, touch the icon of handsfree again. You can also use a wired headset to go handsfree.

Note: The use of handfree speaker while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always abide by laws and regulations on the use of these products.

Speed dial

You can set the speed dial to call the entries in your phonebook.

Find it: Touch **Menu icon**> **Phonebook** > **Options (Left soft key on screen)**> **Phonebook settings** >**Speed dial**.


- 1 Select **Status** to switch it on, then select **Set number**.
- 2 Scroll to the speed dial number (2-9) you want to set, then touch **Edit**.

Calls

- 3 Scroll to the desired contact and touch ✓.
- 4 To call speed dial entries, touch and hold the single-digit speed dial number for a few seconds.

Note: Speed dial 1 is reserved for calling your voicemail.

In-call options

During an active call, you can access the in-call options by touching icons on screen, including Call on hold, loudspeaker, keypad and contacts, or you can touch  **Options:**

- **Hold Single Call:** put a call on hold.
- **End Single Call:** end a call.
- **New Call:** make a new call during an active call.
- **Phonebook:** shortcut to phonebook menu.
- **Sound Recorder:** record your conversation during an active call.
- **Mute:** Mute your voice during an active call.
- **DTMF:** switch DTMF (Dual Tone Multi-Frequency) tone dialing system.

Calls

Note: This is the standard main menu layout. Your phone's menu may be different.

Emergency calls

To call an emergency number, enter the emergency number and touch the Call/Answer Key.




Your service provider programs one or more emergency phone numbers, (such as 112 or 911), that you can call under any circumstances, even when your phone is locked.

Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.


Contacts

Meet someone new? Save their names.

Save a contact

- 1 From the home screen, touch  to open a virtual keypad. Enter a number.
- 2 Touch **Options**  > **Save to Phonebook** > **Add New Contact**.
- 3 Enter the contact name and details, and touch **Options**  > **Save**.

Call a contact

- 1 From the home screen, touch  to open the phonebook.
- 2 Scroll the list to highlight a contact.
- 3 Select the contact and touch the Call/Answer Key.

Note: If the Dual SIM Open mode is activated, you must choose which SIM card as voice call.


Tip: Your phone calls all contacts' default numbers. If you have stored more than one number for a contact, select the contact to see other number(s). To dial a number, scroll to it and touch the Call/Answer Key on screen.





Customize

Create your personal style.

User profiles

Your phone has different profiles. You can customize ringtones, alerts, and volumes for each profile.

1 Touch **Menu icon** > **Setup menu (Drag  down to the bottom)** > **Profiles.**

- **General:** Standard profile as default setting. After activating this profile, your phone shows an indicator .
- **Silent:** Vibrator and ringtones are set to be off. After this profile is activated, only the screen of your phone shows incoming events. Your phone shows an indicator .
- **Meeting:** ringtone is set to be off. Only vibrator is activated. After this profile is activated, your phone shows an indicator .
- **Outdoor:** The Volume of ringtone and key tone is set to maximum. After this profile is activated, your phone shows an indicator .

Customize

- **My style:** You can set your desired ringtones and alert types when using My style.

2 Touch **Menu icon** > **Drag Setup menu down to the bottom** > **Profile** > **My style** > **Options** on screen > **Customize** to set your desired ringtones and alert types.

- **Alert Type:** Select an alert type (Ring only, Vibrate only, Vibrate and Ring, Vibrate then ring).
- **Ring Type:** Select a ring type (Repeat, Ascending, Beep once).
- **SIM1 incoming call, SIM2 incoming call, SIM1 message, SIM2 message:** Set the ringtones of incoming call and messages respectively for two SIM cards. You can also select different ringtone types for power on/off.
- **Ringtone volume, Message volume:** Adjust ringtone volume and message volume.
- **Other tones:** Change tones of Keytone, Power on, Power off and System alert.

Customize

Display settings

You can set display settings such as Wallpaper, Screen Saver and Main Menu Style.

Find it: Touch **Menu icon** > **Setup menu** > **Phone Settings** > **Display**.

Find it: Touch **Menu icon** > **Setup menu** > **Layout setting**.

Find it: Touch **Menu icon** > **Setup menu** > **Theme**.

Date & time

You can set date, time, time zone and format.

Find it: Touch **Menu icon** > **Setup menu** > **Phone Settings** > **Time and date**.

Language

You can set menu language.







Find it: Touch **Menu icon** > **Setup menu** > **Phone Settings** > **Language**.

Note: This is the standard main menu layout. Your phone's menu may be different.

Text Entry

Give you comfortable and quick typing.

With your phone's touch screen, you can enter text or numbers and create messages or notes. After you enter the text input field, an indicator at the top left of the display shows the text input mode you are currently using.


- 1 You can change the text input mode by touching **Options (Left soft key on screen) > Input method.**
- 2 Use the following keys to access functions:
 - To delete letters, touch the **Back Key**  on screen.
 - To enter a space, enter the **Space Key** .
 - To start a new line, touch  first, then touch the **Enter Key** .
 - To enter a capital letters, touch the **Caps Key** . To enter the small letters, touch the .
 - To insert symbols, touch **Options > Insert symbol.**



Note: This is the standard input method layout. Your phone may be different.

Messages


It's good to text.

Create & send a message

Find it: From the home screen, touch  to open Message Menu, then choose **Write message**.

- 1 To enter a message, touch the screen, then use the virtual keypad to enter text or numbers.
- 2 To insert pictures, audios, videos or objects, touch **Options** or the shortcut  on screen.
- 3 When you finish the message, touch **Options > Send to** or shortcut  on screen. You can enter one or more recipients or choose recipients from your phonebook.

Read messages

When you receive a message, your phone plays an alert and shows a message indicator  in the middle of the screen.

- 1 To read a new message, touch **View** in the message notification area.
- 2 You can read all received messages in your inbox by touch **Menu icon > Message > Inbox**.

It's good to E-mail.

Set up an e-mail account

Find it: Touch **Menu icon** > **Email**.

- 1 Enter your e-mail address, touch **Options** > **Next** to set Protocol, Data account, Incoming server, Outgoing server, User name, Password and Account name.
- 2 In **Email**, select the e-mail address you want to activate, then touch **Options** > **Connect**.
- 3 To add another new account, touch **Options** > **Email accounts** > **Options** > **New account**.

Note: E-mail service depends on your e-mail and phone network service providers.

Create & send e-mail

Find it: Touch **Menu icon** > **Email** > **Options** > **Write Email**.

- 1 To edit the subject and the content, use the virtual keypad to enter text or numbers.
- 2 To add a picture or a file, touch **Options** > **Add attachments or shortcut on screen**.
- 3 When you finish the e-mail, touch **Options** > **Send**.

E-mail

- 4 Scroll to one of the recipients and touch **Options** > **Send**. You can touch **Options** > **Change Type**. to set the type of recipients as **To**, **Cc** and/or **Bcc**.

Tip: You can save an e-mail draft you are composing and then finish and send it later. Touch **Options** > **Save to Drafts**. An e-mail draft is stored in **Drafts**.

Create & add an e-mail signature

Find it: Touch the **Main Menu icon** > **Email** > **Options** > **Email accounts**.

Scroll to the account for which you are creating the signature, then touch **Options** > **Edit** > **Advance settings** > **Signature**.

Read E-mails

When you receive an e-mail message, your phone plays an alert and shows a message indicator (📧) at the top of the screen.

- 1 To read new e-mail, touch **View** in the E-mail notification area.
- 2 You can read all received E-mails in your inbox by touching **Menu icon** > **Email**. Select an e-mail account and touch **Inbox**.

Bluetooth

Connect your phone and other devices.


Your phone supports Bluetooth wireless pairing (also called linking or bonding). You can pair your phone with a Bluetooth headset or car kit.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always abide by laws and regulations on the use of these products.

Note: Bluetooth - indoor use only in France.

Turn Bluetooth power on and off

Find it: Touch **Menu icon** > **Setup menu** > **Connection** > **Bluetooth**.

- 1 Touch **Power** to switch Bluetooth on / off. After Bluetooth is turned on, your phone shows an indicator  at the top of the display.
- 2 If Bluetooth **Power** is **On**, your phone can automatically pair with the handsfree device you have used before. Just turn on the device or move it near the phone.

Note: To extend battery life, use the previous procedure to set Bluetooth **Power** to **Off** when it is not in use. It will not pair with devices until you set Bluetooth **Power** back to **On**.

Bluetooth

Pair with a handsfree device

Before you try to pair your phone with a device, make sure your phone's Bluetooth **Power** is **On** and the device is on and ready in pairing or bonding mode.

- 1 Put the device (handsfree headset, stereo headset, car kit, etc.) in pairing mode.
- 2 Touch **My devices** > **Search new device**. Your phone can search and list the devices it has found within range.
- 3 Select the device from the list, and then touch **Connect**. If prompted, enter the device passkey and touch ✓.

Send objects to another device

You can use Bluetooth pairing to send contacts, tasks, calendar items, audios, pictures, videos, and voice notes from your phone to another device.





- 1 Select the object you want to send.
- 2 Touch **Options** > **Send** > **Via Bluetooth**.
- 3 Select the device from the list, then sending will automatically start.
- 4 To cancel sending an item, touch **Cancel**.

Mobile TV

Watch your favorite programs!

- 1 The TV antenna is located inside your phone. To receive better TV signal, stretch out the TV antenna.
- 2 Touch **TV key** to open Mobile TV.
- 3 Your phone will show **Local Setting** to let you select your located region for channel scanning.
- 4 Touch **Channel Scan** to search for available channels. Touch the screen to switch to full screen mode.

Control menu

 Settings	Set options such as Channel Scan, Local Setting, Caption, Parental Rating, etc
 Options	Display Channel List and Program Guide
 Previous	Move up to the previous channel
 Next Channel	Move down to the next channel

Note: Available programming and networks may vary depending on your service provider or region. ATV function does not support in USA area.

 
Note: Always retract and store the aerial after use, especially when making or receiving calls. This will maintain compliance with RF exposure (SAR) guidelines and help protect your aerial.



Camcorder


Capture your colorful life!

Take a photo

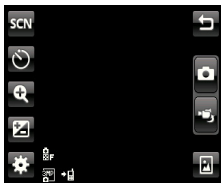- 1 To open the camera viewfinder, you can touch **Menu icon**
> **Flick the menu screen to Menu 2** > **More** > **Camera**.








- 2 Touch the Camera Key  to take a picture. Your phone saves the picture and shows it in the camera viewfinder.
- 3 You can find your stored pictures by touching  > **Switch to photo album**.

Note: Before taking your photo, you can touch  to adjust picture settings, such as **Capture mode**, **Image size**, **White balance**, **Effects**, etc.

Camcorder

Record a video clip

- 1 To open the video viewfinder, you can touch **Menu icon** > **Flick the menu screen to Menu 2** > **More** > **Camera**.
- 2 Touch the Camcorder Key  to start recording a video.
- 3 Touch  to end recording the video, or touch  to pause recording and  to continue recording.
- 4 You can find your stored videos by touching **Menu icon** > **Flick the menu screen to Menu 1** > **File Manager** > **Phone** or **Memory Card**, then select the folder that contains the stored videos.

Note: Before recording your video, you can touch  to adjust video settings, such as **Record size**, **White balance**, **Effects**, **Video quality**, **Record audio**, etc.

Audio Player

Enjoy music anytime and anywhere.

Playlists

Create a playlist

Find it: Touch **Menu icon** > **Flick the menu screen to Menu 2** > **More** > **Audio Player** > **Playlists** > **Options** > **New**.

- 1 Enter a name for the playlist, then touch **Options** > **Done**.
- 2 Open the playlist you want to edit, then touch **Options** > **Add** to add music files from your phone or your memory card.

Play a playlist

In **Playlists**, touch the playlist you want to play, then touch one of the songs.

- 1 In **Playlists**, open the playlist you want to play, then select one of the music files.
- 2 Use these keys to control Audio Player:

Controls	
previous song	touch 
next song	touch 

Audio Player

Controls

play / pause

touch  or 

volume

touch the sideVolume keys up or down

Delete a playlist

In **Playlists**, scroll to the playlist you want to delete, then touch **Options > Delete**.

Player settings

When using the media player, you can touch **Options > Settings > Player Settings** to set these options.

- **Shuffle:** Set all songs play shuffled or one by one.
- **Repeat:** Repeat all songs or one selected song.
- **Sound effects:** Set your desired equalizer modes such as Bass, Classical or Party.
- **Bass Enhancement:** Switch the effect of bass enhancement.

FM Radio






Listen to your favorite channels.

1 Plug a wired headset into your phone.

Note: The FM radio works only when a headset is plugged in.

2 Touch **Menu icon** > **Flick the menu screen to Menu 2** > **More** > **FM radio**.

3 Use these keys to control the radio:

Controls	
tune in a station	touch  or 
previous or next available station	touch  or 
turn off the radio	touch 
volume	touch the Volume keys (on the right side of your phone)

4 Touch **Options** to set these options:

- **Loudspeaker:** Turn on/off the loudspeaker.
- **Channel list:** Bookmarks for up to 30 radio channels.
- **Manual input:** Key into a channel frequency.



FM Radio






- **Auto Search:** Automatically search for available radio channels and store them to the channel list.
- **Settings:** Change record format, audio quality, and record storage.
- **Record:** Record your favorite radio programs.
- **File List:** Manage the previous recorded files.

Surf your favorite web sites.

Surf web sites

Find it: Touch **Menu icon** > **Flick the menu screen to Menu 4** > **Browser.**

- 1 To go to a Web page, input the URL.
- 2 To bookmark a Web page, touch  > **Bookmarks** > **Manage.**
- 3 To change displays settings like **Zoom** and **Load Images**, touch  >  **Settings.**
- 4 To go to a link on a Web page, touch it.

Note: If you can't connect, contact your service provider.

Personal Organizer

Manage your life with these handy tools.

Calendar

Find it: Touch **Menu icon** > **Flick the menu screen to Menu 1** > **More** > **Calendar**.

- 1 Touch **Options** to add, delete or view events. You can set six types of events including **Reminder, Meetings, Course, Date, Call** and **Anniversary**.
- 2 More details of the first coming event in the calendar will appear in **Menu1**.

Tasks

Find it: Touch **Menu icon** > **Flick the menu screen to Menu 1** > **More** > **Tasks**.

Alarms

Find it: Touch **Menu icon** > **Flick the menu screen to Menu 1** > **Alarm**

You can set the FM radio as your alarm tone by touching **Edit** > **Alarm Tone** > **FM radio**.

Security

Keep your phone secure!

Lock & unlock the phone


You can lock your phone to keep others from using it.

Find it: Touch **Menu icon** > **Flick the menu screen to Menu 1** > **More** > **Settings** > **Security settings** > **SIM1/2 security setting**.

- 1 Touch **SIM lock** to turn this lock on. The Lock code is provided by your network service provider.
- 2 In Security Setting, you can change the password by touching **Change Password** > **SIM1/2 PIN**.

Lock & unlock the keypad

You can lock the keypad to prevent any unwanted phone operations.

- 1 Touch the **Power/Lock key** on the right side of your phone to lock the keypad.
- 2 To unlock, touch the **Power/Lock key**, then drag  from the top to the bottom of the screen.

Troubleshooting

We are here to help.

Crash recovery

In the unlikely event that your phone stops responding to touches and key presses, try a quick reset. Remove the back cover and battery, then replace them and turn your phone on as usual.

Reset

Find it: Touch **Menu icon** > **Flick the menu screen to Menu 1** > **More** > **Settings** > **Restore factory settings**.

Your phone will be reset to factory settings, and all data in your phone will be deleted.

Battery Use & Safety

Important: Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.**
- **Don't let the phone or battery come in contact with water.** Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your carrier or contact Motorola, even if they appear to be working properly.
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
- Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
- Avoid leaving your phone in your car in high temperatures.

DOs

- **Do avoid dropping the battery or phone.** Dropping these items, especially on a hard surface, can potentially cause damage.
- **Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.**

Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety

protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a “Motorola Original” hologram.

Motorola recommends you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a “Motorola Original” hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola authorized service center.

Important: Motorola’s warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the Web:

- www.motorola.com/recycling
- www.rbrc.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.



Warning: Never dispose of batteries in a fire because they may explode.

Battery Charging

Notes for charging your phone's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Specific Absorption Rate (ICNIRP)

Your model wireless phone meets international guidelines for exposure to radio waves:

Your mobile device is a radio transmitter and receiver. It is designed to not exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health, and to account for any variations in measurements. The guidelines use a unit of measurement known as the Specific Absorption Rate (SAR). The ICNIRP SAR limit for mobile devices used by the general public is 2 watts per kilogram (W/kg), and the CE MAX SAR value for this mobile device when tested at the head is **0.707 mW/10g** and the FCC MAX SAR value for this mobile device when tested at the head is **1.32 mW/g**. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this guide. In this case, the tested CE MAX SAR value is **0.733 mW/10g** and the tested FCC MAX SAR value is **1.46 mW/g**. The tests are carried out in accordance with international guidelines for testing. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product. As SAR is measured utilizing the mobile device's highest transmitting power, the

actual SAR of this mobile device while operating is typically below that indicated above. This is due to automatic changes to the power level of the mobile device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure, then you can do so by limiting the length of calls or using a handsfree device to keep the mobile device away from the head and body.

Additional Information can be found on the Web sites of the World Health Organization (<http://www.who.int/emf>) or Motorola Mobility, Inc. (<http://www.motorola.com/rfhealth>).

Software Copyright Notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Content Copyright

The unauthorized copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorized or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Safety & General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

Driving Precautions

Using a mobile device while driving may cause distraction. End a call if you can't concentrate on driving. Input information about your destination and route prior to your drive. Do not input data or engage in text messaging while driving. Keep your eyes on the road while driving. Listen to the audible turn-by-turn directions, if available.

Also, using a mobile device or accessory may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products. Responsible driving practices can be found at www.motorola.com/callsmart (in English only).

Operational Warnings

Obey all posted signs when using mobile devices in public areas.



Potentially Explosive Atmospheres





Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.

Symbol	Definition
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries & Chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see “Battery Use & Safety.”

Keep Your Mobile Device & Its Accessories Away From Small Children

These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If

glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

Caution About High Volume Usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To protect your hearing:



- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only).

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your

hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Nov0109]

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate this device.

- Increase the separation between the device and the receiver.
- Connect the device into an outlet on a circuit different from that of other electronics.
- Consult the dealer or an experienced radio technician for help.

Federal Communication Commission (FCC) Statement

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- this device may not cause harmful interference and

- this device must accept any interference received, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

For body worn operation, this device has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the device a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Use & Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



shock and vibration
Don't drop your phone.

EU Declaration of Conformity

Hereby, Motorola declares that this phone is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC:

Radio Specifications:	
GSM Essential Requirements	EN 301 511: V9.0.2
Wideband 2.4 GHz Systems	EN 300 328: V1.7.1
EMC Specifications	
Common Technical Requirements	EN 301 489-1 V1.8.1
GSM Digital Cellular Radio	EN 301 489-7 V1.3.1
Radio Wideband Systems	EN 301 489-17 V2.1.1
Safety Specifications	
IT Equipment	EN 60950-1: 2009
Specific Absorption Rate (SAR)	EN 50360: 2008

- **EN60950-1:2006+A11:2009**
Safety of Information Technology Equipment
- **EN50360: (2001)**
Product standard to demonstrate the compliance of mobile phones with the basic restrictions related to human exposure to electromagnetic fields (300 MHz - 3GHz)
- **EN 300 328 V1.7.1: (2006-10)**
Electromagnetic compatibility and Radio spectrum Matters (ERM);

Wideband Transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using spread spectrum modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive

- **EN 301 511 V9.0.2: (2003-03)**

Global System for Mobile communications (GSM); Harmonized standard for mobile stations in the GSM 900 and DCS 1800 bands covering essential requirements under article 3.2 of the R&TTE directive (1999/5/EC)

- **EN 301 489-1 V1.8.1: (2008-04)**

Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part1: Common technical requirements

- **EN 301 489-7 V1.3.1: (2005-11)**

Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part7: Specific conditiona for mobile and portable radio and ancillary equipment of digital cellular radio telecommunications systems (GSM and DCS)

- **EN 301 489-17 V2.1.1: (2009-05)**

Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part17: Specific conditiona for 2.4 GHz wideband transmission systems and 5GHz high performance RLAN equipment

- **EN 50332-1/-2**

Sound pressure test

In Italy the end-user should apply for a license at the national spectrum authorities in order to obtain authorization to use the device for setting up outdoor radio links and/or for supplying public access to telecommunications and/or network services.


 
This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 - 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

CE 0168 

cs Český [Czech]	<i>[Jméno výrobce]</i> tímto prohlašuje, že tento <i>[typ zařízení]</i> je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
da Dansk [Danish]	Undertegnede <i>[fabrikantens navn]</i> erklærer herved, at følgende udstyr <i>[udstyrets typebetegnelse]</i> overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
de Deutsch [German]	Hiermit erkläre <i>[Name des Herstellers]</i> , dass sich das Gerät <i>[Gerätetyp]</i> in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
et Eesti [Estonian]	Käesolevaga kinnitab <i>[tootja nimi = name of manufacturer]</i> seadme <i>[seadme tüüp = type of equipment]</i> vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

en English 	Hereby, <i>[name of manufacturer]</i> , declares that this <i>[type of equipment]</i> is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
es Español [Spanish]	Por medio de la presente <i>[nombre del fabricante]</i> declara que el <i>[clase de equipo]</i> cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
el Ελληνική [Spanish]	ΜΕ ΣΗΝ ΠΑΡΟΤ?Α <i>[name of manufacturer]</i> ΔΗΛΩΝΕΙ ΟΣΙ <i>[type of equipment]</i> ?ΤΜΜΟΡΦΩΝΕΣΑΙ ΠΡΟ? ΣΙ? ΟΤ?ΙΩΔΕΙ? ΑΠΑΙΣΗ?ΕΙ? ΚΑΙ ΣΙ? ΛΟΙΠΕ? ?ΥΕΣΙΚΕ? ΔΙΑΣΑΞΕΙ? ΣΗ? ΟΔΗΓΙΑ? 1999/5/ΕΚ.
fr Français [French]	Par la présente <i>[nom du fabricant]</i> déclare que l'appareil <i>[type d'appareil]</i> est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
it Italiano [Italian]	Con la presente <i>[nome del costruttore]</i> dichiara che questo <i>[tipo di apparecchio]</i> è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian]	Ar šo <i>[name of manufacturer / izgatavotāja nosaukums]</i> deklarē, ka <i>[type of equipment / iekārtas tips]</i> atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Lietuvių [Lithuanian]	Šiuo [<i>manufacturer name</i>] deklaruoja, kad šis [<i>equipment type</i>] atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
[nl] Nederlands [Dutch]	Hierbij verklaart [<i>naam van de fabrikant</i>] dat het toestel [<i>type van toestel</i>] in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
[mt] Malti [Maltese]	Hawnhekk, [<i>isem tal-manifattur</i>], jiddikjara li dan [<i>il-mudel tal-prodott</i>] jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
[hu] Magyar [Hungarian]	Alulírott, [<i>gyártó neve</i>] nyilatkozom, hogy a [<i>... típus</i>] megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
[pl] Polski [Polish]	Niniejszym [<i>nazwa producenta</i>] oświadczam, że [<i>nazwa wyrobu</i>] jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
[pt] Português [Portuguese]	[<i>Nome do fabricante</i>] declara que este [<i>tipo de equipamento</i>] está conforme com os requisitos.
[sl] Slovensko [Slovenian]	[<i>Ime proizvajalca</i>] izjavlja, da je ta [<i>tip opreme</i>] v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Slovensky [Slovak]	Hierbij verklaart [<i>naam van de fabrikant</i>] dat het toestel [<i>type van toestel</i>] in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
 Suomi [Slovenian]	[<i>Valmistaja = manufacturer</i>] vakuuttaa täten että [<i>type of equipment = laitteen tyyppimerkintä</i>] tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
 Svenska [Sendish]	Härmed intygar [<i>företag</i>] att denna [<i>utrustningstyp</i>] står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products (“Accessories”) and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products (“Software”) to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to

new Motorola Products, Accessories, and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions (Products and Accessories)

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions (Software)

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones: 1-800-331-6456 Pagers: 1-800-548-9954 Two-Way Radios and Messaging Devices: 1-800-353-2729
Canada	All Products: 1-800-461-4575
TTY	1-888-390-6456

For **Accessories** and **Software**, please call the telephone number designated above for the product with which they are used.

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to

you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device’s telecoil (“T Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

Product Registration

Online Product Registration:

www.motorola.com/us/productregistration

Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Caring for the Environment by Recycling

This symbol on a Motorola product means the product should not be disposed of with household waste.



Disposal of your Mobile Device & Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. Do not dispose of your battery or mobile device in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling



Disposal of your Mobile Device Packaging & User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

California Perchlorate Label

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

Perchlorate Material – special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate

There is no special handling required by consumers.

Privacy & Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data

security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.
- **Secure personal information**—Your mobile device can store personal information in various locations including your SIM card, memory card, and phone memory. Be sure to remove or clear all personal information before you recycle, return, or give away your device. You can also backup your personal data to transfer to a new device.

Note: For information on how to backup or wipe data from your mobile device, go to www.motorola.com/support

- **Online accounts**—Some mobile devices provide a Motorola online account (such as MOTOBLUR). Go to your account for information on how to manage the account, and how to use security features such as remote wipe and device location (where available).
- **Location-based information**—Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones which are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola, and other third parties providing services.
- **Other information your device may transmit**—Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other

third-party servers. This information is used to help improve products and services offered by Motorola.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Smart Practices While Driving

Drive Safe, Call Smart

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas -- for example, handsfree use only. Go to www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.



- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies (wherever wireless phone service is available).
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number (wherever wireless phone service is available), as you would want others to do for you.
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number (wherever wireless phone service is available).

Motorola, Inc.
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048

www.hellomoto.com

Note: Do not ship your phone to the above address. If you need to return your phone for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© 2010 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 68000202648-A

U.S. patent Re. 34,976