 



Note: Your home screen might look a little different.

The home screen extends to give you room for adding shortcuts, widgets, and more. Flick the home screen left and right to see more panels or to add widgets or shortcuts.

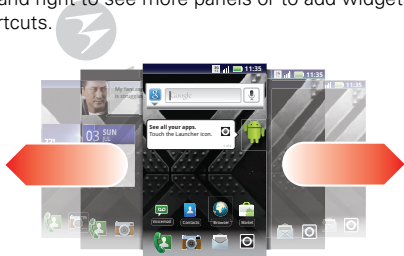



USE & CHANGE YOUR HOME SCREEN

On your home screen, *shortcuts* are icons that open your favorite apps, Web bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates right on your homescreen without having to open a separate application or web page.

Tip: From the home screen, touch Menu  > **Profiles** to design different home screens for **Work**, **Home**, or **Weekend**. Or, rename a label to whatever you like. Your changes are stored in each profile.

 
Flick the home screen left or right to open other *panels* of shortcuts and widgets.

- To **open** something, touch it. Touch Home  to return to the home screen.

Tip: When you open a widget, touch Menu  to see any options or settings (you can choose accounts for **Messages**, **Social Networking**, or **Calendar** widgets).

There's more about social networking widgets in "**YOUR SOCIAL NETWORKING ACCOUNT**" on page 32.

- To **resize** Motorola widgets, touch and hold a corner until you feel a vibration, then drag.
- To **add** something or change your wallpaper, touch and hold an empty spot until you see the **Add to Home screen** menu.

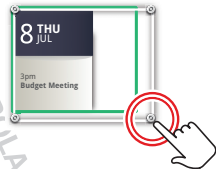


You can add a folder to organize your shortcuts.

Tip: To choose apps for the "hot seat" row of apps along the bottom of the home screen, first add the app as a shortcut. Then, touch and hold the shortcut and drop it on top of one of the three hot seat spots.

- To **move** or **delete** something, touch and hold it until you feel a vibration, then drag it to another

spot, another panel, or the trash at the top of the screen.

 
SEARCH









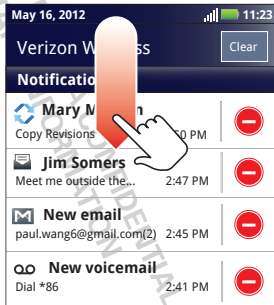







Touch Search , then use the window that appears.



SMARTPHONE STATUS & NOTIFICATIONS

The status bar at the top of the screen has icons that tell you about messages and smartphone status. To view your notifications, touch the status bar and drag it down. Touch a notification to select it.




	Bluetooth® active		network (full signal)
	GPS active		network (roaming)
	Wi-Fi® active		3G (fastest data)
	downloading		airplane mode
	vibrate		sync active
	silent		alarm set
	mute call		battery (charging)
	speakerphone active		battery (full charge)

Tip: To see today's date, touch the status bar at the top of the screen.



APPS & UPDATES

get the app you want

QUICK START: APPS & UPDATES

You can find all of your apps in one place. From the home screen, touch **Launcher icon**  to open the app menu.

Tip: From the app menu, touch **All apps** > **New group** to create special groups of apps or to see your most recently used apps.

To close the app menu, touch Home  or Back .


BROWSE & INSTALL APPS

Get all the fun games and cool apps you want! Android Market™ provides access to applications developed by developers worldwide, so you can find the app you want.

Find it: **Launcher icon**  >  **Market**

Scroll to and touch the app you want to install. Then, touch **Install** (if app is free) or **Buy**.


Tip: Find more apps by going to market.android.com on your computer.

Note: If you need help or have questions about Android Market, touch Menu  > **Help**.

RECENT APPS

Your smartphone remembers the apps that you used most recently. From the app menu, touch **All apps** > **Recent**.

MANAGE & RESTORE APPS

Find it: Menu  > **More** > **Settings** > **Applications** > **Manage applications**

Touch an app in the list, then touch **Uninstall** (for apps you downloaded), **Clear cache**, or other options.

To reinstall apps from Android Market, touch **Launcher icon**  >  **Market** > Menu  > **My apps**.

Previously installed apps are listed and available for download.

IMPORTANT CUSTOMER INFORMATION

Please be advised that many services and applications offered through this unique device are provided by Google™ and various application developers. If you use, link to or download a Google service, or an application such as a non-Verizon Wireless location based GPS-type service, chat room, marketplace or social network from this device, you should carefully review the terms of such service or application. If you use any of these non-Verizon Wireless services or applications, personal information you submit may be

read, collected, or used by the service or application provider and/or other users of those forums.

Motorola Mobility, Inc. and Verizon Wireless are not responsible for your use of those applications or information you choose to submit or share with others. Specific terms and conditions, terms of use, and privacy policies apply to those applications and services. Please review carefully any and all terms and conditions applicable to those applications and services including those related to any location-based services for any particular privacy policies, risks or waivers.


Your Verizon Wireless customer agreement terms and conditions and certain other specifically identified terms govern your use of any Verizon Wireless products and services.

UPDATE MY SMARTPHONE

You can check, download, and install smartphone software updates using your smartphone, or using your computer:

- Using your smartphone:

You may get an automatic notification of an available update on your smartphone. Simply follow the instructions to download and install.

To manually check for updates, touch Menu  > **More** > **Settings** > **About phone** > **System updates**.

Your smartphone downloads any updates over your mobile network. Remember, these updates can be quite large (25MB or more) and may not be available in all countries. If you don't have an unlimited data plan, or mobile network updates are not available in your country, you can update using a computer.

- Using your computer:

On your computer, go to www.motorola.com/support and check the "Software" links. If an update is available, follow the installation instructions.

CALLS

it's good to talk

SELECT A NETWORK

MOTOROLA XT875 switches effortlessly between CDMA, GSM 900, GSM 1800, and UMTS 2100 networks, so you can make calls in over 200 countries worldwide.

Note: To use your phone on a GSM or UMTS network, you need to insert a SIM card (see "**ASSEMBLE & CHARGE**" on page 3), supplied by Verizon Wireless® or a compatible GSM or UMTS network service provider.

To set your phone to roam globally:

 
Find it: Menu  > **More** > **Settings** > **Wireless & networks** > **Mobile networks** > **Network Mode** > **Global**

To manually switch your phone to a CDMA or GSM/UMTS network, see "**MANUALLY SWITCH NETWORK MODE (OUTSIDE THE U.S.)**" on page 45.

QUICK START: CALLS

DIALING OPTIONS

From the home screen, touch  **Dialer**.

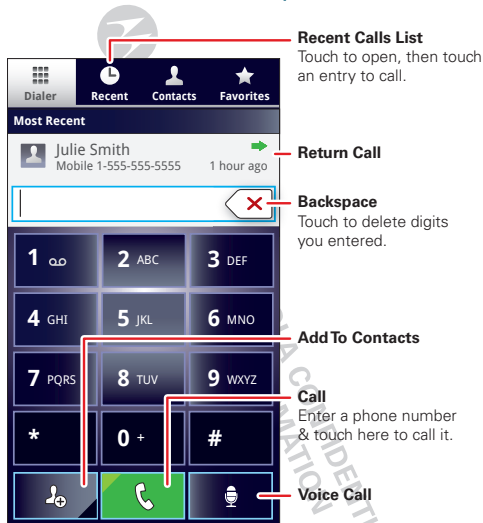

IN-CALL OPTIONS



During a call:

- To use a Bluetooth® device, touch **Bluetooth**. (The device must be turned on and previously paired—see “**CONNECT NEW DEVICES**” on page 39.)
- To mute a call, touch **Mute**.

- To use the speakerphone, touch **Speaker**.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Tip: You can touch Home (🏠) or Back (↶) to leave the active call display. To reopen it, touch Home (🏠) > 📞 **Dialer** > **Return to call in progress**.

MAKE & ANSWER CALLS

To make a call, touch 📞 **Dialer**, enter a number, then touch 📞.

Tip: If the screen is locked, drag 🔒 to the right.

 
To answer a call while the display is active, touch **Answer**. When the display is not active, answer by dragging 📞 to the right.

To ignore a call, touch **Ignore**.

Note: Your smartphone includes a proximity sensor. When you hold the smartphone to your ear, the display goes dark to prevent accidental touches. When you move your smartphone away from your ear, the display lights up again.

END CALLS

Touch **End Call**.

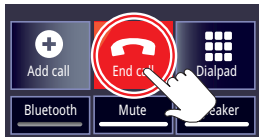

MAKE CALLS (OUTSIDE THE U.S.)

Your phone has an assisted dialing feature that makes dialing easy. For local calls, just dial the local number. For international calls, dial the country code, the area code (if applicable), then the phone number.

RECENT CALLS

Find it: **Dialer** > **Recent**

- To call a number, touch it.
- To send a text message, create a contact, view a contact, or other options, touch and hold an entry.
- To clear the list, touch Menu > **Clear list**.

FREQUENT CALLS

Find it: **Dialer** > **Favorites**

- To call a number, touch it.

- To send a text message, view a contact, or other options, touch and hold an entry.
- To add a contact to Favorites, select the contact, and touch the star in the upper right corner. The star turns green.

CONFERENCE CALLS

To start a conference call, call the first number. After the call connects, touch **Add Call**. Dial the next number, or select it from contacts or favorites. When the next number answers, touch **Merge calls**.


YOUR SMARTPHONE NUMBER

Find it: Menu > **More** > **Settings** > **About phone** > **Status** > **My Phone number**

EMERGENCY CALLS

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your smartphone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Touch **Dialer** (if your smartphone is locked, touch **Emergency Call**).

- 2 Enter the emergency number.
- 3 Touch  to call the emergency number.

Note: Your mobile device can use GPS and AGPS signals to help emergency services find you. See “GPS & AGPS” in your legal and safety information.

COOL DOWN

 
In very limited circumstances, such as where your phone has been exposed to extreme heat, “Cool Down” message screens will appear. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in “Cool Down” mode, only emergency calls can be made.

CONTACTS

contacts like you've never had before

QUICK START: CONTACTS

Find it:  **Contacts**

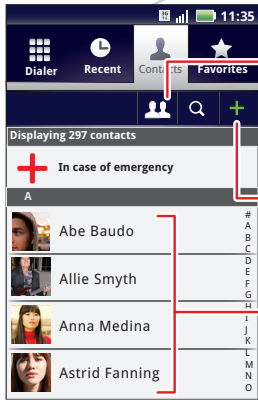


Group

Create and view groups of contacts.

Create Contacts

Contacts List

Touch to view contact information. Touch & hold to call, send a text message, & more.

Tip: To search the list, touch and hold Menu  to open a touchscreen keypad, then type a name. Or, touch a letter of the alphabet on the right to go directly to that letter.

CALL OR EMAIL CONTACTS

Find it:  **Contacts**

For **View contact**, **Call contact**, **Text contact**, or other options, touch and hold the contact.


VIEW & USE CONTACTS

When you set up a social networking account (see “**SOCIAL NETWORKING**” on page 32), you’ll know what everybody’s up to and when. Every time you pick up a call, check a message, or look up a friend’s contact info, sure, you’ll see their name and number, but you can see their social network status and smiling face, too.

Find it:  **Contacts**

Touch a contact to open its details. While viewing details, you can start a call or message by touching a phone number or other info.

SORT CONTACTS


To sort contacts or set display options, touch Menu  > **Display options** and touch:

- **Only contacts with phones:** hide email-only contacts.
- **Sort list by:** sort by first or last name.
- **View contact names as:** view contacts as first name or last name first.

- **Choose contacts to display:** select which source to use contacts from.

CREATE CONTACTS

Find it:  **Contacts** > Menu  > **Add contact**

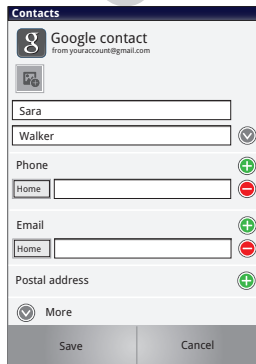


Touch any entry area to open the touchscreen keypad. When you’re finished, touch **Save**.

Where are contacts saved? Your smartphone saves new contacts in its memory and on the Google Server

or Backup Assistant™, if you have a subscription. It also updates your social networking account.

EDIT OR DELETE CONTACTS

Find it:  **Contacts**

Touch the contact, then touch Menu  > **Edit** or **Delete**.


SYNCHRONIZE CONTACTS

When you change one of your contacts, your smartphone automatically updates your other social networking accounts. Likewise, if you change a social networking friend, your smartphone updates your contacts.

GROUPS

Find it:  **Contacts** >  > 

You can put your **Contacts** into groups that you create (like “friends,” “family,” or “work”). Then, you can find contacts faster by showing one group at a time.

 
Tip: Touch Menu  to choose which groups to show (like **All** or **Favorites**).

MESSAGING

sometimes it's best to text, or IM, or email . . .

QUICK START: MESSAGING

Find it: Launcher icon  >  **Messaging**
> **Universal Inbox**

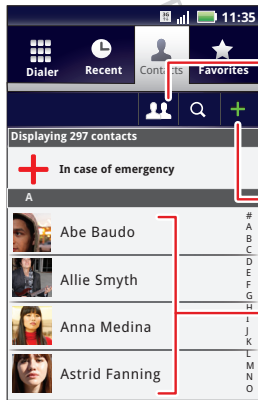

Group

Create and view groups of contacts.

Create Contacts

Contacts List

Touch to view contact information. Touch & hold to call, send a text message, & more.

Tip: To see more messages, flick or drag up.