 


## CAMCORDER SETTINGS

In the viewfinder, touch Menu  > **Settings** to open the camcorder menu and adjust settings like **Video Resolution**, **Shutter Animation**, **Focus Options**, and more.

## VIEW PHOTOS & VIDEOS

**Find it:** Launcher icon  >  **Gallery**

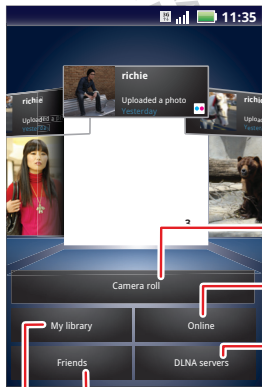

View your captured photos & videos.

See your online albums (like Picasa, Flickr, or Facebook).

See media from DNLA Connected devices on your Wi-Fi network.

Go to your friends' online albums.

Sort your photos & videos.

## SHARE PHOTOS & VIDEOS

**Find it:** Launcher icon  >  **Gallery**

- 1 Touch a photo or video, then touch .
- 2 Choose how you want to share—like **Bluetooth**, **Email**, **Text Messaging**, or an online album.

## MANAGE PHOTOS & VIDEOS

**Find it:** Launcher icon  >  **Gallery**

Touch a thumbnail image from your camera roll or library, then:

- To delete the photo or video, touch Menu  > **Delete**.
- To set the photo as a contact picture, social network profile picture, or wallpaper, touch Menu  > **Set as**.

**Tip:** To copy photos to/from a computer, go to “**USB CONNECTION**” on page 43.

## EDIT PHOTOS & VIDEOS

**Find it:** Launcher icon  >  **Gallery** > *picture* > Menu  > **Edit**

You can choose advanced editing features to resize, crop, or change the color.

## MUSIC

 
*when music is what you need...*

**Note:** Copyright—do you have the right? Always follow the rules. See “Content Copyright” in your legal and safety information.

### QUICK START: MUSIC

**Find it:** Launcher icon  >  **Music**

Touch a category, then touch the song or playlist you want to play. Touch Menu  > **Party shuffle** to randomly play all your songs, or touch **Search** to find a song.

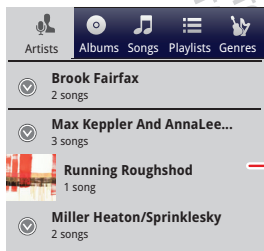

#### Categories

Touch to select music by artist, album, song, or playlist.

#### Last Played

Touch to play again.

**Tip:** When a song is playing, you can add it to a playlist by touching Menu  > **Add to playlist**.

## SET UP MUSIC

### WHAT MUSIC TRANSFER TOOLS DO I NEED?

To put music on your computer and then load it on your smartphone, you need:

- Microsoft® Windows® computer or Apple® Macintosh™.
- USB data cable (included with your smartphone).
- optional microSD memory card (sold separately).

Your smartphone supports removable microSD memory cards up to 32GB capacity. To make sure your memory card is installed, go to “**ASSEMBLE & CHARGE**” on page 3.

**Tip:** To see the available memory on your memory card, touch Menu  > **More** > **Settings** > **SD card & Phone storage**.

### WHAT AUDIO FILE FORMATS CAN I PLAY?

Your smartphone can play many types of files: AAC, AMR, MP3, WAV, WMA, AAC+, and MIDI.

### WHAT HEADPHONES CAN I USE?

Your smartphone has a 3.5mm headset jack for wired stereo listening (required for FM radio). You can also go wireless with Bluetooth® stereo headphones or speakers (see “**BLUETOOTH® WIRELESS**” on page 39).

## GET MUSIC

 
Transfer music from your computer to your smartphone using a USB cable. See “**USB CONNECTION**” on page 43 to learn how.

Or, download your favorite music from V CAST Music.

**Find it:** Launcher icon  >  **V CAST Music**

## PLAY MUSIC

Touch a song or playlist to start playing music.

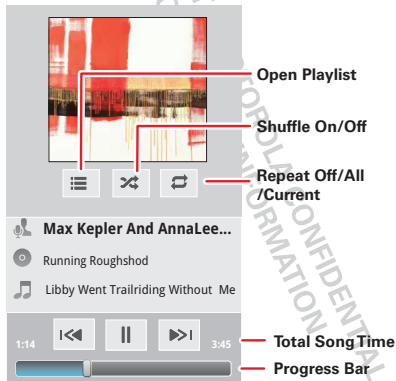

Use these music player controls:

- **Play/pause**—Touch .
- **Previous/next**—Touch .
- **Fast forward/rewind**—Touch and hold .
- **View playlist**—Touch .
- **Shuffle**—Touch .
- **Repeat**—Touch .
- **Volume**—Press the side volume keys.
- **View library**—Touch Menu  > **Library**.
- **Manage speakers**—Touch Menu  > **Audio effects**.
- **Add to playlist**—Touch Menu  > **Add to playlist**.
- **Set as ringtone**—Touch Menu  > **Use as ringtone**.
- **Delete**—Touch Menu  > **Delete**.

## HIDE, WAKE, TURN OFF

Touch Home  to use another app. Your music continues to play.

When you see  in the status bar, a song is playing. Flick down to see details. Touch the song to return to the music controls.

To turn off your music, touch .

## PLAYLISTS

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist, or touch **New** to create one.

To add a song to the playlist you're playing, touch Menu  > **Add to playlist** in the music player.

To edit, delete and rename playlists, touch and hold the playlist in the music library.

## SOCIAL NETWORKING

*my life, your life*

### YOUR SOCIAL NETWORKING ACCOUNT

Integrate and sync all your contacts, emails, and social networking sites. No opening and closing apps and menus. Just touch the **Social Networking** and **Social Status** widgets on your home screen.

**Tip:** Use the gallery to view all of yours and your friends' online albums. Touch **Launcher icon**  >  **Gallery**.

### ADD ACCOUNTS

You can add your **Facebook**, **MySpace**, **Twitter**, or other accounts to your social networking account. If you don't have accounts on these sites, visit their Web sites to set them up.

For email accounts, see "**SET UP MESSAGING**" on page 19.

**Find it:** **Launcher icon**  >  **My Accounts** > **Add account**

Add an account by touching it. Then enter your user name and password for that account.

When you sign into social networking accounts, you'll see your friends and contacts in your **Contacts** list, and

your status and updates can appear in your **Social Networking** widget.

**Twitter and MySpace messages** will always appear as “read” on your smartphone, but your smartphone notifies you when you receive a new message. MySpace marks your messages as “read” online.

**Tip:** To download updates faster, use “**Wi-Fi**” on page 40.

## EDIT & DELETE ACCOUNTS

**Find it:** Launcher icon  >  **My Accounts**

Touch and hold an account, then touch **Open account** to edit it, or touch **Remove account** to remove it (along with its contacts and messages).

 
**Note:** You can't delete the Google™ account you used or created when you set up your smartphone.

## WEB

*surf the web with your smartphone*

## QUICK START: BROWSER

**Find it:**  **Browser**

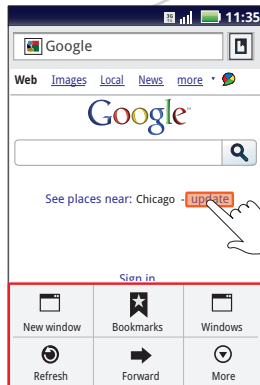

Touch a link to select it. Touch and hold for more options.

Touch  for browser options.

**Tip:** To zoom, touch the display with two fingers, then move them apart.

## CONNECT

Your smartphone uses the mobile phone network (over the air) or a Wi-Fi connection to automatically access the Web.

**Note:** Your service provider may charge to surf the Web or download data.

To use a wireless network, touch Menu  > **More** > **Settings** > **Wireless & networks**. Touch **Wi-Fi** to turn it on and touch **Wi-Fi settings** to search for nearby wireless networks. Touch a network to connect.

**Note:** If you can't connect, contact your service provider.

## PLAY WEB VIDEOS

The browser features the Adobe® Flash® Player, which adds animation, video, and interactivity to web pages. Touch  to begin video playback. Double-tap the video during playback to enlarge it for better viewing.

## BROWSER OPTIONS

Touch Menu  to see browser options:

| options           |                            |
|-------------------|----------------------------|
| <b>New Window</b> | Open a new browser window. |

### options

|                                                                                                  |                                                   |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------|
| <b>Bookmarks</b>                                                                                 | See your bookmarks.                               |
| <b>Windows</b>  | View the browser windows that are currently open. |
| <b>Refresh</b>                                                                                   | Reload the current page.                          |
| <b>Back/Forward</b>                                                                              | Go to previously viewed pages.                    |
| <b>More</b>                                                                                      | View additional browser options.                  |

## YOUTUBE™

Share videos with YouTube users everywhere. You don't need a YouTube account to browse and view videos.

**Find it:** Launcher icon  >  **YouTube**

**Note:** If you want a YouTube account, go to [www.youtube.com](http://www.youtube.com). To create an account or sign in, touch Menu  > **My account**. To **Browse** or **Upload** videos, touch Menu .

# PERSONALIZE

*add your personal touch*

## WIDGETS

### ADD WIDGETS

- 1 Touch and hold the empty spot on your screen.

**Tip:** You can flick left or right to open other panels on your home screen.

- 2 Touch **Motorola widgets** or **Android widgets** and choose a widget.

### SET UP WIDGETS

You can customize some widgets. Touch a widget to open it, then touch Menu .

Your home screen may already have these widgets:

- **Messages:** Change the widget name or choose how long it shows new messages. To add email accounts, “**SET UP MESSAGING**” on page 19.
- **Music:** Set this widget to an artist, album, song, playlist, or just touch Menu  > **Shuffle all**. There’s more about “**MUSIC**” on page 30.
- **News:** Change the widget name, choose how long it shows new stories, or choose a news source. To choose a source, touch , then choose preset

**Bundles** or **Channels**, or choose **Custom** to enter a URL for a **Webpage** or an **RSS feed**.

- **Weather:** Change temperature units or add locations. To add locations, touch , enter a city, and touch **Search**. When you open the weather widget, flick left to see other locations you added.

## SHORTCUTS

To add shortcuts for apps, bookmarks, and more to the home screen, touch and hold an empty spot on the home screen, touch **Shortcuts**, and select a shortcut.

**Tip:** To change one of the docked shortcuts that always appears at the bottom of the home screen (no matter what panel you’re viewing), touch and hold the shortcut.

## RINGTONES

To personalize your ringtones:

**Find it:** Menu  > **More** > **Settings** > **Sound** > **Phone ringtone** or **Notification ringtone**

To set your vibrate options:

**Find it:** Menu  > **More** > **Settings** > **Sound** > **Vibrate**

To set a song as a ringtone:

**Find it:** **Launcher icon**  > **Music** and play the song, then touch Menu  > **Use as ringtone**

**Note:** To choose from thousands more songs, visit [verizonwireless.com/ringtones](http://verizonwireless.com/ringtones).

## WALLPAPER

To apply a new wallpaper:

- 1 Touch and hold an empty spot on your home screen.
- 2 Touch **Wallpapers**.
- 3 Touch **Gallery**, **Live wallpapers**, or **Wallpapers**, and choose a wallpaper.

## SOUNDS

- To play dial pad tones, touch Menu  > **More** > **Settings** > **Sound** > **Audible touch tones**.
- To play sound on a screen selection, touch Menu  > **More** > **Settings** > **Sound** > **Audible selection**.
- To customize the sound settings for media and videos, touch Menu  > **More** > **Settings** > **Sound** > **Media audio effects**.

## DISPLAY SETTINGS

- To set display brightness, touch Menu  > **More** > **Settings** > **Display** > **Brightness**.

- To set orientation, touch Menu  > **More** > **Settings** > **Display** > **Auto-rotate screen**.
- To set animation, touch Menu  > **More** > **Settings** > **Display** > **Animation**.

**Note:** Some apps are designed so that your smartphone can “animate” them by rotating, fading, moving, and stretching one or more images.

## DATE & TIME

Set date, time, time zone, and formats:

**Find it:** Menu  > **More** > **Settings** > **Date & time**

## LANGUAGE & REGION

Set your menu language and region:

**Find it:** Menu  > **More** > **Settings** > **Language & keyboard** > **Select locale**



- 2 Touch **Select from Contacts**, then touch a contact.  
Or, touch **Add via email address**, then enter an email address.

- 3 Touch **Yes**.

If your friends already use Google Latitude, they'll receive an email request and a notification. If they have not yet joined Google Latitude, they'll receive an email request that invites them to sign in to Google Latitude with their Google account.

To remove friends:

- 1 Touch Menu  > **Latitude** to show your friend's list, then touch a friend in your list.

- 2 Touch **X**.

## SHARE LOCATION

When you receive a request to share location details you can choose to:

- **Accept and share back**—See your friend's location, and your friend can see yours.
- **Accept, but hide my location**—See your friend's location, but they can't see yours.
- **Don't accept**—Location information is not shared between you and your friend.

## HIDE YOUR LOCATION

To hide your location from a friend, touch Menu  > **Latitude** to show your friend's list. Touch your contact name, then touch Menu  > **Edit privacy settings** > **Hide your location**.

## TURN OFF GOOGLE LATITUDE

Touch Menu  > **Latitude** to show your friend's list.  
Touch Menu  > **Edit privacy settings** > **Turn off Latitude**.