


FACEBOOK™

what's your status?

See what your friends are up to, and share your status right from your home screen. To access **Facebook**, press  on your keypad.

Note: If you don't have a Facebook account, you can visit their website to set one up.

UPDATE YOUR STATUS

After you set up a **Facebook** account, you can sign in, update and see your current status, and see and respond to friends' updates.

MESSAGING

sometimes it's best to text or email...

CREATE & SEND MESSAGES

Find it: Menu >  **Messaging** > **Write message**


Use the keypad to enter your message. Press **Options** to insert a picture, sound, or video.


When you finish composing the message, press **Options** > **Send to**, then:

- To enter a phone number, select **Enter recipient**, type the number, then press **Options** > **Done**.
- To enter a contact, select **Add from Phonebook**.

To send the message, press **Options** > **Send** and select the SIM card to use.


RECEIVE A MESSAGE

When you receive a message, your phone plays an alert and shows the new message indicator  at the top of the screen.

To read messages stored in your inbox, press **Menu** >  **Messaging** > **Inbox**.


EMAIL

SET UP AN ACCOUNT

Find it: Menu >  **Messaging** > **Email** press **Options**
> **Email accounts** > **New account**

The email setup wizard will guide you through setting up your email account.

CREATE A NEW EMAIL











Find it: Menu >  **Messaging** > **Email** press **Options**
> **Write Email**

Use the keypad to enter a subject and enter your message, then press **Options** > **Send**.

TEXT ENTRY

think keyboard, now think smaller

Use the keypad to enter text and create messages or notes. Indicators at the top left of the text screen show the current text entry mode.





To...	
Enter symbols chosen from a list	Press Alternate  then Symbols 
Enter alternate characters at the top of the keys	Press Alternate 
Enter only alternate characters, until you press Alternate  again	Press Alternate  twice
Enter one capital letter	Press Shift 
Enter only capital letters, until you press Shift  again	Press Shift  twice
Delete characters to the left of the cursor	Press Delete 
Start a new line	Press Enter 

To **change** the keypad text entry mode, press **Options**
> **Input method**:

Entry modes	
abc	Enter letters in the text field.
Numeric	Enter numbers in the text field.
Insert symbol	Select a symbol to insert.



TIPS & TRICKS

a few handy hints

To...	
Return to home screen	Press Power/End  .
See recent incoming & outgoing calls	Press Menu >  Call center > Call history .
Create a new contact in your phonebook	Enter a phone number, press Options > Save to Phonebook .
Adjust sound volume during a call	Press  left/right.
Set app menu style	View the app menu as a Matrix or List : Press Menu >  Settings > Phone settings > Display > Main menu style .

BATTERY TIPS

Want to extend your battery life? Try these:

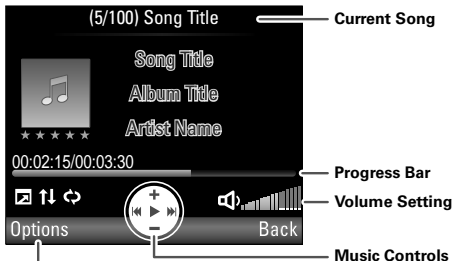
- Turn off Bluetooth™ power: Press **Menu** >  **Settings** > **Connectivity** > **Bluetooth** > **Power** > **Off**.
- Reduce the time your phone display stays on: Press **Menu** >  **Settings** > **Phone settings** > **Misc. settings** > **LCD backlight**, and set **Time (sec)** to a lower setting.

MUSIC

when music is what you need...




PLAY MUSIC

Find it: Menu >  Multimedia > Media player



Select to view song/playlist details, change settings, or exit media player.

MEDIA PLAYER CONTROLS

Controls	
play/pause	Press  .
previous/next	Press  left/right.
fast forward/ rewind	Press and hold  left/right.
volume	Press  up/down.


To set **Shuffle**, **Repeat**, and more, press **Options** > **Settings** > **Player settings**.

GET MUSIC

You can transfer music from your computer to your phone using a USB connection. See “**USB DRAG & DROP**” on page 38.

Note: Copyright—do you have the right? Always follow the rules. See “**CONTENT COPYRIGHT**” on page 58.


CREATE PLAYLISTS

To **create** a new playlist, press **Menu** >  **Multimedia** > **Media player** > **Playlists**, then press **Options** > **New**.

To **add** a song or video to a playlist, open it and press **Options** > **Add**.

To **delete** or **rename** a playlist, highlight it and press **Options**.

HIDE AND TURN OFF

Press Power/End  to use another app. Your media continues to play. For example, if you use the **FM radio**, the media player is turned off.

To turn off your media, press **Menu** >  **Multimedia** > **Media player** > **Now playing**, then press **Options** > **Exit**.

RADIO



news and music on the go

Listen to news and music anywhere, for free.

Find it: Menu >  **Multimedia > FM radio**

Note: The FM radio only works when a headset is plugged in.

RADIO CONTROLS

Controls	
tune stations	Press  left/right.
volume	Press  up/down.
turn off radio	Press Options > Power off.

RADIO PRESETS

To **auto search and save** preset stations, press **Options > Auto search.**

To **manually save** preset stations, press **Options > Channel list**, highlight an empty preset location and press **Options > Edit**, then enter the **Channel name** and **Frequency.**


To **go to** a preset station, press the channel number. Or, you can press **Options > Channel list**, highlight the channel number, and press **Options > Play.**

PHOTOS

see it, capture it, share it!

TAKE & SHARE PHOTOS

Take that family photo, and send it to everyone.

Find it: Menu >  **Camera**

Your phone shows the camera viewfinder.

Press  left/right to increase/decrease exposure.




Press  up/down to zoom in/out.

Press  to take a photo.

Select to return to the home screen.


Select to switch to photo album or video recorder, or to adjust camera settings.

Note: **Image size** is 2 MP, unless you change it.

To **see photos** you've taken, go to the camera viewfinder screen and press , then select **Switch to > Photo album**.


Press , then:

- To **send** the photo in a message, email, or over a Bluetooth™ connection, select **Send**.
- To **edit** the photo, select **Edit**.
- To **delete** the photo and return to the viewfinder, select **Delete**.

To **record a video**, go to the camera viewfinder screen and press , then select **Switch to > Video recorder**.

WEB


surf the web with your phone

Note: To use the browser, you need to have data service activated for your account (additional fees may apply for this service). To select which SIM card to use when you browse, press **Menu** >  **Settings** > **Connectivity** > **Data connection SIM**.

Use your phone's browser to surf your favorite web sites, upload videos to a video blog, and download files and applications to your phone. Log onto your internet-based email account to check your email.

Find it: **Menu** >  **Services** > **Internet service**

To...	
Go to your home page	Select Homepage .
Go to a web page	Select Input address .
Bookmark a web page	Press Options > Add to Bookmarks .
Go to a link on a web page	Select the link.

Note: If you can't connect, contact your service provider. To turn data service on or off, press **Menu** >  **Settings** > **Connectivity** > **Data service** > **On/Off**.

PERSONALIZE

add your personal touch

PROFILES

Customize ringtones, alerts, and volumes for each profile.

Find it: Menu >  **User profiles**


You can select these profiles:

Profiles	
General	Standard profile default setting.
Silent	Ringtone is off, vibrate is off.
Outdoor	Ringtone and key tone volume are set to maximum.
Indoor	Ringtone is on, vibrate is off.
Vibration	Vibrate is on.
Headset	Adjust profile settings for when a wired headset is plugged into your phone.
Bluetooth	Adjust profile settings for when a Bluetooth™ headset is connected to your phone.

To **change** a profile's settings, press **Options** > **Customize**. You can adjust these settings:

Settings	
Tone settings	Set ringtones for incoming calls, messages, key tones, and other events.
Volume	Set the volume for ringtones and key tones.
Alert type	Set to Ring only , Vib. only , Vib. and ring , Vib. then ring , or Silent .
Ring type	Set to Single , Repeat , or Ascending .
Extra tone	Play an extra tone for Warning , Error , Camp on , and Connect .
Answer options	Set to answer calls by pressing any key.

DISPLAY SETTINGS

To set display options such as wallpaper and home screen appearance, press **Menu** >  **Settings** > **Phone settings** > **Display**.

DATE & TIME

Set date, time, time zone, and formats:

Find it: **Menu** >  **Settings** > **Phone settings** > **Time and date**

LANGUAGE

Set menu language:

Find it: **Menu** >  **Settings** > **Phone settings** > **Language**