



MOTOROLA

EN

MOTOSMART™

LIFE.  POWERED.

CONGRATULATIONS

MOTOSMART™

Your MOTO**SMART** smartphone with DUAL CHIP gives you music and the Internet in your pocket.

- **Music Dashboard:** Seamlessly synchronize easy access to all your favorite music, see “**DASHBOARD**” on page 45.
- **High speed Internet:** Browse the web and pinch-to-zoom on the high resolution touch display in “**WEB**” on page 38.
- **MotoSwitch:** MotoSwitch is a dynamic interface that gives you seamless access to content relevant to you. For details, see “**MOTOSWITCH**” on page 10.
- **Dual SIM slot:** No need to change SIM cards—use two at the same time.

Note: Certain apps and features may not be available in all countries.

Caution: Before assembling, charging, or using your smartphone for the first time, please read the important safety, regulatory and legal information provided with your product.



This product meets the applicable SAR limits of 1.6 W/kg (FCC & IC) and 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety

margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the regulatory information packaged with your product.

Note: When using the product while worn on your body, either use an approved accessory such as a holster or maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with SAR requirements. Note that the product may be transmitting even if you are not making a phone call.

WANT MORE?

More help, more accessories, more free stuff. We're here to help.

- **Updates:** Smartphone updates, PC software, user's guides, online help, and more at www.motorola.com/support.
- **Accessories:** Find more for your smartphone at www.motorola.com/products.
- **Social:** The latest news, tips & tricks, videos, and so much more—join us on:



YouTube™ www.youtube.com/motorola



 
Facebook™ www.facebook.com/motorola



Twitter www.twitter.com/motomobile

YOUR SMARTPHONE

the important keys & connectors

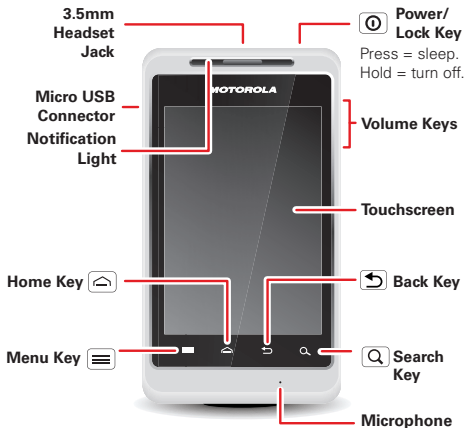

CONTENTS

LET'S GO	5
TOUCHSCREEN & KEYS	9
HOME SCREEN	14
APPS & UPDATES	18
PERSONALIZE	22
CALLS	25
CONTACTS	29
MESSAGING	32
TEXT ENTRY	36
WEB	38
LOCATION	40
PHOTOS & VIDEOS	42
MUSIC	45
CONNECTIONS	49
SECURITY	53
TOOLS	55
TROUBLESHOOTING	57
SAFETY, REGULATORY & LEGAL	58

LET'S GO

let's get you up and running

ASSEMBLE & CHARGE

1 Cover off



2 SIM in



SIM



microSIM



microSIM
+ Adapter

 
3 microSD in (optional)



4 Battery in



5 Cover on



6 Charge up




Caution: Please read “**BATTERY USE & SAFETY**” on page 58.

SET UP & GO

Note: This smartphone supports apps and services that use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.

When you turn on your new smartphone, you can create or enter a Google™ account so that you can download apps, use Gmail™, and much more:

1 Press and hold the Power/Lock Key  to turn on your smartphone.




**Power/
Lock Key**
Press = sleep.
Hold = turn off.



2 Touch the Android™ icon to begin setup.


3 Touch to **Create** a Google account, **Sign in** with one you have, or **Skip**.

You can log into your account from a computer at www.accounts.google.com.

4 When your smartphone confirms the account, it shows account sync options.


- Touch the Google account name, to choose whether to sync your Google account's contacts, Gmail™, and calendar.

- To add another account, touch Menu  > **Accounts & sync** > **Add account**. For details, see “**EMAIL**” on page 33.
- To exit setup, touch Home .

If your smartphone cannot connect, touch Menu  > **Settings** > **Wireless & networks** to change mobile network settings.

WI-FI CONNECT

Use a Wi-Fi network for even faster Internet access. Touch the status bar at the top of the home screen and drag it down. Touch the **Wi-Fi networks available** notification to select a preferred network.

You can also touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings** to search for and connect to wireless networks. There's more in “**CONNECTIONS**” on page 49.


COOL CONTENT & MORE

Browse and download thousands of the coolest apps on the planet from Android Market™.

Download new apps with “**BROWSE & INSTALL APPS**” on page 18. An optional microSD memory card can be installed in your smartphone—you can load it up with photos, videos, and music from your computer (see “**CONNECTIONS**” on page 49).

ACTIVATE SIM CARDS

Your smartphone supports two SIM cards. When two SIM cards are installed, you can activate one or both.

- 1 From the home screen, touch Menu  > **Settings** > **SIM management**, and select **Slot 1**, **Slot 1** or **both**.
- 2 Set **Voice call, messaging, data connection, roaming and contacts & SIM** to **SIM 1** or **SIM 2**.


Note: If only one SIM card is installed, it is activated by default.


Note: Only **SIM 1** supports 3G data network.

TOUCHSCREEN & KEYS

a few essentials

SLEEP & WAKE UP

Your screen sleeps when you hold it to your ear during a call, or when it is inactive. To change the sleep delay, touch Menu  > **Settings** > **Display** > **Screen timeout**.

To **unlock** the screen, drag  to the outer circle.

Tip: To access all your favorite apps from a lock screen, see “**MOTOSWITCH**” on page 10.



MOTOSWITCH

Jump right to your favorite apps from the lock screen!

To set up your lock screen apps:




Your favorites.

Touch & hold between the two rings to show your most used apps at the bottom.

Drag to scroll.

Most used apps. Drag an app to the outer ring to add it to your favorites.

Tip: To **delete** an app from this screen, touch and hold between the two rings, then drag the app icon to the trash icon .

 
To **go to a favorite app** from the lock screen, drag the app towards the lock icon .

Note: For apps that turn on/off by a toggle, such as **Bluetooth** or **Flight Mode**, the screen will remain locked.


TOUCH TIPS

It's all in the touch:

- **Touch:** Choose an icon or option.
- **Touch & Hold:** Show options.
- **Drag:** Scroll or move slowly.
- **Flick:** Scroll or move quickly.
- **Zoom:** Slide fingers apart or together to zoom in or out on Google Maps™, web pages, or photos.

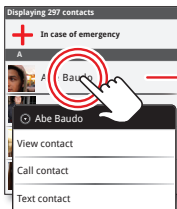

Touch & hold
to show options.

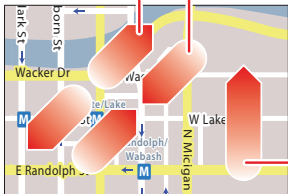 




Slide two fingers
apart or together
to zoom in or out.

Drag or flick to scroll.


KEY TIPS

 
MENU, HOME, BACK, & SEARCH

Touch Home  to close any menu or app and return to the home screen. In the home screen, touch and hold Home  to show the most recent apps used, then touch an app to open it.


Touch Menu  to open menu options.

Touch Back  to go back.

Touch Search  for text search, or touch and hold for voice search.

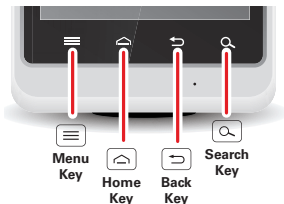

POWER KEY MENU

Press and hold the Power/Lock Key  to open the power key menu, where you can turn off your smartphone (**Power off**), **Reboot** your smartphone, or turn **Airplane mode** or **Silent mode** on and off.