


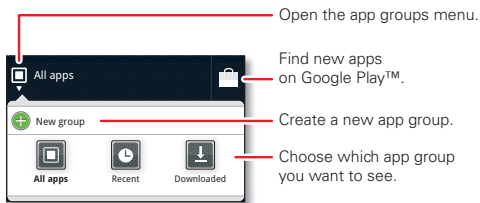 
APPS & UPDATES



get the app you want

QUICK START: APPS & UPDATES

You can find all of your apps in one place. From the home screen, touch  to open the app menu. To see all of your apps, flick up and down.

From the app menu, touch  **All apps** to view or create app groups.



To close the app menu, touch Home  or Back .

BROWSE & INSTALL APPS

Get all the fun games and cool apps you want! Google Play™ provides direct access to apps, games and books that you can download and install on your phone.



Find it:  >  **Play Store**

Scroll to and touch the app you want to install. Then, touch **Install** (if app is free) or **Buy**.

New apps that you install are added to the app menu.

Note: When installing an app, make sure you read the alerts that tell you what information the app will access. If you don't want the app to have access to this information, don't install it.

RECENT APPS


Your phone remembers the apps that you used most recently. From the home screen, touch and hold Home  to show the most recent apps. Or, touch  > **Recent**.

UPDATE MY PHONE

You can check, download and install phone software updates using your phone or your computer:

- Using your phone:

You may get an automatic notification of an available update on your phone. Simply follow the instructions to download and install.

To manually check for updates, touch Menu  > **Settings** > **About phone** > **System updates**.

 
 
 
 
 
Your phone downloads any updates over your mobile network. Remember, these updates can be quite large (25 MB or more) and may not be available in all countries. If you don't have an unlimited data plan, or



mobile network updates are not available in your country, you can update using a computer.

- Using your computer:

On your computer, go to www.motorola.com/support and check the "Software" links. If an update is available, follow the installation instructions.



 
PERSONALISE

add your personal touch

QUICK START: PERSONALISE



Customise your phone's sounds and appearance to make it unique to you:

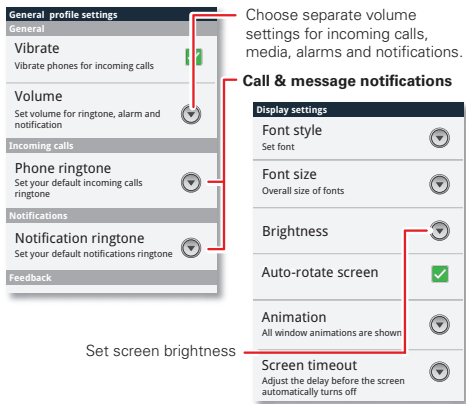Find it: Menu  > **Settings** > **Audio profiles** or **Display**.




To show quick settings from the home screen, touch Menu  > **Settings** > Menu  > **Quick settings**:

 


- To change your quick settings, touch Menu  > **Edit**.
- To return to advance settings, touch Menu  > **Advance settings**.

LANGUAGE & REGION

Set your menu language and region:


Find it: Menu  > **Settings** > **Language & keyboard** > **Select language**.



CALLS

it's good to talk

QUICK START: CALLS

 
From the home screen, touch .



Call.



Start a conference call.

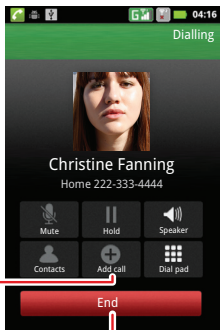Open a list, then touch an entry to call.












Hang up.

- To **make** a call, touch , enter a number, then touch .


When dialling, touch Menu  to add a pause (pauses two seconds), or wait (waits for your confirmation). To enter the international dialling code, touch and hold .

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

- To **answer** a call, touch  and flick to .
- **During** a call, touch Menu  to switch to a Bluetooth **headset** (see "**CONNECTIONS**" on page 39). Touch Home  or Back  to hide the active call display (to reopen it, touch .
- To use the **speakerphone** during a call, touch **Speaker**.
- To **enter numbers** during a call, touch **Dial pad**.
- To **mute** or **unmute** a call, touch **Mute**.
- To put a call on **hold**, touch Menu  > **Hold**.
- To **end** a call, touch **End**.
- To **ignore** an incoming call, touch  and flick to .

EMERGENCY CALLS

Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

- 1 Open the phone, then touch  (if your phone is locked, touch **Emergency call**).
- 2 Enter the emergency number.
- 3 Touch **Call** to call the emergency number.

Note: Your phone can use location based services (GPS and AGPS) to help the emergency services find you. See "**LOCATION SERVICES**" in your legal and safety information.

COOL DOWN

 
In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see "Cool down" messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in "Cool down" mode, only emergency calls can be made.




CONTACTS

contacts like you've never had before

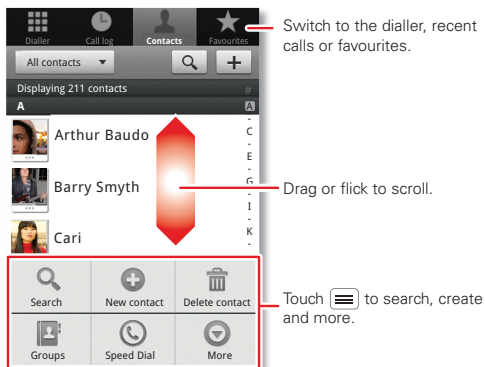

QUICK START: CONTACTS







From the home screen, touch  **Phone > Contacts**.



- To **create** a contact, touch  **Phone > Contacts > Menu  > New contact**, choose where you want to store the contact, then enter details (to close the display keyboard, touch Back ).

Contacts shows the contacts from your Google™ account, which you can open from any computer at


www.contacts.google.com (or open your contacts within www.mail.google.com). To stop synchronising with your account, touch  **Phone** > **Contacts** > Menu  > **More** > **Accounts**, touch your Google account, then deselect **Sync contacts**.

 
- To **call**, **text** or **email** a contact, touch  **Phone** > **Contacts**, touch the contact, then touch  (call),  (text) or  (email).
- To **edit** or **delete** a contact, touch  **Phone** > **Contacts**, touch the contact, then touch Menu  > **Delete contact**.

MESSAGING



sometimes it's better to text or email...


QUICK START: TEXT MESSAGING

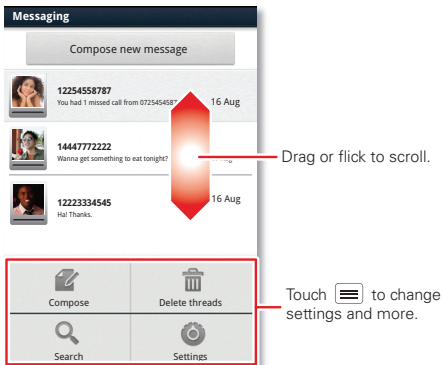
From the home screen, touch  **Messaging**.




Tip: To see more messages, flick or drag up.


- To **create** a text message, touch  **Messaging** > **Compose new message**. For options like attaching files, touch Menu .






- To **open** text messages, touch  **Messaging**, then touch the sender's name.

When you see  in the status bar at the top of your screen, flick down the status bar and touch the new message to open it.


- To **respond** to a text message, just touch it and enter your response in the text box at the bottom.
- To **forward, copy** and more, touch  **Messaging**, touch the sender's name, then touch and hold the message.

EMAIL

- To **set up Google** or **Corporate** (Microsoft™ Exchange server) accounts, touch Menu  > **Settings** > **Accounts & sync** > **Add account**. For details, contact the account provider.

To set up other email accounts (not Gmail™ or Microsoft™ Exchange), touch  >  **Email** and follow the wizard. To add more standard accounts, open  **Email** and touch Menu  > **Accounts** > Menu  > **Add account**. For details, contact the account provider.

- To **open** email, touch  >  **Email** or  **Gmail**. Touch a message to open it.

Tip: Touch Menu  for options like **Refresh** or **Search**.