



MOTOROLA **i485**

CONGRATULATIONS

MOTOROLA I485

Get the convenience of push-to-talk calls together with a sleek design in an affordable package.

- **Private Calls:** Stay in touch with your family, friends, and colleagues with the simple touch of a button.
- **My Phone, My Way:** It's your phone—make it that way. Customize your home screen with personal pictures, and change wallpapers and ringtones.

Caution: Before using your phone, please read the safety, regulatory and legal information provided with your product.

SAR This product meets the applicable SAR limits of 1.6 W/kg (FCC & IC) and 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the regulatory information packaged with your product.

MORE INFORMATION

On your computer—Go to www.motorola.com/support

YOUR PHONE

the important keys & connectors



Note: Your phone might look a little different.

CONTENTS

MENU MAP	4
LET'S GO	5
BASICS	7
CALLS	11
PUSH-TO-TALK	13
SDG CALLS	15
WEB	16
TEXT ENTRY	17
CONTACTS	19
MESSAGING	20
PERSONALIZE	23
CAMERA	25
MULTIMEDIA	26
BLUETOOTH™ WIRELESS	29
MEMORY CARD	31
TOOLS	33
SECURITY	37
TROUBLESHOOT	39
SAFETY, REGULATORY & LEGAL	40

MENU MAP

MAIN MENU

Recent Calls

Contacts

- [New Contact]
- [New SDG List]
- [New Msg Group]

Settings

Web

- Net

Multimedia

- Media Center
- My Images
- My Music
- My Videos
- Camera
- Camcorder
- Ring Tones
- VoiceRecord

Push To Talk

- Call Alert
- PT Manager
- Quick PTT
- PTT Options
- PTT Help

Games and Apps

- Alarm Clock Plus
- My Images
- My Music
- My Videos
- Calculator Suite
- Download Apps
- iHelp
- Java System
- Memory Card

Tools

- My Info
- Profiles
- Alarm Clock Plus
- Bluetooth
- GPS
- Datebook
- Call Timers
- Memo

Messages

- [Create Message]
- Voice Mail
- Inbox
- Drafts
- Outbox
- Sent Items
- Fax Mail
- Net Alert

This is the standard main menu layout.
Your phone's menu may be different.

LET'S GO

let's get you up and running

ASSEMBLE & CHARGE

1

Remove battery cover.



2

Insert SIM with gold contacts facing down.



SIM



micro SIM



SIM & Adapter

3

Insert optional memory card.



4

Insert battery.




5


Replace battery cover.




TURN IT ON & OFF

To turn on your phone, press and hold Power/End  for a few seconds or until the display turns on. If prompted, enter your four-digit unlock code.




Note: If you press Power/End  for more than four seconds, the phone will turn on in **Transmitters Off** mode.

To turn off your phone, press and hold Power/End .

ENABLE SECURITY

You will need to enable security the first time you turn on your phone or within 10 days of using your phone.

- 1 Press **Ok**.
- 2 You are prompted to enable security. Press **Yes** and follow the on-screen instructions.
- 3 Press Power/End  to return to the home screen.





BASICS

ABOUT THIS GUIDE

This guide shows how to locate a menu feature as follows:

Find it: Menu  >  **Settings** > **Phone Calls**

This means that, from the home screen:

- 1 Press the Menu key  to open the main menu.
- 2 Press the navigation keys to scroll to the  **Settings** menu option, and press  to select it.
- 3 Press the navigation keys to scroll to **Phone Calls**, and press  to select it.

HOME SCREEN







Your phone shows the *home screen* when you are not on a call or using the menu.



Note: Your home screen might look a little different.

Soft key labels in the home screen show the current soft key functions.


Status indicators appear at the top of your phone's display.

Indicators	
 Signal Strength	 No Service
 Active Phone Line	 New Message
 Speaker On	 Packet Data
 Speaker Off	 Battery Level
 Ringer Off	 Bluetooth™ On
 Vibrate All	 New Voicemail

CAROUSEL MENU

Get quick access to your favorite applications, right on your home screen.



OPEN APPLICATIONS

- 1 Press the Navigation Key left or right until you highlight the desired application.
- 2 Press  to launch the application.



Note: Availability of the Carousel is dependent on your service provider.

CHOOSE APPLICATIONS

Customize the Carousel with your most often used applications.

Find it: Menu  >  **Settings** > **Personalize** > **Carousel**

AUTO HIDE

To hide the Carousel when not in use, press Menu  >  **Settings** > **Personalize** > **Carousel** > **Auto Hide**.

ADJUST VOLUME

Press the volume keys up or down to:


- change the earpiece volume during calls
- change the ringer volume from the home screen
- turn off a call alert before answering the call



Tip: On the home screen, press and hold the volume key down until your phone vibrates to set your ringer to **Vibrate All**.

NAVIGATION KEY

Press the navigation key up, down, left, or right to scroll to items.

When you highlight an item, press  to select it.



TRANSMITTERS

Consult with airline staff about the use of the **Transmitters Off** feature during a flight. Turn off your phone whenever instructed to do so by airline staff.

Find it: Menu  >  **Settings** > **Advanced** > **Transmitters** > **Off**


Transmitters Off turns off your phone's calling and Bluetooth features in situations where wireless phone use is prohibited. You can use the phone's other non-calling features when the transmitters are turned off.


Note: Select **Transmitters Off** to disable all wireless services. You can still make emergency calls.


CALLS

it's good to talk

MAKE & ANSWER CALLS

Enter a number, then press Talk .

To answer a call, press Talk .


To end a call, press Power/End .



HANDSFREE


Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.


During a call:

- To use the speakerphone, press **Speaker**.
- To connect a Bluetooth device, press Menu  > **Use Bluetooth**.

RECENT CALLS

Find it: Menu  >  **Recent Calls**

Tip: When you are in the home screen, you can press Talk  to go to **Recent Calls**.


The recent calls list contains information about the last 20 calls you made and received. To see call details, highlight an entry and press .

EMERGENCY CALLS



Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked.

Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

1 Enter the emergency number.

2 Press Talk  to call the emergency number.

Note: You can't make emergency calls while the keypad is locked, or if the phone shows a No Service message.

To unlock the keypad, press Menu  > .

Note: Your phone can use location based services (GPS and AGPS) to help emergency services find you. See "**LOCATION SERVICES**" on page 47.

COOL DOWN

In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see "Cool Down" messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in "Cool Down" mode, only emergency calls can be made.

PUSH-TO-TALK



one or more, talk to them all

PRIVATE CALLS

Private calls are push-to-talk calls between two people.


MAKE AND ANSWER PRIVATE CALLS

To **make** a private call:


- 1 Enter the recipient's PTT number.
- 2 Press Menu  >  **Contacts**, and select a contact that has a PTT number.

To **talk**, press and hold the PTT Button. To **listen**, release the PTT Button.

To **answer** a private call, press the PTT Button after the caller has stopped talking.

To **end** a private call, press Power/End  or do nothing. The call will end after a few seconds.

PUSH-TO-TALK SPEAKER

You can listen to push-to-talk calls through your phone's speaker or earpiece. Press Speaker  to turn the speaker on or off.



CALL ALERTS

Use call alerts to tell someone you want to speak to them.

To **send** a call alert:

- Enter a Private ID, and press **Alert**. When prompted, press the PTT Button.
- Press **Contacts**, and highlight a contact containing a Private ID. Press **Alert**, and press the PTT Button when prompted.

When you **receive** a call alert, you can:

- **Answer:** Press the PTT Button to begin a private call with the sender.
- **Queue:** Press **Queue** to store the call alert to the call alert queue.
- **Clear:** Press **Clear** to dismiss and delete the call alert.

Note: Call alerts will automatically be moved to the queue after a few minutes of inactivity. You won't be able to make phone calls or private calls until the call alert is moved, or you've chosen one of the options above.

TURN OFF A CALL ALERT

You can press the volume keys to turn off a call alert before answering the call.

SDG CALLS

Need to talk to more than one person at a time? With SDG (Selective Dynamic Group) calls you can talk to up to 20 people at a time.

Note: SDG calls may not be available from your service provider. To store groups on your phone you need a group-call-capable SIM card. Contact your service provider for more information.

CREATE SDG LISTS IN CONTACTS

Find it: Menu  >  **Contacts**

- 1 Select **[New SDG List]**.
- 2 To assign a name to the SDG list, enter the name.
- 3 Add Private IDs.
- 4 Press **Save**.

MAKE SDG CALLS

- 1 In Contacts or the recent calls list, scroll to or select the SDG list you want.
- 2 Press the PTT Button.

WEB


Find it: Menu  >  **Web** > **Net**

Note: Your service provider may charge you to surf the web or to download data.



GO TO A WEB SITE

- 1 From the home page, select **Go to URL**.
- 2 Press **Edit**.
- 3 Enter the web address and press **Done**.
- 4 Press **Option** and select **accept** to go to the website.

ADD A BOOKMARK

While on a website, press and hold Menu  > **Bookmark Page**. Name the bookmark and select **Save**.












OPEN A BOOKMARK

While on a website, press and hold Menu  > **View Bookmarks**. Highlight a bookmark and press , or press its number on the keypad.


TEXT ENTRY


Your phone provides convenient ways to enter text.

TYPING TIPS

To...	
Enter symbols .	Press  .
Enter alternate characters at the tops of keys	Press  .
Enter several alternate characters, until you press  .	Press and hold  until  appears in status bar.
Enter one capital letter.	Press  .
Enter only capital letters, until you press  .	Press and hold  until  appears in status bar.
Delete a character (hold to delete more).	Press  .
Start a new line (email or text messaging).	Press  .

CHANGE CHARACTER INPUT MODE

- 1 On a screen where you can enter text, press Menu  to change the character input mode.
- 2 Select an option:

Option	
Alpha	Enter words a single letter at a time.
Word	Predicts words as you enter text. Press the Navigation Key right to accept a word. If incorrect, press and hold the Navigation Key down for other options. Highlight a word and press  to select.
Text Input Settings	Select desired entry language and Word Prediction features.
Insert	Select a file or photo to attach. Note: Only available with MMS.

CONTACTS


STORE A PHONE NUMBER OR PRIVATE ID

Find it: Menu  >  **Contacts** > **[New Contact]**

- 1 Enter a name (up to 20 characters) for the new contact.
- 2 Select a ringtone.
- 3 Select a type for the contact (**Mobile**, **Private1**, **Private2**, **Work1**, **Work2**, **Home**, **Email1**, **Email2**, **Fax**, **Pager**, **Talkgroup**, **SDG**, **Msg Group**, **IP**, or **Other**).
Choose **Private1** or **Private2** to store a Private ID.
- 4 Enter the number for the contact and press **Save**.

CALL A STORED PHONE NUMBER OR PRIVATE ID

Find it: Menu  >  **Contacts**

- 1 Scroll to the contact.
- 2 If the contact has more than one number, scroll left or right to find the number you want (**Mobile**, **Private1**, **Work1**, **Work2**, or **Home**).
- 3 For a phone number, press Talk  to begin a call. For a Private ID, Talkgroup ID, or SDG list, press and hold the PTT Button to start a call.


MESSAGING

Find it: Menu  >  **Messages**

You can send an SMS or Multimedia Messaging Service (MMS) message depending on your service provider.


CREATE & SEND MESSAGES

Find it: Menu  >  **Messages** > **[Create Message]**

1 Enter a phone number and press , or press **Search** to select a contact or recent call.

2 Enter your message in the **Message** field.


3 Or add a picture, sound, or quick note:

- Quick notes are short, pre-written phrases. Press **QNotes** to enter a quick note.
- To insert pictures, sounds (audio files), or voice recordings into the body of your message, press Menu  > **Insert** > **Insert Picture, Insert Audio, Insert Video, Capture Video, Capture Picture, Record Voice, or Record Video.**


Note: To remove an item from a message, highlight it and press **Delete**.

- To attach a file to the end of your message, select **....MORE....** > **Attach** > **[New Attach]** > **Browse Pictures, Capture Picture, Browse Audio, Record Voice, Browse Video, Record Video.**

Note: You can only attach pictures and audio files if they're not forward locked or DRM-protected.


Tip: To remove an attachment, select **Attach**. Highlight the attachment to remove, and press Menu  > **Unattach**.

Note: You can't attach or insert files in SMS messages.

- 4 When finished, press .
- 5 To send the message, press **Send**.

RECEIVE MESSAGES

- To view the message, press **Read**.
- To dismiss the message notification, press **Exit**.

To read your messages later, press Menu  > ::

 **Messages** > **Inbox**.

MESSAGE GROUPS

You can create a message group to send messages to a group of up to 20 contacts.

Note: Your service provider may not support this feature.

CREATE MESSAGE GROUPS

Find it: Menu  >  **Contacts** > **[New Msg Group]**

1 Select **[Add Member]** and select the contacts you want to add to the group.

2 When you're finished press **Done**.

3 Enter a name for the group in the **Name** field.

Note: If you don't name the group, it will be named **Msg Group** followed by the number of group members. For example, **Msg Group (3)**.

4 Press **Save**.

VOICEMAIL

To receive voicemail, you'll need to contact your service provider to set up a voicemail account.

RECEIVING A MESSAGE

To listen to the message, press **Call**.

To dismiss the notification, press **Back**.

To listen to your messages later, press Menu  >



 **Messages** > **Voice Mail**.

PERSONALIZE

RINGTONES

Find it: Menu  >  **Multimedia** > **Ring Tones**

- 1 Make sure **Vibrate All** is set to **Off**.
- 2 Scroll through the list of ringtones and select one to assign. **Vibrate** sets your phone to vibrate instead of making a sound. **Silent** sets your phone to neither vibrate nor make a sound.
- 3 Select the features, such as **Messages**, you want to assign the ringtone to.
- 4 When you're finished press **Done**.

Note:  appears if the phone is set to **Silent**.  appears if the phone is set to **Vibrate All**.

SET TO VIBRATE

You can set your phone to vibrate for all calls and alerts.

Find it: Menu  >  **Multimedia** > **Ring Tones** > **Vibrate All**

Set this option to **On** or **Locked**.

To turn the ringer on when **Vibrate All** is set to **On**, press the volume key up. To turn the ringer on when **Vibrate All** is set to **Locked**, press and hold the volume up key until the phone vibrates, then press the volume key up again.


BACKLIGHT

Set the amount of time the backlight remains on or turn it off to extend battery life.

Find it: Menu  >  **Settings** > **Display/Info** > **Backlight**

WALLPAPER

Find it: Menu  >  **Settings** > **Display/Info** > **Wallpaper**

- 1 Select **Wallpaper**.
- 2 Scroll through the list of pictures and press  to select a picture.

You can set the wallpapers to change automatically by selecting **Auto Cycle**.

MENU LANGUAGE

Find it: Menu  >  **Settings** > **Display/Info** > **Language**

PROFILES



Your phone has different profiles. You can customize ringtones, display settings, call settings, volume, and call filters.

Find it: Menu  >  **Tools** > **Profiles**


CAMERA

TAKE PHOTOS


Find it: Menu  >  **Multimedia** > **Camera**

- 1 Aim the camera lens and press the navigation key up to zoom in or down to zoom out. To change the picture size, press the navigation key left or right.
- 2 Press **Capture** or press  to take the picture.
- 3 To save the picture to memory, press Menu  and select **Save** to store, press **Discard** to delete it, or you can press **Send** to send it in an MMS message.

SHARE

To send the picture you've just taken via Bluetooth, PTT, or MMS message, press Menu  > **Send Via ...**

CAMERA OPTIONS

To set camera options such as **Zoom**, **Picture Quality**, and **Picture Size**, press Menu .


MULTIMEDIA

MY MUSIC



PLAY MUSIC FILES

Find it: Menu  >  **Multimedia** > **My Music**

To play a **Song, Album, Playlist, Genre, or Artist**, highlight it and press **Play**.


To view the contents of an **Album, Playlist, Genre, or Artist**, highlight it and press .

MUSIC PLAYER CONTROLS

Options	
Play/Pause	To play a song press  . To pause a song, press  .
Next/ previous song	Press press the Navigation key right (next) or left (previous).
Fast Forward/ Rewind	Press and hold the Navigation key right (Fast Forward) or left (Rewind).

PLAYLISTS

Find it: Press Menu  >  **Multimedia** > **My Music** > **Playlists** > **[Create New]**

To add a song to the Favorites playlist, highlight it and press Menu  > **Add To Favorites**.