


**INSTRUCTION MANUAL**

A preliminary draft copy of the Users Manual follows:

# Welcome

---

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola 125t wireless phone.

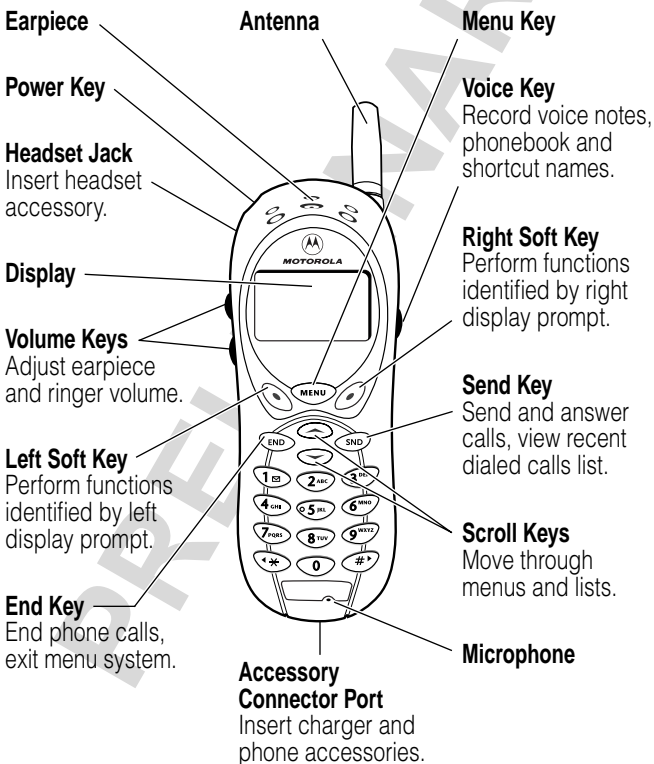

Personal Communications Sector  
600 North U.S. Highway 45  
Libertyville, Illinois 60048

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States)

1-800-461-4575 (Canada)

[www.motorola.com](http://www.motorola.com) (United States)

[www.motorola.ca](http://www.motorola.ca) (Canada)

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. TrueSync, Sidekick, Starfish, and the Stylized Starfish Logo are registered trademarks of Starfish Software, Inc., a wholly owned independent subsidiary of Motorola, Inc. All other product or service names are the property of their respective owners.

© 2002 Motorola, Inc. All rights reserved.

### **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number: 6809450A20-O

Cover number: 8988485L49-O

# Menu Map

## Main Menu

- Recent Calls
  - Received Calls
  - Dialed Calls
  - Notepad
  - Call Times
- Phonebook
- Datebook
- Quick Dial
- Radio
- Messages
  - Create Message
  - Voiceemail
  - Inbox
  - Quick Notes
  - Outbox
  - Drafts
- Ring Styles
  - Style
  - Style Detail
  - My Tones
- Shortcuts
- Voice Notes
- Browser
- Calculator
- Games
- Settings  
(see next page)

This is the standard phone menu layout. You or your service provider may have changed the menu layout or changed some feature names. Not all features may be available for all users.

For example, the **Radio** feature on the main menu (left) is displayed only when the optional FM Stereo Radio Headset accessory is plugged into the accessory connector port on your phone (see phone illustration, page 1).

Shortcuts
<b>Change display zoom:</b> Press <b>MENU</b> , then press and hold <b>MENU</b>
<b>Change ringer alert:</b> Press down volume key to switch to vibrate alert, then silent alert. Press up volume key to reset ring alert.
<b>Display my phone number:</b> Press <b>MENU</b> <b>#*</b>
<b>Go to dialed calls list:</b> Press <b>SND</b>
<b>Exit menu system:</b> Press <b>END</b>
<b>Open phonebook:</b> Press <b>down</b>
<b>Create phonebook entry:</b> Press <b>up</b>

# Settings Menu

## Phone Status

- My Tel. Number
- Active Line
- Battery Meter
- Other Information

## Connection

- Incoming Call

## In-Call Setup

- In-Call Timer
- Answer Options

## Security

- Phone Lock
- Lock Keypad
- Lock Application
- Talk Secure
- Restrict Calls
- New Passwords

## • Other Settings

### Personalize

- Main Menu
- Keys
- Greeting
- Quick Dial

### Initial Setup

- Time and Date
- Backlight
- Zoom
- TTY Setup
- Scroll
- Animation
- Language
- Battery Save
- Contrast
- DTMF
- Master Reset
- Master Clear

### Network

- Car Settings
- Headset

# Contents

---

<b>Menu Map</b> .....	3
<b>About This Guide</b> .....	10
<b>Safety and General Information</b> .....	11
<b>Getting Started</b> .....	17
What's in the Box? .....	17
Installing the Battery .....	17
Charging the Battery .....	18
Turning Your Phone On .....	19
Making a Call .....	20
Ending a Call .....	20
Answering a Call .....	20
Seeing Your Phone Number .....	21
<b>About Your Phone</b> .....	22
Using the Display .....	22
Zooming In and Out .....	24
Adjusting Volume .....	24
Battery Use .....	25
<b>Making and Answering Calls</b> .....	27
Redialing a Number .....	27
Using Caller ID .....	27
Using Talk Secure .....	27
Returning an Unanswered Call .....	28
Calling an Emergency Number .....	28
Turning Off a Call Alert .....	29
Canceling an Incoming Call .....	29
Calling With Speed Dial .....	30
Calling With One-Touch Dial .....	30

Calling a Number In a Text Message . . . . .	30
Additional Calling Features . . . . .	31
<b>Using Features While On a Call.</b> . . . . .	32
Using Call Waiting . . . . .	32
Making a Three-Way Call . . . . .	32
Additional On-Call Features . . . . .	33
<b>Using the Menu.</b> . . . . .	34
Navigating to a Feature. . . . .	34
Selecting a Feature Option . . . . .	35
Entering Feature Information . . . . .	36
<b>Entering Text.</b> . . . . .	38
Choosing a Text Mode . . . . .	38
Using Tap Method . . . . .	39
Using Symbol Mode . . . . .	42
Using iTAP™ Software Predictive Text Entry Method . . . . .	43
<b>Menu Feature Descriptions</b> . . . . .	47
<b>Recent Calls</b> . . . . .	58
Viewing Received Calls or Dialed Calls . . . . .	58
Using the Notepad . . . . .	60
Viewing and Resetting Call Timers . . . . .	60
<b>Phonebook</b> . . . . .	63
Viewing Entry Details . . . . .	63
Storing a Phonebook Entry . . . . .	64
Storing a PIN Code With the Phone Number . . . . .	66
Recording a Voice Name For a Phonebook Entry . . . . .	68
Dialing a Phonebook Entry . . . . .	69
Editing a Phonebook Entry . . . . .	70
Deleting a Phonebook Entry . . . . .	70
Setting the Primary Number for a Phonebook Entry. . . . .	70
Checking Phonebook Capacity . . . . .	71
Sorting the Phonebook List. . . . .	72

<b>Datebook</b> .....	74
Week View .....	74
Day View .....	75
Event View .....	75
Adding a Datebook Event .....	76
Changing Event Information .....	76
Copying an Event .....	77
Deleting an Event .....	78
Synchronizing with TrueSync Software .....	78
<b>Radio</b> .....	79
Turning the Radio On and Off .....	79
Tuning a Station .....	80
Storing a Preset .....	80
Selecting a Preset .....	80
Sending and Receiving Calls With the Radio On .....	80
<b>Messages—Voicemail</b> .....	82
Storing Your Voicemail Number .....	82
Receiving a Voicemail Message .....	83
Listening to a Voicemail Message .....	83
<b>Messages—Text</b> .....	84
Setting Up the Text Message Inbox .....	84
Receiving a Text Message .....	85
Reading, Locking, or Deleting a Text Message .....	86
Storing Sounds .....	89
Sending a Text Message .....	89
Sending a Quick Note Text Message .....	91
Viewing the Status of Sent Text Messages .....	92
<b>Ring Styles</b> .....	94
Selecting a Ring Style .....	94
Customizing a Ring Style .....	94



Creating Alert Tones . . . . .	96
Setting Reminders . . . . .	103
<b>Shortcuts</b> . . . . .	104
Standard Shortcuts . . . . .	104
Creating a Shortcut . . . . .	105
Using Shortcuts . . . . .	106
<b>Voice Notes</b> . . . . .	107
Recording a Voice Note . . . . .	107
Viewing the Voice Notes List . . . . .	108
Playing a Voice Note . . . . .	109
Locking and Unlocking a Voice Note . . . . .	111
Deleting a Voice Note . . . . .	112
<b>Micro-Browser</b> . . . . .	113
Starting a Micro-Browser Session . . . . .	113
Interacting With Web Pages . . . . .	113
Downloading Sounds . . . . .	114
<b>Calculator</b> . . . . .	115
Calculating Numbers . . . . .	115
Converting Currency . . . . .	117
<b>Games</b> . . . . .	118
Playing a Game . . . . .	118
Blackjack . . . . .	118
Falling Numbers . . . . .	120
Video Poker . . . . .	121
<b>Adjusting Your Settings</b> . . . . .	123
Reordering Menu Items . . . . .	123
Customizing a Soft Key Function . . . . .	123
TTY Operation . . . . .	124
Hands-Free Use . . . . .	126

<b>Data Calls</b> .....	130
Making a Cable Connection .....	130
Synchronizing Data .....	132
Sending a Data Call .....	132
Receiving a Data Call .....	133
<b>Security</b> .....	135
Assigning a New Code or Password .....	135
If You Forget a Code or Password .....	136
Locking and Unlocking Your Phone .....	137
Locking and Unlocking Your Keypad .....	138
Restricting Calls .....	138
Activating Talk Secure .....	140
<b>Troubleshooting</b> .....	141
<b>Programming Instructions</b> .....	150
<b>Specific Absorption Rate Data</b> .....	152
<b>Additional Health and Safety Information</b> .....	154
<b>Warranty</b> .....	162
<b>Product Registration</b> .....	167
<b>Export Law Assurances</b> .....	167
<b>Index</b> .....	168
<b>Wireless Phone Safety Tips</b> .....	179

# About This Guide

---


This user guide introduces you to the many features in your Motorola wireless phone.

## Navigating To a Menu Feature

Use the menu system to access your phone's features. This guide shows you how to select a menu feature as follows:

### Find the Feature

 > Messages  
> Create Message

This example shows that you must press , scroll to and select **Messages**, then scroll to and select **Create Message**.

## Optional Features



This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

## Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.

# **Safety and General Information**

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.  
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information contained in user guides published prior to July 2000. For information regarding radio use in a hazardous atmosphere please refer to the Factory Mutual (FM) Approval Manual Supplement or Instruction Card, which is included with radio models that offer this capability.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## ***RF Operational Characteristics***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy. The phone operates in the frequency range of 824 MHz to 849 MHz in analog and digital mode.

When you communicate with your phone, the system handling your call controls the power levels at which your phone transmits. The output power level typically may vary over a range from 0.00 watts to \_\_\_\_ watts in analog mode and 0.00 watts to \_\_\_\_ watts in digital mode.

## ***Exposure To Radio Frequency Energy***

Your Motorola phone is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
- National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation-Human Exposure) Standard 1999

To assure optimal phone performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:

## ***Portable Phone Operation and EME Exposure***

### ***Antenna Care***

**Use only the supplied or an approved replacement antenna.**

Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

**Do NOT hold the antenna when the phone is in use.** Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

### ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone. **Speak directly into the microphone.**

## ***Body-Worn Operation***

To maintain compliance with FCC/Health Canada RF exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this product. Use of non-Motorola-approved accessories may exceed FCC/Health Canada RF exposure guidelines. If you do not use one of the Motorola-supplied or approved body-worn accessories, and are not using the phone held in the normal use position, **ensure the phone and its antenna are at least one inch (2.5 centimeters) from your body when transmitting.**

## ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, **position the phone and its antenna at least one inch (2.5 centimeters) from your body.**

## ***Approved Accessories***

For a list of approved Motorola accessories, visit our website at [www.mot.com](http://www.mot.com).

## ***Electromagnetic Interference/Compatibility***

**Note:** Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

## ***Facilities***

To avoid electromagnetic interference and/or compatibility conflicts, turn off your phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

## ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

## ***Medical Devices***

### **Pacemakers**

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, the United States Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## ***Safety and General Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- give full attention to driving and to the road.
- use hands-free operation, if available.
- pull off the road and park before making or answering a call if driving conditions so require.

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a portable phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless the phone is a model specifically identified as being "Intrinsically Safe." Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.



## ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

## ***Operational Cautions***

### ***Antennas***

**Do not use any portable phone that has a damaged antenna.** If a damaged antenna comes into contact with your skin, a minor burn can result.

### ***Batteries***

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

ITC01-101

# Getting Started



## What's in the Box?

Your wireless phone typically comes equipped with a battery and a charger. Other accessory options can customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

## Installing the Battery


You must install and charge the battery to use your phone.



Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.


### Do This

- 1 Remove the battery from its protective clear plastic case.
- 2 If necessary, slide down the battery door release latch and lift the door off of the phone.

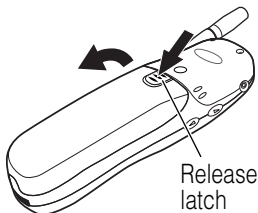

**Do This**

- 3 Insert the battery, printed arrows first, into the top of the battery compartment and push down.

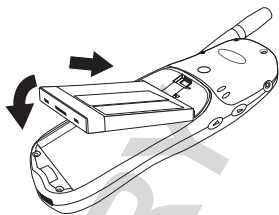


- 
- 4 Replace the battery door.
- 
- 

## ***Charging the Battery***

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery, as indicated by the following instructions. Some batteries perform best after several full charge/discharge cycles.

**Do This**

- 1 Plug the travel charger into your phone with the release tab facing up.

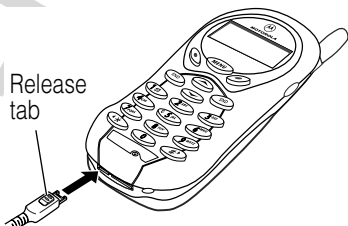

- 
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
  - 3 When your phone indicates that the battery is fully charged (**Charge Complete**), press the release tab and remove the travel charger.
- 
-

## Notes:

- When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete.
- If the battery charge drops too low, your phone may power off during a call, even when the charger is connected. To avoid this possibility, do not make calls while charging the battery.




## Turning Your Phone On

### Do This


### To

- 1 Press and hold  turn on your phone

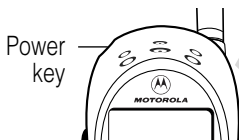

- 2 If necessary, enter your four-digit unlock code and press OK 

unlock your phone  
The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.

**Note:** At startup, you are given the option to personalize your phone. Select YES  to set personal phone options,

or **NO** (⓪) to go to the idle display. For more information, see “Personalize” on page 53.



## Making a Call

Press	To
1 keypad keys	dial the phone number
	<b>Tip:</b> If you make a mistake, press <b>DELETE</b> (⓪) to delete the last digit, or press and hold <b>DELETE</b> (⓪) to clear all digits.
2 <b>SND</b>	make the call

## Ending a Call

Press	To
<b>END</b>	end the call

## Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
<b>SND</b> or <b>ANSWER</b> (⓪)	answer the call

**Tip:** If your phone is locked, you must unlock it to answer the call.

# Seeing Your Phone Number

Press



To

see your phone number




Getting Started

PRELIMINARY



# About Your Phone


See page 1 for a basic phone diagram.
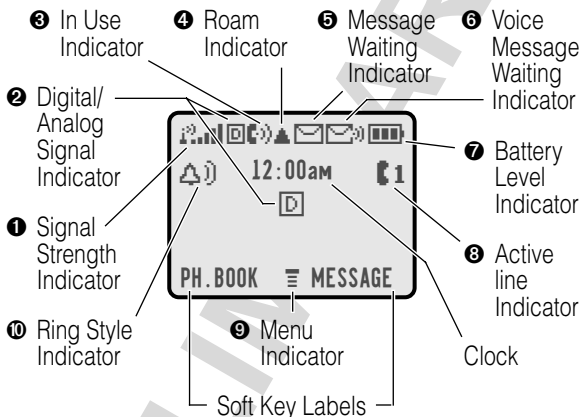
## Using the Display



The *idle display* is the standard display that you see when you are *not* on a call or using the menu.

Labels at the bottom corners of the display show the current soft key functions. A  (menu) indicator at the bottom center of the display indicates that you can press  to enter the main menu.

**1 Signal Strength Indicator** Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator is displayed.



**2 Digital (D) or Analog (A) Signal Indicator** Shows whether you are receiving a digital or analog signal.

**3 In Use Indicator** Shows that a call is in progress.



**4 Roam Indicator** Shows that your phone is seeking or using another network system outside your home network.



**5 Message Waiting Indicator** Appears when you receive a text message.




**6 Voice Message Waiting Indicator** Appears when you receive a voicemail message.

**7 Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when you see **Low Battery** and hear the low battery alert.




**8 Active Line Indicator** Shows the current active phone line.


**9 Menu Indicator** Indicates that you can press  to enter the main menu or open a feature sub-menu.






⑩ **Ring Style Indicator** Shows the ring style setting.

 = loud ring



 = soft ring

 = vibrate

 = vibrate and ring

 = silent

## Zooming In and Out

Press and release , then press and hold  to zoom in and out on the display. Zoom in to increase text size, zoom out to display more information.


You can also zoom in and out from the menu. See page 54.

## Adjusting Volume

Press the up and down volume keys to:

- increase and decrease earpiece volume during a call
- increase and decrease the ringer volume setting when the idle display is visible

Volume keys

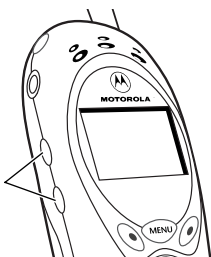

**Tip:** At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.

# Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; and your voice, data, and other application usage patterns.

## Battery Care

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is



normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.

### ***Extending Battery Life***



- **Turn off the display backlight**  
The backlight uses power. To turn it off, see “Initial Setup” on page 54.
- **Minimize keypad-intense functions**  
Activities that require intensive keystroke use (such as playing a game or using messaging) reduce your phone's talk and standby time.

# Making and Answering Calls

For basic instructions on how to make a call, end a call, and answer a call, see pages 20–20.

## Redialing a Number

If you hear an ordinary busy signal:

Press	To
1 	hang up
2 	redial the busy number

## Using Caller ID



*Calling line identification* (caller ID) displays the phone number for incoming calls.

The phone displays the caller's name when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

## Using Talk Secure


When *talk secure* is activated, your phone always tries to use a high-security connection to prevent others from intercepting your calls. To activate talk secure, see page 140.






If a high-security connection is not available, your phone uses a standard connection and displays **Line Not Secure**. This message does not appear when caller ID or other information is displayed.

## Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the  (missed call) indicator
- **X Missed Calls Y Unknown**, where **X** is the total number of missed calls and **Y** is the number of missed calls with no caller ID information


Press	To
1 	see the received calls list
2 	select a call to return
3 	make the call

## Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be

placed due to network, environmental, or interference issues.

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number



## **Turning Off a Call Alert**

You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert

## **Canceling an Incoming Call**

While the phone is ringing or vibrating:

Press	To
 or <b>IGNORE</b> (  )	cancel the incoming call





Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.



## Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number. To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
3 	call the entry

## Calling With One-Touch Dial




To call phonebook entries 1 through 9, just press and hold the one-digit speed dial number for one second.

We recommend that you reserve phonebook entry 1 (speed dial number 1) for storing and dialing your voicemail number. In many cases, your service provider has already done this for you. If necessary, see page 64 to store your voicemail number for one-touch dial access.

## Calling a Number In a Text Message



To call a phone number embedded in a text message that you receive:





Press	To
1 	open the <b>Text Msg Menu</b>
2 	scroll to <b>Call Back</b>
3 <b>SELECT</b> 	call the number

## Additional Calling Features

While dialing (with digits visible in the display), open the **Dialing Menu** to perform the following tasks:

Press	To
 > <b>Attach Number</b>	attach a number from the phonebook or recent call lists
 > <b>Send Message</b>	open a new text message with the number in the <b>To</b> field

You can also call a number using these features:

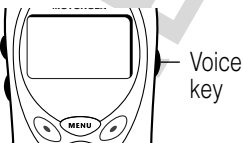Do This	To Call
Press and release the voice key, then say a voice name 	a phonebook entry using voice dial  To record a voice name, see page 68.
Press  > <b>Recent Calls</b> > <b>Received Calls</b> or <b>Dialed Calls</b> > <i>entry to call</i>	a missed call, or a recent received or dialed call







# Using Features While On a Call

## Using Call Waiting






When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1 	answer the new call
2 	switch back to the first call

## Making a Three-Way Call



During a call, you can call and connect a third party for a three-way call. You cannot do this if you already have a call on hold.

Press	To
1 keypad keys	dial the third party's number
2 	call the number
3 	connect the two calls
4 	end the entire call



## Additional On-Call Features

Press	To
MUTE (📞) (if available) or MENU > Mute	mute the call
SPEAKER (📞) (if available) or MENU > Spkrphone On	activate an attached speakerphone during an active call
MENU > My Tel. Number	see your phone number
MENU > Send Tones	send a number to the network as DTMF tones, for credit card or password calls  To activate DTMF tones, see the “DTMF” option on page .
MENU > Received Calls or Dialed Calls	view recent received or dialed call numbers
MENU > Messages	view or send messages
MENU > Datebook	view datebook entries
MENU > Other Information	view phone specifications



# Using the Menu

## Navigating to a Feature

Use these keys to move through the menu system:


### Left Soft Key

Perform the function shown in the lower left corner of the display (usually **EXIT** or **BACK**).

### Right Soft Key

Perform the function shown in the lower right corner of the display (usually **SELECT** the highlighted menu item).

### Menu Key

Enter the menu system, or open a sub-menu, when  appears in the bottom center of the display.


### End Key

Exit the menu system without making changes, return to the idle display.

### Scroll Keys


Scroll up or down through menus and lists.

 and   
Cycle through and set the value of the highlighted menu item.

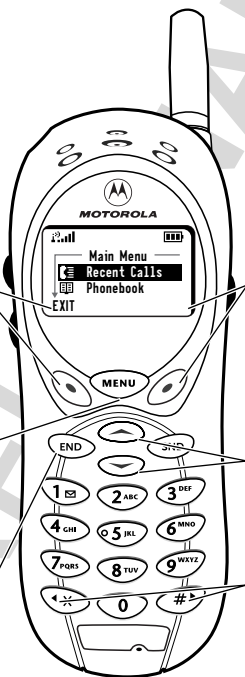

## Selecting a Feature Option

Some features require you to select an item from a list:

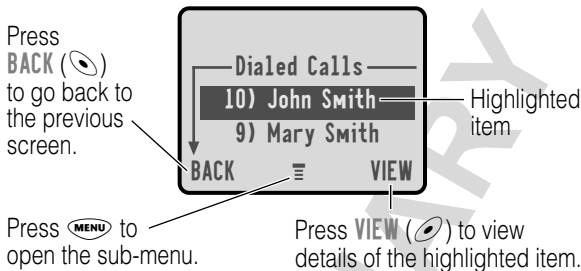


- Press ⏪ to scroll up or down to highlight the item you want.
- In a numbered list, press a number key to highlight the item.
- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.



# Entering Feature Information

Some features require you to enter information:




Press  to scroll down to additional items.



Highlighted item

Press **CANCEL** () to exit without making changes. **DONE** () appears when you enter or edit information.

Press **CHANGE** () to edit the information.

- Enter numbers or text with the keypad.
- When an item has a list of possible values, press  or  to scroll through and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.
- If you enter or edit information and do not want to save your changes, press  to exit without saving.



The message center lets you compose and send text messages. A *flashing cursor* shows where text will appear:

*Flashing cursor* indicates insertion point.



Press **BROWSE** (⦿) to view and insert a quick note.

Press **CANCEL** (⦿) to exit without making changes.

Press **MENU** to open the sub-menu.

When you enter text using the standard tap method, the flashing cursor changes to a *block cursor*, and the soft key functions change:

*Block cursor* indicates current highlighted character.



Press **OK** (⦿) to accept and store the text.

After two seconds, the block cursor reverts to a flashing cursor and moves to the next position.

Press **DELETE** (⦿) to delete the character to the left of the insertion point.




# Entering Text

---



Multiple text entry methods make it easy for you to enter names, numbers, and messages on your phone.

## Choosing a Text Mode


Press  from any text entry screen to select a text mode:


- |                   |   |
|-------------------|---|
| <b>iTAP</b>       | Let the phone predict each word as you enter it. See page 43.                         |
| <b>Tap Method</b> | Enter letters, numbers, and symbols by pressing a key one or more times. See page 39. |
| <b>Numeric</b>    | Enter numbers only.   |
| <b>Symbol</b>     | Enter symbols only. See page 42.  |
| <b>Browse</b>     | Browse your phonebook or recent call lists to select a name or number.                |

**Note:** The text mode you select remains active until you change it by selecting another mode.

## Using Tap Method

This is the standard mode for entering text on your phone.

Press  from any text entry screen and select the **Tap Method** menu option.

Do This	To
1 Press a number key one or more times	select a letter, number, or symbol shown in the "Character Chart" on page 41
2 Continue pressing number keys	enter the remaining characters
3 Press <b>OK</b> (  )	store the text when you are finished

PRELIMINARY




## General Text Entry Rules

Press a number key repeatedly to cycle through its characters. See “Character Chart” on page 41.



Press a number key as many times as necessary to enter the desired character at flashing cursor location.

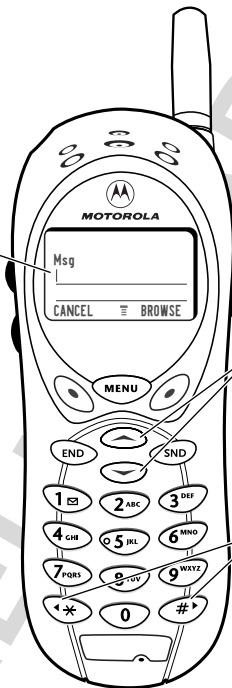

Change letter in block cursor to uppercase or lowercase.

Press and hold a number key to cycle between text entry modes.

Move flashing cursor to the left or right in text message.

- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.

- The first character of every sentence is capitalized. (Press down to force the character to lowercase while it is highlighted by the block cursor).
- Your phone may support multiple languages. The current language setting determines whether a new message begins on the left or right side of the display.

You can switch languages within a message. Press to select the text mode and language you want to use.

## Character Chart


Use this chart as a guide for entering spaces, letters, numbers, and symbols with the tap method.

	space . 1 ? ! , @ _ & ~ : ; " - ( ) ' ¿ ¡ % £ \$ ¥ ¤ €
	a b c 2 á à â ã ç
	d e f 3 é è ê ë
	g h i 4 í î ï
	j k l 5
	m n o 6 ñ ó ô õ
	p q r s 7
	t u v 8 θ ü ú ù û
	w x y z 9
	+ - 0 x * / \ [ ] = > < # §

**Note:** This chart may not reflect the exact character set available on your phone.





# Using Symbol Mode

Your phone provides an alternate way to enter symbol characters in a message. Press **MENU** from any text entry screen and select the **Symbol** menu option.

Do This	To
1 Press a number key one time	display its symbol options at the bottom of the display  See "Symbol Chart" on page 42.
2 Press <b>*</b> or <b>#</b>  or  Press the number key multiple times	highlight the symbol you want
3 Press <b>SELECT</b> (  )	enter the symbol at the flashing cursor location

## Symbol Chart

Use this chart as a guide for entering characters in symbol mode.

	space . ? ! , @ _ & ~ : ; " - ( ) ' ` ¡ ¨ % £ \$ ¥ ¤ €
	@ _ \ α β
	/ : ; δ φ
	" & ' γ

5 JKL	( ) [ ] { } λ
6 MNO	ı i ~ ω
7 PQRS	< > = π β σ
8 TUV	\$ £ ¥ □ € θ
9 WXYZ	# % * ξ ψ
0	+ - x * / = > < # §

## Using iTAP™ Software Predictive Text Entry Method

iTAP™ software provides a predictive text entry method that lets you enter a word using one keypress per letter.

Press from any text entry screen and select the iTAP menu option.

### Enter Words


Do This	To
1 Press a number key one time	enter the first letter of the word  The letters associated with the key are shown at the bottom of the display.
2 Press number keys (one per letter)	enter the rest of the word  Alternative words and letter combinations are shown at the bottom of the display. The word choices are updated with each keypress.



Do This	To
3 Press  or	highlight the word you want
4 Press SELECT	enter the word at the flashing cursor location  A space is automatically inserted after the word.

For example, to spell the word “act,” press . The display shows:

Flashing cursor indicates insertion point.

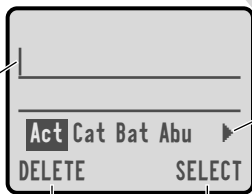

Press to scroll and see additional word choices.

Press DELETE to clear the last letter.

Press SELECT to insert the highlighted word.

## Enter Novel Words

You may enter a word that the iTAP software does not recognize. If the word you want is not displayed:

Do This	To
1 Press DELETE  one or more times	delete letters until you see a letter combination that matches the start of the word

Do This	To
2 Press  or	highlight the letter or letter combination
3 Press <b>SELECT</b> (), then press	shift the text entry cursor to the left and “lock” the selected word portion
4 Continue to enter letters and highlight letter combinations	spell the word

## ***Punctuation***

Press	To
or	enter punctuation or other characters as shown in the “Character Chart” on page 41

## ***Capitalization***

The first word of a sentence is automatically capitalized, with following words in lowercase.

Press	To
	change the words to initial character capitalized, all uppercase characters, or all lowercase characters

## Enter Numbers

Do This	To
1 Enter the first digit and then highlight it	put the iTAP software in number entry mode
2 Press number keys	add digits to the number
3 Press <b>SELECT</b> (⊙)	enter the number at the flashing cursor location

## Delete Letters and Words

Place the cursor to the right of the text you want to delete, and then do the following:

Do This	To
Press <b>DELETE</b> (⊙)	delete one letter at a time
Hold <b>DELETE</b> (⊙)	delete the entire message

# Menu Feature Descriptions

---

This chapter describes all of your phone's features in order of the menu map shown on pages 3–4.

## Main Menu

### RECENT CALLS

**Received Calls**  > Recent Calls  
> Received Calls

View a list of recently received calls. See page 58.

**Dialed Calls**  > Recent Calls  
> Dialed Calls

View a list of recently dialed calls. See page 58.

**Notepad**  > Recent Calls  
> Notepad

Call or store the last number entered on the keypad.  
See page 60.

**Call Times**  > Recent Calls  
> Call Times

View call timers that track time spent on your last call, dialed calls, received calls, all calls since reset, and all calls total. See page 60.



**PHONEBOOK**  > Phonebook

Store names and numbers as entries in your phonebook, then call numbers by selecting them from the phonebook list. See page 63.





**DATEBOOK**  > **Datebook**

Use the datebook calendar to schedule and review your appointments. See page 74.

**QUICK DIAL**  > **Quick Dial**

Dial pre-programmed numbers. Your service provider may program your phone with one or more quick dial numbers, such as the customer service number. You can call them by selecting them from the quick dial list.

**Note:** Your service provider may use a different name for this feature.

**RADIO**  > **Radio**

Listen to FM radio stations with the optional Motorola Original™ FM Stereo Radio Headset accessory. This menu feature is displayed only when the FM Stereo Radio Headset is plugged into the accessory connector port on your phone. See page 79.

**MESSAGES**  > **Messages**

Adjust message settings, view and manage the various types of messages your phone can send and/or receive:



**Create Message** Create new text messages. See page 89.

**VoiceMail** Listen to your recorded voice messages. See page 82.

<b>Inbox</b>	Read and manage text messages. See page 84.
<b>Quick Notes</b>	Select and send pre-written messages from the quick notes list. See page 91.
<b>Outbox</b>	View all outgoing text messages, delivered and undelivered.
<b>Drafts</b>	Store and edit text messages that you have written but not sent.



## RING STYLES

### **Style**

 > Ring Styles  
> Style

Select the ring style your phone uses to notify you of incoming calls, messages, or other events. See page 94.

### **Style Detail**

 > Ring Styles  
> Style Detail

Change details about the current ring style. *Style* represents the name of the ring style. See page 94.

### **My Tones**

 > Ring Styles  
> My Tones

Create custom alert tones for your phone. See page 96.

## SHORTCUTS

 > Shortcuts

Create keypad or voice shortcuts to menu features. See page 104.

**VOICE NOTES****MENU** > Voice Notes

Use the voice key to record messages and phone calls. See page 107.

**Note:** Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.

**BROWSER****MENU** > Browser

Access Web pages and run Web-based applications. The micro-browser delivers WAP (Wireless Application Protocol) pages from your service provider directly to your phone. See page 113.

**CALCULATOR****MENU** > Calculator

Use your phone as a calculator or currency converter. See page 115.

**GAMES****MENU** > Games

Play games on your phone. See page 118.

**Settings Menu****PHONE STATUS*****My Tel. Number***
**MENU** > Settings  
 > Phone Status  
 > My Tel. Number

View, enter, and edit information about your name and phone number.

## Active Line

-  > Settings
- > Phone Status
- > Active Line




Change the active phone line to send and receive calls from either of the available numbers.

## Battery Meter

-  > Settings
- > Phone Status
- > Battery Meter

View a detailed battery charge meter.

## Other Information

-  > Settings
- > Phone Status
- > Other Information



View your phone's feature specifications (if available from the service provider).

## CONNECTION

Connect your phone to a computer or hand-held device to send and receive data calls on the connected device. See page 130.



## Incoming Call

-  > Settings
- > Connection
- > Incoming Call

Specify the format for the next incoming call. You can select **Data In Only** or **Normal**. See page 133.

## IN-CALL SETUP

Set the features that are active during a call, such as the in-call timer and call answering options.



**In-Call Timer**

**MENU** > Settings  
 > In-Call Setup  
 > In-Call Timer

Adjust call timer **Display** and **Beep** settings. You can set your timer to beep at a selected interval during your calls. (60 seconds is the default.) You can also turn on or off a display timer during calls as follows:

<b>Time</b>	Display the elapsed time for the current call.
<b>Off</b>	No in-call timer display.

**Answer Options**

**MENU** > Settings  
 > In-Call Setup  
 > Answer Options

Turn call answering options on or off:

<b>Multi-Key</b>	Answer by pressing any key.
------------------	-----------------------------

**SECURITY****Phone Lock**

**MENU** > Settings > Security  
 > Phone Lock

Lock and unlock your phone. See page 137.

**Lock Keypad**

**MENU** > Settings > Security  
 > Lock Keypad

View instructions on how to lock and unlock your keypad. See page 138.


**Lock Application**

**MENU** > Settings > Security  
 > Lock Application

Lock and unlock specific phone applications (such as phonebook or datebook). When an application is locked, users must enter the unlock code to use the application.

**Talk Secure**       > Settings > Security  
> Talk Secure

Activate a secure connection to prevent others from intercepting your calls. See pages 27 and 140.

**Restrict Calls**       > Settings > Security  
> Restrict Calls

Restrict incoming and outgoing calls. See page 138.

**New Passwords**       > Settings > Security  
> New Passwords

Change your unlock code (originally set to 1234) or your security code (originally set to 000000). See page 135.

## OTHER SETTINGS

**Personalize**       > Settings  
> Other Settings  
> Personalize

Set several personal phone options:

**Main Menu**      Change the order of the main menu. See page 123.

**Keys**      Change the functions of the soft keys in the idle display. See page 123.

**Greeting**      Change the text displayed when you turn on your phone.



## Quick Dial

Change quick dial number(s).



## Initial Setup

**MENU** > Settings  
> Other Settings  
> Initial Setup

Set many basic phone options:

- |                      |  |
|----------------------|--|
| <b>Time and Date</b> | Set the phone's time and date.   |
| <b>Backlight</b>     | Set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power. |
| <b>ZOOM</b>          | Switch between lines ( <b>ZOOM Out</b> ) and lines ( <b>ZOOM In</b> ) of display text.                             |
| <b>TTY Setup</b>     | Set your phone to operate in one of three TTY modes, or return to normal <b>Voice</b> mode. See page 124.          |
| <b>Scroll</b>        | Force the cursor to stop or wrap around when it reaches the top or bottom of a list in the display.                |



<b>Animation</b>	Turn animation off (to conserve battery power) or on. Animation makes your phone's menus move smoothly as you scroll up and down.
<b>Language</b>	Set the language for phone menus.
<b>Battery Save</b>	Adjust the phone's power usage characteristics to conserve power.
<b>Contrast</b>	Adjust the contrast setting for your display.
<b>DTMF</b>	Your phone can send a number to the network as dual tone multi-frequency (DTMF) tones. DTMF tones are used to communicate with automated systems that require you to enter a number such as a code, password, or credit card number. Use this option to set DTMF tones to be long, short, or off.
<b>Master Reset</b>	Reset all options back to their original factory settings <i>except</i> for the unlock code, security code, and lifetime timer.





## Master Clear

Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer, *and* clear all user settings and entries.

**Note:** This option *erases all user-entered information* stored in your phone's memory, including phonebook and datebook entries. Once you erase the information, it cannot be recovered.

## Network

 > Settings  
> Other Settings  
> Network



View and adjust your phone's network settings.

Your service provider registers your phone to a network. You can view information about the current network, change how your phone searches for a network, and activate alerts that indicate when a call is dropped or network registration changes.

## Car Settings

 > Settings  
> Other Settings  
> Car Settings



Adjust hands-free car kit settings.

You can set your phone to route calls directly to the car kit when it detects a connection, and

automatically answer calls after two rings. See page 126.

**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

### **Headset**

-  > Settings
- > Other Settings
- > Headset



Set your phone to automatically answer calls after two rings when connected to a headset. See page 126.



PRELIMINARY

# Recent Calls

---




## Viewing Received Calls or Dialed Calls

Your phone keeps a list of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new ones are added.




**Shortcut:** Press **END** to go directly to the dialed calls list from the idle display.

### Find the Feature

**MENU** > Recent Calls

Press	To
1 	scroll to Received Calls or Dialed Calls
2 <b>SELECT</b> (  )	select the list
3 	scroll to an entry
	<b>Note:</b> ✓ means the call connected.



Press	To
4 	call the entry's number
or	
VIEW 	view entry details
or	
	open the <b>Last Calls Menu</b> to perform other procedures as described in the following list

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a phonebook entry with the number in the <b>No.</b> field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Send Message	Open a new text message with the number in the <b>To</b> field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent call lists, after the highlighted number.
Send Tones	Send the number to the network as DTMF tones, for credit card or password calls.



## Using the Notepad

Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

### Find the Feature

**MENU** > Recent Calls  
> Notepad

### Press

**SND**

### To

call the number

or

**MENU**

open the **Dialing Menu** to attach a number or insert a special character

or

**STORE** (o)

create a phonebook entry with the number in the **No.** field

## Viewing and Resetting Call Timers

*Network connection time* is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing **END**. This time includes busy signals and ringing.

**The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.**



You can view the following network connection times:



Timer	Description
Last Call	Approximate time spent on last dialed or received call. You cannot reset this timer.
Dialed Calls	Approximate time spent on dialed calls since the last time you reset this timer.
Received Calls	Approximate time spent on received calls since the last time you reset this timer.
All Calls	Approximate time spent on dialed and received calls since the last time you reset this timer.
Lifetime	Approximate time spent on all calls on this phone. You cannot reset this timer.





To view a call timer:

### Find the Feature

 > Recent Calls  
> Call Times

Press	To
1 	scroll to the timer you want\
2 <b>SELECT</b> (  )	view the recorded time

To reset the call timer:

Press	To
1 <b>RESET</b> (  )	reset the time (if available)
2 <b>YES</b> (  )	confirm the reset




# Phonebook

You can store a list of names and phone numbers or email addresses in your phone's electronic phonebook.





To see the names in your phonebook, press

**MENU** > **Phonebook** from the idle display. Scroll to a name and press to view details of the phonebook entry as shown below.

**Shortcut:** Press  down from the idle display to open the phonebook.

## Viewing Entry Details

**Type** indicator identifies number type:

-  Work
-  Home
-  Main
-  Mobile
-  Fax
-  Pager
-  Email

**Voice Name** indicator indicates a recorded voice name

Entry's **Name**


Entry's **phone number** or **email address**

Entry's speed dial number

Return to list

Press **MENU** to open the **Phonebook Menu**

Edit entry

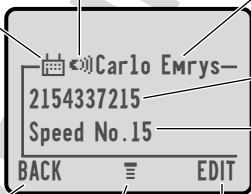


**Note:** When you set a distinctive ringer alert for an entry, the **Ringer ID** setting appears below the speed dial number.



# Storing a Phonebook Entry

A phone number or email address is required for a phonebook entry. All other information is optional.







**Shortcut:** Press  up from the idle display to open the phonebook and go to [New Entry].

**Shortcut:** Enter a phone number in the idle display, then press **STORE** () to create a phonebook entry with the number in the **No.** field. Go directly to step 3 to continue.

## Enter Information

### Find the Feature




 > Phonebook  
 > New

Press	To
1 	scroll to <b>Phone Number</b> or <b>Email Address</b>
2 <b>SELECT</b> (  )	select the entry type
3 <b>CHANGE</b> (  )	select <b>Name</b>
4 keypad keys	enter a name for the entry
5 <b>OK</b> (  )	store the name
6 <b>CHANGE</b> (  )	select <b>No.</b> or <b>Email</b>
7 keypad keys	enter the phone number or email address
	<b>Tip:</b> You can store a PIN code with the phone number. See page 66.
8 <b>OK</b> (  )	store the phone number or email address




Press	To
9 CHANGE (⊖)	select <b>Type</b>  <b>Note:</b> This option is not available for email entries.
10 ⊖	scroll to the number type
11 SELECT (⊖)	select the number type
12 RECORD (⊖)  or  Go to step 13 if you do not want a voice name	record a voice name for the entry, if desired (see page 68)
13 ⊖	scroll to <b>Speed No.</b>  The next available speed dial number is assigned to a new phonebook entry.
14 CHANGE (⊖)	select <b>Speed No.</b> if you want to change it
15 keypad keys	enter a different speed dial number, if desired
16 OK (⊖)	store the speed dial number
17 CHANGE (⊖)	select <b>Ringer ID</b> if you want to assign a distinctive ringer alert for the phone number  Your phone uses the alert to notify you when you receive a call from this phone number. See page 95.



Press	To
18 	scroll to the alert you want
19 SELECT 	store the ringer ID alert
20 SELECT 	select <b>MORE</b> if you want to create another entry under the same <b>Name</b>  You must use a different <b>Type</b> identifier for each number.

## Complete Phonebook Entry

When you are finished entering information for a phonebook entry:




Press	To
DONE 	store the entry

## Storing a PIN Code With the Phone Number

You can store a PIN code with the phone number for calls that require additional digits (for example, to make a calling card call, or to retrieve voicemail or answering machine messages). Insert one or more of the following



characters in the dialing sequence to ensure that the number dials and connects properly:

Press	To
 > Insert Pause	insert a <b>p</b> (pause) character  Your phone dials the preceding digits, waits for the call to connect, then sends the remaining digit(s).
 > Insert Wait	insert a <b>w</b> (wait) character  Your phone dials the preceding digits, waits for the call to connect, then prompts you for confirmation before it sends the remaining digit(s).
 > Insert 'n'	insert an <b>n</b> (number) character  Your phone prompts you for a number before dialing the call. The number you enter is inserted into the dialing sequence in place of the <b>n</b> character

**Note:** You can store a maximum of 32 digits per number. Each character counts as one digit.









# Recording a Voice Name For a Phonebook Entry

You can record a voice name for a new or existing phonebook entry. A voice name lets you call the phonebook entry using voice dial (see page 69).

**Tip:** Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.

## Find the Feature

 > Phonebook

Do This	To
1 Press 	scroll to the entry
2 Press <b>VIEW</b> (  )	view entry details
3 Press <b>EDIT</b> (  )	edit the entry
4 Press 	scroll to <b>Voice Name</b>
5 Press <b>RECORD</b> (  )	begin recording
6 Press and release the voice key and say the entry's name (in two seconds)	record the voice name
7 Press and release the voice key and repeat the name	confirm the voice name
8 Press <b>DONE</b> (  )	store the voice name





# Dialing a Phonebook Entry

Use one of the following procedures to call a number (or send a text message to an email address) stored in your phonebook.

## Phonebook List

### Find the Feature

 > Phonebook

Press	To
1 keypad key letter	jump to entries that begin with that letter (optional)
2 	scroll to the entry
3 	make the call

## Voice Dial

Do This	To
Press and release the voice key and say the entry's name (in two seconds).	make the call





To speed dial a phonebook entry, see page 30. To call an entry with one-touch dial, see page 30.



## Editing a Phonebook Entry

Find the Feature

 > Phonebook




 



Press	To
1  	scroll to the entry
2 VIEW 	view entry details
3 EDIT 	edit the entry

Edit the entry as described on pages 64-66.

## Deleting a Phonebook Entry

Find the Feature

 > Phonebook

Press	To
1  	scroll to the entry
2 	open the Phonebook Menu
3  	scroll to Delete
4 SELECT 	select Delete
5 YES 	confirm the deletion







## Setting the Primary Number for a Phonebook Entry

When you enter multiple phone numbers for the same name, you can set one as the primary number.

Find the Feature

 > Phonebook



Press	To
1 	scroll to the entry
2 	open the <b>Phonebook Menu</b>
3 	scroll to <b>Set Primary</b>
4 <b>SELECT</b> 	select <b>Set Primary</b>
5 	scroll to the number you want to set as the primary number
6 <b>SELECT</b> 	set the primary number




Depending on how the phonebook list is sorted, the primary number is listed first, or is the only number that appears for a phonebook entry. See page 72.

## Checking Phonebook Capacity

You can see how much memory space remains for storing phonebook and datebook entries on your phone.

### Find the Feature

 > Phonebook

Press	To
1 	open the <b>Phonebook Menu</b>
2 	scroll to <b>Ph Book Capacity</b>
3 <b>SELECT</b> 	select <b>Ph Book Capacity</b>
	Your phone displays the phone memory meter.












# Sorting the Phonebook List

You can sort your phonebook list by speed dial number (the standard), name, email address, or voice name.

**Note:** The voice name sort is identical to the name sort, except that entries with voice name tags appear first.



## Find the Feature

 > Phonebook

Press	To
1 	open the <b>Phonebook Menu</b>
2 	scroll to <b>Setup</b>
3 <b>SELECT</b> 	select <b>Setup</b>
4 	scroll to <b>Sort by</b>
5 <b>CHANGE</b> 	select <b>Sort by</b>
6 	scroll to <b>Name, Speed No., Voice Name, or Email</b>
7 <b>SELECT</b> 	select the sort order

If you select **Speed No.**, **Voice Name**, or **Email**, the procedure is complete.

If you select **Name**, you must specify whether you want to view all numbers or just the primary number for each name:

Press	To
8 <b>CHANGE</b> 	change view preference
9 	scroll to <b>Primary Contacts</b> or <b>All Contacts</b>



Press	To
10 SELECT (⦿)	select the view preference
11 DONE (⦿)	set the view preference

To set an entry's primary phone number, see page 70.

**Tip:** When the phonebook list displays primary numbers only, you can scroll to a name and press **\*#** or **#>** to view other numbers associated with the name.



# Datebook

The datebook is a calendar that lets you schedule and organize events such as appointments and meetings. You can set the datebook to send a reminder alarm for specific events.

**Note:** You must set the correct time and date on your phone to use the datebook.


To schedule or review datebook events:

## Find the Feature

**MENU** > Datebook


## Week View

The datebook initially displays a calendar for the week. Lines or filled boxes indicate scheduled events.

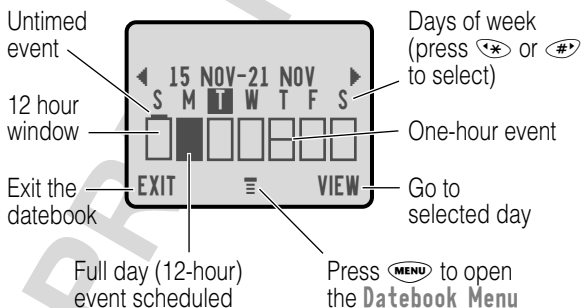


## Day View

Select a day and press **VIEW** (👁️) to see the day's events.

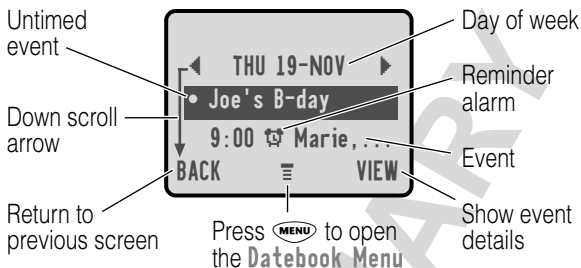

## Event View

Select an event and press **VIEW** (👁️) to see event details.

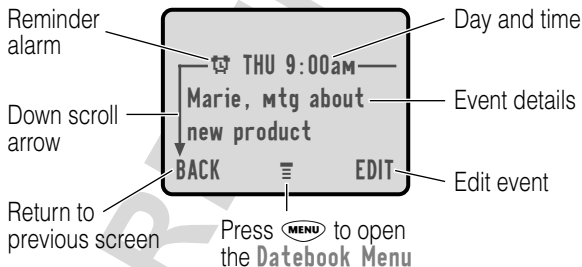






# Adding a Datebook Event

A title is required for a datebook event. All other information is optional.

**Note:** You must create an event to use the reminder alarm.
 
## Find the Feature








 > Datebook > day  
 > New

Press	To
1 <b>CHANGE</b> (  )	select <b>Title</b>
2 keypad keys	enter a title for the event
3 <b>OK</b> (  )	store the event title
4  	scroll to other fields and enter information as necessary  You can set start time, duration, date, repeat interval, and reminder alarm.
5 <b>DONE</b> (  )	store the event




# Changing Event Information

## Find the Feature

 > Datebook

Press	To
1  or 	scroll to the day
2 <b>VIEW</b> (  )	display the day view
3  	scroll to the event
4 <b>VIEW</b> (  )	display the event view
5 <b>EDIT</b> (  )	edit the event














Press	To
6 	scroll to the information you want to change
7 <b>CHANGE</b> ( 	edit the information
8 keypad keys	enter new information
9 <b>DONE</b> ( 	store the information

## Copying an Event

### Find the Feature

 > Datebook

Press	To
1  or 	scroll to the day
2 <b>VIEW</b> ( 	display the day view
3 	scroll to the event
4 	open the <b>Datebook Menu</b>
5 	scroll to <b>Copy</b>
6 <b>SELECT</b> ( 	copy the event
7 <b>YES</b> ( 	confirm the copy
	Your phone assumes you want to change the date, and displays the <b>Date</b> field.
8 keypad keys	enter date information
9 	move to month, day, and year
10 <b>DONE</b> ( 	save the copy of the event
11 	scroll to and edit event information, if necessary



Press	To
12 <b>DONE</b> (⏏)	store the information

## Deleting an Event

**Find the Feature**      **MENU** > Datebook

Press	To
1 (⌘) or (#)	scroll to the day
2 <b>VIEW</b> (⌘)	display the day view
3 (⏪)	scroll to the event
4 <b>MENU</b>	open the <b>Datebook Menu</b>
5 (⏪)	scroll to <b>Delete</b>
6 <b>SELECT</b> (⌘)	select <b>Delete</b>
7 <b>YES</b> (⏏)	confirm the deletion

## Synchronizing with TrueSync Software



You can synchronize datebook entries between your phone and computer or hand-held device with Starfish TrueSync<sup>®</sup> software, a Motorola accessory product. See the TrueSync user guide for more information.

**Note:** TrueSync software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products.



# Radio



You can use your phone to listen to FM radio stations when the optional Motorola Original™ FM Stereo Radio Headset accessory is plugged into the phone's accessory connector port.



## Turning the Radio On and Off

Press	To
Radio (⦿)	turn the radio on and off

Alternatively, you can use the following procedure:



Press	To
1 MENU	open the menu
2 ⦿	scroll to Radio
3 On (⦿) or Off (⦿)	turn the radio on or off

**Note:** The Radio menu feature and soft key options appear only when the FM Stereo Radio Headset is plugged into the accessory connector port.

 







## Tuning a Station

Do This	To
Press 	scroll to the next frequency
or	
Press and hold 	scroll to the next available stereo station

## Storing a Preset

Do This	To
Press and hold a number key (  to  )	assign its preset number to the tuned station

## Selecting a Preset

Press	To
a number key (  to  )	tune the station stored at the preset location

## Sending and Receiving Calls With the Radio On

Your phone rings or vibrates as usual to notify you of an incoming call, message, or other event.



Do This	To
Press <b>IGNORE</b> (👁)	ignore the call
Press <b>ANSWER</b> (👁)  <b>or</b> Press the button on the FM Stereo Radio Headset microphone	answer the call  <b>Note:</b> You can use the FM Stereo Radio Headset microphone to converse with the other party during a call

To end the call and resume the FM broadcast:

Do This	To
Press <b>END</b>  <b>or</b> Press and hold the button on the FM Stereo Radio Headset microphone	end the call

Turn the radio off before dialing outgoing calls from the phone keypad. You do not have to turn off the radio to dial emergency numbers, or numbers selected from your phonebook or recent call lists.

**Tip:** To dial a recently called number, press **SND** or the button on the FM Stereo Radio Headset microphone to go to the dialed calls list. For more information, see page 58.

# Messages—Voicemail



You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone.

## Storing Your Voicemail Number

Storing your voicemail number on your phone makes it easy for you to listen to new voicemail messages. In many cases, your service provider has already done this for you.


### Find the Feature


**MENU** > Messages  
**MENU** > VoiceMail Setup

Press	To
1 keypad keys	enter your voicemail number
<b>Tip:</b> You can store your PIN code with the voicemail number. See page 66.	
2 OK (ⓘ)	store the number

Your service provider additionally may store your voicemail number as phonebook entry number 1, so you can use one-touch dial to listen to your voicemail messages. If necessary, see page 64 to store your voicemail number for one-touch dial access.

# Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voice message waiting) indicator and a **New VoiceMail** notification.

Press	To
CALL 	listen to the message

If reminders are turned on, your phone sends a reminder at regular intervals until you close the new message notification, listen to the message, or turn off your phone.




## Listening to a Voicemail Message

### Find the Feature

 > Messages > VoiceMail

The phone calls your voicemail number. If no voicemail number is stored, your phone prompts you to store one.

**Shortcut:** If your voicemail number is also stored as phonebook entry number 1, you can press and hold  to listen to your voicemail message(s).

# Messages—Text



Text messages are brief messages that you can send and receive.

Quick notes are pre-written text messages that you can incorporate into a message and send quickly.

Your text message inbox must be set up *before* you can send and receive messages. The number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored on your phone.



## Setting Up the Text Message Inbox

**Note:** In many cases, your service provider has already set up the text message inbox for you.

### Find the Feature

 > Messages  
 > Inbox Setup


Press	To
1 CHANGE (⓪)	change the Srvce Center No.
2 keypad keys	enter the phone number for the service that handles your outgoing messages
3 OK (⓪)	store the number


Press	To
4 CHANGE (⓪)	change the <b>Expire After</b> period
5 keypad keys	enter the expiration period—the number of days your network tries to send unreceived messages
6 OK (⓪)	store the expiration period
7 CHANGE (⓪)	change the <b>Cleanup</b> setting
8 ⓪ ⓪	scroll to the number of days you want to keep messages in the inbox, or the number of messages you want to keep
9 SELECT (⓪)	select the cleanup setting
10 CHANGE (⓪)	change the <b>SMS Alert</b> setting
11 ⓪ ⓪	select whether you want incoming message alerts turned <b>On</b> or <b>Off</b> while you are on a voice call
12 SELECT (⓪)	select the <b>SMS Alert</b> setting
13 DONE (⓪)	save the inbox settings

## Receiving a Text Message


**Note:** Your text message inbox must be set up before you can receive text messages. See page 84.



When you receive a text message, your phone displays the  (message waiting) indicator and a **New Message** notification, and gives an alert.

Press	To
<b>READ</b> 	open the message

If reminders are turned on, your phone sends a reminder at regular intervals until you close the new message notification, read the message, or turn off your phone.

As memory space for storing messages gets close to full, the  (message waiting) indicator flashes and your phone displays **Memory is Low!** when you receive a new message. When memory is full, your phone automatically deletes the oldest read and unlocked messages to make space for an incoming message. If memory is filled with unread and/or locked messages, your phone displays **Memory is Full!**, and the network temporarily holds new messages until you manually delete some existing messages.

















## **Reading, Locking, or Deleting a Text Message**

Messages in the text message inbox are sorted from newest to oldest. The oldest messages are deleted automatically as specified by the inbox cleanup setting (see page 84). If you want to save a message, you should lock it to prevent it from being deleted during cleanup.

**Find the Feature**

 > Messages > Inbox

Press	To
1 	scroll to the message
	The following indicators show message status:
	 = unread
	 = unread (with attachment)
	 = unread and urgent
	 = unread and urgent (with attachment)
	 = read
	 = read (with attachment)
	 = read and urgent
	 = read and locked
	 = read and locked (with attachment)
2 <b>READ</b> 	open the message
3 <b>BACK</b> 	close the message
<b>or</b>	
<b>REPLY</b> 	compose and send a reply
<b>or</b>	
	open the <b>Text Msg Menu</b> to perform other procedures as described in the following list

The **Text Msg Menu** can include the following options:

Option	Description
Delete	Delete the message.










Option	Description
Call Back	Call the number in the message header or embedded in the message.
Go To	Launch the micro-browser and go to a Web address (URL) embedded in the message.
Forward	Open a copy of the text message, with an empty <b>To</b> field.  <b>Note:</b> You cannot forward sound files embedded in a text message. Only the text is forwarded.
Store Tone	Store the selected sound file.
Play	Play a sound file in the message.
Lock/Unlock	Lock or unlock the message.
Store Number	Create a phonebook entry, with the embedded number in the <b>No.</b> field.
Delete All	Delete all inbox messages.
Create Message	Open a new text message.
Store Address	Create a phonebook entry, with the embedded email address in the <b>Email</b> field.
Setup	Open the text message inbox setup menu.

## Storing Sounds

You can receive a text message that contains a ring tone or other sound. The ring tone plays when you open the message.

You can store the ring tone on your phone, and use it as an event alert.


Press	To
1 	open the <b>Text Msg Menu</b>
2 	scroll to <b>Store Tone</b>
3 <b>SELECT</b> 	select the option
	Your phone adds the tone to the <b>My Tones</b> list.

For more information about using ring tones, see pages 94 and 96.



## Sending a Text Message

You can send a text message to one or more recipients. You can manually enter each recipient's phone number or email address, or select numbers/addresses from the phonebook or recent call lists.

**Note:** When you manually enter numbers and/or email addresses, you must insert a space between each entry. Press and hold  until the space appears, then enter the next number or email address.

### Find the Feature

 > Messages  
> Create Message



Press	To
1 CHANGE (⊖)	select To
2 keypad keys	enter one or more phone numbers and/or email addresses
<p>or</p> <p>BROWSE (⊖)</p>	
	select numbers/addresses from the phonebook or recent call lists
3 OK (⊖)	store the numbers/addresses
4 CHANGE (⊖)	select Msg
5 keypad keys	enter the message
<p><b>Note:</b> Message length is limited. A display counter shows how many characters are left.</p>	
<p>or</p> <p>BROWSE (⊖)</p>	
	select and insert a quick note message (see page 91)
6 OK (⊖)	store the message
7 CHANGE (⊖)	select Priority
8 ⊖ ⊖	scroll to the priority you want
9 SELECT (⊖)	set the priority

Press	To
10 CHANGE (⓪)	select <b>Call</b>
11 keypad keys	enter a number for the recipient to call back
12 OK (⓪)	store the number
13 CHANGE (⓪)	select <b>Receipt</b>
14 (⓪) (⓪)	select whether you want the message status to be updated when the recipient opens the message
	<b>Note:</b> Sent messages are stored in your outbox. See page 92.
15 OK (⓪)	store your receipt preference
16 DONE (⓪)	finish the message
17 YES (⓪)	send the message
or	
NO (⓪)	cancel the message or save it in the drafts folder




## ***Sending a Quick Note Text Message***

Quick notes are pre-written text messages that you can incorporate into a message and send quickly (for example, **Meet me at . . .**). You can also create new quick notes.

### **Find the Feature**

**MENU** > Messages  
> Quick Notes



Press	To
1 	scroll to the quick note
2 <b>READ</b> 	read the quick note
<b>or</b>	
	open the <b>Quick Note Menu</b> to perform other procedures as described in the following list

The **Quick Note Menu** can include the following options:



Option	Description
<b>New</b>	Create a new quick note.
<b>Edit</b>	Edit the quick note.
<b>Delete</b>	Delete the quick note.
<b>Send</b>	Open a new message with the quick note in the <b>Msg</b> field.

## Viewing the Status of Sent Text Messages

Messages that you send are stored in the outbox.

**Find the Feature**  > **Messages** > **Outbox**

Messages in the outbox are sorted from newest to oldest. The following indicators show message status:

- » = sending in progress
- ✕ = sending failed
-  = sent
-  = read by recipient

**Tip:** To re-send an undelivered message, highlight the message and then press  > **Re-send**. Your phone gives you the option to edit the destination or message before you re-send it.


PRELIMINARY




# Ring Styles

---


Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*. You can select one of five different ring styles:

 = loud ring

 = soft ring

 = vibrate

 = vibrate and ring

 = silent




The ring style indicator in the display shows the current ring style (see page 22).

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume.

## Selecting a Ring Style

**Find the Feature**

 > Ring Styles > Style

Press	To
1  	scroll to the ring style
2 SELECT 	select the ring style

## Customizing a Ring Style

### Change Style Settings

You can change the alerts that notify you of the following events: incoming calls, text messages, voicemail












## Set Ringer or Keypad Volume

### Find the Feature

 > Ring Styles  
> Style Detail

**Note:** *Style* represents the current ring style.

Press	To
1  	scroll to Ring Volume or Key Volume
2  * or # 	scroll to the desired volume
3 OK (  )	confirm the new volume







## Creating Alert Tones

You can create and store custom alert tones on your phone. The tones appear in the list of available alerts.

### Create a Tone

#### Find the Feature

 > Ring Styles  
> My Tones

Press	To
1  	scroll to [New Tone]
2 SELECT (  )	select [New Tone]
3 CHANGE (  )	select Notes
4 keypad keys	enter notes (see)
5 OK (  )	store the notes
6 CHANGE (  )	select Name
7 keypad keys	enter a name for the tone



Press	To
8 OK (0)	store the name
9 DONE (0)	store the tone

## Enter Notes

To create a new tone, use the keypad keys to enter notes. For each note, you must specify the octave (optional), pitch, length, and a length modifier (optional). Press a key multiple times to cycle through its available options and enter the necessary character as described in the following lists.

### Octave

The default setting for a new tone is octave four.

Key	Display	Description
0	*	enter * followed by a number (0 to 8) to set the octave

### Notes and Rests

Key	Display	Description
0	#	sharp
	&	flat
2 ABC	a	note A
	b	note B
	c	note C





Key	Display	Description
3 DEF	d	note D
	e	note E
	f	note F
4 CHI	g	note G
7 PARS	r	rest


## Lengths and Modifiers

Key	Display	Description
0	0	whole note
1 BS	1	half note
2 ABC	2	quarter note
3 DEF	3	eighth note
4 CHI	4	sixteenth note
5 JRS	5	1/32 note
1 BS	.	dotted note
	:	double dotted note
	;	2/3 length note

## Volume Control Characters

Key	Display	Description
8 TRV	V, +, and -	Set volume level from V1 to V15. Enter V+ or V- to increase or decrease volume one level from current setting.

## Repeat Characters

Key	Display	Description
	(, ), and @	Use parentheses to enclose sequence of notes to be repeated. After the sequence, enter @ followed by digit(s) to set number of repetitions.

## Note Entry Sequence

Do This	Action
1 Set the octave (optional)	Set the octave (*0 to *8) <i>before</i> selecting the note. The octave applies to the note and all following notes until you change it again.
2 Set the note to a sharp or flat, if necessary	Enter a sharp or flat (# or &) <i>before</i> selecting the note.
3 Select the note (required)	Press a keypad key.
4 Set length (required)	Set the length (0 to 5) <i>after</i> selecting the note. If you do not specify a length, a 2 (quarter note) length is appended to the note.
5 Modify length (optional)	Enter a length modifier (. , :, or ;) <i>after</i> you set the length.



You can perform the following tasks when creating a tone:











 
 



 

 
Task	Action
Insert a rest	Enter one or more rests (r characters) as needed in the tone sequence. Set the length of the rest (0 to 5) <i>after</i> the rest, just as you would for a note.
Repeat a note sequence	Use ( and ) to group a sequence of notes. After the sequence, enter @ followed by a number to set the number of repetitions.
Adjust volume	Enter V+ or V- to increase or decrease volume one level at the current location in the note sequence.
Listen to a new tone as you compose it	Press <b>MENU</b> to enter the <b>Compose Menu</b> , and select <b>Play All</b> to play the notes you have entered.



### Example

Press the following keys to create this sequence of notes and rests in octave three: **C** (quarter note), **E flat** (quarter note), **half rest**, and **G** (whole note):







Press	To	Display
1    0   0   3 DEF   3 DEF 3 DEF   3 DEF	set octave three	*3
2    2 ABC   2 ABC   2 ABC	enter note <b>C</b>	c

Press	To	Display
3    	set length to quarter note	2
4    	enter flat symbol	&
5  	enter note <b>E flat</b>	e
6    	set length to quarter note	2
7 	enter <b>rest</b>	r
8 	set length to half rest	1
9 	enter note <b>G</b>	g
10 	set length to whole note	0

## Play a Tone

### Find the Feature

 > Ring Styles  
> My Tones

Press	To
1  	scroll to the tone
2 	open the <b>My Tones Menu</b>
3  	scroll to <b>Play</b>
4 <b>SELECT</b> 	select <b>Play</b>



Press	To
5 <b>PLAY</b> (📞)	play the tone again
or	
<b>CANCEL</b> (📞)	return to my tones list

## Edit a Tone

You cannot edit the predefined alert tones included with your phone. To edit a custom alert tone:

### Find the Feature

**MENU** > Ring Styles  
> My Tones






Press	To
1 (📞)	scroll to the tone
2 <b>EDIT</b> (📞)	open the tone details
3 (📞)	scroll to the item you want to edit ( <b>Name</b> or <b>Notes</b> )
4 <b>CHANGE</b> (📞)	select the item
5 keypad keys	enter new text or notes
6 <b>OK</b> (📞)	store the new text or notes
7 <b>DONE</b> (📞)	save your changes

## Delete a Tone

You cannot delete the predefined alert tones included with your phone. To delete a custom alert tone:

### Find the Feature

**MENU** > Ring Styles  
> My Tones

Press	To
1 	scroll to the tone
2 	open the <b>My Tones Menu</b>
3 	scroll to <b>Delete</b>
4 <b>SELECT</b> 	select <b>Delete</b>
5 <b>YES</b> 	confirm the deletion

## Download a Tone

You can download custom alert tones from a text message. See page 89.



## Setting Reminders

A reminder is an alert that rings or vibrates at regular intervals to notify you about a voicemail or text message that you have received.

### Find the Feature

-  > **Ring Styles**
- > **Style Detail**
- > **Reminders**

**Note:** *Style* represents the current ring style.

Press	To
1 	scroll to <b>Beep</b> or <b>Vibrate</b> to set the reminder alert type, or <b>Off</b> to turn off all reminders
2 <b>SELECT</b> 	select the reminder alert







# Shortcuts

---

Your phone includes several standard shortcuts. You can create additional shortcuts to frequently used menu items.

## Standard Shortcuts

The following shortcuts are pre-programmed in your phone. You cannot edit or delete these shortcuts.









Do This	To
Press <b>MENU</b> , then press and hold <b>MENU</b> (within two seconds)	zoom in/out on your phone display
Press the down volume key (at lowest volume setting)	switch to vibrate alert, then silent alert Press the up volume key to cycle back to vibrate alert, then ring alert.
Press <b>MENU</b> <b>#*</b>	see your phone number
Press <b>SND</b>	go to the dialed calls list
Press <b>END</b>	exit the menu system
Press  down	open the phonebook
Press  up	open the phonebook and go to <b>[New Entry]</b>



## Creating a Shortcut

You can create a keypad shortcut *plus* an optional voice shortcut to a menu item. A voice shortcut takes you directly to the menu item when you say the shortcut name.

**Tip:** Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.


Do This	To
1 Press 	enter the menu system
2 Press 	scroll to the menu item
3 Press and hold 	open the shortcut editor
4 Press YES (  )	view shortcut options
5 Press CHANGE (  )	change the keypad shortcut number
or	
Press DONE (  )	select the default keypad shortcut number
or	
Press 	scroll to <b>Voice</b> to assign a voice shortcut
6 Press RECORD (  )	begin recording
7 Press and release the voice key and say the shortcut's name (in two seconds)	record the shortcut name



Do This	To
8 Press and release the voice key and repeat the name	confirm the shortcut name
9 Press <b>DONE</b> (👁)	store the shortcut name

## Using Shortcuts


### Use a Keypad Shortcut

Press	To
1 	open the main menu
2 a number key	go to the menu item with that shortcut number

### Select a Shortcut From the List

**Find the Feature**  > Shortcuts  
> *shortcut name*

### Use a Voice Shortcut

Do This	To
1 Press 	open the menu
2 Press and release the voice key and say the shortcut's name (in two seconds)	go to the menu item with that shortcut name



# Voice Notes

---

You can use the voice note feature to record personal messages and phone calls on your phone.



## Recording a Voice Note

Use this procedure to record a voice note from the idle display, or to record a phone call in progress. Your phone plays an alert tone to notify the other party that the call is being recorded.

**Note:** Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.

**Tip:** Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.


Do This	Result
1 Press and hold the voice key for the duration of the recording.	The phone sounds an alert tone and begins recording.
2 Speak your voice note.	The phone records the voice note.
3 Release the voice key to stop recording.	The phone displays the voice note number and total recording time.

# Viewing the Voice Notes List

Find the Feature

**MENU** > Voice Notes

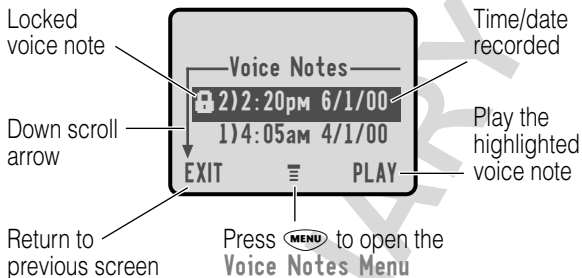

Voice Notes



# Playing a Voice Note

## Find the Feature

**MENU** > Voice Notes

Press	To
1 	scroll to the voice note
2 <b>PLAY</b> (  )	play the voice note




When you connect an optional Motorola Original™ headset or FM Stereo Radio Headset accessory to your phone, playback is automatically routed to the headset.

**Tip:** You can play a voice note while taking a call. It will not be transmitted to the other party.

## Playback Screen

The playback screen is displayed as the voice note plays.

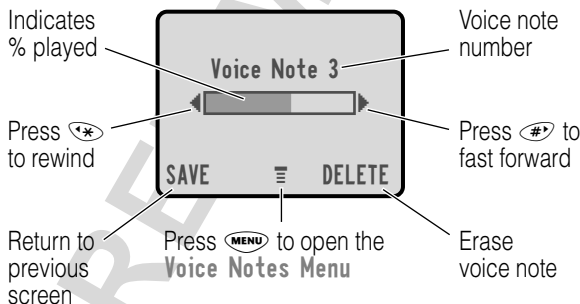

## Voice Note Controls



Stop playback and go to **Voice Notes Menu**.

Raise or lower playback volume of voice note.

Stop playback and return to voice notes list.

Stop playback and scroll up/down to next voice note.

Rewind three seconds, resume playing.

Press and hold to rewind to the beginning.

When playback is complete, press to restart.


If voice note is unlocked, stop playback and display **Delete Voice Note?**

If voice note is locked, stop playback and unlock voice note.

Press any number to alternately stop and start playback.

Fast forward three seconds, resume playing.

Press and hold to fast forward to end.

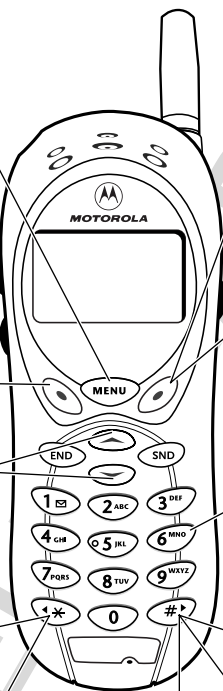





# Locking and Unlocking a Voice Note




Lock a voice note to prevent it from being deleted. You must unlock a voice note to delete it.

## Find the Feature

 > Voice Notes

Press	To
1 	scroll to the voice note
2 	open the <b>Voice Notes Menu</b>
3 	scroll to <b>Lock</b> or <b>UnLock</b>
4 <b>SELECT</b> 	lock or unlock the voice note

To lock or unlock a voice note during playback:

Press	To
1 	open the <b>Voice Notes Menu</b>
2 	scroll to <b>Lock</b> or <b>UnLock</b>
3 <b>SELECT</b> 	lock or unlock the voice note

Playback stops when you lock or unlock a voice note. Press any number key to resume playback.






 






# Deleting a Voice Note

## Find the Feature

 > Voice Notes

Press	To
1  	scroll to the voice note you want to delete
2 	open the <b>Voice Notes Menu</b>
3  	scroll to <b>Delete</b> or <b>Delete All</b>
4 <b>SELECT</b> 	select the highlighted option
5 <b>YES</b> 	confirm the deletion
or	
<b>NO</b> 	cancel deletion

## Notes:

- You cannot delete a locked voice note.
- You cannot recover a deleted voice note.



# Micro-Browser



The micro-browser lets you access Web pages and Web-based applications on your phone. Contact your service provider to set up access, if necessary.



## Starting a Micro-Browser Session

### Find the Feature

> Browser

Press	To
1	scroll to a bookmark, service, or application
2 SELECT	select the item

If you are unable to establish a network connection with the micro-browser, contact your service provider.

## Interacting With Web Pages

Press	To
	scroll through text, or highlight a selectable item
SELECT	select the highlighted item





Press	To
	call the highlighted phone number from the micro-browser
keypad keys, followed by <b>OK</b> ()	enter information Press  to delete one letter at a time if you make a mistake.
	go back to the previous page
	open the <b>Browser Menu</b>

## Downloading Sounds

To download a ring tone from a Web page, select its link, or follow the instructions posted on the Web page. The sound begins to play when downloading is complete.

You can store the ring tone on your phone, and use it as an event alert.

Press	To
<b>1</b>	open the menu
<b>2</b> 	scroll to <b>Store Tone</b>
<b>3</b> <b>SELECT</b> ()	select the option  Your phone adds the tone to the <b>My Tones</b> list.

For more information about using ring tones, see pages 94 and 96.

# Calculator

You can use your phone as a calculator and currency converter.

## Calculating Numbers

Find the Feature


**MENU** > Calculator

Press	To
1 number keys	enter a number
2 <b>*</b> or <b>#</b>	highlight a calculator function
3 <b>SELECT</b> ( <b>o</b> )	perform the function

Selected function appears here

Press **\*** or **#** to highlight a function

Exit the calculator

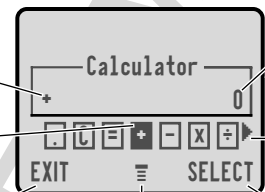

Press **MENU** to open the Calculator Menu

Entered number

Press **\*** or **#** to scroll to other functions

Perform the highlighted function



The calculator can perform the following functions:

Function	Description
.	Insert a decimal point
C	Clear the calculation
CE	Clear entry (replaces C when you enter subsequent values in a calculation)
=	Calculate the result
+	Add
-	Subtract
x	Multiply
÷	Divide
%	Divide the displayed value by 100
±	Change the entry's sign (positive/negative)
\$	Calculate the exchange rate
MS	Store the value in memory (overwrites current stored value)
MC	Clear the value stored in memory
MR	Replace the displayed value with the value stored in memory







# Converting Currency

The currency converter works just like the calculator, but uses the \$ (currency) function:

## Find the Feature

 > Calculator  
 > Exchange Rate

Press	To
1 number keys	enter the exchange rate
2 <b>OK</b> (  )	store the exchange rate
3 number keys	enter the amount to convert (amount to multiply by the exchange rate)
4  or 	highlight the \$ function
5 <b>SELECT</b> (  )	perform the conversion






# Games

You can play games on your phone between phone calls. An incoming call, message, alarm, or alert automatically ends the game.





## Playing a Game

### Find the Feature

 > Games

Press	To
1 	scroll to a game
2 SELECT 	start the game

When the game is over:

Press	To
NEW  or YES 	start another session of the same game
BACK  or NO 	end the game session

## Blackjack

In this classic card game, you play against the dealer to see who can get closer to 21 points without going over.



## ***Rules of the Game***

- The first card is dealt to the dealer. The dealer's cards are shown at the top of the display, and your cards are shown at the bottom.
- Face cards count as 10 points. Number cards count as the points shown on their face.
- An ace counts as 11 points, unless that would put you over 21 points. Otherwise, an ace is counted as 1 point. An ace that is originally counted as 11 may later be counted as 1 if it will bring your total under or equal to 21 points.
- An initial deal of an ace and a card with a face value of 10 points counts as exactly 21 points or Blackjack.
- Blackjack automatically wins against any other hand that totals 21 points.
- If you score more than 21 points, you go "bust" or lose.
- If you get five cards without going bust, you win.
- If you and the dealer have the same score, the dealer wins.
- You can ask for a "hit" or another card as long as you do not go bust.
- As long as the dealer's total is less than 17 points, the dealer must continue to take a hit.





## How to Play

When the game begins, you are dealt two cards.

Press	To
STAY (👁)	see the results of the hand
HIT ME (🃏)	request another card

## Falling Numbers

Score points by pressing the corresponding number key for numbers as they “fall” down the display.


### Rules of the Game

- If a number reaches the bottom of the display or if you press an incorrect number key, you score one miss.
- The game is over when you score three misses.
- The game has five levels. When you complete a level, play continues automatically at the next level.
  - You earn a bonus if you finish a level without a miss.

### How to Play

When the game begins, numbers start falling from the upper portion of the display. Press the corresponding number key to eliminate a falling number before it reaches the bottom of the display.



Press  to select the following options:

Option	Description
Game Sounds	Switch game sounds on/off.
New Game	Start a new game.
Level	Choose the starting level of play.
Top Scores	View the top five scores.
Help	Review the goal of the game.

## **Video Poker**

Turn 100 credits into 9,999-plus credits by making the best possible poker hands.

### **Rules of the Game**


- You start a new game with 100 credits. You must bet from 1-10 credits for each hand you play.
- You are dealt five cards face up, and have one opportunity to trade in cards (zero to five) for new ones.
- A winning hand earns credits as listed in the **Awards Table**.
- Your credit total is saved when you exit the game. The next time you play, you start with the number of credits that remain from the previous session.
- The game is over when you lose all of your credits.



## How to Play

Place your initial bet or change your bet (from 1-10 credits) and then:

Press	To
DEAL (🎰)	start a new hand
4 CH or ♣	select the card to the left
6 MND or #	select the card to the right
5 DL	discard selected card
5 UN	undo discard (replaces previous option after discard)
DONE (🎰)	remove discarded cards and deal replacements

Press  to select the following options:

Option	Description
Change Bet	Change bet amount (not available while hand is in play).
Game Sounds	Switch game sounds on/off.
New Game	Start a new game.
Choose Deck	Change the design that appears on the backs of the cards.
Awards Table	View the list of odds/payouts for each winning hand.
Help	Review the goal of the game.








# Adjusting Your Settings

## Reordering Menu Items



You can reorder the items in your phone's main menu.

### Find the Feature

-  > Settings
- > Other Settings
- > Personalize
- > Main Menu

Press	To
1 	scroll to a menu item
2 GRAB 	grab the menu item
3 	move the item to a new location in the menu
4 INSERT 	insert the menu item





## Customizing a Soft Key Function

You can relabel the soft keys ( and ) to access different menu items from the idle display.

### Find the Feature

-  > Settings
- > Other Settings
- > Personalize > Keys



Press	To
1 	scroll to <b>Left</b> or <b>Right</b>
2 <b>CHANGE</b> 	select the key
3 	scroll to the new key function
4 <b>CHANGE</b> 	confirm the new function

## TTY Operation



You can use an optional TTY device with your phone to send and receive calls. You must plug the TTY device into the phone's headset jack and set the phone to operate in one of three TTY modes.

### Notes:

- Use a TSB-121 compliant cable (provided by the TTY manufacturer) to connect the TTY device to your phone.
- Set the phone volume to level 4 (middle setting) for proper operation. If you experience a high number of incorrect characters, adjust the volume as necessary to minimize the error rate.
- For optimal performance, your phone should be at least 12 inches (30 centimeters) away from the TTY device. Placing the phone too close to the TTY device may cause high error rates.


 

 


## Set TTY Mode

When you set your phone to a TTY mode, it operates in that mode whenever the TTY device is connected. The

### Find the Feature


 > Settings  
> Initial Setup  
> TTY Setup

Press	To
1 	scroll to TTY Setup
2 CHANGE 	change the TTY mode
3 	scroll to the TTY mode
4 SELECT 	select the TTY mode

TTY Setup menu can include the following options:






Option	Description
TTY	Transmit and receive TTY characters
VCO	Receive TTY characters but transmit by speaking into the microphone
HCO	Transmit TTY characters but receive by listening to the earpiece
Voice	Return to normal voice mode



When your phone is in a TTY mode, the international TTY symbol and the mode setting are shown in the display during an active digital TTY call. You can press **TTYMODE**  to change the mode setting.



## Switch to TTY Mode During a Voice Call

Press	To
1 	open the <b>Call</b> menu
2 	scroll to <b>TTY Setup</b>
3 <b>SELECT</b> 	display the <b>TTY Setup</b> menu
4 	scroll to the TTY mode
5 <b>SELECT</b> 	select the TTY mode

### Return to Voice Mode

To return to normal voice mode, select **Voice** from the **TTY Setup** menu as described on page 125.

### Hands-Free Use



You can purchase an optional Motorola Original™ hands-free car kit or headset for your phone.

These accessories provide alternative ways for you to use your phone without using your hands.

**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.









## Automatic Answer

You can set your phone to automatically answer calls after two rings (four seconds) when connected to a car kit or headset.

### Find the Feature

 > Settings  
> Other Settings



Press	To
1 	scroll to Car Settings or Headset
2 SELECT 	select the feature
3 	scroll to Auto Answer
4 CHANGE 	select Auto Answer
5 	scroll to On or Off
6 SELECT 	confirm the setting

## Automatic Hands-Free

You can set your phone to automatically route calls to a car kit when it detects a connection.

### Find the Feature

 > Settings  
> Other Settings  
> Car Settings  
> Auto Handsfree

Press	To
1 	scroll to On or Off
2 SELECT 	confirm the setting





## Power-Off Delay



When your phone is connected to a car kit, you can set it to stay on for a period of time after you switch off the ignition. This prevents the phone from draining your vehicle battery, but leaves the phone on long enough that you do not have to re-enter your unlock code when making short stops.

**Note:** This feature may not work with all car ignition switches.

**Caution:** If you select **Continuous**, the phone does not power off when you turn off the ignition. Be careful not to drain your vehicle battery if you select this option.

### Find the Feature

-  > Settings
- > Other Settings
- > Car Settings
- > Power-Off Delay

Press	To
1 	scroll to the time delay
2 <b>SELECT</b> 	confirm your selection


## Charger Time



When your phone is connected to a car kit, you can set it to charge itself for a specified time period after you switch off the ignition. This helps ensure that the phone battery gets fully charged while the vehicle is parked.



**Note:** This feature may not work with all car ignition switches.

### Find the Feature

-  > Settings
- > Other Settings
- > Car Settings
- > Charger Time

Press	To
1 	scroll to the charge time
2 SELECT 	confirm your selection



# Data Calls

---



An optional Motorola Original™ data kit (which includes a cable connector) lets you transfer data between your phone and a computer, Palm OS® compatible device, or Microsoft

Windows CE, Pocket PC, or Handheld PC device. You can:

- Synchronize phonebook and datebook information between your phone and a computer or PDA.
- Use your phone as a modem to connect to the Internet.
- Use your phone to send and receive data calls on your computer or hand-held device.

## ***Making a Cable Connection***

### ***Install the Software***

To transfer data between your phone and computer, you must install the software included with the Motorola Original data kit. See the data kit's user guide for more information.

### ***Attach the Cable***


Use a Motorola Original serial cable or Motorola Original USB cable to connect your phone to the external device.

**Note:** Not all devices are compatible with a cable connection. Check your computer or hand-held device to determine the type of cable you need.


## Serial Cable

### Do This

- 1 Plug the serial cable into the detachable head. Make sure that the Motorola logo on the detachable head and the metal shielding on the serial cable plug are both facing you.

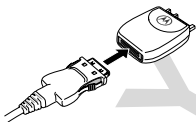

- 2 With the Motorola logo and the phone both facing you, plug the detachable head into the phone's accessory connector port.

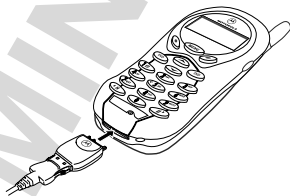

- 3 Plug the other end of the cable into the serial interface connection on the device and tighten the screws, if present.



## USB Cable



### Do This

- 4 Plug the end of the cable with the Motorola logo into the phone's accessory connector port. Make sure that the logo and the phone are both facing you.



- 5 Plug the other end—the USB connection—into the USB port on the external device.

## Synchronizing Data

You can synchronize phonebook and datebook information between your phone, computer, and PDA with Starfish TrueSync<sup>®</sup> software, a Motorola accessory product. See the TrueSync user guide for more information.

**Note:** TrueSync software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products.

## Sending a Data Call

Use this procedure to send data from a connected device.

Connect your phone to the device as described on pages 130-132 and do the following:



Do This	To
1 Check the phone	make sure that the phone is connected and powered on
2 Open the application on your computer	place the call through the application (such as dial-up-networking)
	<b>Note:</b> You cannot dial data numbers through your phone's keypad. You must dial them through your computer.
3 End the call from the connected device	close the call and connection when the transfer is complete



## Receiving a Data Call

Use this procedure to transfer data to your computer or hand-held device. Connect your phone to the device as described on pages 130-132.

### Set Up Your Phone

#### Find the Feature

 > Settings  
> Connection  
> Incoming Call

Do This	To
1 Press CHANGE 	select Next Call
2 Press 	scroll to Data In Only



Do This	To
3 Press <b>SELECT</b> (⓪)	set the call format
4 Connect your phone to the device	enable the data transfer

**Note:** You cannot answer incoming voice calls when your phone is in data mode. Any voice calls you receive are treated as unanswered calls. To return a voice call, reset your phone to voice mode as described on page 134.

## ***Transfer the Data***

Your phone notifies you when the data call arrives, and transfers the call to the connected device. Use the application running on the device to answer the call.

## ***End the Data Connection***

When the data transfer is complete, end the call from the connected device to close the connection.

## ***Reset Normal Voice Operation***

After making a data call, you must reset your phone to resume normal voice operations. You cannot receive voice calls when your phone is in data mode.

### **Find the Feature**

**MENU** > Settings  
 > Connection  
 > Incoming Call  
 > Next Call > Normal

Your phone also reverts to normal voice operations when you turn it off and then turn it back on.

# Security

---

## Assigning a New Code or Password

Your phone's unlock code is originally set to 1234, and the security code is originally set to 000000. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information. The unlock code must contain four digits, and the security code must contain six digits.

### Notes:

- Your service provider may retain your phone's security code for customer service purposes. In this case, you will not be able to use phone features that require you to enter the security code.
- If the unlock code is the only code you can change, the **New Passwords** menu is not available. In this case, change the unlock code by selecting: **MENU** > **Settings** > **Security** > **Phone Lock** > **Unlock Code**.

To change a code or password:






### Find the Feature

**MENU** > **Settings** > **Security**  
> **New Passwords**









Press	To
1 	scroll to the code or password
2 CHANGE 	select the code or password
3 keypad keys	enter your old code
4 OK 	submit your old code
5 keypad keys	enter the new code
6 OK 	assign the new code
7 keypad keys	re-enter the new code
8 OK 	confirm the new code

## If You Forget a Code or Password

If you forget your security code, contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

Press	To
1 	go to the unlock code bypass screen
2 keypad keys	enter your security code
3 OK 	submit your security code

# Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*

You can make emergency calls on your phone even when it is locked. For more information, see page 28.

## Lock Your Phone Manually

### Find the Feature

 > Settings > Security  
> Phone Lock  
> Lock Now

Press	To
1 keypad keys	enter your unlock code
2 OK (ⓘ)	lock the phone

## Set Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off.

### Find the Feature

 > Settings > Security  
> Phone Lock  
> Automatic Lock > On

Press	To
1 keypad keys	enter your unlock code
2 OK (ⓘ)	activate automatic lock





## Unlock Your Phone

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 OK (⓪)	unlock your phone

## Locking and Unlocking Your Keypad

You can lock your phone keypad to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

Press	To
 	lock or unlock your keypad

**Note:** Incoming calls and messages unlock the keypad.

## Restricting Calls

You can stop all incoming and/or outgoing calls, or you can restrict them to the numbers stored in your phonebook.

### Notes:

- You can make emergency calls when outgoing calls are restricted.
- Your phone still receives incoming text messages when incoming calls are restricted.

- When you restrict incoming calls to numbers stored in the phonebook, a valid incoming call may be restricted if caller ID information for the call is not available from the network.

### Find the Feature

**MENU** > Settings > Security  
> Restrict Calls

Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (ⓘ)	open the restrict calls menu
3 ⓘ	scroll to <b>Outgoing Calls</b> or <b>Incoming Calls</b>
4 <b>CHANGE</b> (ⓘ)	select the option
5 <b>CHANGE</b> (ⓘ)	change the <b>Allow</b> setting
6 ⓘ	scroll to <b>All</b> , <b>None</b> , or <b>Phonebook</b>
7 <b>SELECT</b> (ⓘ)	select the allowed calls

**Tip:** The phonebook is not locked when you restrict outgoing calls to numbers stored in the phonebook. To prevent a user from adding (and then calling) a new phonebook entry, you may want to lock the phonebook. See the “Lock Application” item on page 52.






# Activating Talk Secure

Your phone can attempt to send your calls using a high-security connection, to prevent others from intercepting them. For more information, see page 27.


 




## Find the Feature

 > Settings > Security  
> Talk Secure

Press	To
1  	scroll to Preferred or Off
2 SELECT 	switch talk secure on or off

# Troubleshooting

Check these questions first if you have problems with your phone. If you need additional help, contact the Motorola Customer Call Center at 1-800-331-6456 (United States) or 1-800-461-4575 (Canada).

Question	Answer
<b>Is your phone set up correctly?</b>	Press   . If you do not see your phone number, contact your service provider.
<b>Is your battery charged? Do you see  in the display?</b>	The battery level indicator should have at least one segment showing (  ). If it does not, recharge your battery. See page 18.
<b>Does the handset have a signal? Do you see  in the display?</b>	The signal strength indicator should have at least one segment showing (  ). If it does not, move to an area with a stronger signal to use your phone.
<b>Is the earpiece volume too low?</b>	While on a call, press the upper volume key on the side of your phone.





Question	Answer
<b>Is the other party unable to hear you?</b>	Your phone may be muted. Press <b>UNMUTE</b> (🔊) if necessary to unmute the phone.  Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.
<b>Has the phone been damaged, dropped, or gotten wet?</b>	Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
<b>Was a non-Motorola battery or battery charger used?</b>	

The following refer to specific problems:

Problem	Solution
<b>My phone was stolen. To whom should I report this?</b>	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
<b>I forgot my password.</b>	See page 136.


Problem	Solution
<p><b>I pressed the power key, but nothing happened.</b></p>	<p>Be sure to press and hold  (the power key) until the display appears and you hear an alert. This could take several seconds. If nothing happens, check that a charged battery is installed. See page 17.</p>
<p><b>The display says: Enter Unlock Code. How do I unlock my phone?</b></p>	<p>Enter the factory-preset unlock code (1234), or the last four digits of your phone number. If this fails, call your service provider (the company that sends you your monthly wireless service bill).</p>
<p><b>My phone asks for an unlock code when I try to open a feature.</b></p>	<p>The application you want is locked. If you do not know the unlock code, see page 136.</p>
<p><b>My phone does not ring.</b></p>	<p>If you see  or  in the display, then the ringer is turned off. See page 94.</p> <p>Also, the ringer may be set to <b>Silent</b> even though your phone is set to an audible ring style. See page 94.</p>










Problem	Solution
<p><b>My phone rings even though I selected the Silent (or Vibrate) ring style.</b></p>	<p>The ringer may be set to play a tone even though your phone is set to a silent ring style. See page 94.</p>
<p><b>I tried to place a call and heard an alternating high/low tone.</b></p>	<p>Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until you see the idle display before making a call.</p>
<p><b>I cannot send/receive calls.</b></p>	<p>Make sure that you have a phone signal (see the “Signal Strength Indicator” item on page 23). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings.</p> <p>Your phone also may have the <b>Restrict Calls</b> feature turned on. If you know the unlock code, you can change this setting in the security menu (<b>MENU</b> &gt; <b>Settings</b> &gt; <b>Security</b>).</p>

Problem	Solution
<b>My phone has poor reception and drops calls.</b>	<p>Make sure that your antenna is not bent or damaged.</p> <p>Also, make sure you have a phone signal (see the “Signal Strength Indicator” item on page 23). Stay clear of any obstructions such as bridges, parking garages, or tall buildings.</p>
<b>I cannot hear others on my phone.</b>	<p>While on a call, press the upper volume key. The display should show the volume increasing.</p> <p>Also, make sure that your phone’s earpiece is not blocked by its carrying case.</p>
<b>I cannot open my message inbox.</b>	<p>Before you can use text messages, you must set up the message inbox. See page 84.</p>
<b>How do I see the calls I sent or received?</b>	<p>To see the most recent calls you dialed or received:</p> <p> &gt; Recent Calls        &gt; Received Calls  <b>or</b>        Dialed Calls</p>





Problem	Solution
<p><b>My phone will not send voicemail commands, passwords, or other codes.</b></p>	<p>Your phone sends commands and passwords as DTMF tones. You can set your phone's DTMF tones to be <b>Long</b>, <b>Short</b>, or <b>Off</b>. If you have trouble sending numbers, try changing the DTMF setting.</p> <ol style="list-style-type: none"> <li>From the idle display, press:           <ul style="list-style-type: none"> <li> &gt; <b>Settings</b></li> <li>&gt; <b>Other Settings</b></li> <li>&gt; <b>Initial Setup &gt; DTMF</b></li> </ul> </li> <li>Press  to scroll to <b>Long</b> or <b>Short</b> (some analog networks may not recognize short tones).</li> <li>Press <b>SELECT</b> () to select it.</li> </ol>
<p><b>My phone's display is too dark.</b></p>	<p>Use the <b>Contrast</b> feature to change the level of contrast in your display. See page 55.</p> <p>You can also use the <b>Backlight</b> feature to change the length of time that the display backlight stays on. See page 54.</p>

Problem	Solution
<p><b>My battery didn't last as long as I expected. What can I do to extend battery life</b></p>	<p>Your battery's performance is affected by charge time, feature use, temperature changes, backlight use, and other factors. For tips on extending your battery life, see page 25.</p>
<p><b>I am unable to record a voice note, voice name, or voice shortcut.</b></p>	<p>Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.</p>
<p><b>My TTY device doesn't work with my phone.</b></p>	<p>Your phone must be set to a TTY mode for the phone to detect your TTY device. See page 124.</p>
<p><b>I plugged the data cable into my phone but my phone did not beep. How do I know if the data cable is ready to go?</b></p>	<p>The beep indicates that you are set up correctly. If you did not hear a beep, make sure that both ends of the data cable are connected—the smaller end to your phone and the larger end to your computer.</p> <p>Also, your computer may have deactivated the port to save power. Try opening an application that uses the port, like a fax or dial-up application, to automatically activate the port.</p>





Problem	Solution
<p><b>My phone beeped when I attached the data cable, but my data applications don't work.</b></p>	<p>You must be in an area with digital coverage. Check your phone's display for the digital signal indicator (D).</p> <p>Some wireless networks may not support data transmission. If you see the digital indicator, but you are roaming on an unfamiliar network, this may be the case.</p> <p>Also, remember that data transmission usually requires a subscription. Call your service provider for more information.</p>
<p><b>When sending data with the data cable, why does the computer show a connection rate of 19200 Kbps?</b></p>	<p>19200 Kbps is the data transfer rate of the connection between your computer and the phone. The rate of the connection between your phone and the network is displayed on your phone, and will be either 14400 or 9600 Kbps.</p>
<p><b>I can't end my data call by closing the application on my computer. What can I do?</b></p>	<p>Try pressing <b>END</b> on your phone. Or try disconnecting the cable or turning off the phone. If possible, always close the connection through your computer, as these alternative methods may disrupt the application on your computer.</p>

Problem	Solution
<b>I launched the micro-browser but the display says:</b> <b>Service Not Available.</b>	You may be in an area without service. If you have wireless service, look in the display for the digital signal indicator (D). If you do not see the indicator, you may be in an area that has only analog service or no service at all. If you see the digital signal indicator, you may be connected to a digital network that does not support Internet access.
<b>I launched the micro-browser but the display says:</b> <b>Data Server Unavailable.</b>	Try again in a few minutes. The servers may be temporarily busy.



# Programming Instructions

---

Follow this procedure if you need to program your phone's phone number(s).

**Note:** Programming is normally done by a trained technician at the site of purchase. Users should not make changes other than ones in the following procedure.

Before programming, ask your service provider for your:

- Carrier System ID (a one- to five-digit number)
- 10-digit MIN (Mobile Identification Number)

Press	To
1  , the Carrier System ID number, , ,	enter programming mode
2 , , , , , 	enter the security code
(This is the security code that is in the phone when it is shipped from the factory.)	
3	submit the security code
4 , 	scroll to MIN
5	open the MIN display

Press	To
6 keypad keys for the 10-digit MIN	enter the new MIN
7 OK (⏎)	store the new MIN
8 DONE (⏏)	exit programming mode

PRELIMINARY



## ***Specific Absorption Rate Data***

---

### ***The Motorola 125t wireless phone meets the government's requirements for exposure to radio waves.***

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by Health Canada for Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by Health Canada is 1.6W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.35 W/kg, and when worn on the body, as described in this user guide, is 0.64 W/kg. (Body-worn measurements

differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

ITC02-155

# **The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones**

---



FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known—and what remains unknown—about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

## ***Why the concern?***

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate any adverse health effects associated with the use of mobile phones.

## ***What kinds of phones are in question?***

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna—

the primary source of the RF—and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

### ***How much evidence is there that hand-held mobile phones might be harmful?***

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies that showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously—up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

- 1 In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve

sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the National Cancer Institute is expected to bear on the accuracy and repeatability of these results.<sup>1</sup>

- 2 Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus, follow-up research is necessary.<sup>2</sup>

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research

recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- 1 Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.<sup>3</sup>
- 2 In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used.

Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.<sup>4</sup>

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

### ***What is known about cases of human cancer that have been reported in users of hand-held mobile phones?***

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of

mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

### ***What is FDA's role concerning the safety of mobile phones?***

Under the law, FDA does not review the safety of radiation-emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- support needed research into possible biological effects of RF of the type emitted by mobile phones
- design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function

- cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

### ***In the absence of conclusive information about any possible risk, what can concerned individuals do?***

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if people are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle



- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package
- a headset with a remote antenna to a mobile phone carried at the waist

Again, the scientific data do not demonstrate that mobile phones are harmful. But if people are concerned about the radio frequency energy from these products, taking the simple precautions outlined above can reduce any possible risk.

### ***Where can I find additional information?***

For additional information, see the following Web sites:

**Federal Communications Commission (FCC) RF Safety Program** (select “Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters”):

<http://www.fcc.gov/oet/rfsafety>

**World Health Organization (WHO) International Commission on Non-Ionizing Radiation Protection** (select Qs & As): <http://www.who.int/emf>

**United Kingdom, National Radiological Protection Board:**

<http://www.nrpb.org.uk>

**Cellular Telecommunications Industry Association (CTIA):**

<http://www.wow-com.com>

**U.S. Food and Drug Administration (FDA) Center for Devices and Radiological Health:**

<http://www.fda.gov/cdrh/consumer/>

1. Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
2. Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, D.C.; and personal communication, unpublished results.
3. Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915-MHz simulated mobile phone signal on cognitive function in man. *Int. J. Radiat. Biol.*, April 8, 1999.
4. Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors: a case-control study. *Int. J. Oncol.*, 15: 113-116, 1999.

ITC00-010

PRELIMINARY

# **Motorola Limited Warranty for the United States and Canada**

---

## **What Does this Warranty Cover?**

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

## **Products and Accessories**

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Products and Accessories</b> as defined above, unless otherwise provided for below.	<b>One (1) year</b> from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
<b>Decorative Accessories and Cases.</b> Decorative covers, bezels, PhoneWrap™ covers and cases.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.
<b>Monaural Headsets.</b> Ear buds and boom headsets that transmit mono sound through a wired connection.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
<b>Consumer and Professional Two-Way Radio Accessories.</b>	<b>Ninety (90) days</b> from the date of purchase by the first consumer purchaser of the product.
<b>Products and Accessories that are Repaired or Replaced.</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.

### **Exclusions**

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

**Use of Non-Motorola Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

### **Software**

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Software.</b> Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	<b>Ninety (90) days</b> from the date of purchase.

### **Exclusions**

**Software Embodied in Physical Media.** No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

**Software NOT Embodied in Physical Media.** Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

### **Who is Covered?**

This warranty extends only to the first consumer purchaser, and is not transferable.

### **What Will Motorola Do?**

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent

reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

## ***How to Obtain Warranty Service or Other Information?***

<b>USA</b>	<b>Phones</b> 1-800-331-6456 <b>Two-Way Radios</b> 1-800-353-2729 <b>Pagers</b> 1-800-548-9954
<b>Canada</b>	<b>All Products</b> 1-800-461-4575
<b>TTY</b>	1-888-390-6456
For <b>Accessories</b> and <b>Software</b> , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

## ***What Other Limitations Are There?***

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT

(INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

**Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.**

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

ITC02-162

## ***Product Registration***

---

Online Product Registration:

<http://www.motorola.com/warranty>

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

## ***Export Law Assurances***

---

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.



# Index

---

## A

### accessories

optional 10, 79, 109, 124,  
126, 130

standard 17

### accessory connector port 1

### active line indicator

defined 23

illustration 22

### Add Digits feature 59

### alarm 74, 76

### alert

creating 96–103

defined 94

reminders, turning on/off  
103

selecting 94–95

turning off 29

### analog signal indicator

defined 23

illustration 22

### animation 55

### answering a call 20

### antenna 1

### application, locking 52

### appointments. *See*

datebook

### Attach Number feature 31, 59

## B

### backlight 54

### battery

car kit charger time 128

charging 18–19

extending battery life  
25–26, 54, 55

installing 17–18

level indicator 19, 22, 23

meter 51

### battery save 55

### blackjack 118–120

### block cursor, defined 37

### browse text mode 38

### browser. *See* micro-browser

## C

### calculator 115–117

### calendar. *See* datebook

### call

adding digits after phone  
number 59

alert, creating 96–103

- call (continued)
  - alert, selecting 94–95
  - alert, turning off 29
  - answer options 52
  - answering 20
  - call waiting 32
  - calling card 66
  - canceling 29
  - datebook, opening 33
  - deleting 58–59
  - dialed calls list 31, 33, 58–59
  - dialing 20
  - dialing a recent call 58–59
  - emergency number 28
  - ending 20
  - in-call timer 52
  - making 20
  - message center, accessing 33
  - muting 33
  - prefix digits, inserting 31
  - privacy 27, 140
  - received calls list 31, 33, 58–59
  - receiving 20
  - recent calls 58–59
  - restricting 138–139
  - ring style, setting 94
  - secure connection 27, 140

- call (continued)
  - speakerphone, activating 33
  - storing 58–59
  - three-way call 32
  - timing 60–62
  - unanswered call 28
  - voice dial 31
- call timers 60–62
- call waiting 32
- caller ID 27, 28
- calling card call 66
- calling line identification. *See* caller ID
- car kit
  - automatic answer 127
  - automatic hands-free 127
  - charger time 128
  - power-off delay 128
- clock 22
- codes
  - changing 135–136
  - default 19, 135
  - if you forget a code/password 136
- computer
  - synchronizing data 78
- contrast, display 55
- currency converter 117

cursor 37  
customer service, calling  
    48

## D

data call  
    making 130–134  
date, setting 54  
datebook  
    adding an event 76  
    alarm 76  
    calendar 74  
    changing event  
        information 76  
    copying an event 77  
    day view 75  
    deleting an event 78  
    event reminders, turning  
        on/off 103  
    event view 75  
    reminders 76  
    synchronizing 132  
    synchronizing entries 78  
    week view 74  
deleting a call 58–59  
dialed calls list 31, 33,  
    58–59  
dialing a number 20  
Dialing Menu 60  
digital signal indicator  
    defined 23  
    illustration 22

display  
    animation 55  
    backlight 54  
    contrast 55  
    described 22–24  
    greeting 53  
    idle display 22  
    illustration 22  
    language 55  
    zoom setting 54  
    zooming in/out 24  
drafts folder 49  
DTMF tones 33, 55, 59,  
    146

## E

earpiece  
    illustration 1  
    volume, adjusting 24  
email  
    address, storing in  
        phonebook 64–66  
email, sending 69, 89–91  
emergency number 28  
end key  
    functions 1, 20  
    menu functions 34  
ending a call 20  
Enter UnLock Code message  
    136, 138  
event alert 94–95

exchange rate, calculating  
117  
external device  
synchronizing data 78

## F

factory settings, resetting  
55–56  
falling numbers 120–121  
flashing cursor, defined 37  
FM Stereo Radio Headset  
48, 79–81

## G

games 118–122  
greeting, display 53

## H

hands-free mode  
automatic answer 127  
automatic call routing  
127  
charger time 128  
defined 126  
power-off delay 128  
speakerphone, activating  
33  
headset  
automatic answer 127  
FM Stereo Radio Headset  
48, 79–81

headset jack 1  
high-security connection  
27, 140

## I

idle display, defined 22  
in use indicator  
defined 23  
illustration 22  
inbox, text message 84–85  
in-call timer 52  
incoming call  
canceling 29  
Incoming Call message 27  
indicators  
active line 22, 23  
battery level 19, 22, 23  
digital/analog signal 22,  
23  
in use 22, 23  
loud ring style 24, 94  
menu 22, 23  
message waiting 22, 23,  
86  
missed call 28  
ring style 22, 24, 94  
roam 22, 23  
signal strength 22, 23  
silent alert 24  
silent ring style 24, 94  
soft ring style 24, 94

indicators (continued)  
vibrate and ring style 24,  
94  
vibrate style 24, 94  
voice message waiting  
22, 23, 83  
voice name 63  
iTAP software 43–46

## K

key  
end 1, 20, 34  
left soft key 1, 22, 34, 123  
lock 52, 138  
menu 1, 10, 23, 34  
power 1, 19  
right soft key 1, 22, 34,  
123  
scroll 1, 34  
send 1, 20, 58  
voice 1, 68, 107  
volume control 1, 24  
keypad  
answering calls 52  
locking and unlocking 52,  
138  
volume, setting 96

## L

language, setting 55  
left soft key  
customizing 123  
functions 1, 22, 34  
**Line Not Secure** message  
28  
lock  
applications 52  
keypad 52, 138  
phone 137–138  
voice notes 111  
lock application feature 52  
loud ring style indicator 24,  
94  
**Low Battery** message 23

## M

making a call 20  
master clear 56  
master reset 55  
**Memory is Full!** message  
86  
**Memory is Low!** message  
86  
menu  
**Browser Menu** 114  
**Calculator Menu** 115  
**Datebook Menu** 74, 75  
**Dialing Menu** 31, 60

- menu (continued)
  - entering text 36–37, 38–46
  - features 47–57
  - language, setting 55
  - Last Calls Menu** 59
  - lists 35
  - locking applications 52
  - My Tones Menu** 101, 103
  - navigating 10, 34
  - personalizing 123
  - Phonebook Menu** 63
  - Quick Note Menu** 92
  - rearranging features 123
  - scroll feature 54
  - Text Msg Menu** 87–88
  - using features 10, 35–37
  - Voice Notes Menu** 108, 109, 110
- menu indicator
  - defined 23
  - illustration 22
- menu key 1, 10, 23, 34
- message
  - deleting, text 86–88
  - dialing number from 30
  - drafts folder 49
  - inbox setup, text message 84–85
  - locking, text 86–88
  - outbox 49, 92
  - quick note 91–92

- message (continued)
  - reading, text 86–88
  - receiving, text 85–86
  - reminders, receiving 83, 86
  - reminders, turning on/off 103
  - sending 31, 89–91
  - sound 89
  - status 92
  - text 84–93
  - voicemail 82–83
- message waiting indicator
  - defined 23
  - displayed 86
  - flashing 86
  - illustration 22
- micro-browser
  - sound 114
  - using 113–114
- microphone 1
- missed call indicator 28
- Missed Call** message 28
- missed call, dialing 31
- muting a call 33
- my telephone number 3, 21, 33, 50
- my tones 96–103
- My Tones Menu** 101, 103

## N

- network settings 56
- notepad
  - defined 60
  - entering digits 60
  - retrieving digits 60
- number, viewing your own 3, 50
- numeric text mode 38

## O

- one-touch dial
  - defined 30
  - using 30
  - voicemail number 30
- optional accessory, defined 10
- optional feature, defined 10
- outbox 49, 92

## P

- passwords. *See* codes
- pause character 67
- phone
  - active line indicator 23
  - alert, turning off 29
  - answer options 52
  - codes 135–136
  - erase user-entered information 56

- phone (continued)
  - feature specifications 33, 51
  - information 33
  - keypad, locking and unlocking 52, 138
  - locking 137–138
  - muting a call 33
  - reset all options 55
  - secure connection 27, 140
  - security code 135
  - specifications 33, 51
  - turning on/off 19
  - unlock code 19, 135, 136
  - unlocking 19, 137–138
  - voice dial 31
- phone number
  - active line indicator 23
  - active phone line, changing 51
  - adding digits after 59
  - attaching to prefix digits 31
  - attaching two numbers 59
  - redialing 27
  - seeing your own 21, 33
  - sending text message to 31
  - storing in phonebook 64–66

phone number (continued)  
  viewing your own 3, 50  
  voice dial 31

## phonebook

  attaching two numbers  
    59  
  capacity, checking 71  
  deleting an entry 70  
  dialing a number 69  
  editing an entry 70  
  email address 63  
  entry details 63  
  entry name 63  
  number type indicator 63  
  one-touch dial 30  
  phone number 63  
  prefix digits, inserting 31  
  primary number, setting  
    70  
  ringer ID,  
    activating/deactivating 95  
  ringer ID, defined 65, 95  
  ringer ID, setting 65  
  sending an email 69  
  sorting entries 72  
  speed dial number 63, 65  
  speed dial number,  
    defined 30  
  speed dial, using 30  
  storing an entry 64–66  
  synchronizing 132

phonebook (continued)  
  voice name entry 68  
  voice name indicator 63  
  PIN code 66  
  power key 1, 19  
  predictive text entry 43–46  
  privacy, call 27, 140

## Q

### quick dial

  changing number(s) 54  
  using 48

### quick note 91–92

  defined 84

## R

### radio 79–81

  received calls list 31, 33,  
    58–59

### recent calls 58–59

### redial

  busy number 27

### reminders

  datebook 76  
  defined 103  
  text message 86  
  turning on/off 103  
  voicemail message 83

### restricting calls 138–139

### right soft key

  customizing 123  
  functions 1, 22, 34



- ring alert
  - selecting 94–95
  - turning off 29
- ring style
  - customizing 94–96
  - defined 94
  - indicators 24, 94
  - setting 94
- ring style indicator
  - defined 24, 94
  - illustration 22
- ringer
  - volume, adjusting 24
  - volume, setting 96
- ringer ID
  - activating/deactivating 95
  - defined 65, 95
  - listed in phonebook entry 63
  - setting for phonebook entry 65
- roam indicator
  - defined 23
  - illustration 22
- S**
- scroll feature 54
- scroll keys 1, 34
- secure connection 27, 140
- security code
  - changing 135–136
- send key 1, 20, 58
- short message service. *See* text message
- shortcuts
  - creating 105–106
  - standard 104
  - using 106
- signal strength indicator
  - defined 23
  - illustration 22
- silent alert indicator 24
- silent ring style indicator 24, 94
- SMS. *See* text message
- soft keys
  - customizing 123
  - functions 22, 34
  - illustration 1
  - labels 22
- soft ring style indicator 24, 94
- sound
  - storing 89, 114
- speakerphone, activating 33
- speed dial
  - changing number 65
  - number, defined 30
  - sorting phonebook entries by 72
  - using 30
- standby time, increasing 26
- storing a call 58–59

symbol text mode 42–43  
symbols, entering 42–43  
synchronizing data 78

## T

**Talk Secure** feature 27, 140

tap method text entry  
39–41

telephone number, viewing  
your own 3, 50

### text

- block cursor 37
- browse mode 38
- character chart 41
- entering from keypad  
38–46
- entry mode, changing 38
- flashing cursor 37
- iTAP software predictive  
text entry 43–46
- numeric mode 38
- symbol chart 42
- symbol mode 42–43
- tap method 39–41

### text message

- defined 84
- deleting 86–88
- dialing number from 30
- drafts folder 49
- inbox setup 84–85
- locking 86–88
- outbox 49

### text message (continued)

- quick note 91–92
- reading 86–88
- receiving 85–86
- reminders 86
- sending 31, 89–91
- sound 89
- status 92

text mode, changing 38

three-way call 32

time, setting 54

timers 60–62

travel charger, using 18

TrueSync 78, 132

TTY device 124–126

## U

### unlock

- keypad 52, 138

- phone 137–138

unlock code 136

- bypassing 136

- changing 135–136

- entering 19, 137, 138

## V

### vibrate alert

- selecting 94–95

- turning off 29

vibrate and ring style

- indicator 24, 94

- vibrate ring style
  - setting 94
- vibrate style
  - indicator 24, 94
- video poker 121–122
- voice dial
  - dialing a number 31, 69
  - recording voice name 68
- voice key
  - dialing a number 31
  - functions 1
  - recording a voice name 68
  - recording a voice note 107
- voice message waiting
  - indicator 22, 23, 83
- voice name
  - defined 68
  - phonebook indicator 63
  - recording 68
- voice notes 107–112
- voice shortcut
  - creating 105–106
  - defined 105
  - using 106
- voicemail
  - dialing with one-touch dial 30
  - reminders, turning on/off 103
  - using 82–83

- volume
  - earpiece 24
  - keypad 96
  - ringer 24, 96
- volume keys 1, 24

## W

- wait character 67
- warranty 162–166
- Web pages 113–114

## Z

- zoom setting 54
- zooming in/out 24

U.S. patent Re. 34,976



**MOTOROLA**

# **Wireless Phone Safety Tips**

*“Safety is your most important call!”*


Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.



- 2 **When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.
- 3 **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 **If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 **Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.

- 
- 8 **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.\*
- 9 **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.\*
- 10 **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*
- PRELIMINARY

\* Wherever wireless phone service is available.

**Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.**



PRELIMINARY

For more information,  
please call  
1-888-901-SAFE  
or visit the  
CTIA Web site at  
[www.wow-com.com](http://www.wow-com.com)<sup>TM</sup>

ITC00-011

