

INSTRUCTION MANUAL

- A preliminary draft copy of the User's Manual follows this cover page.
- The User's Manual will have the following text added to it:


"NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help."


HELLOMOTO

Introducing your new Motorola PEBL U6c CDMA wireless phone. Here's a quick anatomy lesson.



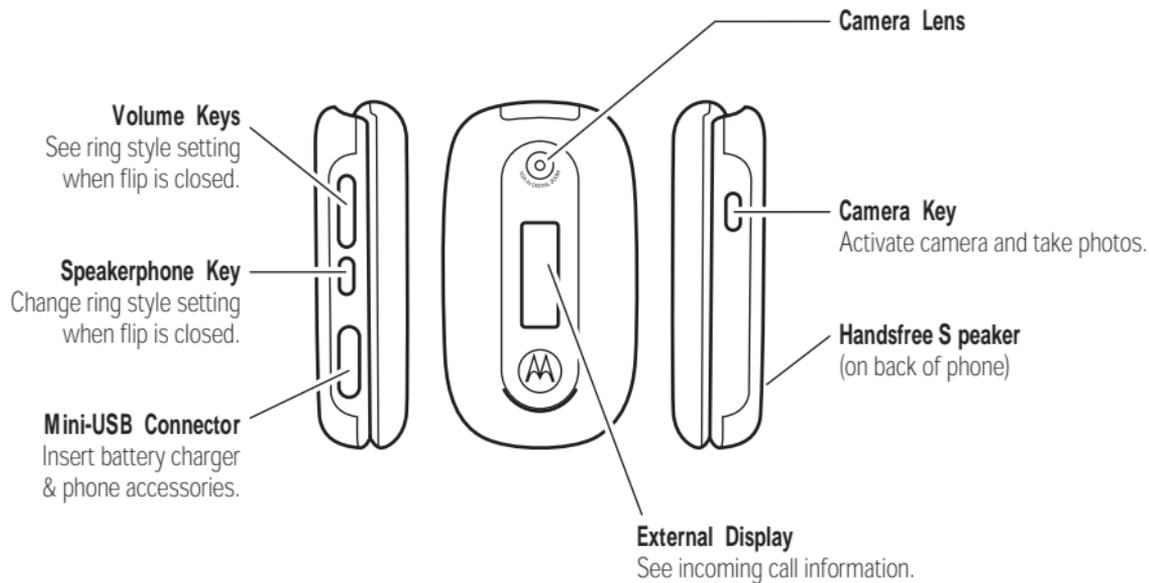

Home Screen

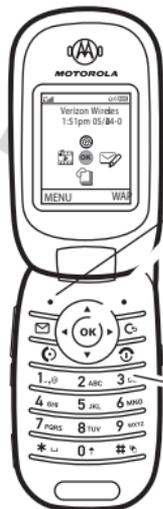

2 Press the left soft key to open the **Main Menu**

1 Press and hold the **Power Key**  for a few seconds or until the display lights up to turn on your phone.

Main Menu



3 Press the Navigation Key **up, down, left, right** () to highlight a menu feature.

4 Press the **OK** key to select.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com

Motorola Argentina S.A
Suipacha 1111 - Piso 18
C1008AAW Buenos Aires
ARGENTINA

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2006.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 680xxxxxx-O

Contents

menu map	7	basics	20	themes	32
Use and Care	9	display	20	display appearance	32
essentials	10	text entry	22	answer options	32
about this guide	10	volume	26	calls	33
battery	10	navigation key	26	turn off a call alert	33
turn it on & off	13	speakerphone key	26	all calls	33
make a call	13	external display	27	redial	34
answer a call	13	return unanswered call		return a call	34
store a phone number	13	in external display	27	caller ID	34
call a stored phone		handsfree speaker	28	emergency calls	35
number	14	codes & passwords	28	voicemail	35
your phone number	14	lock/unlock side keys	29	other features	37
main attractions	15	lock & unlock phone	29	advanced calling	37
photos	15	customize	30	phonebook	39
send message	17	ring style	30	messages	41
cable connections	19	time & date	31	personalize	42
		wallpaper	31	call times & costs	45

handsfree	45
data & fax calls	46
network.	47
personal organizer. . .	47
security.	48
fun & games.	49
service & repairs. . .	50
SAR Data.	51
SAR Data.	53
Safety Information .	56
Warranty (except	
Mexico)	62
Warranty (Mexico)..	66

menu map

main menu



Phonebook

- Voice Mail



Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Data Times
- Data Volumes *



Message Center

- New Message
- Inbox
- Outbox
- VoiceMail
- Templates
- Safebox
- Drafts
- Settings



Downloads

- Style
- Style Detail
- Sounds



WAP



Tones & Images

- Pictures
- Sounds



Entertainment

- Voice Portal



Office Tools

- Calendar
- Calculator
- Shortcuts
- Alarm



Settings

* optional features

This is the standard main menu layout. Your phone's menu may be a little different.

settings menu

- **Personalize**
 - Main Menu
 - Home Keys
 - Color Style
 - Greeting
 - Banner
 - Flip Tone
 - Wallpaper
 - Themes
 - Screen Saver
 - Speed Dial
- **Alert Styles**
 - Style
 - Loud Detail
 - Sounds
- **Network**
 - Current Network
 - Set Mode
 - Service Tone
 - Call Drop Tone
- **Security**
 - Phone Lock
 - Lock Side Keys
 - Lock Application
 - Restrict Calls
 - New Passwords
- **In-Call Setup**
 - In-Call Timer
 - Answer Options
 - Speaker Phone
- **Browser Setup**
 - Vivo Wap
- **Connection**
 - Incoming Call
- **Phone Status**
 - My Tel. Number
 - Active Line
 - Battery Meter
 - Other Information
- **Initial Setup**
 - Time and Date
 - SubLCD
 - Auto PIN Dial
 - Auto Redial
 - Backlight
 - Scroll
 - Animation
 - Language
 - Master Reset
 - Master Clear
- **Car Settings**
 - Auto Answer
 - Auto Handsfree
- **Supplementary**
 - Call Forward
 - Call Waiting
 - Call Forward to Voicemail
- **Easy Prefix**
 - Auto Change
 - Pref. Op.
 - Override

* optional features

use and care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

essentials

CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

about this guide

This guide shows how to locate a menu feature as follows:

Find it: Press MENU >  Recent Calls > Dialed Calls

This example shows that, from the home screen, you press the *left soft key* MENU to

open the menu. Scroll to and select  Recent Calls, then scroll to and select Dialed Calls.

Press the *navigation key*  to scroll to a menu feature. Press the *left soft key* MENU or the *center key*  to select the highlighted menu feature.

battery

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.



- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.




Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the “Safety and General Information” section included in the gray-edged pages at the back of this guide.


battery installation

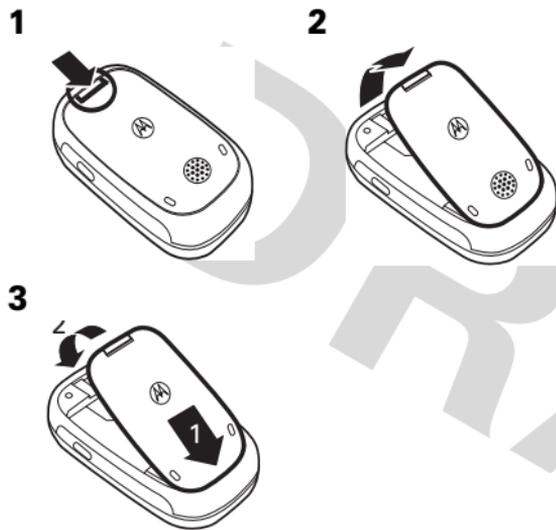

battery charging

New batteries are not fully charged. Plug the battery charger into your phone and

an electrical outlet. Your phone might take several seconds to start charging the battery. Your display shows **Charge Complete** when finished.

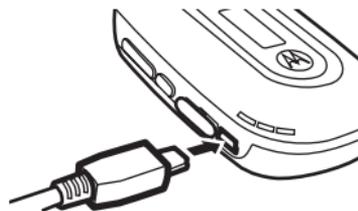

When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete. At least one segment of the battery level indicator must be visible to ensure full phone functionality while charging.

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

turn it on & off

To turn on your phone, press and hold the *power key*  for a few seconds or until the display turns on. If prompted, enter your four-digit unlock code.



To turn off your phone, press and hold  for two seconds.

make a call

Enter a phone number and press the *send key*  to make a call.

Note: You must enter the phone number from the home screen.

To "hang up," close the phone flip or press the *end key* .

answer a call

When your phone rings and/or vibrates, just open the phone flip or press  to answer.

To "hang up," close the phone flip or press the *end key* .

store a phone number

You can store a phone number in **Phonebook**:

- 1 Enter a phone number in the home screen.
- 2 Press the *right soft key* **STORE** .

- 3 Enter a name and other details for the phone number. To select a highlighted item, press the *center key* .
- 4 Press the *right soft key* *Done* to store the number.

To edit or delete a **Phonebook** entry, see page 39.

To store an email address, press **MENU** >  **Phonebook** > **Create New Phonebook** > **Email Address**. Enter the new name and email information.

call a stored phone number

Find it: Press **MENU** >  **Phonebook**

- 1 Scroll to the **Phonebook** entry.

Shortcut: In **Phonebook**, press keypad keys to enter the first letters of an entry you want. You can also press  to see your VIP entries and  to see your general entries.

- 2 Press  to call the entry.

your phone number

Press **MENU** >  **More** >  **Settings** > **Phone Status** > **My Tel. Number**.

Tip: Want to see your phone number while you're on a call? Press **Options** > **My Tel. Number**.

main attractions


You can do much more with your phone than make and receive calls!

photos

take a photo

To see the camera viewfinder, press:

MENU >  **Tones & Images** > **Pictures** (see illustration on page 1) to see the camera viewfinder.

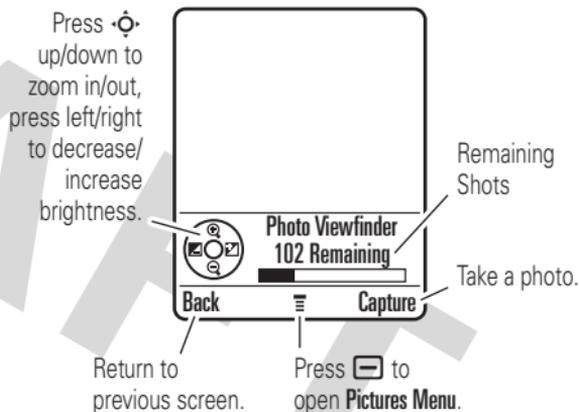

- 1 Point the camera lens at the photo subject.

2 Press the **Camera** key or **[OK]** to take a photo.

3 Press **[OK]** > **OPTIONS** to select a storage option: **Send in Message, Save, Apply to Phonebook, Apply as Wallpaper, Apply as Screen Saver, or Print and Store.**

or

Press the **Erase** key to delete the photo and return to the active viewfinder.

camera settings

When the viewfinder is active, press the left soft key to select camera options:

options	
Change Resolution	Adjust the resolution of the photo to 160 x 120, 320 x 240, or 640 x 480.

options	
Change Quality	Adjust the quality of the photo to Low, Medium, or High.
Change Brightness	Use the <i>navigation key</i> ·◊· to adjust the brightness of the photo.
Change Contrast	Use the <i>navigation key</i> ·◊· to adjust the contrast of the photo.
Change Image Style	Adjust the image style. Use the <i>navigation key</i> ·◊· to choose from the following selections: Normal, B&W, Original/Yellow/Cyan/Red Sepia, Negative, Emboss, Sketch, or UV Sel. Red/Yellow/Green/Blue.

options	
Mirror Effect	Adjust the effect of the photo. Use the <i>navigation key</i>  to choose from the following selections: <i>None, Horizontal, Vertical, or Horz/Vert.</i>
Multi Shot	Adjust the number of frames to be included in the photo: <i>None, 3 Frames, or 6 Frames.</i>
Night Mode	Turn the night mode on or off.
Shutter Tone	Choose from five different shutter tones.
Picture Status	See the current settings applied to the photo.
Delete All	Delete the unlocked files in the camera memory.
Memory Status	See the available space in the camera memory.

send message

Find it: Press MENU >  > Messaging > New TXT Message

- 1 Scroll to the name of a **Phonebook** entry and press the  key.

or

Scroll to **New Phone Number** or **New Email Address** and press the  key to enter a new phone number or email address.

- 2 Press the **NEXT** key to go to the **Create** screen.
- 3 Enter the text of the message.
Press the **OPTIONS** key to display a list of message options (see the table following these steps).
- 4 When you finish entering the message, press the  key.

Your phone displays the **Send** screen, with the **Call** entry area highlighted.

- 5** To change the callback number, type a new number, then press **OK** when finished.
- 6** Scroll to the **Priority** entry area, then scroll left or right to select **Normal** or **Urgent**.
- 7** Scroll to the **Receipt** entry area, then scroll left or right to select **Yes** or **No**.
- 8** Press the **SEND** key to send the message.

or

Select **OPTIONS** to preview the message, see details about the message, or save the message to the **Drafts** folder.

Press the **OPTIONS** key from the **Create** screen to display the following selections:

options	
Next	Go to the Create screen.
Insert	Enter Quick Notes, Pictures, or Sounds .
Entry Mode	Set the current entry mode (see page 22).
Entry Setup	Specify the default primary and secondary entry modes see page 22).
Cut	Cut message text: Select Cut , scroll to highlight the message text you wish to cut, then press the OK key.


options	
Copy	Copy message text: Select Copy , scroll to highlight the message text you wish to copy, then press the  key.
Paste	Paste cut or copied text into the message, at the cursor location.

Note: Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need. To make **data calls** through a connected computer, see page 46.



cable connections

Your phone has a mini-USB port so you can connect it to a computer to transfer data.

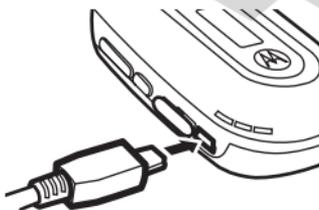


basics

See page 1 for a basic phone diagram.

display

The *home screen* shows when you turn on the phone. To dial a number from the home screen, press number keys and .


Note: Your home screen may look different from the one below.

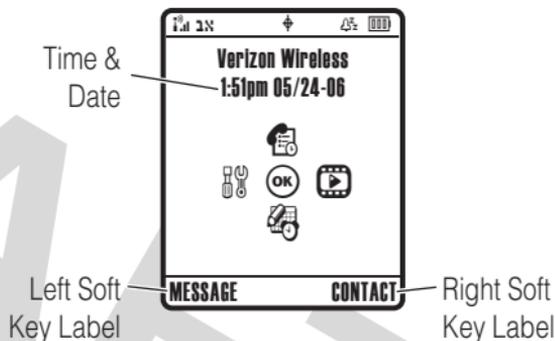

Soft key labels show the current soft key functions. For soft key locations, see page 1.

Status indicators can show at the top of the

home screen and on the external display:

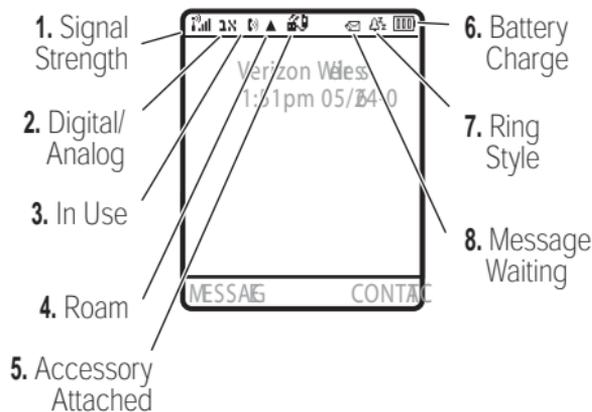

Signal Strength Indicator – Vertical bars show the strength of the network connection. You can't make or receive calls when or shows.

Digital/Analog Signal Indicator – Shows whether you are receiving a digital or analog signal.

In Use Indicator – Shows that a call is in progress. Other indicators can include:



= datebook alarm

= packet data

= status secure data

= voice privacy

Roam Indicator – Shows when your phone using a network outside your home network.

Accessory Indicator – Shows when your phone is charging or is plugged into a data connector.

Battery Charge Indicator – Vertical bars show battery charge level. Recharge the battery when you see and hear the low battery alert.

Ring Style Indicator – Shows the ring style setting.

🔊 = Loud

🔊🔊 = Vibrate

🔊🔊 = Soft

🔊🔊 = Vibe&Ring

🔊🔊 = Silent

Message Indicator – Shows when you receive a text message.



Indicators can include:


📧 = text and voicemail message

📧 = voicemail message

text entry

Some features let you enter text.

Flashing cursor indicates insertion point.

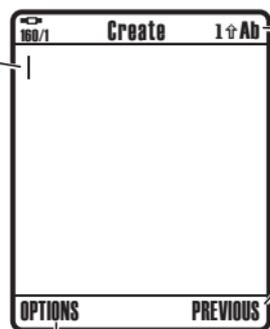

For indicator descriptions, see following section.

Return to previous screen.

Press the **OPTIONS** key to open sub-menu.

Press **#** in a text entry view to select an entry mode:

entry modes	
1  or 1 	Your Primary text entry mode can be set to any iTAP™ 1  or tap 1  mode.
12	Numeric mode enters numbers only.
#;	Symbol mode enters symbols only.
2  or 2 	Your Secondary text entry mode can be set to any iTAP 2  or tap 2  mode, or set to None if you don't want a secondary entry mode.


To set your primary and secondary text entry modes, press **Options > Entry Setup** in a text entry view and select **Primary Setup** or **Secondary Setup**.

iTAP™ mode

Press  in a text entry view to switch to iTAP mode. If you don't see **1**  or **2** , press **OPTIONS > Entry Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your key presses into common words, and predicts each word as you enter it.

For example, if you press **[7]** **[7]** **[6]** **[4]**, your display shows:

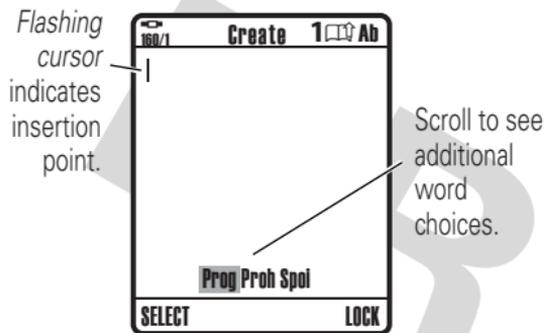

- If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers

you want. Press and hold **[#]** to change back to iTAP mode.


- Press **[1]** to enter punctuation or other characters.

tap mode

Press **[#]** in a text entry view to switch to tap mode. If you don't see **1[↑]** or **2[↑]** press **OPTIONS > Entry Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press **[8]** one time, your display shows:

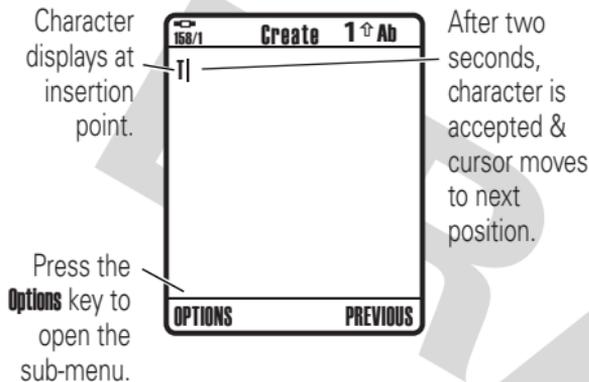

- The first character of every sentence is capitalized. If necessary, press **⌵** down to change the character to lowercase before the cursor moves to the next position.

- Press **⌵** to move the flashing cursor to enter or edit message text.
- If you don't want to save your text or text edits, press **[C]** to exit without saving.

numeric mode

Press **[#]** in a text entry view until you see **12**. Press the number keys to enter the numbers you want.

symbol mode

Press **[#]** in a text entry view until you see **#**. Press a number key to see the symbols associated with that key, scroll to the symbol you want, and press **SELECT** to enter it.

volume

Press the volume keys to:

- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key in the home screen.




navigation key

Press the *navigation key* (the central key with four arrows) up, down, left, or right to scroll to items in the display. When you scroll to something, press **SELECT** or **OK** to select it.



speakerphone key

The speakerphone key gives you a way to use your phone without holding the phone to your ear. You can also use the speakerphone key to view the alert styles for your phone.

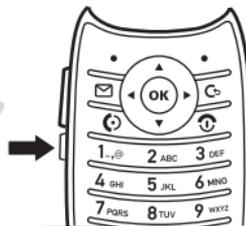

external display

When your phone flip is closed, the external display shows the time and indicates phone status, incoming calls, and other events. For a list of phone status indicators, see page 20.

Tip: To change the external display orientation, press MENU >  More >  Settings > Initial Setup > SubLCD > Vertical or Horizontal.

set phone alert style in external display

- 1 Press the down volume key (see illustration on page 2) to see **Alert Styles**.
- 2 Press the speakerphone key repeatedly, until you see the style you want.
- 3 Press the down volume key to return to the home screen.

return unanswered call in external display

Your phone keeps a record of your unanswered calls, and the external display shows **X Missed Calls**, where X is the number of missed calls.

Tip: Since the microphone and earpiece are hidden when the phone flip is closed, you'll have to use a headset or other handsfree device to make and receive calls.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

- 1 Press the speakerphone- key (see illustration on page 2) to see the received calls list.
- 2 Press the volume keys to scroll to an unanswered call.
 - To call the number with a headset connected to your phone, press and hold the speakerphone key.
 - To exit without calling, press the speakerphone key briefly.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call (with the flip open), press and hold the speakerphone key to turn the

handsfree speaker on. Your display shows **Speaker Phone**.

The handsfree speaker stays on until you press and hold the speakerphone key again or turn off the phone.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Press **MENU** >  **More** >  **Settings** > **Security** > **New Passwords**.

If you forget your unlock code: At the Enter Unlock Code prompt, try entering 1234 or the last four digits of your phone number.

lock/unlock side keys

You can restrict the use of the volume keys and the speakerphone key:

Press MENU >  More >  Settings > Security > Lock Side Keys. If necessary, enter your four-digit unlock code and press the OK key. Then select Unlocked, Flip Closed Only, or Always Locked.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:

Press MENU >  More >  Settings > Security > Phone Lock > Lock Now. Enter the four-digit unlock code, then press the OK key.

To **automatically lock** your phone whenever you turn it off:

Press MENU >  More >  Settings > Security > Phone Lock > Automatic Lock. Enter the four-digit unlock code, press the OK key, then select On.

Note: You can make emergency calls on a locked phone (see page 35). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer.**

customize

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

 = Loud

 = Vibrate

 = Soft

 = Vibe&Ring

 = Silent

The ring style profile's indicator shows at the top of your home screen. To choose your profile:

Find it: Press MENU >  More
>  Settings > Alert Styles

- 1 Press the **Edit** key.
- 2 Scroll to the desired ring style profile and press the **SELECT** key.
- 3 Press the **DONE** key.

Tip: Change it quickly! With your **phone closed**, press a volume key to display the current ring style profile. Press the speakerphone key to cycle to the profile you want, then press a volume key to select the profile.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it: Press MENU >  More >  Settings > Alert Styles > Detail

Note: *Detail* represents the current ring style. You can't set an alert for the Silent ring style setting.

- 1 Scroll to Calls, Ptt Calls, Text Msgs, Voice Mail, Alarms, Data Calls, or Fax Calls, and press the Edit key.
- 2 Scroll to the desired detail setting and press the SELECT key.
- 3 Press  to return to the home screen.

time & date

Set how your phone displays the time and date on the **home screen**:

Press MENU >  More >  Settings > Initial Setup > Time and Date > Time Format or Date Format.

Set how your phone displays the time on the **external display**:

Press MENU >  More >  Settings > Initial Setup > Time and Date > SubLCD, then select Vertical Horizontal.

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Note: Your *theme* can also set your wallpaper (page 32).

Press MENU >  More >  Settings > Personalize > Wallpaper.

options	
Picture	Press  up or down to select a picture, or select None for no wallpaper.

options

Layout	Select Center to center the image in the display, or Tile to repeat the image across the display.
--------	---

themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone comes with some themes.

To **apply** a theme, press MENU >  **More** >  **Settings** > **Personalize** > **Themes**.

display appearance

Press MENU >  **More** >  **Settings** > **Personalize** > **Color Style**.

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Press MENU >  **More** >  **Settings** > **In-Call Setup** > **Answer Options**.

options

Multi-key	Answer by pressing any key.
Open to Answer	Answer by opening the flip.

calls

To make and answer calls, see page 13.

turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.

all calls

Your phone keeps lists of incoming and outgoing calls. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see a list of all calls.

Press **MENU** >  **Recent Calls** > **Received Calls** or **Dialed Calls**.

Scroll to a call. A ✓ next to a call means the call connected.

- To call the number, press .
- To see call details (like time and date), press the  key.
- Press the **OPTIONS** key to access these options:

options	
Store	Create a Phonebook entry with the number in the No. field. Store does not appear if the number is already stored.

options	
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the Phonebook or recent calls lists.

redial

- 1 Press  from the home screen.
- 2 Scroll up or down to the entry you want to call, then press .

If you hear a **busy signal** and you see **Call Failed**, you can press  or the **Retry** key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.

return a call

Your phone keeps a record of your calls.

- 1 Press  from the home screen.
- 2 Scroll up or down to the entry you want to call, then press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in **Phonebook**, or **Incoming Call** when caller ID information isn't available.

You can set your phone to play a different ringer ID for an entry stored in **Phonebook** (see page 40).

emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency

call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.

Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:

Press  >  **Messaging** > **Voicemail**.

Enter your four-digit unlock code if necessary and press the  key.

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause),  (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a **Phonebook** entry for it. Then, you can use the entry to call your voicemail.

other features

advanced calling

features

auto PIN dial

Some networks require an authenticating PIN code to allow outgoing calls. Use Auto PIN Dial to dial your PIN code automatically.

To activate Auto PIN Dial and save your PIN code:

**MENU >  More >  Settings > Initial Setup
> Auto PIN Dial**

features

attach a phone number

Enter a number, then press **OPTIONS**
> Attach Number.

features

insert special characters

While entering a number, press the **OPTIONS** key. Then select one of the following:

Insert Pause—Your phone waits until the call connects before it dials the next digit(s) in the series.

Insert Wait—Your phone waits until the call connects, then prompts you for confirmation before it dials the next digit(s).

Insert 'n'—Your phone prompts you to enter a number.

features

notepad

The last number you entered is stored in the *notepad*. You can use the notepad to “jot down” a number during a call for later use. To see the notepad:

MENU >  **Recent Calls** > **Notepad**

- To call the number, press .
- To create a **Phonebook** entry with the number in the **No.** field, press the **STORE** key.
- To attach a number or insert a special character, press the **OPTIONS** key.

mute a call

Press the **MUTE** key (if available) or **OPTIONS** > **Mute** to put all active calls on mute.

features

conference call

During a call:

Dial next number, press , press the Link key.

restrict calls

Restrict outgoing or incoming calls:

MENU >  More >  Settings > Security
> Restrict Calls

If necessary, enter your four-digit unlock code and press the OK key.

phonebook

features

edit or delete a Phonebook entry

Edit a number stored in Phonebook:

MENU >  Phonebook, scroll to the Phonebook entry, and press OPTIONS. You can select Edit Contact, Delete Contact, or other options.

Shortcut: In Phonebook, press keypad keys to enter the first letters of an entry you want. You can also press  and  to see the entries you use frequently, or entries in other categories.

features

set ringer ID for a Phonebook entry

Assign a ring alert (ringer ID) to an entry:

MENU >  Phonebook > *entry*, then press
OPTIONS > Edit Contact > Ringer ID > *ringer name*

Activate ringer IDs:

MENU >  More >  Settings > Alert Styles
> *style Detail* > Ringer IDs

set picture ID for a Phonebook entry

Assign a photo or picture to show when you receive a call from an entry:

MENU >  Phonebook > *entry*, then press
OPTIONS > Edit Contact > Picture > *picture name*

set category for a Phonebook entry

MENU >  Phonebook > *entry*, then press
OPTIONS > Edit Contact > Category
> *category name*

features

set category view for Phonebook

MENU >  Phonebook, then press OPTIONS
> Categories > *category name*

You can show All entries, entries in a predefined category, or entries in a category you create.

Shortcut: To see other categories in Phonebook, press  or .

sort Phonebook

Set the order in which entries are listed:

MENU >  Phonebook, then press
OPTIONS > Phonebook Setup > Sort by > *sort order*

You can sort Phonebook by Name or Email.

messages

features

read messages

Icons next to each message indicate if it is read  or unread . Icons can also indicate if the message is locked , urgent , or low priority , or if it has an attachment .

To see message options like Reply, Forward, Lock, or Delete, scroll to a message and press **OPTIONS**.

view sent messages

Scroll to the message you want to view and press the  key. Press the **OPTIONS** key to perform various operations on the message.

features

send quick note

Quick notes are prewritten messages that you can quickly select and send. Your phone comes with several quick notes, and you can create additional ones.

Scroll to the quick note you want to send and press the **SEND** key.

create quick note

Press the **OPTIONS** key, then select **New**. Enter the text of your new quick note. When finished, press the  key.

erase messages

Press the **OPTIONS** key, then scroll to and select **Cleanup Messages**. Next, scroll to **Delete All, Voice Mail, Inbox, Drafts, Sent, or Saved**, and press the **SELECT** key.

features

manage messages

Press the **OPTIONS** key to select one of these options:

personalize

features

language

Set menu language:

MENU >  More >  Settings > Initial Setup
> Language

greeting

Change the greeting that appears when you turn on your phone:

MENU >  More >  Settings > Personalize
> Greeting

features

animation

Change the animation that appears when you turn on your phone:

MENU >  More >  Settings > Initial Setup
> Animation

banner

Change the text that appears near the top of the home screen:

MENU >  More >  Settings > Personalize
> Banner

scroll

Set the scroll bar to Up/Down or Wrap Around in menu lists:

MENU >  More >  Settings > Initial Setup
> Scroll

features

activate ringer IDs

Activate ringer IDs assigned to phonebook entries and categories:

MENU > ☰ More > ⚙ Settings > Alert Styles
> *style* Detail > Ringer ID

ring volume

MENU > ☰ More > ⚙ Settings > Alert Styles
> *style* Detail > Ring Volume

keypad volume

MENU > ☰ More > ⚙ Settings > Alert Styles
> *style* Detail > Key Volume

reminders

Set reminder alerts for messages that you receive:

MENU > ☰ More > ⚙ Settings > Alert Styles
> *style* Detail > Reminder

features

flip tone

Set your phone to play a tone when you close the flip:

MENU > ☰ More > ⚙ Settings > Personalize
> Flip Tone

menu view

Show the main menu as graphic icons or as a text-based list:

MENU > ☰ More > ⚙ Settings > Personalize
> Main Menu > View

main menu

Reorder your phone's main menu:

MENU > ☰ More > ⚙ Settings > Personalize
> Main Menu > Reorder

features

change home keys

Change features for the navigation keys in the home screen:

MENU >  More >  Settings > Personalize > Home Screen > Home Keys

key shortcuts

To create a key shortcut:

Scroll to and highlight the menu option you want to assign a shortcut. Press and hold the left soft key, then press the YES key to confirm your selection.

Scroll to the **Key:** entry area, enter the key for the shortcut, and press the OK key.

To use a key shortcut:

Press  > *shortcut_number*.

features

master reset

Reset all options **except** unlock code, security code, and lifetime timer:

MENU >  More >  Settings > Initial Setup > Master Reset

master clear

Caution: Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

MENU >  More >  Settings > Initial Setup > Master Clear

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing the Send key. This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times

Show call timers:

MENU >  Recent Calls > Call Times

features

in-call timer

MENU >  More >  Settings > In-Call Setup > In-Call Timer

To display a timer during a call, select Timer, then select On.

To set your phone to play a beep at intervals that you specify select Beep, then select the desired interval.

data volumes

Show data volumes:

MENU >  Recent Calls > Data Volumes

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving.

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features

speakerphone

Activate the speakerphone during a call:
Press and hold the speakerphone key, or press **Options > Spkrphone On.**

auto answer (car kit or headset)

Automatically answer calls when connected to a car kit or headset:

MENU > More > Settings > Car Settings or Headset > Auto Answer

features

auto handsfree (car kit)

Automatically route calls to a car kit when connected:

MENU > More > Settings > Car Settings > Auto Handsfree

data & fax calls

To connect your phone with a USB cable, see page 19.

features

send data or fax

Connect your phone to the device, then place the call through the device application.

features

receive data or fax

MENU >  More >  Settings > Connection
> Incoming Call

Scroll left or right to change Next Call to Data In Only or Fax In Only.

Connect your phone to the device, then answer the call through the device application.

network

features

network settings

See network information and adjust network settings:

MENU >  More >  Settings > Network

personal organizer

features

calculator

MENU >  Office Tools > Calculator

currency converter

MENU >  Office Tools > Calculator

Press the **OPTIONS** key, select **Set Currency**, then enter the exchange rate and press the **OK** key.

Enter the amount you wish to convert, then press **OPTIONS** > **Convert Currency**.

set alarm

MENU >  Office Tools > Alarm Clock

features

turn off alarm

When an alarm occurs:

To turn off the alarm, press the Dismiss key or .

add new calendar event

MENU >  Office Tools > Calendar

Scroll to the day and press , then press Options > [New Event].

see calendar event

MENU >  Office Tools > Calendar

To see event details, scroll to the day and press .

To edit event details, scroll to the day and press , then press the EDIT key.

features

event reminder

When an event reminder happens:

To see event details, press the VIEW key.

To close the reminder, press the BACK key.

security

features

lock feature

MENU >  More >  Settings > Security > Lock Application

fun & games

Note: A lock (🔒) icon next to a picture or sound means that you cannot send or copy it.

features
view, delete, or manage pictures Manage pictures: MENU >  Tones & Images > Pictures
hear, delete, or manage sounds Manage your ring tones: MENU >  Tones & Images > Sounds
games MENU >  Office Tools > Games
launch the micro-browser MENU >  WAP

service & repairs

If you have questions or need assistance, we're here to help.

Go to

www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 0800 666 8676 (Argentina), (800-201-442 (Chile), 01-800-700-1504 (Colombia), 01 800 021 0000 (México), 0800-100-4289 (Venezuela), or 0-800-52-470 (Peru).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory

authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.36W/kg, and when worn on the body, as described in this user guide,

is 1.27W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 1.27W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was ___ W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is ___ W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device

while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

Important Safety and Legal Information

DRAFT

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if

inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.

- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks on boats, fuel or

chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**



Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.

Symbol	Definition
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These

may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters,



MOTOROLA

DRAFT

you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Latin America Warranty, except Mexico

Latin America Warranty MOTOROLA INC. Subscribers/Cellular Division

Through its own service centers and/or its authorized service centers, Motorola provides a 1-year warranty that covers the cellular phone, all its parts and labor against any defect and operation as long as the "Product" has been operated and handled under normal conditions. The term of 1 year begins when the "Product" is purchased.

Conditions

- 1 For warranty service, return the "Product" and this warranty to the place of purchase or to any Motorola authorized service center.

If additional information is needed, please contact any of our service centers:

Motorola de México, S.A.
Bosques Alisos No. 125
Bosques de las Lomas
CP 05120 México, D.F.
Telephone: 257-6700

Motorola de Brasil
Rua Bandeira, Paulista 580
Sao Paulo, Brazil 05424-010
Telephone: 821-9991

Centro de Servicio
Motorola de Colombia
Diagonal 127A N. 17-64
Bogotá, Colombia
Telephone: 615-5759
Telephone: 615-5769
Telephone: 216-1743

If the cellular phone has been installed in a vehicle, take the vehicle to the service center to analyze the equipment, or the installation on the vehicle. This warranty does not cover the installation of the cellular phone.

- 2** Motorola Inc., through its own service centers and/or their authorized service centers, will repair or replace the cellular phone at no charge. This warranty covers shipping expenses, only if it is needed to make the repair.

Motorola Inc. through its own service centers and/or their authorized service centers, at its own discretion, will repair, replace, or reimburse the purchase price of the defective cellular phone only during the warranty period, as long as the "Product", in accordance with the conditions established in this warranty, is returned to a Motorola service center or to a Motorola authorized service center. All the accessories, batteries, parts, small boards or equipment of the cellular telephone that by virtue of being defective are replaced in fulfillment of this warranty, will automatically become property of Motorola Inc.

- 3** To receive warranty service, present your cellular phone or accessory to any Motorola service center or to any Motorola authorized

service center along with your receipt of purchase or comparable substitute that indicates the date of purchase, serial number of the transceiver, and/or electronic serial number.

- 4** The repair time will not be greater than 30 days, starting from the day the equipment was received at the service center.
- 5** To purchase parts, spare parts, accessories and service not covered by this warranty, contact one of the following service centers:

Motorola de México, S.A.
Bosques Alisos No. 125
Bosques de las Lomas
CP 05120 México, D.F.
Telephone: 257-6700

Motorola de Brasil
Rua Bandeira, Paulista 580
Sao Paulo, Brazil 05424-010
Telephone: 821-9991

Centro de Servicio
Motorola de Colombia
Diagonal 127A N. 17-64
Bogotá, Colombia
Telephone: 615-5759
Telephone: 615-5769
Telephone: 216-1743

Or to any authorized service center in your locality.

6 This warranty is not valid in the following cases:

- a** Defects or damages derived from abnormal use.
- b** Defects or damages derived from accident or negligence.
- c** Defects or damages derived from tests, unsuitable operation, maintenance, installation and adjustments, or derived from any alteration or modification of any type.
- d** Damage caused to antennas, unless they are consequences of defects in material or workmanship.

- e** When the cellular phone has been disassembled and/or repaired so that its operation has been affected or that it can not be tested to verify any claim that grants this warranty.
- f** Any cellular phone with a serial number that has been removed, altered, or obliterated.
- g** Defects or damages caused by food spills or liquids.
- h** When the cables of the control unit have been stretched or the module tongue-piece has broken.
- i** When the surface of the "Product" and its pieces have been scratched or damaged due to the normal use.
- j** Leather cases.
- k** Rented cellular phones.
- l** When the "Product" has been altered or repaired by non-Motorola authorized service centers.
- m** When the "Product" has not been operated in agreement with the instructions that accompany the "Product".

The batteries (Nickel-Cadmium) are warranted only if their capacity is reduced by 80% below

its predicted capacity. This warranty is null for all types of batteries if:

- a** The batteries are charged by a charger that has not been approved by MOTOROLA.
- b** If any of the battery seals are broken or tampered with.
- c** If the batteries were used or installed in non-MOTOROLA equipment.

“Product”:

Brand: Motorola Model:

Number of Mechanical Series:

Number of Electronic Series:

Name of Distributor:

Street and Number:

Town:

Municipality:

Postal Code, City, State, or Country:

Telephone:

Date of Delivery or Installation:

Limited Warranty (Mexico)

For Motorola Personal Communication Products and Accessories that are Purchased in Mexico

I. Concepts Covered by this Warranty

This warranty covers all the parts, components, accessories and labor of the Motorola "product" from defects in materials and workmanship under normal consumer usage.

The Motorola "Products" that are protected under this warranty can be: (a) cellular telephones, (b) radar sets, (c) two-way radios, and (d) wireless telephones.

Motorola de Mexico S.A., at its option, will at no charge repair, replace, or refund the purchase price of any "Product" that does not conform to this warranty. Motorola may use functionally

equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. Updates in software are not covered.

II. Length of Warranty Coverage

The length of coverage is one (1) year from the date the new "Product" was purchased from an authorized distributor.

III. Place where consumers can make the warranty effective, obtain parts, components, and accessories:

Motorola de México, S.A.
Bosques de Alisos 125
Col. Bosques de las Lomas
Del. Cuajimalpa
Te:(55) 5257-6700

IV. Procedure to Make the Warranty Effective

For warranty service, return the "Product" (with its components and accessories, such as batteries, antennas, and charger) to the place of purchase, to the address above, or to an authorized service center, or call 01 800 021 0000. To request a refund, you must present this warranty, sealed by the place of purchase, along with the "Product."

V. Warranty Limitations or Exceptions

The warranty is not valid:

- 1 When the "Product" has been used in conditions different from the normal ones.
- 2 When the "Product" has not been operated as described in the operating instructions.)
- 3 When the "Product" has been altered or repaired by someone other than Motorola, or its authorized service centers.

If repairs are not covered by this warranty, Motorola, at the request of the purchaser, will provide information regarding availability, prices, and other conditions for the repair of the "Product"

To obtain information on Products that need repairs not covered by this warranty, please call 01 800 021 0000.

Product Model:	Date of purchase:
	Seal of the authorized or established distributor where the "Product" was purchased:

Note: In other countries, consult the laws and local regulations under the warranty and its local Motorola office.

A

- accessories 45
- accessory connector port 1
- accessory indicator 21
- alarm clock 47, 48
- alert
 - set 26, 27, 30
 - turn off 26, 33
- animation 42, 49
- answer a call 13, 32
- attach a number 34, 37, 38

B

- banner 42
- battery 12
- battery life, extend 10
- browser. See micro-browser

C

- cables 19

calculator 47

calendar 48

call

answer 13, 32

end 13

make 13

call timers 45

caller ID 34, 40

camera 2, 15

camera key 2

car kit 45

center key 1, 26

center select key 10

codes 28, 29

conference call 39

D

data call 46, 47

data volumes, tracking 45

dial a phone number 13

dialed calls 33

display 20, 32

E

earpiece volume 26

emergency number 35

end a call 13

end key 1, 13

Enter Unlock Code message 29

external display 2, 27

F

fax call 46, 47

flip 13, 32

flip tone 43

G

games 49

greeting 42

H

handsfree speaker 2, 28

headset 28, 45

headset jack 1

home screen 20, 44

I

in use indicator 21

Incoming Call message 35

iTAP text entry mode 23

K

keypad 32, 43

L

language 42

lock

application 48

phone 29

side keys 29

M

- make a call 13
- master clear 44
- master reset 44
- menu 10, 42, 43
- menu icons 43, 44
- message 41
- message indicator 22
- message reminders 43
- micro-browser 49
- mini-USB connector 2
- Missed Calls message 34
- music 49
- mute a call 38

N

- navigation key 1, 10, 26
- network settings 47
- notepad 38
- number. See phone number
- numeric entry mode 25

70 Warranty (Mexico)

O

- open to answer 32

P

- passwords. See codes
- personalize 42
- phone number 14
- phonebook 34, 37, 38, 39
- photo 15, 49
- picture 49
- picture ID 35, 40
- power key 1, 13
- printing 16

R

- received calls 33
- recent calls 33
- redial 34
- reminders 43
- restrict calls 39

return a call 27, 34
ring style 27
ring style indicator 21, 22
ring style, setting 26, 30
ring tone 49
ringer ID 35, 40, 43
ringer volume 26, 43
roam indicator 21

S

safety information 56
security code 28
send key 1, 13
shortcuts 44
signal strength indicator 21
silent mode 27
smart key 2, 26, 27, 28, 44
soft keys 1, 20, 44
speakerphone 45
store your number 14
symbol entry mode 25

T

tap text entry mode 24
telephone number. See phone number
text entry 22
text message 41
theme 32
timers 45
turn on/off 13

U

unlock
 application 48
 phone 29
 side keys 29
unlock code 28, 29
USB cables 19

V

vibrate mode 27
voicemail 35

voicemail message
 indicator 22, 35
volume 26, 43
volume keys 2

W

wallpaper 31
Web pages 49

Y

your phone number 14

DRAFT