

APPLICANT: MOTOROLA, INC.


FCC ID: IHDT6ES1

INSTRUCTION MANUAL

A preliminary draft copy of the Users Manual follows:


Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola E398 series GSM wireless phone.

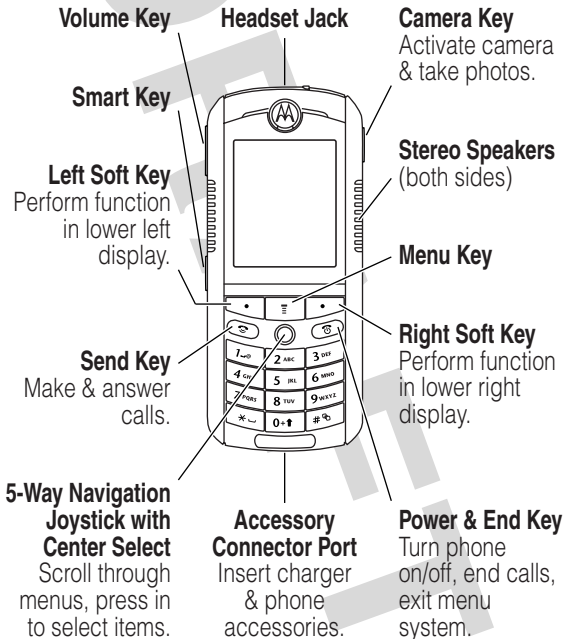



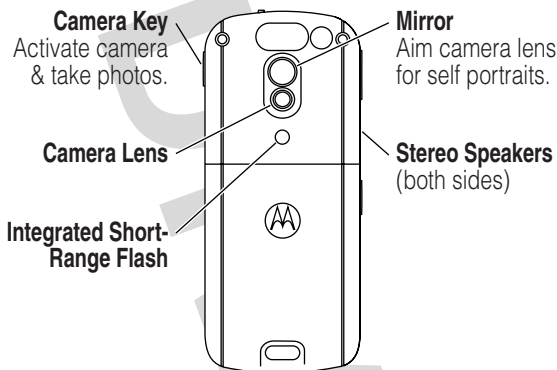

Note: Your phone may not appear exactly as shown above. All key locations, sequences, and functions remain the same regardless of your phone's appearance.

Check It Out!



Feature	Description
Use Memory Card	Set the memory location you want to use to store and retrieve files: Go to a multimedia menu (such as Pictures or Sounds), then press ☰ > Switch Storage Device > <i>device name</i> .
Play Music	Play a song on your phone: ☰ > Multimedia > Sounds > <i>song name</i>
Create Playlist	Create a playlist of songs to play on your phone: ☰ > Multimedia > Sounds > (New Playlist)

Feature	Description
Rhythm Lights	Activate rhythm lights to flash in sync with the sounds around you:  > Settings > Personalize > Rhythm Lights
Ring Lights	Choose ring lights for incoming calls:  > Settings > Ring Styles > Ring Lights > <i>light pattern</i>
Wireless Connection	Set up a Bluetooth [®] wireless connection to a headset accessory, car kit, or external device:  > Settings > Connection > Bluetooth Link > Handsfree > [Look For Devices]
Take Photo (With Flash)	Press the camera key to activate the camera. Press  > Flash > On to activate the flash. Point lens at subject, then press the camera key to take a photo.
Send Photo	Send a photo to a phone number or email address: Press STORE () > Send In Message .
Phone Skin	Apply a different skin to the phone display:  > Settings > Personalize > Skin > <i>skin</i>
Send Multimedia Message	Send a multimedia message with pictures, animations, sounds, and videos:  > Messages > Create Message > New Multimedia Msg
Play Video Clip	Play a video clip:  > Multimedia > Videos > <i>video clip</i>



Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States)
1-800-461-4575 (Canada)

www.motorola.com (United States)
www.motorola.ca (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual number: 68XXXXXX32-O

Contents

Getting Started	8
About This Guide	8
Installing the SIM Card	9
Installing a Memory Card	10
Battery Use	11
Installing the Battery	13
Charging the Battery	14
Turning Your Phone On	15
Adjusting Volume	16
Making a Call	16
Answering a Call	17
Viewing Your Phone Number	17
Locking and Unlocking the Keypad	18
Highlight Features	19
Using a Removable Memory Card	19
Creating a Music Playlist	20
Activating Rhythm Lights	21
Setting Ring Lights	22
Setting Up a Bluetooth® Wireless Connection	23
Taking and Sending a Photo	24
Changing Phone Skin	27
Sending a Multimedia Message	27
Playing Video Clips	31
Learning to Use Your Phone	32
Using the Display	32
Using the 5-Way Navigation Joystick	37
Using Menus	38
Entering Text	41

Using the Smart Key	51
Using the Handsfree Speaker	51
Changing a Code, PIN, or Password	52
Locking and Unlocking Your Phone	52
If You Forget a Code, PIN, or Password	54
Using the Phonebook	54
Setting Up Your Phone	57
Storing Your Name and Phone Number	57
Setting the Time and Date	57
Setting a Ring Style	57
Activating Multi-Key Answer	58
Activating Vibe Sync	58
Setting Event Lights	59
Setting a Wallpaper Image	59
Setting a Screen Saver Image	60
Setting Display Brightness	61
Adjusting the Backlight	61
Setting Display Timeout	62
Calling Features	63
Changing the Active Line	63
Redialing a Number	63
Using Automatic Redial	64
Using Caller ID	64
Canceling an Incoming Call	65
Turning Off a Call Alert	66
Calling an Emergency Number	66
Dialing International Numbers	66
Viewing Recent Calls	67
Returning an Unanswered Call	68
Using the Notepad	69
Attaching a Number	70

Calling With Speed Dial	70
Calling With 1-Touch Dial	70
Using Voicemail	71
Using Call Waiting.....	72
Putting a Call On Hold	73
Transferring a Call.....	73
Phone Features	75
Main Menu	75
Settings Menu.....	76
Feature Quick Reference	77
Specific Absorption Rate Data	96
Index	98

Getting Started



CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

About This Guide

This guide describes the basic features of your Motorola wireless phone.

Note: A *More Here* reference guide for your phone is also available that describes your phone's features in more detail.

To obtain the *More Here* guide for your phone, or another copy of this guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals> (U.S.A.)

<http://motorola.ca/consumer> (Canada)

or contact the Motorola Customer Call Center at 1-800-331-6456 (U.S.A.) or 1-800-461-4575 (Canada).

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories




This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the SIM Card

Your *Subscriber Identity Module* (SIM) card contains your phone number, service details, and phonebook/message memory.




Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

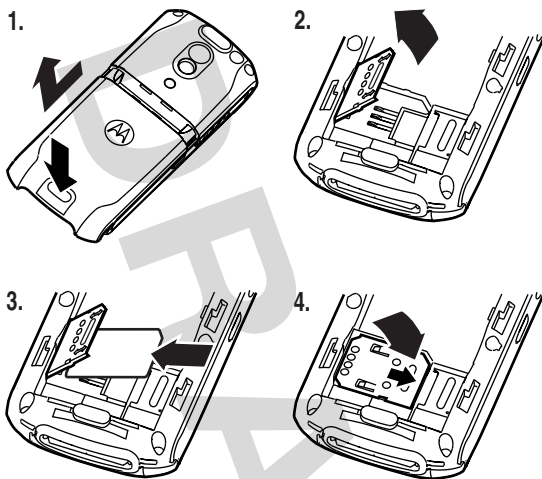

Installing a Memory Card

You can install a removable memory card in your phone. You can store additional multimedia objects (such as photos and sounds) on the memory card.

Caution: Do not bend or scratch your memory card. Avoid exposing your memory card to static electricity, water, or dirt.

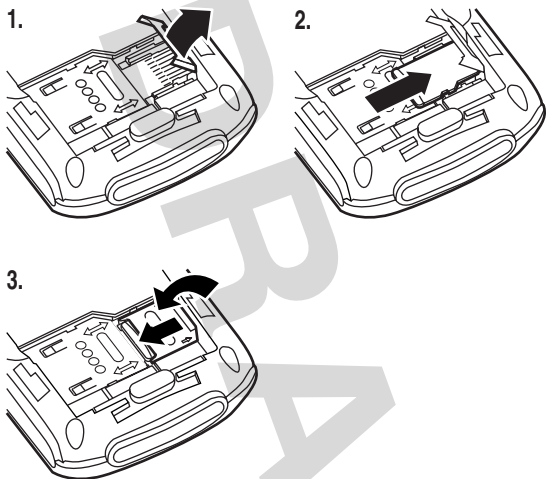

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.



To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
 - New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode.

Installing the Battery






Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.



Notes:

- Your phone battery may be enclosed in a protective clear plastic case. Remove the battery from the case before attempting to install it.
- Your phone is shipped with a protective clear plastic liner covering the battery door latch. Remove the liner to ensure that the battery door attaches and closes properly.

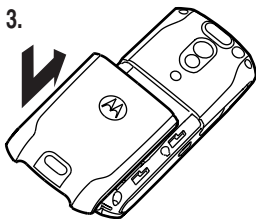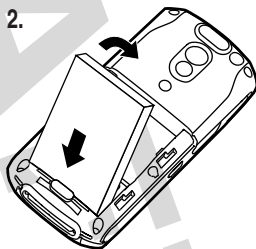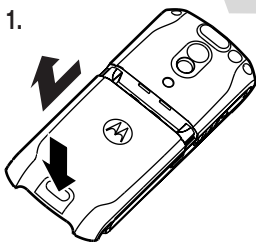


Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

Action

- 1 Insert the travel charger plug into your phone with the release tab facing up. Make sure that both of the plug's connector hooks engage to lock the plug in place.

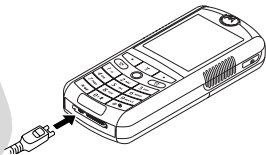


Note: It may take up to 10 seconds for your phone to provide a visible or audible indication that the battery is charging.


- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.

Tip: You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.

Turning Your Phone On

Action


- 1 Press and hold  (power key) for 2 seconds to turn the phone on.

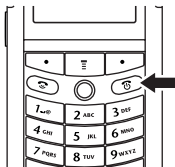



Note: It may take up to 4 seconds for the display to illuminate after you turn the phone on.

- 2 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.

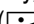Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

- 3 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.

Note: At startup, you are prompted to personalize your phone. Select **YES** () to set personal phone options, or **NO** () to go to the idle display. For more information about personalizing your phone, see page 83.



Adjusting Volume




Press the volume key up or down to:



- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume when the home screen is visible

Tip: At the lowest volume setting, press the volume key down once to switch to vibrate alert. Press it down again to switch to silent alert. Press the volume key up to switch back to vibrate alert, then ring alert.

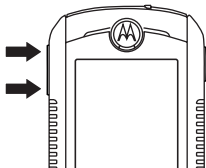- turn off an incoming call alert



Making a Call




	Press	To
1	keypad keys	dial the phone number
2		make the call
3		end the call and “hang up” the phone when you are finished

Note: You must dial the phone number from the home screen (see page 32).



Answering a Call


When you receive a call, your phone rings and/or vibrates and displays an incoming call message.



Press	To
1  or ANSWER ()	answer the call
2 	end the call and “hang up” the phone when you are finished

Viewing Your Phone Number

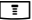To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers**.

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 57. If you do not know your phone number, contact your service provider.

Locking and Unlocking the Keypad



You can lock your phone keypad to prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

Press



To

lock or unlock your keypad

Select  > **Settings** > **Security** > **Lock Keypad** to view instructions on how to lock/unlock the keypad.

Note: Incoming calls and messages unlock the keypad.

Highlight Features

You can do much more with your phone than make and receive calls!






Using a Removable Memory Card

You can use an optional memory card or other storage device with your phone to store and retrieve multimedia objects (such as photos and sounds). To install a memory card, see page 10.

To view and manage an installed memory card:

Find the Feature

 > **Settings** > **Phone Status**
> **Storage Devices**


Press	To
1 	scroll to the memory card Note: Phone memory is always listed last.
2 DETAILS ()	view memory card information
or	
	open the Storage Device menu to perform other procedures

The **Storage Device** menu can include the following options:




Option	Description
Format	Format the memory card.
Rename	Rename the memory card.

When a memory card is installed on your phone, the phone prompts you to select a storage device when you download or store a multimedia object.

To view the contents of a memory card, go to the multimedia menu for a specific object type (such as **Pictures** or **Sounds**), then press  > **Switch Storage Device** > *device name*.

Creating a Music Playlist

You can download and play a variety of different types of ring tones and music on your phone. You can store these sound files in phone memory, or on a memory card.

Tip: To see the sound files stored on a memory card, go to the **Sounds** menu, then press  > **Switch Storage Device** > *device name*.

You can create a playlist of selected songs that play in the order you specify. Playlists you create are stored in the **Sounds** menu.

To create a playlist:

Find the Feature

 > **Multimedia** > **Sounds**
> **[New Playlist]**



Press	To
1 CHANGE (◀▶)	select Name
2 keypad keys	enter a name for the playlist
3 OK (◀▶)	store the name
4 CHANGE (◀▶)	select Audio Files
5	scroll to a song
6 CHECK (◀▶)	add the song to the playlist
	Repeat steps 5 and 6 to add more songs to the playlist
7 DONE (◀▶)	store the selected songs
8 DONE (◀▶)	store the playlist

To listen to a playlist:

Find the Feature

> **Multimedia** > **Sounds**
> *playlist name*

Activating Rhythm Lights

Rhythm lights make your phone's display and keys flash in synchronization with music or sounds around you.

Find the Feature

> **Settings** > **Personalize**
> **Rhythm Lights**

You can adjust the following options:

Option	Description
Pattern	Choose a light pattern to activate rhythm lights, or turn the lights Off .



Option	Description
Timer	Set the number of minutes rhythm lights stay active (up to 10 minutes).
Sensitivity	Set how loud the music has to be before rhythm lights respond. Values range from 1 (least sensitive) to 7 (most sensitive).

Notes:

- Rhythm lights work only when your phone is idle and your battery is not low. Rhythm lights pause if you press a key or receive a call or message.
- Your phone also can flash for incoming calls and messages (see following sections).
- Some games might make your phone flash and vibrate.

Setting Ring Lights

Set up your phone to display a light pattern when you receive an incoming call. The same light pattern displays for all incoming calls.

Find the Feature

 > **Settings** > **Ring Styles**
> **Ring Lights**
> *light pattern*

To display a distinctive light pattern for calls from a specific phonebook category, use the light ID feature described on page 82.

Setting Up a Bluetooth® Wireless Connection

Your phone supports Bluetooth wireless connections. You can set up a wireless link with a Bluetooth-enabled headset accessory, speakerphone, or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronize data.




Searching for Other Devices



To connect your phone to a headset accessory or handsfree device:

Find the Feature

-  > **Settings** > **Connection**
- > **Bluetooth Link**
- > **Handsfree**
- > **[Look For Devices]**

Your phone displays a list of device(s) located within range of the phone. If your phone is already connected to a device, your phone lists the connected device and identifies it with a ✓ (in use) indicator.

To connect to a device, highlight the device name and press **SELECT** ()

The device may request permission to bond with your phone. Select **YES** () and enter the correct PIN code to create a secure connection with the device. When the connection is made, the  (Bluetooth) indicator or a **Bluetooth Connected** message displays in the home screen.

Copying Objects to Another Device

You can use a Bluetooth wireless connection to copy a picture, sound, phonebook entry, datebook event, or bookmark from your phone to another phone, computer, or hand-held device.



Copying a Multimedia Object

Highlight the object on your phone that you want to copy to the other device, then press  > **Copy**.

Select a recognized device name listed in the **Object Exchange** menu, or **[Look For Devices]** to search for the device to which you want to copy the object.

Copying a Phonebook Entry, Datebook Event, or Bookmark

Highlight the item on your phone that you want to copy to the other device, then press  > **Send** > **Bluetooth**.


Select a recognized device name listed in the **Object Exchange** menu, or **[Look For Devices]** to search for the device to which you want to copy the item.

Taking and Sending a Photo


Shortcut: Press the camera key to activate the camera. Press the camera key again to take a photo.

To activate your phone's camera using the menu system:

Find the Feature  > **Multimedia** > **Camera**

Tip: When you want to take photos in low-light settings, press  > **Flash** > **On** to activate the built-in flash.

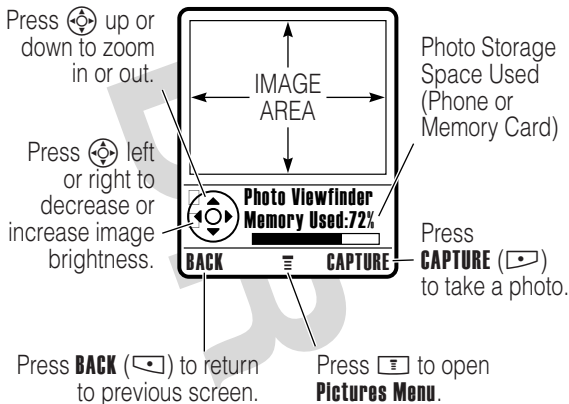

The active viewfinder image appears on your display.



Point the camera lens at the photo subject, then:

Press	To
1 CAPTURE ()	take a photo
2 STORE ()	view storage options
or	
DISCARD ()	delete the photo and return to active viewfinder
	If you choose to store the photo, continue to step 4.



Press	To
3 	scroll to Send in Message , Store Only , Send as TIM Click , Apply as Wallpaper , Apply as Screen Saver , or Apply as Phonebook Entry
4 SELECT 	perform the storage option

Press  to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:


Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Delete All	Delete all pictures.
Pictures Setup	Open the setup menu to adjust picture settings.
Switch Storage Device	Save the photo in phone memory or on a memory card.
View Free Space	See how much memory remains for storing pictures.
Flash	Activate the flash for photos taken in low-light settings.

Changing Phone Skin

Change the look and feel of your phone's display by selecting a different skin setting.

Find the Feature

 > **Settings** > **Personalize**
> **Skin** > *skin*

Your phone displays the new skin. Press **BACK** () to return to the previous skin.




Sending a Multimedia Message



A *Multimedia Messaging Service* (MMS) multimedia message contains one or more slides with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and/or video clips). You can send the multimedia message to other wireless phone users, and to email addresses.











Find the Feature





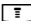




 > **Messages**
> **Create Message**
> **New Multimedia Msg**

Press	To
1 keypad keys	enter slide text
2 	open the MMS Menu
3 	scroll to Insert
4 SELECT ()	display a list of items you can insert





Press	To
5 	scroll to Picture, Voice Record, Sound, Video, New Page, Quick Note, or Contact Info
6 SELECT ()	select the file type
7 	highlight the file you want
8 SELECT ()	insert the file
	To add another slide to the message, continue to step 9. To send the message, go to step 14.
9 	open the MMS Menu to insert a new slide
10 	scroll to Insert
11 SELECT ()	display a list of items you can insert
12 	scroll to New Page
13 SELECT ()	insert a new slide after the current slide
	Repeat steps 1 to 8 to enter contents for the new slide.
14 OK ()	store the message

Press	To
15 	scroll to a Send To option: Highlight [One Time Entry] to enter one or more phone numbers and/or email addresses. Highlight [New Phonebook Entry] to enter a number/address and add it to the phonebook. Or highlight an existing phonebook entry.
16 SELECT 	select [One Time Entry] or [New Phonebook Entry]
or	
ADD 	add a phonebook entry to the list of recipients
17 DONE 	store the numbers/addresses
18 	scroll to Subject
19 CHANGE 	select Subject
20 keypad keys	enter the subject
21 OK 	store the subject
22 CHANGE 	select Attachments to attach a file to the message, if desired
23 	scroll to Picture, Voice Record, Sound, or Video






Press	To
24 SELECT (◀)	select the file type
25	highlight the file you want
26 SELECT (◀)	attach the file
27 BACK (◀)	return to the message editor
28	scroll to Receipt to request a receipt, if desired
29 CHANGE (◀)	select Receipt
30 ADD (◀) or REMOVE (◀)	activate/deactivate the delivery report
31 DONE (◀)	return to the message editor
32 SEND (◀)	send the message
or	
	view message details, save the message in the drafts folder, or cancel the message

Playing Video Clips


You can download and play video clips on your phone. You can store these video clips in phone memory, or on a memory card.

Tip: To see the video clips stored on a memory card, go to the **Videos** menu, then press  > **Switch Storage Device** > *device name*.

To play a video clip:

Find the Feature  > **Multimedia** > **Videos**
> *video clip*

The video clip displays in the video clip playback screen:

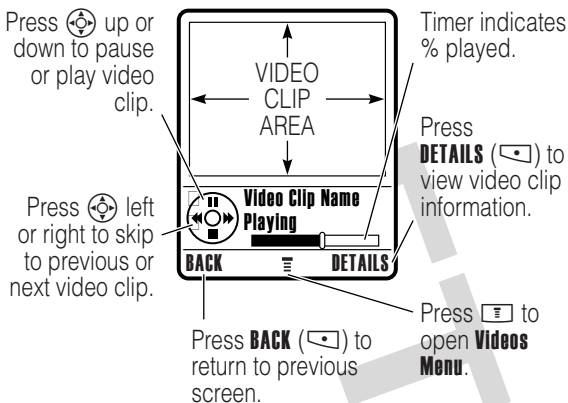



Learning to Use Your Phone



See page 1 for a basic phone diagram.

Using the Display

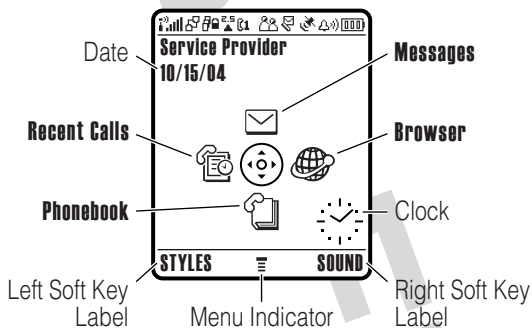The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.



Press the 5-way navigation joystick (⊕) up, down, left, or right to select a menu feature icon. If you select a menu icon by mistake, press  to return to the home screen.

The  (menu) indicator shows that you can press the menu key () to enter the main menu.


Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (◀) or right soft key (▶) to perform the indicated function.

Notes:


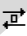



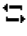

- Your home screen may appear different than shown. For example, your service provider may hide the menu feature icons to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide menu icons, see page 84.
- Your phone can display an analog or digital clock in the home screen (see page 84).
- Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you press any key. To set the time that the backlight stays on, see page 61.
- To extend battery life, you can set the display to turn off after a period of inactivity. The display turns back on when you press any key. To set the time that the display stays on, see page 62.

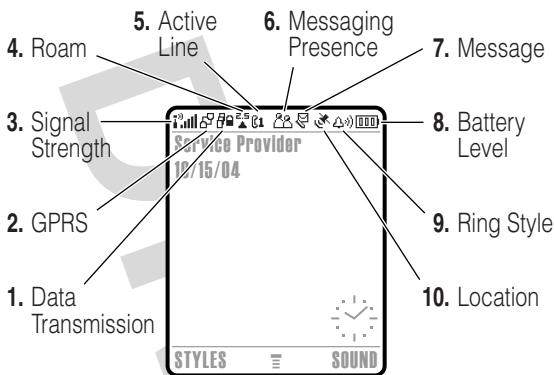

The following status indicators can display:



1. Data Transmission Indicator Shows connection and data transmission status. Indicators can include:


-  = secure packet data transfer
-  = unsecure packet data transfer
-  = secure application connection
-  = unsecure application connection
-  = secure *Circuit Switch Data* (CSD) call
-  = unsecure CSD call
-  = Bluetooth[®] connection





2. GPRS Indicator Shows that your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. GPRS allows faster data transfer speeds. Other

indicators can include:

 = GPRS PDP context active

 = GPRS packet data available

3. Signal Strength Indicator Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator or  (no transmit) indicator is displayed.



4. Roam Indicator Shows when your phone is seeking or using another network outside your home network. Indicators can include:


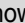
 = 2.5G home


 = 2.5G roam


 = 2G home

 = 2G roam



5. Active Line Indicator Shows  or  to indicate the currently active phone line. Other indicators can include:

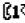 = line 1 active, call forward on

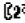 = line 2 active, call forward on

 = alarm activated






6. Messaging Presence Indicator Shows when instant messaging is active. Indicators can include:


 = IM active


 = available for IM

 = busy

 = invisible to IM


 = available for phone calls


 = offline


When a Java™ application is active, a  (Java midlet) indicator can display in this location.




7. Message Indicator Displays when you receive a new message. Indicators can include:

 = text message

 = voicemail message

 = voicemail and text message

 = answering machine


 = IM message


 = active chat session

When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size in bytes/kilobytes (multimedia message or letter).

8. Battery Level Indicator Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.


9. Ring Style Indicator Shows the ring style setting.

 = loud ring

 = soft ring

 = vibrate

 = vibrate and ring

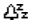 = silent






10. Location Indicator Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:

 = location on


 = location off

Using the 5-Way Navigation Joystick

Press the 5-way navigation joystick () up, down, left, or right to scroll through the menu system, highlight menu items, change feature settings, and play games. Press the 5-way navigation joystick () in to select a highlighted menu item.

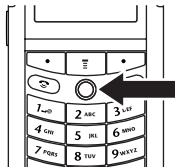

Using Menus


From the home screen, press  to enter the main menu.

Highlighted
Menu Feature
Icon

Left Soft Key
Perform left
function.

5-Way Navigation
Joystick With
Center Select


Scroll up, down,
left, or right.
Press in to select
menu item.

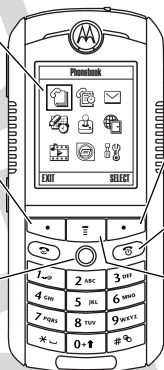











Right Soft Key
Perform right
function.

End Key
Exit menu without
making changes.

Menu Key
Enter menu
system, or open
a sub-menu.

Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.

Menu Icon	Feature	Menu Icon	Feature
	Phonebook		Recent Calls
	Messages		Office Tools
	Games & Apps		Web Access





Menu Icon	Feature	Menu Icon	Feature
	Multimedia		IM
	Settings		Chat

Selecting a Menu Feature

This guide shows you how to select a menu feature, starting from the home screen.

Find the Feature

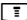
 > **Recent Calls** > **Dialed Calls**

This example shows that from the home screen, you must press , scroll to and select  **Recent Calls** from the main menu, then scroll to and select **Dialed Calls**. Press  to scroll. Press  in to select the highlighted item. Press the left/right soft keys to select the functions listed in the bottom left and right corners of the display.



Selecting a Feature Option


Some features require you to select an option from a list:

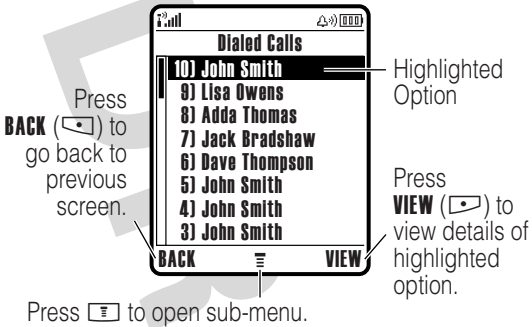


- Press to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.


Entering Text


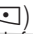
Some features require you to enter information.

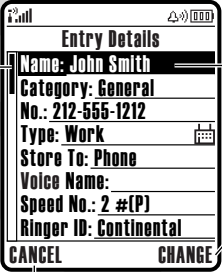


Press  to scroll down to other options.

Highlighted Option

Press **CHANGE** () to enter or edit information.


Press **CANCEL** () to exit without making changes. **DONE** () displays when you enter or edit information.


The message center lets you compose and send text messages.

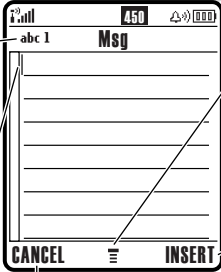


For indicator descriptions, see following section.

Flashing cursor indicates insertion point.

Press  to open sub-menu.

Press **INSERT** () to insert a quick note, picture, or sound.


Press **CANCEL** () to exit without making changes.




Choosing a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.


Press  in any text entry screen to select one of the following entry modes:



Primary	The primary text entry mode (see below to set).
Numeric	Enter numbers only (see page 49).
Symbol	Enter symbols only (see page 49).
Secondary	The secondary text entry mode (see below to set).


Alternatively, you can select a text entry mode in any text entry screen by pressing  > **Entry Mode**.

Setting Up a Text Entry Mode

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

iTAP	Use iTAP [®] mode to let the phone predict each word as you press keys (see page 47).
Tap	Enter letters and numbers by pressing a key one or more times.
Tap Extended	Enter letters, numbers, and symbols by pressing a key one or more times.
None	Hide the Secondary setting (only available for Secondary Setup).

Using Capitalization

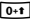Press  in any text entry screen to change text case. The following indicators show capitalization status:







abc = no capital letters

Abc = capitalize next
letter only

ABC = all capital letters

Text Entry Mode Indicators

When you select the **Primary** or **Secondary** text entry mode, indicators at the top of the display identify the text entry setting:

Primary	Secondary	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalize next letter only
1↑	2↑	Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalize next letter only
		iTAP, all capital letters

The following indicators identify **Numeric** or **Symbol** entry mode:

123 = numeric mode


@ = symbol mode







Using Tap Mode

This is the standard mode for entering text on your phone.


Tap mode cycles through the letters and number of the key you press. **Tap Extended** mode also cycles through additional symbols as shown in the “Character Chart” on page 46.




Press	To
1 a keypad key one or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters Tip: Press  right to accept a word completion, or  to insert a space.
3 OK ()	store the text

In a text entry screen, you can press  to switch entry modes. An indicator shows which mode is active (see page 43). If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry mode, see page 42.

When you enter text with **Tap** or **Tap Extended** mode, the soft key functions change.

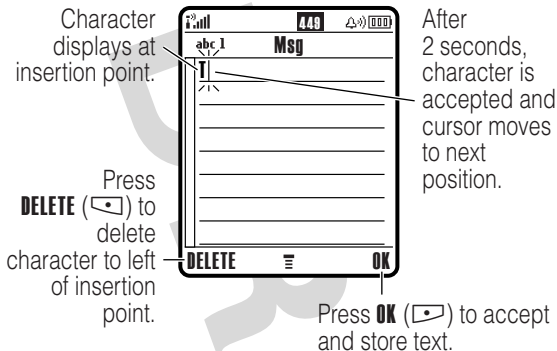


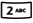
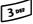

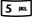

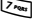
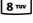

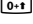


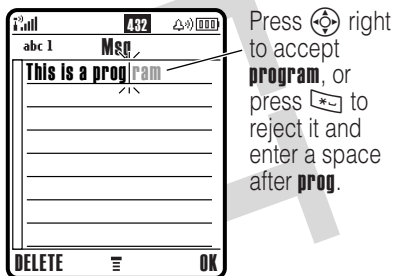When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:




If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

Character Chart




Use this chart as a guide for entering characters with **Tap Extended** mode.

	. 1 ? ! , @ _ & ~ : ; " - () ' ÿ ÿ % £ \$ ¥ ¤ € + x * / \ [] = > < # §
	a b c 2 ä å á à â ã α β ç
	d e f 3 δ ë é è ê ø
	g h i 4 ï í î γ
	j k l 5 λ
	m n o 6 ñ ö ø ó ò ô õ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú ù û
	w x y z 9 ξ ψ
	<i>change text case, for capital letters</i>
	<i>enter a space (hold to enter a return)</i>
	<i>change text entry mode (hold for default)</i>

Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor,  first shows common characters for that editor.

Tap Mode Text Entry Rules


- Press a keypad key repeatedly to cycle through its characters.


- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press  down to change the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.



Using iTAP[®] Mode


iTAP software provides a predictive text entry mode that lets you enter a word using one keypress per letter. This can be faster than **Tap** mode, because your phone combines the keypresses into common words.

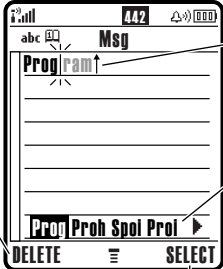
For example, if you press    , letter combinations that match your keypresses display:



Press  up to accept **Program**.

Press  right to highlight another combination. Press  to enter **Prog** and a space.


Press **DELETE** () to delete last letter.


Press **SELECT** () to select highlighted combination.






If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Words

In a text entry screen, you can press  to switch entry modes. An indicator tells you which mode is active (see page 43). If **ITAP** mode is not available as the **Primary** or **Secondary** entry mode, see page 42.




Press	To
1 keypad keys (one press per letter)	show possible letter combinations at the bottom of the display
2  left or right	highlight the combination you want
3 SELECT ()	select the highlighted combination You can press keypad keys to add more letters to the end of the combination.
or	
	enter the highlighted combination when it spells a word A space is automatically inserted after the word.

If you enter a word your phone does not recognize, the phone stores it to use as one of your word options. When

you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.




Using Numeric Mode

In a text entry screen, press  to switch entry modes until the 123 (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry mode.

Using Symbol Mode













In a text entry screen, press  to switch entry modes until the @ (symbol) indicator displays.


Press	To
1 keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display
2  left or right	highlight the combination you want
3 SELECT ()	select the highlighted combination
or	
	enter the highlighted combination

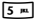

Symbol Chart

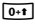Use this chart as a guide for entering characters with symbol mode.

	. ? ! , @ _ & ~ : ; " - () ' ¿ ¡ % £ \$ ¥ ¤ €
	@ _ \
	/ : ;
	" & '
	() [] { }
	¿ ¡ ~
	< > =
	\$ £ ¥ ¤ €
	# % *
	+ - x * / = > < # §
	<i>enter a space (hold to enter a return)</i>
	<i>change text entry mode (hold for default)</i>

Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor,  first shows common characters for that editor.

Deleting Letters and Words


Place the cursor to the right of the text you want to delete, and then:

Action

Press **DELETE** () to delete one letter at a time.

Hold **DELETE** () to delete the entire message.

Using the Smart Key

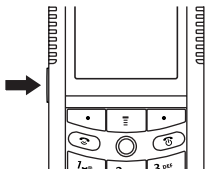

The *smart key* gives you another way to perform many basic phone functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as pushing in the 5-way navigation joystick (⬇️).

Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** (🗉) to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** (🗉) again or turn the phone off.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.



Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

Find the Feature

 > Settings > Security
> New Passwords

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.


To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 66).

Locking Your Phone Manually

Find the Feature


 > **Settings** > **Security**
> **Phone Lock** > **Lock Now**

Press	To
1 keypad keys	enter your unlock code
2 OK ()	lock the phone

Unlocking Your Phone

Tip: Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:


Press	To
1 keypad keys	enter your unlock code
2 OK ()	unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature

 > **Settings** > **Security**
> **Phone Lock**
> **Automatic Lock** > **On**



Press	To
1 keypad keys	enter your unlock code
2 OK ()	activate automatic lock



If You Forget a Code, PIN, or Password

Note: Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 OK ()	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

Using the Phonebook

This section describes basic phonebook operations. For more information about using the phonebook, see page 80 and the *More Here* guide (described on page 8).

Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** (☐) to create a phonebook entry with that number. Fill in the other fields to complete the entry.

Select **MORE** to store another number (for example, a work number) for the same **Name**.

Recording a Voice Name

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (☐) to begin. When prompted, press **RECORD** (☐) and say the entry's name (within 2 seconds). When prompted, press **RECORD** (☐) and repeat the name. Press **DONE** (☐) to store the voice name.

Note: This option is not available for entries stored on the SIM card.

Dialing a Number

Press ☰ > **Phonebook**, highlight the phonebook entry, press ☎ to call.

Voice Dialing a Number

From the home screen, press and hold ☎ for 2 seconds, release, then say the entry's name (within 2 seconds).

Sorting Phonebook Entries

Press ☰ > **Phonebook**, press ☰ > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.



When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 83.

Setting a Picture ID for a Phonebook Entry

Press  > **Phonebook** > *entry*, press  > **Edit** > **Picture** > *picture name*.

Also see pages 3 and 24.

Setting Picture ID View

Press  > **Phonebook**, press  > **Setup** > **View by** > **Picture**.

Viewing Entries By Category

Press  > **Phonebook**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business, Personal, General, VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 82.


Setting Up Your Phone



Storing Your Name and Phone Number



To store or edit your name and phone number information on your SIM card:

Find the Feature

 > **Settings** > **Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider.

Setting the Time and Date

You must set the time and date to use the datebook.

Find the Feature

 > **Settings** > **Initial Setup**
> **Time and Date**

Setting a Ring Style


Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.



You can select one of 5 different ring styles. The ring style indicator in the display shows the current ring style (see page 37).

To set a ring style:

Find the Feature


 > **Settings** > **Ring Styles**
> **Style** > *style name*

Each ring style has settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Settings** > **Ring Styles** > **Style Detail**.

Activating Multi-Key Answer

The multi-key answer option lets you press any key to to answer an incoming call.

Find the Feature

 > **Settings** > **In-Call Setup**
> **Answer Options**
> **Multi-Key** > **On** or **Off**

Activating Vibe Sync

Some ring tones include vibrations. You can turn these vibrations on or off.

Find the Feature

 > **Settings** > **Initial Setup**
> **Vibe Sync** > **On** or **Off**

This setting does not affect game vibrations.

Note: You might feel your phone vibrate a little when you bump or move it. This is natural movement from the vibration unit, and does not affect phone performance or durability.

Setting Event Lights

When event lights are activated, your phone displays a light pattern to notify you of the following events: incoming calls from phonebook categories, incoming text and voicemail messages, alarms, power up, power down, battery charging, Bluetooth® connect, Bluetooth activity, and Bluetooth disconnect.

To turn event lights on or off:

Find the Feature

 > **Settings** > **Ring Styles**
> **Event Lights** > **On** or **Off**




Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.



Tip: To see the picture files stored on a memory card, go to the **Pictures** menu, then press  > **Switch Storage Device** > *device name*.

Find the Feature

 > **Settings** > **Personalize**
> **Wallpaper**


Press	To
1 	scroll to Picture
2 CHANGE ()	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to [None] to turn off the wallpaper image.



Press	To
4 SELECT (◀)	select the image
5 	scroll to Layout
6 CHANGE (◀)	adjust the image layout
7 	scroll to Center , Tile , or Fit-to-screen
	Center places the image in the center of the display.
	Tile fills the display with adjacent copies of the image.
	Fit-to-screen resizes the image, if necessary, to fit the display.
8 SELECT (◀)	confirm the layout setting
9 BACK (◀)	save wallpaper settings

Setting a Screen Saver Image










Set a photo, picture, or animation as a screen saver image. The screen saver image displays when no activity is detected for a specified time. If necessary, the image shrinks to fill the display. An animation repeats for one minute, then the first frame of the animation displays.

Tip: To see the picture files stored on a memory card, go to the **Pictures** menu, then press  > **Switch Storage Device** > *device name*.

Tip: Turn off the screen saver to extend battery life.

Find the Feature

 > **Settings** > **Personalize**
> **Screen Saver**

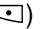Press	To
1 	scroll to Picture
2 CHANGE (	open the picture viewer
3 	up or down scroll to a picture/animation Scroll to (None) to turn off the screen saver image.
4 SELECT (	select the image
5 	scroll to Delay
6 CHANGE (	set the delay interval
7 	scroll to the inactivity interval that starts the screen saver
8 SELECT (	select the inactivity interval
9 BACK (	save screen saver settings

Setting Display Brightness

Find the Feature

 > **Settings** > **Initial Setup**
> **Brightness**

Adjusting the Backlight

Set the amount of time that the display backlight remains on.

Find the Feature

 > **Settings** > **Initial Setup**
> **Backlight**

Note: Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off



automatically when no activity is detected for a period of time. The backlight turns back on when you press any key.

Setting Display Timeout

To extend battery life, you can set the display to turn off when no activity is detected for a period of time.

Find the Feature

 > **Settings** > **Initial Setup**
> **Display Timeout**

Note: The display turns back on when you press any key.



Calling Features

For basic instructions on how to make and answer calls, see page 16.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.




Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature

 > **Settings** > **Phone Status**
> **Active Line**

The active line indicator in the display shows the currently active phone line (see page 35).

Redialing a Number

Press	To
1 	view the dialed calls list
2 	scroll to the entry you want to call
3 	redial the number



Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

Press



To

redial the number

When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and connects the call.

Using Caller ID

Incoming Calls



Calling line identification (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.

The phone displays the caller's name (and picture ID, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID for specific entries stored in your phonebook. For more information, see page 80.

Outgoing Calls



You can show or hide your phone number as an ID for the calls that you make.

Find the Feature

 > **Settings** > **In-Call Setup**
> **My Caller ID**

You can override the default caller ID setting when you make a call. While dialing (with digits visible in the display):

Press

To

 > **Hide ID/Show ID**

hide or show your caller ID for the next call

Canceling an Incoming Call

While the phone is ringing or vibrating:

Press

To

IGNORE ()

cancel the incoming call



Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.



Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert


Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number


Dialing International Numbers

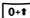Press and hold  to insert the local international access code (+) for the country from which you are calling, then press the keypad keys as usual to dial the phone number.










Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press  from the home screen to view the dialed calls list.

Find the Feature

 > Recent Calls

Press	To
1 	scroll to Received Calls or Dialed Calls
2 SELECT ()	select the list
3 	scroll to an entry Note: ✓ means the call connected.
4 	call the entry's number Tip: Press and hold  for 2 seconds to send the number as DTMF tones during a call.
or	
VIEW ()	view entry details
or	
	open the Last Calls Menu to perform various operations on the entry



The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. Note: This option displays only during a call.
Talk then Fax	Talk and then send a fax in the same call (see page 89).





Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the ☎ (missed call) indicator



- **X Missed Calls**, where **X** is the number of missed calls



Press	To
1 VIEW (📄)	see the received calls list
2 	select a call to return
3 	make the call

Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's *notepad* memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature


 > Recent Calls > Notepad

Press	To
	call the number
or	
	open the Dialing Menu to attach a number or insert a special character
or	
STORE (📄)	create a phonebook entry with the number in the No. field





Attaching a Number

While dialing (with digits visible in the display):



Press	To
 > Attach Number	attach a number from the phonebook or recent calls lists

Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number.

Tip: To see an entry's speed dial number, press  > **Phonebook**, scroll to the entry, press **VIEW** ().

To speed dial a phonebook entry:

	Press	To
1	keypad keys	enter the speed dial number for the entry you want to call
2		submit the number
3		call the entry

Calling With 1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.

Tip: You must specify which phone number list you want to use with this feature: phone memory phonebook, or SIM card phonebook (see page 83).



Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.


Note: Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

Find the Feature  > **Messages** > **Voicemail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voicemail message) indicator and the **New Voicemail** notification.

Press	To
CALL ()	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.




Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature

-  > Messages
-  > Voicemail Setup





Press	To
1 keypad keys	enter your voicemail number
2 OK ()	store the number

Note: You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. For more about these characters, see the *More Here* guide.

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.



Press	To
1 	answer the new call
2 SWITCH ()	switch between calls
or	
LINK ()	connect the 2 calls
or	
 > End Call On Hold	end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature

 > **Settings** > **In-Call Setup**
> **Call Waiting**

Putting a Call On Hold

Press	To
HOLD () (if available) or	put the call on hold
 > Hold	

Transferring a Call








You can announce that you are transferring an active call to another party, or you can directly transfer the call.




Announce the Call Transfer

Find the Feature  > Hold

Press	To
1 keypad keys	dial the number where you are transferring the call
2 	call the number and speak to the person who answers
3 	open the menu
4 	scroll to Transfer
5 SELECT ()	select Transfer
6 OK ()	confirm the transfer

Do Not Announce the Call Transfer

Find the Feature  > Transfer

Press	To
1 keypad keys	dial the number where you are transferring the call
2 	transfer the call



Phone Features

Main Menu

This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.

Phonebook

Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Call Cost
- Data Times
- Data Volumes

Games & Apps

Web Access

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions

Messages

- Create Message
- Message Inbox
- Voicemail
- Email Msgs
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts
- MMS Templates

Multimedia

- Themes
- Camera
- Pictures
- Sounds
- MotoMixer
- Videos

IM

Settings (see next page)

Chat

Office Tools

- SIM Apps
- Calculator
- Datebook
- Shortcuts
- Alarm Clock
- Dialing Services
 - Fixed Dial
 - Service Dial
 - Quick Dial



Settings Menu



Personalize

- Rhythm Lights
- Home Screen
- Main Menu
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



Ring Styles

- Style
- Style Detail
- Ring Lights
- Event Lights



Connection

- Bluetooth Link
- Sync



Call Forward

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup
- Scroll
- Vibe Sync
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available
- Active Line
- Battery Meter
- Storage Devices
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Keypad
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords













Java Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight
- Set Standby App
- DNS IP

Feature Quick Reference













This section helps you locate features on your phone that are not described in this guide. For more detailed information, see the *More Here* guide (described on page 8).

Calling Features





Feature	Description
Conference Call	During a call:  > Hold , dial next number, press  , press LINK () 
Call Forwarding	Set up or cancel call forwarding:  > Settings > Call Forward 
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring 
TTY Calls	Set up your phone for use with an optional TTY device:  > Settings > Initial Setup > TTY Setup 



Messages









Feature	Description	
Send Text Message	Send a text message:  > Messages > Create Message > New Short Message	
Send Multimedia Message	Send a multimedia message:  > Messages > Create Message > New Multimedia Msg	
Send Letter	Send a multimedia letter:  > Messages > Create Message > New Letter	
Use MMS Template	Open an MMS template with preloaded media:  > Messages > Create Message > MMS Templates	
Read Message	Read a new text or multimedia message that you have received: Press READ ().	
Store Message Objects	Go to a multimedia message slide, or highlight an object in a letter, then:  > Store	

Instant Messaging

Feature	Description
Log In	Log in to instant messaging:  > IM > Log In
Find Others Online	After you sign on: Select Contact List to see a list of other users.
Start Conversation	Start a conversation: From your Contact List , highlight a name in Online Contacts , press SEND IM ().
Open Active Conversation	Open a conversation in progress: From your Contact List , highlight a name in Conversations , press VIEW ().
End Conversation	From the conversation display:  > End Conversation
Log Out	Log out of instant messaging: Select Log Out from the IM Online menu.





Chat










Feature	Description	
Start Chat	Start a new chat session:  > Chat  > New Chat	
Receive Chat Request	When you receive a chat request: Press ACCEPT () or IGNORE ()	
End Chat	During a chat session:  > End Chat	

Email












Feature	Description	
Send Email Message	Send an email message:  > Messages > Create Message > New Email	
Read Email Message	Read a new email message that you have received: Press READ ()	






Phonebook

Feature	Description
Create Entry	Create a new phonebook entry:  > Phonebook  > New > Phone Number or Email Address




Feature	Description
Create Group Mailing List	Create a group mailing list as a phonebook entry:  > Phonebook  > New > Mailing List
Dial Number	Call a number stored in the phonebook:  > Phonebook , highlight the phonebook entry, press  to call
Voice Dial Number	Voice dial a number stored in the phonebook: From the home screen, press and hold  for 2 seconds, release, then say the entry's name (within 2 seconds).
Set Ringer ID for Entry	Assign a distinctive ringer alert to a phonebook entry:  > Phonebook > <i>entry</i>  > Edit > Ringer ID > <i>ringer name</i> Note: The Ringer ID option is not available for entries stored on the SIM card.
Set Picture ID for Entry	Assign a photo or picture to a phonebook entry:  > Phonebook > <i>entry</i>  > Edit > Picture > <i>picture name</i> Note: The Picture option is not available for entries stored on the SIM card.










Feature	Description
Set Picture ID View	View phonebook entries as text list, or with picture caller ID photos:  > Phonebook  > Setup > View by > <i>list view</i>
Set Category for Entry	Set the category for a phonebook entry:  > Phonebook > <i>entry</i>  > Edit > Category > <i>category name</i> Note: The Category option is not available for entries stored on the SIM card.
Set Category View	Set a phonebook category view:  > Phonebook  > Categories > <i>category view</i>
Set Category Light ID	Set a distinctive light pattern to be displayed when you receive calls from phonebook entries in a specific category:  > Phonebook  > Categories , scroll to entry, press  > Edit > Light ID . Note: The Light ID option is not available for entries stored on the SIM card.
Sort Phonebook List	Set the order in which phonebook entries are listed:  > Phonebook  > Setup > Sort by > <i>sort order</i>

Feature	Description
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers:  > Phonebook , scroll to entry, press  > Set Primary > <i>phone number</i> .
Copy Phonebook Entry to Another Device	Copy a phonebook entry to another phone, computer, or device:  > Phonebook , highlight the entry, press  > Send > Bluetooth
1-Touch Dial	Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook:  > Settings > Initial Setup > 1-Touch Dial

Personalizing Features




Feature	Description
Ring Style	Change the ring alert for an event:  > Settings > Ring Styles > <i>Style Detail</i> > <i>event name</i>
Ringer IDs	Activate distinctive ring alerts assigned to phonebook entries:  > Settings > Ring Styles > <i>Style Detail</i> > Ringer IDs
Ring Volume	Set ringer volume:  > Settings > Ring Styles > <i>Style Detail</i> > Ring Volume



Feature	Description
Keypad Volume	Set keypad keypress volume:  > Settings > Ring Styles > <i>Style Detail</i> > Key Volume
Reminders	Set reminder alerts for messages that you receive:  > Settings > Ring Styles > <i>Style Detail</i> > Reminders
Clock View	Display an analog clock or digital time readout in the home screen:  > Settings > Personalize > Home Screen > Clock
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalize > Main Menu > View
Main Menu	Reorder your phone's main menu:  > Settings > Personalize > Main Menu > Reorder
Show or Hide Menu Icons	Show or hide menu feature icons in the home screen:  > Settings > Personalize > Home Screen > Home Keys > Icons
Change Soft Keys & Menu Icons	Change soft key labels and menu feature icons in the home screen:  > Settings > Personalize > Home Screen > Home Keys







Feature	Description
Shortcuts	<p>Create a shortcut to a menu item: Highlight the menu item, then press and hold .</p> <p>Select a shortcut:  > Office Tools > Shortcuts > <i>shortcut name</i></p>

Menu Features

Feature	Description
Language	<p>Set menu language:  > Settings > Initial Setup > Language</p>
Master Reset	<p>Reset all options <i>except</i> unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset</p>
Master Clear	<p>Reset all options <i>except</i> unlock code, security code, and lifetime timer, and clear all user settings and entries <i>except</i> SIM card information:  > Settings > Initial Setup > Master Clear</p>




Dialing Features

Feature	Description
Fixed Dial	Turn fixed dialing on or off:  > Settings > Security > Fixed Dial Use the fixed dial list:  > Office Tools > Dialing Services > Fixed Dial
Service Dial	Dial service phone numbers:  > Office Tools > Dialing Services > Service Dial
Quick Dial	Dial preprogrammed phone numbers:  > Office Tools > Dialing Services > Quick Dial
DTMF Tones	Activate DTMF tones:  > Settings > Initial Setup > DTMF Send DTMF tones during a call: Press number keys. Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press  > Send Tones.









Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to

the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.










Feature	Description
Call Times	View call timers:  > Recent Calls > Call Times 
In-Call Timer	Display time or cost information during a call:  > Settings > In-Call Setup > In-Call Timer 
Call Cost	View call cost trackers:  > Recent Calls > Call Cost 


Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always





obey the laws and regulations on the use of these products.

Feature	Description
Speaker-phone	Activate a connected external speakerphone during a call: Press SPEAKER () (if available) or  > Sprkphone On . 
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Car Settings or Headset > Auto Answer 
Voice Dial (headset)	Enable voice dial with headset send/end key:  > Settings > Headset > Voice Dial 
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  > Settings > Car Settings > Auto Handsfree 
Power-Off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:  > Settings > Car Settings > Power-Off Delay 

Feature	Description
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off:  > Settings > Car Settings > Charger Time





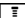



Data and Fax Calls




Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application.
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application.
Talk Then Fax	Connect your phone to the device, enter the number, press  > Dialing Menu > Talk Then Fax , then press  to make the call.



Bluetooth® Wireless Connections


Feature	Description
Set Up a Wireless Connection	Set up a Bluetooth wireless connection to a headset accessory, car kit, or external device:  > Settings > Connection > Bluetooth Link > Handsfree > [Look For Devices]
Make Phone Visible to Other Device	Allow an unknown Bluetooth device to discover your phone:  > Settings > Connection > Bluetooth Link > Setup > Find Me
Connect to Recognized Device	Connect to a recognized handsfree device:  > Settings > Connection > Bluetooth Link > Handsfree > <i>device name</i>
Disconnect From Device	Disconnect from a device: Highlight the device name and press DROP ( .
Switch to Device During Call	Switch to a headset or car kit during a call:  > Use Bluetooth
Copy Multimedia Object to Device	Copy a multimedia object to another device: Highlight the object, press  > Copy , select the device name.



Feature	Description
Copy Phonebook/Datebook Entry to Device	Copy a phonebook entry, datebook event, or bookmark to another device: Highlight the item, press  > Send > Bluetooth , select the device name.
Edit Device Properties	Edit the properties of a recognized device: Highlight the device name and press  > Edit .
Set Bluetooth Options	Set your phone's Bluetooth options:  > Settings > Connection > Bluetooth Link > Setup


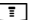


Network Features














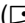

Feature	Description
Network Settings	View network information and adjust network settings:  > Settings > Network





Personal Organizer Features

Feature	Description
Create Datebook Event	Create a new datebook event:  > Office Tools > Datebook , highlight the day, press the center select button, press  > New










Feature	Description
View Datebook Event	View or edit event details:  > Office Tools > Datebook , highlight the day, press the center select button, press VIEW ()
Event Reminder	View event reminder: VIEW () Dismiss event reminder: EXIT ()
Copy Datebook Event to Another Device	Copy a datebook event to another phone, computer, or device:  > Office Tools > Datebook , highlight the day, press the center select button, highlight the event, press  > Send > Bluetooth
Set Alarm	Set an alarm:  > Office Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press DISABLE () or  . Set 8-minute delay: Press SNOOZE ()
Calculator	Calculate numbers:  > Office Tools > Calculator
Currency Converter	Convert currency:  > Office Tools > Calculator  > Exchange Rate Enter exchange rate, press OK () , enter amount, press  > Convert Currency .



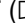





Security






Feature	Description
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications:  > Settings > Security > Lock Application

News and Entertainment

Feature	Description
Launch Micro-Browser	Start a micro-browser session:  > Web Access > Browser 
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press SELECT () , press STORE (). 
Web Sessions	Select or create a Web session:  > Web Access > Web Sessions 

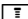

Feature	Description
Apply Phone Theme	Apply a grouped set of image and sound files to your phone:  > Multimedia > Themes > <i>theme</i> 
Download Game or Application (Micro-Browser)	Download a Java™ game or application with the micro-browser:  > Web Access > Browser , highlight the application, press SELECT () , press DOWNLOAD () 
Download Game or Application (Computer)	Download a Java game or application from a computer: Connect your phone to the computer, press  > Settings > Java Settings > Java App Loader . 
Launch Game or Application	Launch a Java game or application:  > Games & Apps , highlight the application, press SELECT () 
Manage Pictures	Manage pictures and animations:  > Multimedia > Pictures 
Manage Sounds	Manage ring tones and music that you have composed or downloaded:  > Multimedia > Sounds

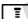Feature	Description
Manage Video Clips	Manage video clips:  > Multimedia > Videos
Edit Sounds With MotoMixer	Edit MIDI-based songs that you can use with your phone:  > Multimedia > MotoMixer > [New Mix] or <i>mix file name</i>
Create Ring Tones	Create iMelody ring tones that you can use with your phone:  > Multimedia > Sounds > [New iMelody]
Camera	Adjust light level and other settings for the integrated camera:  > Multimedia > Camera  > Pictures Setup



Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when

tested for use at the ear is 0.33 W/kg, and when worn on the body, as described in this user guide, is 0.46 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 0.43 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

A

accessories 9, 77

active line indicator 35

active line, changing 63

alarm clock 92

alert

creating 95

defined 57

setting 16, 57, 83

turning off 16, 66

animation

downloading 78, 93

screen saver 60

viewing 94

wallpaper 59

answering a call 17, 58

application, locking and

unlocking 93

automatic redial 64

B

backlight 61

barring calls 77

battery

charging 14

extending battery life 11,
33, 60, 61

installing 13

level indicator 36

Bluetooth 3, 23, 83, 90, 91,
92

brightness, setting 61

browser. *See* micro-browser

C

calculator 92

call

adding digits after phone
number 68

alert, turning off 16, 66

answering 17

barring 77

barring password,
changing 52

call waiting 72

canceling 65

costs 87

deleting 67

dialed calls list 67

dialing 16

emergency number 66

ending 16, 17

forwarding 77

handsfree speaker 51

hold 73

- international access code
 - 66
 - making 16
 - multi-key answer 58
 - received calls list 67
 - receiving 17
 - recent calls 67
 - ring style 16, 57, 83
 - speakerphone 88
 - storing 67
 - talk then fax 68
 - timers 87
 - transferring 73
 - unanswered call 68
 - Call Failed, Number Busy
 - message 64
 - call waiting 72
 - caller ID 26, 56, 64, 68, 81, 82
 - calling line identification.
 - See caller ID
 - camera
 - settings 95
 - taking a photo 3, 24
 - car kit 87
 - character chart 46
 - chat 80
 - clock
 - illustration 32
 - selecting analog or digital 84
 - setting 57
 - codes
 - changing 52
 - default 52, 53, 54
 - forgetting 54
 - conference call 77
 - cursor 41
 - customizing the menu 84
- ## D
- data call 89
 - date, setting 57
 - datebook 91, 92
 - deleting a call 67
 - dialed calls list 67
 - dialing a number 16, 86
 - display
 - backlight 61
 - brightness 61
 - description 32
 - home screen 32
 - language 85
 - personalizing 84
 - skin 3, 27
 - timeout 62
 - distinctive ringer alert 83
 - drafts folder 30
 - DTMF tones
 - activating 86
 - sending 67, 68, 86

E

earpiece volume 16
email 80
 draft 30
 reminders, turning on/off 84

emergency number 66
end key 16, 17
ending a call 16, 17
Enter Unlock Code
 message 53, 54
event lights 59

F

fax call 68, 89
5-way navigation joystick 37
fixed dial 86
flashing cursor 41
forwarding calls 77

G

games 94
GPRS indicator 35
groove tunes 95

H

handsfree speaker 51
handsfree use 87
headset accessory, using 87
Hide ID feature 68

hold a call 73
home keys, personalizing 84
home screen
 defined 32
 selecting clock view 84

I

IM 79
incoming call
 answering 17
 canceling 65
 forwarding 77
Incoming Call message 64
indicators
 active line 35
 battery level 36
 GPRS 35
 Java midlet 36
 location 37
 loud ring style 37
 message 36
 messaging presence 36
 missed call 68
 ring style 37
 roam 35
 signal strength 35
 silent alert 37
 soft ring style 37
 text case 43
 text entry mode 43

transmission 34
vibrate alert 37
vibrate and ring style 37
voicemail message 36,
71
instant messaging. *See* IM
international access code
66
iTAP software 47

J

Java applications 94
Java midlet indicator 36
joystick 37

K

key
end 16, 17
left soft key 33, 84
lock 18
menu 39
power 15
right soft key 33, 84
send 16, 17, 67
smart 51
volume control 16
keypad
answering calls 58
locking and unlocking 18
volume, setting 84

L

language, setting 85
left soft key
functions 33
personalizing 84
light ID, setting 82
line, changing 63
location indicator 37
lock
application 93
keypad 18
phone 52
SIM card 93
Low Battery message 36

M

making a call 16
master clear 85
master reset 85
memory card
defined 10
installing 10
using 2, 19, 26
menu
entering text 41
icons, changing in home
screen 84
icons, converting to text
84
icons, described 32

- menu (continued)
 - icons, showing or hiding 84
 - language, setting 85
 - lists 40
 - navigating 38
 - personalizing 84
 - rearranging features 84
 - using features 40
 - view, changing 84
 - menu key 39
 - message
 - chat 80
 - menu feature icon 32
 - MMS template 78
 - MMS, defined 27
 - multimedia letter 78
 - multimedia message 78
 - reading 78
 - reminders, turning on/off 84
 - text 78
 - message indicator 36
 - messages menu feature icon 32
 - messaging presence indicator 36
 - micro-browser
 - browser setup 93
 - Java applications 94
 - menu feature icon 32
 - using 93
 - Web sessions 93
 - missed call indicator 68
 - Missed Calls message 69
 - MMS template 78
 - MMS. *See* message
 - More Here* guide 8
 - MotoMixer 95
 - multimedia letter, sending 78
 - multimedia message
 - sending 3, 27, 78
 - multimedia messaging service. *See* message
 - music
 - downloading 78, 93
 - managing 94
 - playing 2
 - playlist 2, 20
 - my telephone number 17, 57
- ## N
- network settings 91
 - notepad 69
 - number
 - storing your number 57
 - viewing your number 17
 - numbers, entering 49

O

- object exchange 24
- 1-touch dial
 - setting preference 83
 - using 70
- optional accessory, defined 9
- optional feature, defined 9

P

passwords. *See* codes

phone

- active line indicator 35
- active line, changing 63
- alert, turning off 16, 66
- clear stored information 85
- codes 52
- date, setting 57
- keypad, answering calls 58
- keypad, locking and unlocking 18
- language, setting 85
- locking 52
- multi-key answer 58
- network settings 91
- reset all options 85
- ring style 16, 57, 83
- security code 52
- skin 3, 27

- time, setting 57
- turning on/off 15
- unlock code 52
- unlocking 15, 52, 53, 54

phone number

- active line indicator 35
- active line, changing 63
- adding digits after 68
- attaching 2 numbers 68, 70

international access code 66

redialing 63

storing in phonebook 80

storing your number 57

viewing your number 17

phone theme 94

phonebook

- attaching 2 numbers 68, 70

category views 56, 82

copying entries 83

dialing a number 81

entry category 82

group mailing list 81

light ID 82

1-touch dial 70

picture ID 26, 56, 64, 81, 82

primary number, setting 83

ringer ID 81, 83

phonebook (continued)
 sorting entries 55, 82
 speed dial number 70
 storing an entry 80
 voice dialing 81

photo
 downloading 78, 93
 picture ID 26, 56, 64, 81,
 82
 sending 3, 24
 taking 3, 24

picture
 downloading 78, 93
 screen saver 60
 viewing 94
 wallpaper 59

picture ID 26, 56, 64, 81, 82

PIN code
 changing 52
 entering 93

PIN2 code, changing 52

playlist 2, 20

power key 15

predictive text entry 47

primary text entry mode 42

Q

quick dial 86

R

received calls list 67

recent calls 67

redial
 automatic redial 64
 busy number 63

reference guide 8

reminders
 turning on/off 84

rhythm lights 3, 21

right soft key
 functions 33
 personalizing 84

ring lights 3, 22

ring style indicators 37

ring style, setting 16, 57, 83

ring tone
 creating 95
 downloading 78, 93
 editing with MotoMixer 95
 managing 94
 playing 2
 playlist 2

ringer ID
 setting 81
 turning on/off 83

ringer volume, setting 16,
 83

roam indicator 35

S

- screen saver 60
 - secondary text entry mode 42
 - security code
 - changing 52
 - default 52
 - forgetting 54
 - send key 16, 17, 67
 - service dial 86
 - shortcuts 85
 - Show ID feature 68
 - signal strength indicator 35
 - silent alert indicator 37
 - silent alert, setting 16, 57, 83
 - SIM Blocked message 15, 93
 - SIM card
 - defined 9
 - installing 9
 - locking 93
 - PIN code entry 15
 - PIN code, changing 52
 - PIN2 code, changing 52
 - precautions 10, 11
 - SIM Blocked message 15, 93
 - SIM PIN code
 - changing 52
 - entering 93
 - SIM PIN2 code, changing 52
 - skin 3, 27
 - smart key 51
 - soft keys
 - functions 33
 - personalizing 84
 - song
 - downloading 78, 93
 - managing 94
 - playing 2
 - playlist 2, 20
 - sound
 - downloading 78, 93
 - managing 94
 - playing 2
 - Speaker On message 51
 - speakerphone
 - activating 88
 - automatic answer 88
 - speed dial 70
 - standby time, increasing 60, 61
 - storing a call 67
 - symbol chart 50
 - symbols, entering 49
- ## T
- talk then fax call 68
 - tap mode text entry 44

- telephone number
 - storing your number 57
 - viewing your number 17
- text
 - capitalization, changing 43
 - character chart 46
 - entering 41
 - entry mode, selecting 42
 - entry mode, setup 42
 - flashing cursor 41
 - iTAP software predictive text entry 47
 - numeric mode 49
 - symbol chart 50
 - symbol mode 49
 - tap mode 44
- text case indicator 43
- text entry mode
 - selecting 42
 - setup 42
- text entry mode indicator 43
- theme 94
- time, setting 57
- timers 87
- transfer a call 73
- transmission indicator 34
- travel charger 14
- TTY device 77

U

- unlock
 - application 93
 - keypad 18
 - phone 52
- unlock code
 - bypassing 54
 - changing 52
 - default 52, 53, 54
 - entering 15, 53
 - forgetting 54

V

- vibe sync 58
- vibrate alert
 - setting 16, 57, 83
 - turning off 16, 66
- video clip
 - downloading 78, 93
 - managing 95
 - playing 3, 31
- voice dial 81, 88
- voice key
 - dialing a number 81
- voicemail 71
- voicemail message indicator 36, 71

volume
 earpiece 16
 keypad 84
 ringer 16, 83
volume key 16

W

wallpaper 59
Web pages 93
Web sessions 93

DRAFT