

APPLICANT: MOTOROLA, INC.

FCC ID: IHDT6FE1

INSTRUCTION MANUAL

A preliminary draft copy of the Users Manual follows:



MOTOMANUAL

RAZR™ V3x
3G

motorola.com

HELLOMOTO

Introducing your new Motorola RAZR™ V3x 3G wireless phone. Here's a quick anatomy lesson.



Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2005.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or

reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68XXXXX108-0

contents

menu map	6	text entry	45
Safety Information	8	volume	50
EU Conformance	15	navigation key	50
Recycling Information	16	smart key	51
essentials	17	external display	51
about this guide	17	handsfree speaker	51
SIM card	17	codes & passwords	51
battery	18	lock & unlock phone	52
turn it on & off	20	customize	53
make a call	21	ring style	53
answer a call	21	time & date	54
store a phone number	21	wallpaper	54
call a stored phone number	22	screen saver	55
your phone number	22	themes	56
main attractions	23	display appearance	56
audio player	23	answer options	57
digital audio player	24	calls	58
take & send a photo	25	turn off a call alert	58
record & send a video	28	recent calls	58
video calls	29	redial	59
memory card	30	return a call	60
cable connections	33	caller ID	60
Bluetooth® wireless	34	emergency calls	60
basics	40	voicemail	61
display	40	other features	62
menus	43	advanced calling	62
		phonebook	66

messages	69
instant messaging.	73
personalizing	74
call times & costs	76
handsfree	77
data calls	78
network	79
personal organizer	80
security	82
fun & games	82
service and repairs	86
SAR Data	87
Warranty	89
WHO Information	95
index	96

menu map

main menu



Camera



Tools

- SIM Tool Kit *
- Calculator
- Datebook
- Alarm Clock
- Bar Code Reader
- Dialing Services
 - Fixed Dial *
 - Quick Dial
- Activation List



Ring Styles

- Style
- style Detail



Games & Apps



Multimedia

- Themes
- Camera
- Pictures
- Sounds
- Videos
- Video Camera



Web Access

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions *



Messages

- Create Message
- Call Voicemail
- Inbox
- Create Postcard *
- Send to My Album *
- Email Inbox
- Messenger *
- Browser Msgs
- Info Services *
- Outbox
- Drafts
- Templates



Phonebook



Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times *
- Call Cost *



Settings

- (see next page)



Bluetooth Link

- Audio Devices
- Device History
- Setup



IM

* optional features

This is the standard main menu layout. Your phone's menu may be a little different.

settings menu



Personalize

- Home Screen
- Main Menu
- Skins
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



Connection

- Sync
- USB Settings



Call Forward *

- Voice Calls
- Video Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- Call Cost Setup *
- My Caller ID
- Answer Options
- Call Waiting
- MSG Alert



Initial Setup

- Time and Date
- Speed Dial
- Auto Redial
- Display Timeout
- Backlight
- TTY Setup *
- Scroll
- Language
- Battery Save
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- Active Line *
- Battery Meter
- Storage Devices
- Software Update *
- Other Information



Headset

- Auto Answer
- Ringer Options
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Airplane Mode

- Airplane Mode
- Prompt at Startup



Network

- New Network
- Network Setup
- Available Networks
- My Network List *
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial *
- Call Barring *
- SIM PIN
- New Passwords
- Certificate Mgmt *



Java Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority *
- App Backlight
- Set Standby App *
- DNS IP *

* optional features

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.¹

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions.

External Antenna Care

If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline phone.

Body-Worn Operation: Voice Communication

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting voice communications, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines.

If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 2.5 centimeters (1 inch) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 2.5 centimeters (1 inch) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

Turn off your wireless device whenever instructed to do so by airline staff. If your device offers a flight mode or similar feature, consult airline staff about use in flight. If your device offers a feature that automatically turns on the phone, then turn off this feature before boarding an airplane or entering an area where the use of wireless devices is restricted.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 centimeters (6 inches) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 15 centimeters (6 inches) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road. Using a phone may be distracting in certain circumstances. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices can be found in the "Wireless Phone Safety Tips" at the end of this guide and/or at the Motorola website: www.motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Gas or Petrol Stations

Obey all posted signs with respect to the use of radio equipment in gas or petrol stations. Turn off your wireless device if instructed by authorized staff.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Damaged Products






If your phone or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center to determine if it has been damaged. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become hot. Take care when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Choking Hazards

Your phone or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your phone and its accessories away from small children.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms

occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries


When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
 - If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
 - If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.
1. The information provided in this document supersedes the general safety information in user's guides published prior to January 28, 2005.

European Union Directives Conformance Statement

CE Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

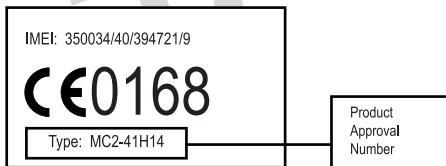

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose the product with household waste.

Recycling Mobile Phones and Accessories



Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.



essentials



about this guide

This guide shows how to locate a menu feature as follows:

Find it: Press  >  **Recent Calls** > **Dialed Calls**

This example shows that, from the home screen, you press the *center key*  to open the menu. Scroll to and select  **Recent Calls**, then scroll to and select **Dialed Calls**.

Press the *navigation key*  to scroll to a menu feature. Press the *center key*  to select the highlighted menu feature.

symbols	
	This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.

SIM card

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.


Turn off your phone and remove your battery before you install or remove a SIM card.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.


It can also contain your voicemail, text message, and Internet access settings. If you put your SIM card in another phone, that phone uses your phone number.

To insert and use a memory card, see page 30.

1

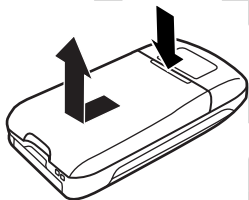


2

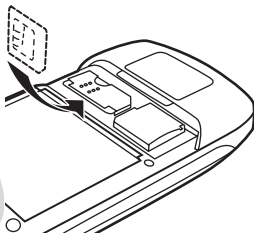


battery

battery installation


1

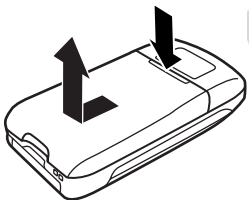

2

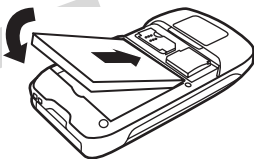


3

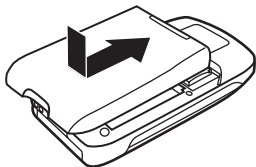

battery charging

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. Your display shows **Charge Complete** when finished.

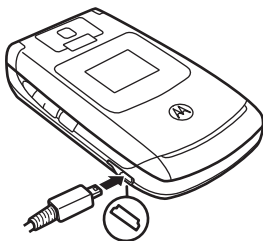

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

The battery charger shipped with this device is designed for Motorola 3G mobile phones. Other chargers might take longer to charge your battery, or cause your calls to fail during charging.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.



- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.




Contact your local recycling center for proper battery disposal.


Warning: Never dispose of batteries in a fire because they may explode.


Before using your phone, read the battery safety information in the “Safety and General Information” section included in this guide.

turn it on & off

Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your display shows **SIM Blocked**. Contact your service provider.


To turn on your phone, press and hold  for a few seconds or until the display turns on. If prompted, enter your 6-digit SIM card PIN code and/or 4-digit unlock code.

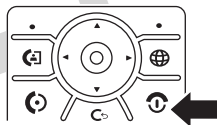

To turn off your phone, press and hold  for 2 seconds.

make a call

Enter a phone number and press  to make a call.

To “hang up,” close the flip or press .

To make video calls, see page 29.


answer a call

When your phone rings and/or vibrates, just open the flip or press  to answer.



To “hang up,” close the flip or press .

store a phone number

You can store a phone number in your **Phonebook**:



- 1 Enter a phone number in the home screen.
- 2 Press the **Store** key.
Select **Create New Contact**, if necessary.
- 3 Enter a name and other details for the phone number. To select a highlighted item, press the *center key* .
- 4 Press the **Done** key to store the number.

To edit or delete a **Phonebook** entry, see page 66.



To store an email address, press  >  **Phonebook** > **New Entry**. Enter the new contact's name and **Email** information.

Note: You can also store a phonebook entry on your SIM card. Entries stored on the SIM (USIM) card cannot include extra details such as **URL** and **Notes**. To see entries on your SIM card, open the Phonebook and press **Options > View SIM Contacts**. Then, to create a new entry on your SIM card, press **Options > Create New**.

call a stored phone number

Find it:  >  Phonebook

- 1 Scroll to the phonebook entry.




Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press  and  to see the entries you use frequently, or entries in other categories.

- 2 Press  to call the entry.

your phone number

From the home screen, press   to see your number.

Tip: Want to see your phone number while you're on a call? Press **Options > My Tel. Numbers**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  , , select an entry, and press the **Edit** key. If you don't know your phone number, contact your service provider.


 
 
main attractions


You can do much more with your phone than make and receive calls!

audio player

Your phone can play song files:

Find it: Press  >  **Multimedia** > **Sounds** and select the file you want to play.

 Press  up to play or pause. Press  down to stop. Press  right or left to go forward or back.



To download songs to your phone, see page 83. To copy files between your phone and a computer, see page 31.

Note: Your phone cannot play MP3 files that have a bit rate higher than 192 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

play music with your phone closed

You can close your phone while you listen to music. When your phone is closed, the external display shows the song artist, title, and time. Press the **volume keys** to adjust playback volume.

Press the **smart key** to show the audio player controls:

audio player controls in the external display	
play or pause a track	Press the smart key.
skip forward	Press the volume up key.
fast-forward	Hold the volume up key.
skip back	Press the volume down key.
rewind	Hold the volume down key.
close the controls	Hold the smart key.

The controls close after 5 seconds if you don't use them.








digital audio player

Your phone can play song files:

Find it: Press  >  **Games & Apps** > **Digital Audio Player**



Press  up or down to scroll to an option, and press the *center key*  to select it:

options	
Playlists	Create or play a playlist of songs.
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.
Songs	Show and play individual songs. Note: All of your phone's songs appear in the Songs list. Some songs do not have any Artist , Album , or Genre information stored, so they don't appear in those lists.
Genres	Select a type of music to show or play songs.
About	Show audio player version information

 

When you select a song, press the *center key*  to play , or pause , press  left for previous , or press  right for next .

To download songs to your phone, see page 83. To copy files between your phone and a computer, see page 31.

Note: Your phone cannot play MP3 files that have a bit rate higher than 192 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file. Metadata information is **not** supported for **MP4** formatted files."


Your phone also has a **Sounds** player that can play songs and ring tones, but it cannot store playlists or other song information. To use the **Sounds** player, press  >  **Multimedia** > **Sounds** and select the file you want to play.



take & send a photo

Focus: You can use the focus switch to enhance focus for close-up pictures (). Use the () setting for standard pictures.



To view, edit, or delete photos you've taken, see page 82.

- 1 Press  to see the camera viewfinder.

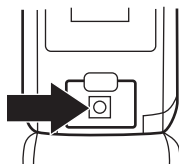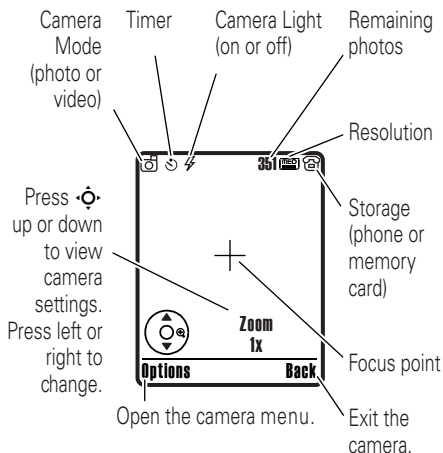


- 2 Press the *center key*  to take the photo in the viewfinder. You can:

- Press the **Options** key to store or discard the photo.
If you press **Options** > **Send**, you can print the picture over a Bluetooth® connection (see page 37).
- Press the **Send** key to send the photo in a message.



Before you capture the photo, you can press **Options** to open the camera menu:

options	
Go To Pictures	See stored pictures and photos.

options	
Go To Video Mode	Switch to the video camera.
Internal / External View	Switch to the camera facing you (Internal) or facing away from you (External).
Switch Storage Device	Choose to store and see pictures on your phone or memory card. 
Light On / Off	Turn the camera light on or off. Note: The light stays on until you take a picture, receive a phone call, or select Light Off .
Auto Timer	Set a timer for the camera to take a photo.
Camera Setup	Open the setup menu to adjust photo settings.
View Free Space	See how much memory remains. Note: Your phone stores any content that you add, like ring tones or games, in <i>user memory</i> . Your service provider may store some content in user memory before you receive the phone.

record & send a video

Press **•◂◃•** > **Multimedia** > **Video Camera** to see the video viewfinder.

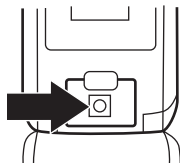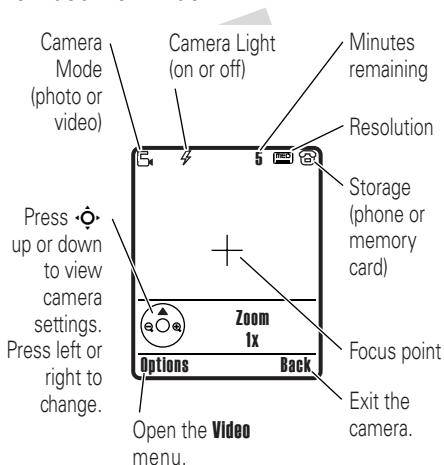

Note: You can zoom only before you start recording. The number of minutes remaining is an estimate.

If you want to send your video in a message, the video length must be set to MMS. To set length, press **Options** > **Videos Setup** > **Video Length**.

- 1 Press the *center key* **•◂◃•** to start recording the video in the viewfinder.
- 2 Press the **Stop** key to stop the video. You can:

- Press the **Options** key to preview, store, or discard the video.

To play a stored video from the home screen, press

 >  **Multimedia** > **Videos** > *video name*.




- Press the **Send** key to send the video in a message.

video calls

If you call someone else who has a video phone, you can see each other while you talk. You can also record a video clip of the call.



make a video call

- 1 Enter a phone number and press  to see the video call preview.
- 2 Press  to make the call.
- 3 To end the call, press .


record a video call

Note: Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.

You can record a video call as a video clip. During a video call:

- 1 Press the *camera key*  to start recording the call.

Your phone displays **Recording**. It records incoming video and incoming and outgoing audio.

- 2 Press  again to stop recording the call and store the video clip.

The recording stops automatically if the call ends or you reach your video capture or memory limit.

To view the video clip from the home screen, press

 >  **Multimedia** > **Videos** > *video name*.

Note: Video recording requires video compatibility with the other caller's video phone.

memory card


You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).



Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

install a memory card

- 1 Remove the battery door.
- 2 Push the card into the metal holder until it clicks into place.

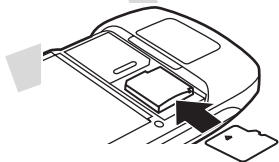


To remove the memory card, push it in until it clicks again. It begins to slide out, and you can slide it the rest of the way out.

- 3 Replace the battery door.

see and change memory card information

 Find it: Press  >  **Settings** > **Phone Status** > **Storage Devices**

- 1 Press  to scroll to the memory card.
- 2 Press the **Details** key to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press **Options** to see the **Storage Device** menu, which lets you **Format** or **Rename** the memory card.

connect the memory card to a computer

You can access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Press  >  **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

This directs the USB connection to your memory card. Attach the Motorola Original USB cable to the accessory port on your phone and to an available USB port on your computer. Then follow these steps:



On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows: **MP3 files:** > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture
video clips: > mobile > video
- 4 When you finish, remove the device by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then select "USB Mass Storage Devices" and "Stop".
- 5 Select "USB Mass Storage Device" then "OK".

On your phone:

To return to **Data** as your USB default connection, press
•◂ > ⚙️ **Settings** > **Connection** > **USB Settings** > **Default Connection**
> **Data/Fax Connection**.

store and use protected content

If you try to play a copyrighted file, it might ask you to download a license. Some licenses only let you play a file for a certain number of times or days. You cannot send, copy, or change copyrighted files.


For example, a license may allow you to play the content of your download 5 times or use the content for 3 days before it expires.


To download a file, see page 83. To activate downloaded copyrighted files:

Find it: Press  >  **Tools** > **Activation List** > *file type* > *file*

You can see file's **Status**, **Type**, **Activation**, and **Counts Remaining**.

cable connections

 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

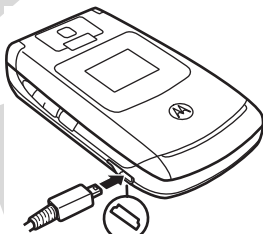

Note: Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need. To make **data calls** through a connected computer, see page 78.



Bluetooth® wireless

Your phone supports Bluetooth wireless *pairing* (also called *linking* or *bonding*). You can pair your phone with a Bluetooth headset or car kit to make handsfree calls. You can pair your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

For maximum Bluetooth security, you should always pair Bluetooth devices in a safe, private environment.

turn Bluetooth power on or off

Find it: Press  >  Bluetooth Link > Setup > Power > On

Note: To extend battery life, use this procedure to set Bluetooth power to **Off** when not in use. Your phone will not pair with devices until you set Bluetooth power back to **On** and pair your phone with the device again.


use a headset or handsfree car kit


Before you try to pair your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device).

Find it: Press  >  Bluetooth Link > Audio Devices
> [Look For Devices]



Your phone lists the devices it finds within range.


- 1 Scroll to a device in the list and press the *center key* .
- 2 Press the **Yes** or **OK** key to pair with the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press the **OK** key.

When your phone is paired, the Bluetooth indicator  shows in the home screen. You cannot play some copyrighted files over a Bluetooth connection.

Shortcut: When Bluetooth power is on, your phone can automatically pair with a handsfree device you have used before. Just turn on the device or move it near the phone. During a call or while playing a sound file, you can press **Options** > **Use Bluetooth** to pair with a headset or handsfree device you have used before.

Tip: We can't see the device you're holding. For specific information about a device, refer to the instructions that came with it.

copy files to another device


You can copy a media file, phonebook entry, datebook event, or Web shortcut from your phone to a computer or other device. 

Note: You can't copy a copyrighted object.

Before you try to copy files to another device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device).

- 1 On your phone, scroll to the object that you want to copy to the other device.


- 2 Press **Options**, then select:
 - **Copy** for media files.
 - **Share Phonebook Entry** for phonebook entries.
 - **Send** for datebook events.
- 3 Select a recognized device name, or **[Look For Devices]** to search for the device where you want to copy the file.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection. To change a device's **Access** setting, see page 39.

receive files from another device

Before you try to receive files from another device,  make sure your phone's Bluetooth power is **on** (see page 34).

- 1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognize each other, place your phone in discoverable mode so the sending device can locate it. Press  > **Bluetooth Link** > **Setup** > **Find Me**

- 2 Press the **Accept** key on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, press the **Save** key to save the file.

send files to a printer

You can use Bluetooth pairing to send a picture, message, phonebook entry, or datebook view from your phone to a printer.



Note: You can print A4 or US Letter size pages. To print another size, copy the object to a linked computer and print it from there. You cannot print message **Templates** or a phonebook **Mailing List**.


- 1 On your phone, scroll to the object that you want to print, then press **Options** > **Print**. In the datebook, you can print the month, week, or day.

Tip: If you see it, you can print it. After you capture a picture in the camera, you can press the **Store** key and select **Print and Store**.

- 2 If available, choose additional objects or print options.
- 3 Select a recognized printer name listed in the **Printers** menu, or **[Look For Devices]** to search for the device to which you want to send the object.

advanced Bluetooth features

A device is *recognized* after you pair with it once (see page 34).

features	
make phone visible to other device	Allow a Bluetooth device to discover your phone:  >  Bluetooth Link > Setup > Find Me



features	
pair with recognized device	<p>Pair your phone with a recognized handsfree device:</p> <p>• > Bluetooth Link > Audio Devices > <i>device name</i></p>
drop pairing with device	<p>Scroll to the device name and press the Drop key.</p>
switch to headset or handsfree device during call	<p>During a call, press Options > Use Bluetooth to switch to a recognized headset or car kit.</p> <p>Your phone connects automatically, or shows a list of devices you can select.</p>
play sound files on a recognized headset	<p>While playing a sound file, press Options > Use Bluetooth to switch to a recognized headset.</p> <p>Your phone connects automatically, or shows a list of devices you can select.</p> <p>You cannot play some copyrighted files over a Bluetooth connection.</p>
move multimedia object to device	<p>Caution: Moving an object deletes the original object from your phone.</p> <p>Scroll to the object, press Options > Move, select the device name.</p>

features

edit device properties

 >  Bluetooth Link > Device History



Scroll to the device name and press the **Edit** key.

Note: The **Access** setting can restrict how this device connects to your phone. You can choose **Automatic** (always connects), **Always Ask** (asks you before connecting), **Just Once**, or **Never**.

set Bluetooth options


 >  Bluetooth Link > Setup




basics

See page 1 for a basic phone diagram.




display

The *home screen* shows when you turn on the phone. To dial a number from the home screen, press number keys and .

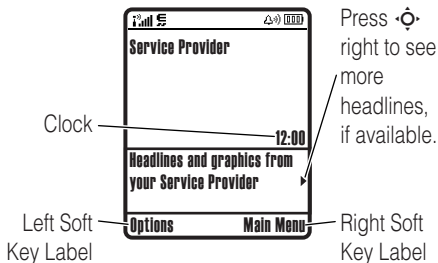
Note: Your home screen may look different from the one below, depending on your service provider.



Soft Key Labels show the current soft key functions. For soft key locations, see page 1.

Your home screen might show headlines from your service provider at the bottom. To change this headline view, press  >  **Settings** > **Personalize** > **Home Screen** > **Headlines**. 

Status indicators can show at the top of the home screen:

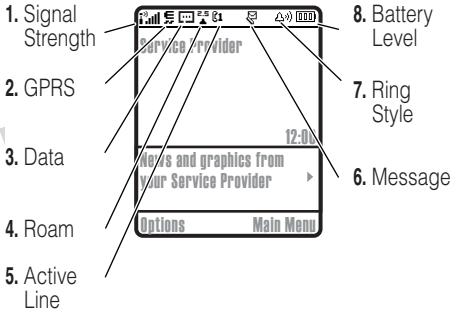

1 Signal Strength Indicator – Vertical bars show the strength of the network connection. You can't make or receive calls when or shows.

2 GPRS Indicator – Shows when your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. Indicators show PDP context active or packet data available .

3 Data Indicator – Shows connection status.

= secure packet data transfer = unsecure packet data transfer

= secure application connection = unsecure application connection

= secure *Circuit Switch Data* (CSD) call = unsecure CSD call

= Bluetooth® connection is active

4 Roam Indicator – Shows when your phone is seeking or using a network outside your home network. Indicators can include:



 = 2G home



 = 2G roam

 = 2.5G home

 = 2.5G roam

 = 3G home

 = 3G roam

5 Active Line Indicator – Shows  to indicate an active call, or  to indicate when call forwarding is on. Indicators for dual-line-enabled SIM cards can include:



 = line 1 active

 = line 1 active, call forward on

 = line 2 active

 = line 2 active, call forward on


When an alarm is activated,  can show here.


6 Messaging Presence Indicator – Shows when Instant Messaging (IM) is active. Indicators can include:



 = IM active

 = invisible to IM

 = busy

When a Java™ application is active,  can show here.

7 Message Indicator – Shows when you receive a new message. Indicators can include:



 = text message

 = voice message

 = IM message

8 Ring Style Indicator – Shows the ring style setting.

📞 = loud ring

📞🔊 = vibrate & ring

📞🔊 = soft ring

📞🔊 = vibrate then ring


🔊 = vibrate

🔊 = silent







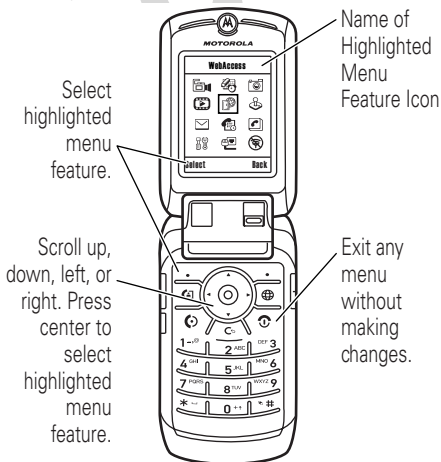





9 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

menus

From the home screen, press **⬇️** to enter the main menu.




The following menu icons may be available, depending on your service provider and service subscription options.

menu features	
 Games & Apps	 Phonebook
 Web Access	 Video Camera
 Camera	 Tools
 Recent Calls	 Connection
 Messages	 Settings
 Multimedia	 Messenger

Note: Your *Instant Messaging (Messenger)* menu icon may be different from the icon in the table, depending on your service provider.

Some features require you to select an option from a list:

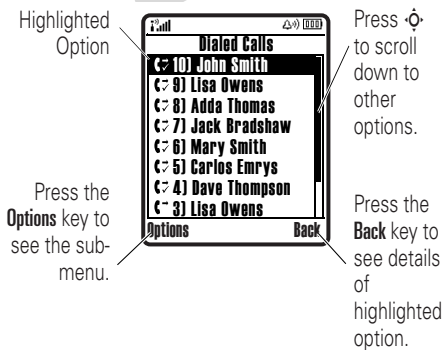

- Scroll up or down to scroll to the option you want.
- In a numbered list, press a number key to highlight an option.


- In an alphabetized list, press a key repeatedly to cycle through its letters and highlight the closest matching list option.
- When an option has a list of possible settings, scroll left or right to select the setting.
- When an option has a list of possible numeric values, press a number key to set the value.

text entry

Some features let you enter text.

For indicator descriptions, see following section.

Flashing cursor indicates insertion point.

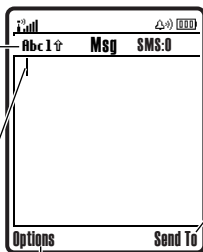

After you enter text, press the **Send To** key to enter recipients.


 
Press the **Options** key to open the sub-menu.

Press **[#]** in a text entry view to select an entry mode:

entry modes

[#] or **1** Your **Primary** text entry mode can be set to any iTAP™ **[#]** or tap **1** mode.

entry modes

 or **2** Your **Secondary** text entry mode can be set to any iTAP  or tap **2** mode, or set to **None** if you don't want a secondary entry mode.


 

123 **Numeric** mode enters numbers only.

 **Symbol** mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Entry Setup** in a text entry view and select **Primary Setup** or **Secondary Setup**.


Tip: WANT TO SHOUT YOUR MESSAGE? Press  in a text entry view to change text case to all capital letters (**ABC**), next letter capital (**Abc**), or no capitals (**abc**).

iTAP™ mode

Press  in a text entry view to switch to iTAP mode. If you don't see  or , press **Options > Entry Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.

For example, if you press **7 7 6 4**, your display shows:

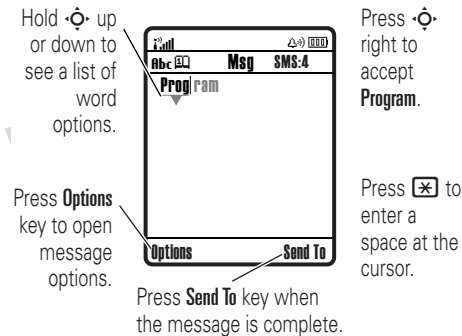

- If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.
- Press **[1]** to enter punctuation or other characters.


Tip: Don't worry if you forget how iTAP works. In a text entry display, you can press **Options > Text Setup > Text Tutorial** to see an explanation.

tap mode

Press **#** in a text entry view to switch to tap mode. If you don't see **Abc 1** or **Abc 2**, press **Options > Entry Setup** to set tap mode as your primary or secondary text entry mode.


To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

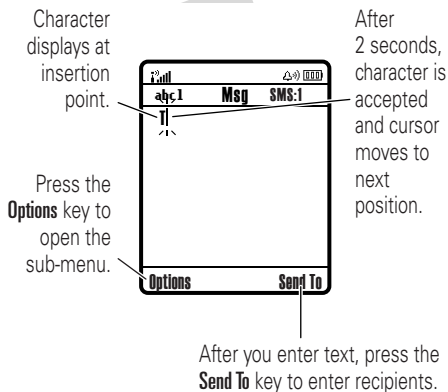

For example, if you press **8** one time, your display shows:


 



When you enter three or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** your display might show:

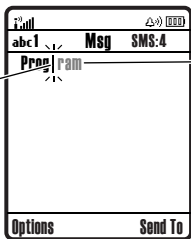
Character displays at insertion point.



Press  right to accept Program, or press  to reject it and enter a space after Prog.

- The first character of every sentence is capitalized. If necessary, press  down to change the character to lowercase before the cursor moves to the next position.
- Press  to move the flashing cursor to enter or edit message text.
- If you don't want to save your text or text edits, press  to exit without saving.
- *Tap extended* mode cycles through additional special characters and symbols as you repeatedly press a keypad key.

numeric mode

Press  in a text entry view until you see **123**. Press the number keys to enter the numbers you want.


symbol mode

Press **#** in a text entry view until your phone shows a list of symbols. Scroll to the symbol you want, then press the *center key*.

volume

Press the volume keys to:

- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

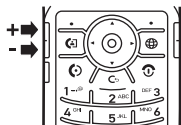


Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key in the home screen. You can also switch to **Silent** or back by holding **#** in the home screen.



To change your ringer volume when your phone is closed, see page 51.

navigation key

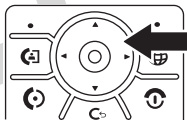Press the *navigation key* up, down, left, or right to scroll to items in the display. When you scroll to something, press the *center key* to select it.



smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the *center key* ). The smart key usually does the same thing as pressing the *center key* . To find the smart key, see page 1. To change what the smart key does in the home screen, see page 75.

external display

When you close your phone, the external display shows the time, date, status indicators, and notifications for incoming calls and other events. After your phone is inactive for a while, the display shows only a clock. For a list of phone status indicators, see page 41.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Speaker** key to turn the handsfree speaker on. Your display shows **Spkrphone On** until you turn it off or end the call.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.


codes & passwords

Your phone's 4-digit **unlock code** is originally set to **1234**. The 6-digit **security code** is originally set to **000000**. If your

service provider didn't change these codes, you should change them:

Find it: Press  >  **Settings** > **Security** > **New Passwords**

You can also change your **SIM PIN** or call barring passwords.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your 6-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the 4-digit unlock code.

To **manually lock** your phone: Press  >  **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  >  **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 60). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

customize

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

 Loud

 Vibrate

 Vibe Then Ring

 Soft

 Vibe & Ring

 Silent

The ring style profile's indicator shows at the top of your home screen. To choose your profile:

Find it: Press  >  **Ring Styles** > **Style:** *style name*

Shortcut: In the **home screen**, press the volume keys up or down to quickly change your ring style profile. With your **phone closed**, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.


Tip: Do you get a lot of text messages? If you don't want to hear incoming message alerts during phone calls, press  >  **Settings** > **In-Call Setup** > **MSG Alert** > **Not in Call**.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it: Press  >  **Ring Styles** > *style Detail*

Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Scroll to the alert you want, then press the *center key* .
- 3 Press the **Back** key to save the alert setting.

time & date



Your phone needs the time and date for the datebook.

To **synchronize** the time and date with the network: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **On**.



To **manually** set the time and date, turn off **Autoupdate**, then: Press  >  **Settings** > **Initial Setup** > **Time and Date** > *time or date*.

To choose an **analog or digital** clock for your home screen, press  >  **Settings** > **Personalize** > **Home Screen** > **Clock**.

Note: If your home screen shows headlines from your service provider, it uses a digital clock. To choose an analog clock, you must turn off the headlines. Press  >  **Settings** > **Personalize** > **Home Screen** > **Headlines** > **Off**.




wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Note: Your *theme* can set your wallpaper (page 56).

Find it: Press  >  **Settings** > **Personalize** > **Wallpaper**

options	
Picture	Press  up or down to select a picture, or select None for no wallpaper.
Layout	Select Center to center the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.


screen saver

Set a photo, picture, or animation as a screen saver. The screen saver shows when the flip is open and no activity is detected for a specified time.


Note: Your *theme* can set your screen saver (page 56).



Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

Find it: Press  >  **Settings** > **Personalize** > **Screen Saver**

options	
Picture	Press  up or down to select a picture or animation, or select None for no screen saver.
Delay	Select the length of inactivity before the screen saver shows.

themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more. 

To **apply** a theme, press  >  **Multimedia** > **Themes** > *theme*.



To **download** a theme, see page 83.

To **delete** a theme, press  >  **Multimedia** > **Themes**, scroll to the theme, and press > **Delete** or **Delete All**.

Note: You can delete only downloaded themes.

display appearance

Note: The **Battery Save** feature tells your phone not to light the display or keypad unless you're in a dark place. To turn on this feature, press  >  **Settings** > **Initial Setup** > **Battery Save** > **On**.

To choose a phone **skin** that sets the look and feel of your phone's display: Press  >  **Settings** > **Personalize** > **Skins**. Your *theme* can set your phone skin (page 56).

To set your display **brightness**: Press  >  **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns back on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press  >  **Settings** > **Initial Setup** > **Backlight**.

Note: To turn the backlight on or off for Java™ applications, press  >  **Settings** > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup** > **Display Timeout**.

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it: Press  >  **Settings** > **In-Call Setup** > **Answer Options**

options	
Multi-Key	Answer by pressing any key.
Open to Answer	Answer by opening the flip.

calls


To make and answer calls, see page 21.

turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.



recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see a list of recent calls.



Find it: Press  >  **Recent Calls** > **Received Calls** or **Dialed Calls**


Scroll to a call. A ✓ next to a call means the call connected.

- To call the number, press .
- To see call details (like time and date), press the *center key* .
- To see the **Last Calls Menu**, press **Options**. This menu can include:

options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. This option shows only during a call.

redial


- 1 Press  from the home screen to see a list of recent calls.
- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal** and you see **Call Failed, Number Busy**, you can press  or the **Retry** key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.



return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.
- 2 Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your external and internal displays.



Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.


You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 67).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options > Hide ID/Show ID**.

emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.


- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:


Find it: Press  >  **Messages** > **Call Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

other features

advanced calling


features	
voice dial a number not stored in the phonebook (digit dial)	<p>Press and release the voice key.</p> <p>When prompted, say “digit dial” (within 2 seconds). When prompted again, say the digits you want to dial (within 2 seconds per digit).</p> <p>Your phone recognizes the digits you want to dial. To voice dial a phonebook entry, see page 66.</p>
attach a phone number	<p>Dial an area code or prefix for a phonebook number, then: </p> <p>Options > Attach Number</p>

features


notepad

The last number you entered is stored in the *notepad*. You can use the notepad to “jot down” a number during a call for later use. To see the notepad:

Press  >  **Recent Calls** > **Notepad**

- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialing Menu** to attach a number or insert a special character, press **Options**.

international calls

If your phone service includes international dialing, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.



hold a call

Press **Options** > **Hold** to put all active calls on hold.

mute a call

Press the **Mute** key (if available) or **Options** > **Mute** to put all active calls on mute.

features



call waiting

When you're on a call, you'll hear an alert if you receive a second call.



Press  to answer the new call.


- To switch between calls, press the **Switch** key.
- To connect the two calls, press the **Link** key.
- To end the call on hold, press **Options > End Call On Hold**.

To turn the call waiting feature on or off, press  >  **Settings > In-Call Setup > Call Waiting > On or Off**

conference call

During a call:



Dial next number, press , press the **Link** key.

transfer a call

During a call:



Options > Transfer, dial transfer number, press .

call forwarding

Set up or cancel call forwarding:





 >  **Settings > Call Forward**

You can set how long your phone waits before it forwards a call (5, 10, 15, 20, or 25 seconds).

call barring

Restrict outgoing or incoming calls:



 >  **Settings > Security > Call Barring**

features

TTY calls

Set up your phone for use with an optional TTY device:



 
•◉ >  **Settings** > **Initial Setup** > **TTY Setup**

fixed dial

When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.



Turn fixed dialing on or off:

•◉ >  **Settings** > **Security** > **Fixed Dial**

Use the fixed dial list:

•◉ >  **Tools** > **Dialing Services** > **Fixed Dial**

quick dial


Dial preprogrammed phone numbers:



•◉ >  **Tools** > **Dialing Services** > **Quick Dial**

DTMF tones

Activate DTMF tones:

•◉ >  **Settings** > **Initial Setup** > **DTMF**

To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press **Options** > **Send Tones**.

phonebook

features	
voice dial a phonebook entry (name dial)	<p>Voice dial a number stored in the phonebook:</p> <p>Press and release the voice key.</p> <p>When prompted, say “name dial” (within 2 seconds). When prompted again, say the entry’s name (within 2 seconds).</p> <p>Your phone matches your voice to a phonebook entry name. To voice dial a number not stored in the phonebook, see page 62.</p>
edit or delete a phonebook entry	<p>Edit a number stored in the phonebook:</p> <p>☰ > 📞 Phonebook, scroll to the phonebook entry, and press Options. You can select Edit, Delete, or other options.</p> <p>Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press ☒ and # to see the entries you use frequently, or entries in other categories.</p>

features

set ringer ID for a phonebook entry

Assign a ring alert (ringer ID) to an entry:

•◉ > ☑ Phonebook > *entry*, then press
Options > Edit > Customize > Ringer ID
> *ringer name*

Note: The **Ringer ID** option isn't available in entries stored on the SIM card.

Activate ringer IDs:

•◉ > ☞ Ring Styles > *style* **Detail** > Ringer IDs

set picture ID for a phonebook entry

Assign a photo or picture to show when you receive a call from an entry:

•◉ > ☑ Phonebook > *entry*, then press
Options > Edit > Customize > Picture
> *picture name*

Note: The **Picture** option isn't available in entries stored on the SIM card.

set picture ID view for phonebook

Show entries as a text list, or with picture caller ID photos:

•◉ > ☑ Phonebook, then press
Options > Setup > View by > *view name*

set category for a phonebook entry

•◉ > ☑ Phonebook > *entry*, then press
Options > Edit > Category > *category name*

Note: The **Category** option isn't available in entries stored on the SIM card.

features	
set category view for phonebook	<p>☰ > 📖 Phonebook, then press Options > Filter by > Category > <i>category name</i></p> <p>You can show All entries, entries in a predefined category, or entries in a category you create.</p> <p>Shortcut: To see other categories in the phonebook, press ☒ or #.</p>
create group mailing list	<p>You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:</p> <p>☰ > 📖 Phonebook, then press Options > Create New > Mailing List</p> <p>You can select the list name as an address for multimedia messages.</p> <p>Note: A Mailing List cannot include entries stored on the SIM card.</p>
sort phonebook list	<p>Set the order in which entries are listed:</p> <p>☰ > 📖 Phonebook, then press Options > Setup > Sort by > <i>sort order</i></p> <p>You can sort the phonebook list by First Name, Last Name or Location Number.</p>
copy one phonebook entry	<p>Copy an entry from the phone to the SIM card, or from the SIM card to the phone:</p> <p>☰ > 📖 Phonebook, scroll to the entry, press Options > Copy to SIM Card or Copy to Phone</p>

features

copy multiple phonebook entries

Copy multiple phonebook entries between the phone and SIM card:

 >  **Phonebook**, scroll to one entry, press **Options** > **Select Multiple to**, then select **Copy to SIM Card** or **Copy to Phone**


send phonebook entry to another device

Send a phonebook entry to another phone, computer, or device:

 >  **Phonebook**, scroll to the entry, press **Options** > **Send vCard**

For more information about copying files to another device, see page 35.

print phonebook entry over Bluetooth® connection

You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer. 







 >  **Phonebook**

Scroll to the entry you want to print, and press **Options** > **Print**.

You cannot print a **Mailing List**. For more about Bluetooth connections, see page 34.

messages

Your phone reads message settings from the USIM card. If you put another USIM card in your phone, your phone sends and receives messages for the phone number on the new card.







features	
send text message	<p>•◂ > ✉ Messages > Create Message </p> <p>Tip: Want to make a message more fun? While composing a message, you can press  to open the camera viewfinder, snap a photo, and insert it. Press and hold  to open the video viewfinder.</p>
send email	<p>•◂ > ✉ Messages > Email Msgs </p> <p>> Create Email</p> <p>Note: To use email, you might need to enter a User ID and Password in your email settings (see page 72).</p>
send voice message	<p>•◂ > ✉ Messages, then press Options </p> <p>> Create Voice Message</p> <p>To record the voice message, press the Record key, speak, then press the Stop key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.</p>
use a postcard	<p>Open a message with preloaded contents: </p> <p>•◂ > ✉ Messages, then press Options</p> <p>> Create Postcard</p>

features

read and manage messages

•• > ✉ Messages > Message Inbox



Icons next to each message indicate if it is read  or unread . Icons can also indicate if the message is locked , urgent , low priority , or has an attachment .

To see message options like **Reply**, **Forward**, **Lock**, or **Delete**, scroll to a message and press **Options**.

read and manage email

•• > ✉ Messages > Email Msgs



To see message options like **Reply**, **Forward**, **Lock**, or **Delete**, scroll to an email message and press **Options**.

store message objects

Go to a multimedia message page, or scroll to an object in a message, then:



Options > **Store**

features

print message over Bluetooth® connection

You can use a Bluetooth wireless connection to send a message from your phone to a printer.



•• > ✉ Messages > Message Inbox, Email Msgs, Browser Msgs, or Info Services

Scroll to the message you want to print and press **Options** > **Print**.

You cannot print message **Templates**. For more about Bluetooth connections, see page 34.

edit email settings

You can edit the settings for your Email connections. To use email, you need to store your email **User ID** and **Password**.









•• > ✉ Messages, then press **Options** > **Email Msg Setup** > **Account Settings**










If you have more than one email account, select an account to edit.



Your phone shows a list of email settings. Here is where you store your email **User ID** and **Password**.

Note: To create a new account, select **New Entry** in the **Account Settings** list. Your display shows a folder for each email account under •• > ✉ Messages > Email Msgs







features		
browser messages	Read messages received by your micro-browser:  >  Messages > Browser Msgs	
info services	Read subscription-based information services messages:  >  Messages > Info Services	














instant messaging

features		
log in	 >  IM > Log In	
add contacts	After you log in: Press Options > Add Contact and enter the contact's IM ID and nickname.	
find others online	After you log in: Select Online Contacts to see a list of others online.	
start conversation	Scroll to a name in Online Contacts and press the Send IM key.	
open active conversation	Scroll to a name in Conversations and press the View key.	
end conversation	From the conversation view: Options > End Conversation	
log out	Select Log Out from the IM Online menu.	

features	
create or change IM accounts	<p>☛ >  IM > IM Account </p> <p>Select an IM account, or select New to create a new IM account.</p>

personalizing

features	
language	<p>Set menu language:</p> <p>☛ >  Settings > Initial Setup > Language</p>
scroll	<p>Set the scroll bar to stop or wrap around in menu lists:</p> <p>☛ >  Settings > Initial Setup > Scroll</p>
activate ringer IDs	<p>Activate ringer IDs assigned to phonebook entries and categories:</p> <p>☛  > Ring Styles > <i>style Detail</i> > Ringer IDs</p>
ring volume	<p>Press ☛ >  > Ring Styles > <i>style Detail</i> > Ring Volume</p>
keypad volume	<p>Press ☛ >  > Ring Styles > <i>style Detail</i> > Key Volume</p>
reminders	<p>Set reminder alerts for messages that you receive:</p> <p>Press ☛ >  > Ring Styles > <i>style Detail</i> > Reminders</p>

features	
headline view	<p>If your home screen shows scrolling headlines from your service provider, you can turn them on or off: </p> <p>  >  Settings > Personalize > Home Screen > Headlines > On or Off </p>
menu view	<p>Show the main menu as graphic icons or as a text-based list:</p> <p>  >  Settings > Personalize > Main Menu > View </p>
main menu	<p>Reorder your phone's main menu:</p> <p>  >  Settings > Personalize > Main Menu > Reorder </p>
show/hide menu icons	<p>Show or hide menu feature icons in the home screen:</p> <p>  >  Settings > Personalize > Home Screen > Home Keys > Icons </p>
change home keys	<p>Change features for the soft keys, navigation key, and smart key in the home screen:</p> <p>  >  Settings > Personalize > Home Screen > Home Keys </p>
master reset	<p>Reset all options except unlock code, security code, and lifetime timer:</p> <p>  >  Settings > Initial Setup > Master Reset </p>


features

master clear

Caution: Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

 >  Settings > Initial Setup > Master Clear

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times

Show call timers:



 >  Recent Calls > Call Times

in-call timer

Show time or cost information during a call:



 >  Settings > In-Call Setup > In-Call Timer

features

call cost

Show call cost trackers:



> Recent Calls > Call Cost

handsfree

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features

speakerphone

Activate the speakerphone during a call:

Press the **Speaker** key (if available, or **Options > Speakerphone On**).

auto answer

(car kit or headset)

Automatically answer calls when connected to a car kit or headset:



> Settings > Car Settings or Headset > Auto Answer

voice dial

(headset)

Enable voice dial with headset send/end key:



> Settings > Headset > Voice Dial







auto handsfree

(car kit)

Automatically route calls to a car kit when connected:





> Settings > Car Settings > Auto Handsfree

features		
power-off delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:	
 >  Settings > Car Settings > Power-Off Delay		
charger time (car kit)	Charge the phone for a specified time after the ignition is switched off:	
 >  Settings > Car Settings > Charger Time		

data calls

To connect your phone with a USB cable, see page 33.



features		
send data	Connect your phone to the device, then place the call through the device application.	
receive data	Connect your phone to the device, then answer the call through the device application.	

features

using sync

You can call an Internet server and synchronize your phonebook and datebook entries with the server.



To **set up** an Internet sync partner, press  >  **Settings** > **Connection** > **Sync** > **[New Entry]**. Enter the server details, including **Server URL** (you can omit **http://**) and **Data Path** (the folder below the URL where your data is stored).

To **synchronize files** with a partner you set up, select the partner from the list in  >  **Settings** > **Connection** > **Sync**.

network



features

network settings










See network information and adjust network settings:











 >  **Settings** > **Network**





features	
software update	<p>Your service provider can update your phone software by sending software updates directly to your phone over the air. When you receive a software update notice, you can choose to defer installation. To install the software update at a later time:</p> <p>  >  Settings > Phone Status > Software Update > Install Now </p>

personal organizer

features	
set alarm	<p> >  Tools > Alarm Clock</p>
turn off alarm	<p>When an alarm happens: To turn off the alarm, press the Disable key or . To set an 8 minute delay, press the Snooze key.</p>
add new datebook event	<p> >  Tools > Datebook, scroll to the day, press , press Options > New</p>
see datebook event	<p>See or edit event details:  >  Tools > Datebook, scroll to the day, press , press the View key</p>

features	
event reminder	When an event reminder happens: To see reminder details, press the View key. To close the reminder, press the Back key.
send datebook event to another device	Send a datebook event to another phone, computer, or device:  >  Tools > Datebook , scroll to the day, press  , scroll to the event, press Options > Send
print datebook month, week, or day over Bluetooth® connection	You can use a Bluetooth wireless connection to send a datebook month, week, or day from your phone to a printer.   >  Tools > Datebook Go to the month, week, or day view and press Options > Print . For more about Bluetooth connections, see page 34.
calculator	 >  Tools > Calculator
currency converter	Enter exchange rate, press the OK key, enter amount, and press Options > Convert Currency .








security







features	
SIM PIN	Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your display shows SIM Blocked . Lock or unlock the SIM card:  >  Settings > Security > SIM PIN
lock feature	 >  Settings > Security > Lock Application

fun & games

Note: A lock (🔒) icon next to a picture, sound, or other object means that you cannot send or copy it.

For basic information on the camera, see page 25.

features	
view, delete, or manage pictures	Manage photos, pictures, and animations:   >  Multimedia > Pictures
view, delete, or manage video clips	 >  Multimedia > Videos
hear, delete, or manage sounds	Manage your ring tones and music:  >  Multimedia > Sounds


features	
start micro-browser	<p>Just press .</p> <p>Your phone reads micro-browser settings from the USIM card. When you remove the USIM card, your phone clears the browser cache. To edit your settings, see page 83.</p>
download objects from Web page	<p>Download a picture, sound, or other object from a Web page:</p> <p>Press , go to the page that links to the file, scroll to the link, and select it.</p> <p>Note: Normal airtime and/or carrier usage charges apply.</p>
Web sessions	<p>A <i>Web Session</i> stores settings that your phone uses to access the Internet. To select or create a Web session:</p> <p> >  Web Access > Web Sessions</p>
clear micro-browser history	<p>Clear the micro-browser's history, cache, or cookies:</p> <p> >  Web Access > Browser Setup</p>

features

download game or application

You can download a Java™ game or application the same way you download pictures or other objects:



Press , go to the page that links to the file, scroll to the link, and select it.

Note: Normal airtime and/or carrier usage charges apply.

start game or application

Start a Java™ game or application:



 >  **Games & Apps**, scroll to the game or application, press the *center key* .

Note: To install and run games stored on your memory card, press

 >  **Games & Apps** > **[Install New]**.

features

airplane mode You can switch your phone to airplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an airplane, without interfering with airplane communications.

◆ > ⚙️ **Settings** > **Airplane Mode** > **Airplane Mode**
> **On**

You can make the airplane mode option appear whenever you turn on your phone:

◆ > ⚙️ **Settings** > **Airplane Mode**
> **Prompt At Startup** > **On**

service and repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg^1 . Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.14 W/kg , and when worn on the body, as

described in this user guide, is 0.11 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the

exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

DRAFT

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int./peh-emf>

index

A

- accessories 17, 77
- accessory connector port 1
- active line indicator 42
- airplane mode 85
- alarm clock 80
- alarm indicator 42
- alert
 - set 50, 53
 - turn off 50, 53, 58
- animation 82
- answer a call 21, 57
- attach a number 59, 62
- audio player 23, 24

B

- backlight 56
- battery 18, 19
- battery indicator 43
- battery life, extending 19, 34, 55, 56, 57
- Bluetooth connection
 - datebook entry, printing 81
 - datebook entry, sending 81
 - description 34

- messages, printing 72
- phonebook entries,
 - printing 69
- phonebook entries,
 - sending 69
- restricting access 39
- brightness 56
- browser messages 73
- browser. See micro-browser

C

- cables 33
- calculator 81
- call
 - answer 21, 57
 - end 21
 - ending 29
 - make 21
 - recording 29
- call barring 52, 64
- call forward indicator 42
- call forwarding 64
- call timers 76
- call waiting 64
- caller ID 59, 60, 67
- camera 25
- car kit 77

center key 1, 50
center select key 17
clock 54
codes 51, 52
conference call 64
copy files 35
copyrighted files 33
costs, tracking 77

D

data call 78
data indicator 41
date, setting 54
datebook 80, 81
dial a phone number 21, 65
dialed calls 58
digit dial 62
digital audio 23, 24
display 40, 56, 75
download media objects
71, 83
DTMF tones 59, 65

E

earpiece volume 50
email
reading and managing 71
sending 70
settings 72
emergency number 60
end a call 21

end key 1, 21
ending a call 29
Enter Unlock Code
message 52
external display 51

F

fax call 78
fixed dial 65
flip 21, 57
focus, photos 25
forward calls 64

G

games 84
GPRS indicator 41
group mailing list 68

H

handsfree speaker 51
headset 77
headset jack 1
hold a call 63
home screen 40, 75

I

IM 73
IM indicators 42
in-call indicator 42
Incoming Call message 60

information services 73
instant messaging. See IM
international access code
63
iTAP text entry mode 46

J

Java applications 84
Java indicator 42

K

keypad 57, 74

L

language 74
licenses 33
linking. See Bluetooth
connection

lock

application 82
phone 52
SIM card 82

Low Battery message 43

M

make a call 21
master clear 76
master reset 75
memory card 30
menu 17, 43, 74, 75

menu icons 43, 75
message 70, 71
message alerts 53
message indicator 42
message reminders 74
micro-browser 73, 83, 84
Missed Calls message 60
MP3 sound files 23, 24, 25
multimedia message 70, 71
music 82
mute a call 63

N

name dial 66
navigation key 1, 17, 50
network settings 79
notepad 63
number. See phone number
numeric entry mode 49

O

object exchange 35
open to answer 57
optional accessory 17
optional feature 17

P

pairing. See Bluetooth
connection
passwords. See codes
personalize 74

phone number 22
phonebook 59, 62, 66
photo 25, 82
picture 82
picture ID 60, 67
PIN code 20, 52, 82
PIN2 code 52
power key 1, 20, 21
printing 37

Q

quick dial 65

R

received calls 58
recent calls 58
recording a call 29
redial 59
reminders 74
return a call 60
ring style indicator 42
ring style, setting 50, 53
ring tone 82
ringer ID 60, 67, 74
ringer volume 50, 74
roam indicator 42

S

screen saver 55
SCREEN3 40, 75
security code 51

send key 1, 21
signal strength indicator 41
SIM Blocked message 20,
82
SIM card 17, 20, 52, 82
skin 56
smart key 51, 75
soft keys 1, 40, 75
software update 80
speakerphone 77
store your number 22
symbol entry mode 50
synchronizing 79

T

tap text entry mode 48
telephone number. See
phone number
text entry 45
text message 70, 71
theme 56
time, setting 54
timers 76
transfer a call 64
TTY device 65
turn on/off 20

U

unlock
application 82
phone 20, 52

SIM card 82
unlock code 51, 52
USB cables 33

V

video clip 82
videos 28
voice dial 62, 66, 77
voice message 70
voicemail 61
voicemail message indicator
42, 61
volume 50, 74

W

wallpaper 54
warranty 89
Web pages 83
Web sessions 83

Y

your phone number 22

U.S. patent Re. 34,976

motorola.com