

APPLICANT: MOTOROLA, INC.

FCC ID: IHDT6FH1

 
**INSTRUCTION MANUAL**

A preliminary draft copy of the Users Manual follows:

# Welcome

---

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola C390 GSM wireless phone.

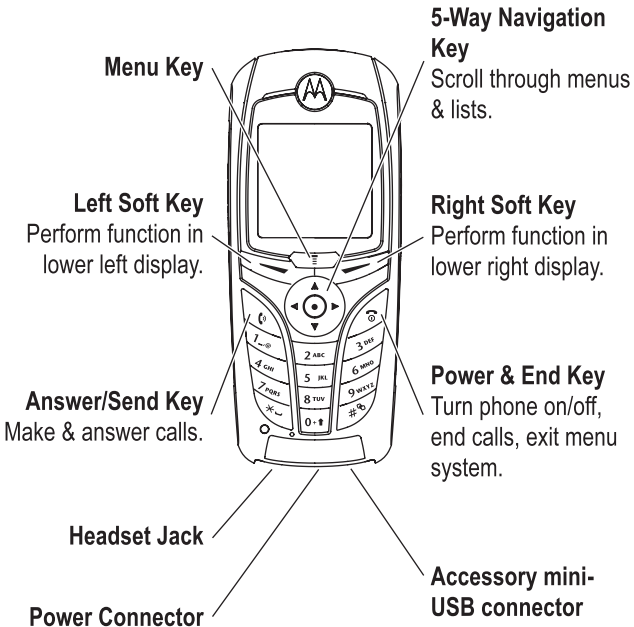

*Note: Your model number may vary based on where you purchased your phone.*

[www.hellomoto.com](http://www.hellomoto.com)

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

All other product or service names are the property of their respective owners.

© Motorola, Inc., 2003.

The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence.

### **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.

# Contents

---

<b>Safety and General Information</b> .....	5
<b>Menu Map</b> .....	13
<b>Getting Started</b> .....	15
About This Guide .....	15
Installing the SIM Card .....	15
Battery Use .....	16
Installing the Battery .....	17
Charging the Battery .....	18
Turning Your Phone On .....	19
Adjusting Volume .....	19
Making a Call .....	20
Answering a Call .....	20
Viewing Your Phone Number .....	20
<b>Highlight Features</b> .....	21
Sending a Multimedia Message .....	21
Receiving a Multimedia Message .....	23
Playing Video Clips .....	24
<b>Learning to Use Your Phone</b> .....	25
Using the Display .....	25
Using the 5-Way Navigation Key .....	29
Using Menus .....	29
Entering Text .....	32
Using the Handsfree Speaker .....	41
Changing a Code, PIN, or Password .....	41
Locking and Unlocking Your Phone .....	42
If You Forget a Code, PIN, or Password .....	43
Locking and Unlocking the Keypad .....	44
Using the Phonebook .....	44

<b>Setting Up Your Phone</b> .....	47
Storing Your Name and Phone Number .....	47
Setting the Time and Date .....	47
Setting a Ring Style .....	48
Setting a Wallpaper Image .....	48
Setting a Screen Saver Image .....	49
Setting Display Colour .....	50
Adjusting the Backlight .....	50
Setting Display Timeout .....	51
<b>Calling Features</b> .....	52
Changing the Active Line .....	52
Redialling a Number .....	52
Using Automatic Redial .....	53
Using Caller ID .....	53
Cancelling an Incoming Call .....	54
Calling an Emergency Number .....	54
Dialling International Numbers .....	55
Viewing Recent Calls .....	55
Returning an Unanswered Call .....	56
Using the Notepad .....	57
Attaching a Number .....	57
Calling With Speed Dial .....	57
Calling With 1-Touch Dial .....	58
Using Voicemail .....	58
Using Call Waiting .....	60
Putting a Call On Hold .....	60
Transferring a Call .....	61
<b>Phone Features</b> .....	62
Feature Quick Reference .....	62
<b>Specific Absorption Rate Data</b> .....	77
<b>Index</b> .....	79

# ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

## ***Exposure To Radio Frequency (RF) Energy***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## ***Operational Precautions***

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

### ***External Antenna Care***

Use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorised antennas may result in non-compliance with the local regulatory requirements in your country.

## ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

## ***Body-Worn Operation***

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimetres) from your body when transmitting.

## ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimetres) from your body.

## ***Approved Accessories***

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at [www.Motorola.com](http://www.Motorola.com).

## ***RF Energy Interference/Compatibility***

*Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.*

## ***Facilities***

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

## ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

## ***Medical Devices***

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimetres) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimetres) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your GP may be able to assist you in obtaining this information.



## ***Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as "Intrinsically Safe." Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

***Note:*** *The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.*






## ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

## ***Batteries***

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, bag, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

## ***Seizures/Blackouts***

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television

or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

## ***Repetitive Motion Injuries***

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

 
# *European Union Directives Conformance Statement*

---

Hereby, Motorola declares that this product is in compliance with



- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

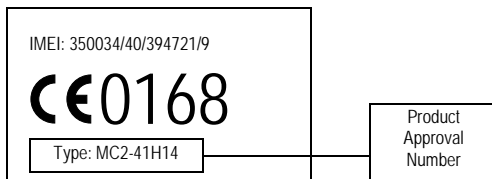

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte) - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site

# ***Caring for the Environment by Recycling***

---



When you see this symbol on a Motorola product, do not dispose the product with household waste.

## ***Recycling Mobile Phones and Accessories***

---

Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

# Menu Map

## Main Menu



### Phonebook



### Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Data Times
- Data Volumes



### Messages

- Create Message
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts
- MMS Templates



### Office Tools

- SIM Tool Kit Apps \*
- Calculator
- Datebook
- Shortcuts
- Alarm Clock
- Chat
- Dialling Services
  - Voice Dial
  - Fixed Dial
  - Quick Dial
  - Service Dial \*



### Games & Apps



### Web Access

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions



### Multimedia

- Themes
- Pictures
- Sounds
- Videos \*



### Bluetooth Link



### Settings

- (see next page)

\* optional features

This is the standard main menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available on your phone.

# Settings Menu



## Personalise

- Home Screen
- Main Menu
- Colour Style
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



## Ring Styles

- Style
- style Detail



## Call Divert

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Divert Status



## In-Call Setup

- In-Call Timer
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



## Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- Scroll
- Language
- Contrast
- DTMF
- Master Reset
- Master Clear



## Phone Status

- My Tel. Numbers
- Active Line
- Battery Meter
- Other Information



## Headset

- Auto Answer
- Voice Dial



## Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



## Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



## Security

- Phone Lock
- Lock Keypad
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords
- Certificate Mgmt



## Java Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight
- Set Standby App
- DNS IP

# Getting Started

---

## About This Guide

This guide describes the basic features of your Motorola wireless phone.

## Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

## Optional Accessories

 


This label identifies a feature that requires an optional Motorola Original™ accessory.

## Installing the SIM Card

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory.

**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

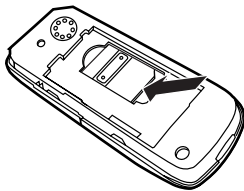



## Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to your phone's accessory connector; and your voice, data, and other application usage patterns.

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximise your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods.

**Warning:** Never dispose of batteries in a fire because they may explode.

 
 
## Installing the Battery

**Note:** If necessary, remove the battery from its protective clear plastic case.



Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

- 1 Squeeze the sides of the front housing in the middle of the "Motorola" logo as shown in the diagram;
- 2 Simultaneously press the release button on the top of the phone with the thumb of your free hand;
- 3 While implementing Steps 1 and 2, pull the rear housing away from the phone.

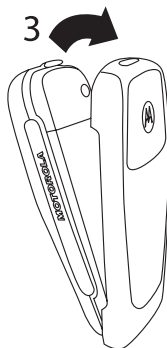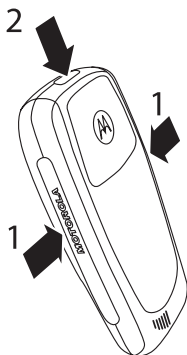 


## Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

### Action

- 1 Plug the travel charger into the bottom of your phone.

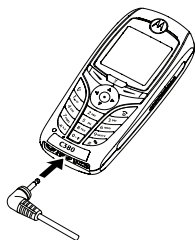


 
- 
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 
- 3 When your phone indicates **Charge Complete**, remove the travel charger.
- 

**Tip:** You can safely leave the travel charger connected to your phone after charging is complete. This will not damage the battery.

## Turning Your Phone On


### Action

- 1 Press and hold  for 2 seconds to turn on the phone.




- 
- 2 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.

**Caution:** If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked.

- 
- 3 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.
- 

## Adjusting Volume

Press the 5-way Navigation key () left or right to increase or decrease volume.

- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible

**Tip:** At the lowest volume setting, press the key left once to switch to vibrate alert. Press it again to switch to silent alert. Press the key right to switch back to vibrate alert, then ring alert.



- turn off an incoming call alert

Alternatively the volume can also be accessed by pressing menu

 > **Settings** > **Ring Styles**.






## Making a Call

Press	To
1 keypad keys	dial the phone number
2 	make the call
3 	end the call and "hang up" the phone when you are finished

Alternatively access the Phonebook by pressing menu   
> **Phone Book** > scroll through to required entry > **Send** .

## Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
1  or <b>ANSWER</b> (  )	answer the call
2 	end the call and "hang up" the phone when you are finished

## Viewing Your Phone Number

To view your phone number from the home screen, press



While you are on a call, press  > **My Tel. Numbers**.

***Note:** Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 47. If you do not know your phone number, contact your service provider.*

# Highlight Features

---

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlight features.

## *Sending a Multimedia Message*



A **Multimedia Messaging Service (MMS)** message contains one or more slides with text and embedded media objects (including pictures, animations, sounds, voice records and/or video clips). You can send the multimedia message to other wireless phone users, and to email addresses.

Find the Feature




> **Messages** > **New Message**  
> **New Multimedia Msg**

Press

1 keypad keys

To

enter slide text

Press  to open the **MMS Menu** and insert a **Picture, Voice Record, Sound, Video, New Page, Quick Note, or Contact Info.**

---

2 **OK** 

store the message

---

Press

3 



To

scroll to a **Send To** option:

- Highlight [**One Time Entry**] to enter one or more phone numbers and/or email addresses.
- Highlight [**New Phonebook Entry**] to enter a number/address and add it to the phonebook.
- Or highlight an existing phonebook entry.

---

4 **SELECT** 

select [**One Time Entry**] or [**New Phonebook Entry**] and enter a number/address. Press **OK**  or **DONE**  when you are finished.

or

**ADD** 

add a phonebook entry to the list of recipients. Press **DONE**  when you are finished.

---

5 

scroll to **Subject**



---

6 **CHANGE** 

select **Subject**

---

7 keypad keys

enter the subject

---

8 **OK** 

store the subject

---

9 **CHANGE** 

select **Attachments**

---

10 

scroll to **Picture, Sounds** or **Video**

---

11 **SELECT** 

select the file type

---

12 


highlight the file you want

---

13 **SELECT** 


attach the file

---

Press 14 <b>BACK</b> (👉)	To return to the message editor
15 (🔄)	scroll to <b>Receipt</b>
16 <b>CHANGE</b> (👉)	select <b>Receipt</b>
17 <b>ADD</b> (👉) or <b>REMOVE</b> (👉)	activate/deactivate the delivery report
18 <b>DONE</b> (👉)	return to the message editor
19 <b>SEND</b> (👉)	send the message
or 	send the message, view message details, save the message in the drafts folder, or cancel the message

## Receiving a Multimedia Message



When you receive an MMS message, your phone displays the  (message waiting) indicator and a **New Message** notification, and sounds an alert.

Press <b>READ</b> (👉)	To open the message
--------------------------	------------------------

MMS messages that you receive can contain the following media objects:

- Pictures, and animations are displayed as you read the message.
- A sound file or video clip begins playing when its slide is displayed.

Attached files are added to the end of the message. To open the attachment, highlight the file indicator/filename and press **VIEW** (👉) (image file type), **PLAY** (👉) (sound file or video clip), or **OPEN** (👉) (object such as phonebook or datebook entry, or unknown file type).



## Playing Video Clips

You can download video clips with the micro-browser, and send and receive video clips in multimedia messages.

To play a video clip stored on your phone:

Find the Feature



> **Multimedia** > **Videos**

Press

To

 
1

scroll to the video clip

2 **PLAY**

start video clip playback

The video clip displays in the video clip playback screen.

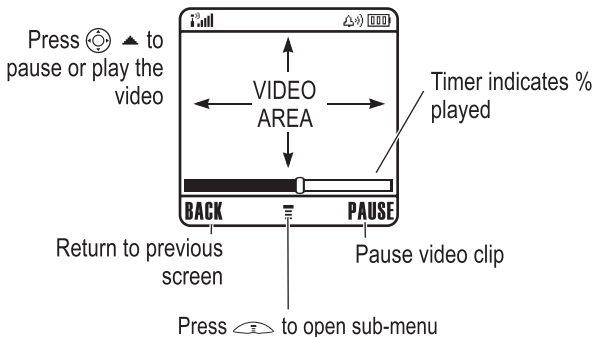

**Note:** Your phone may not have this feature enabled. Please contact your Service Provider should you have any questions on your particular model's capability with their network.

 
# Learning to Use Your Phone

---

See page 1 for a basic phone diagram.

## Using the Display

The *home screen* displays when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

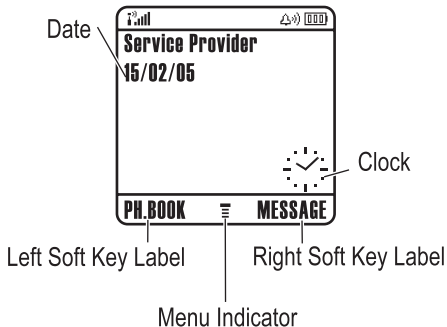 


The ☰ (menu) indicator indicates that you can press the menu key (☰) to enter the main menu.

 

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (☺) or right soft key (☺) to perform the function indicated by the left or right soft key label.

Your phone can display an analogue or digital clock in the home screen (see page 67).

The following status indicators can display:

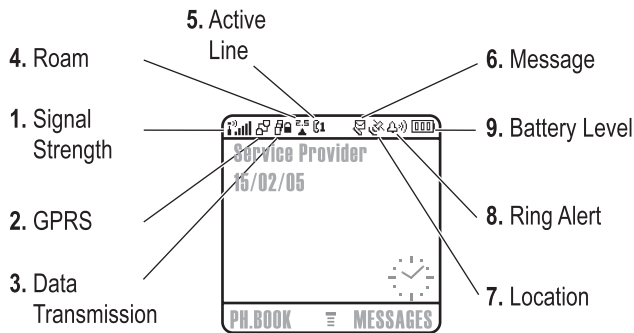


## 1. Signal Strength Indicator


Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator or  (no transmit) indicator displays.

## 2. GPRS Indicator




Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include:

 
 = GPRS PDP context active


 = GPRS packet data available


### 3. Data Transmission Indicator

 
Shows connection and data transmission status. Indicators can include:

 = secure packet data transfer

 = insecure packet data transfer

 = secure application connection

 = insecure application connection

 = secure Circuit Switch Data (CSD) call

 = insecure CSD call

 = Bluetooth® connection

### 4. Roam Indicator



Shows when your phone is seeking or using another network outside your home network. Indicators can include:

 = 2.5G home

 
 
 = 2.5G roam

 
 = 2G home

 = 2G roam

### 5. Active Line Indicator



Shows  or  to indicate the current active phone line. Other indicators can include:

 = line 1 active, call divert on


 = line 2 active, call divert on

 = alarm activated


## 6. Message Indicator



Displays when you receive a new message. Indicators can include:

 = text message

 = voicemail message

 = active chat session

 = voicemail and text message

When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size (multimedia message).

## 7. Location Indicator



 
Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:


 = location on


 = location off

## 8. Ring Style Indicator

 
Shows the ring style setting.

 = loud ring

 = soft ring

 = vibrate

 = vibrate and ring

 = silent

## 9. Battery Level Indicator


Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

 
### *Using the 5-Way Navigation Key*









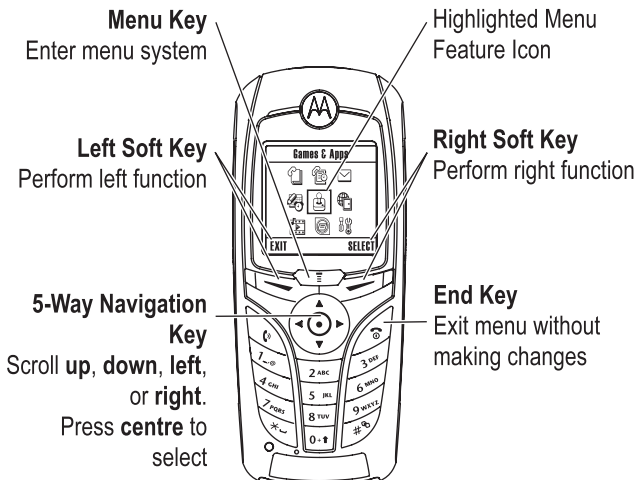


Use the 5-way navigation key (⊙) to scroll up, down, left, or right through the menu system, highlight menu items, change feature settings, and play games. Press the centre select button to select a highlighted menu item.

### *Using Menus*

From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may appear in the main menu, depending on your service provider and service subscription options.

Icon	Feature	Icon	Feature
	<b>Games &amp; Apps</b>		<b>Multimedia</b>
	<b>Office Tools</b>		<b>Settings</b>
	<b>Phonebook</b>		<b>Web Access</b>
	<b>Messages</b>		<b>Recent Calls</b>

## *Selecting a Menu Feature*

To select a menu feature, starting from the home screen:

### Find the Feature

 


> **Recent Calls** > **Dialled Calls**

This example shows that from the home screen, you must press , scroll to and select  **Recent Calls** from the main menu, then scroll to and select **Dialled Calls**. Press  to scroll, and the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

## Selecting a Feature Option

Some features require you to select an option from a list:

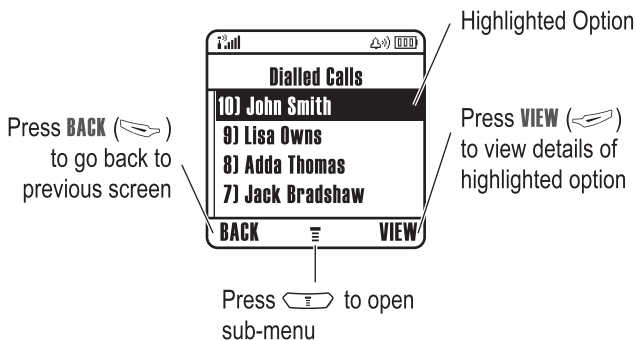

Press (⬇️) to scroll up or down to highlight the option you want.

- In a numbered list, press a number key to highlight the option.
- In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.

 
When an option displays a list of possible values, press (⬅️) left or right to scroll through and select a value.

When an option displays a list of possible numeric values, press a number key to set the value.

 


## Entering Text

Some features require you to enter information.

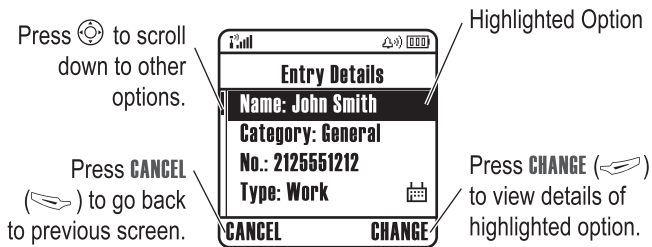


The message centre lets you compose and send text messages. A *Character Counter* indicates how many more characters will fit in a message.

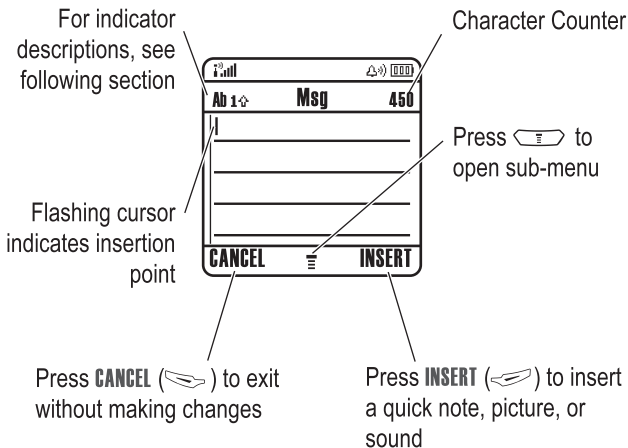


## Choosing a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The method (for example, iTAP predictive text or TAP input mode) you select remains active until you select another method.


Press  in any text entry screen to select one of the following entry modes:

- Primary**      The primary text entry mode (see below to set).
- Numeric**     Enter numbers only (see page 39).
- Symbol**      Enter symbols only (see page 39).
- Secondary**    The secondary text entry mode (see below to set).

Alternatively, you can select a text entry mode in any text entry screen by pressing  > **Entry Mode**.

**Tip:** You can switch between text Entry Methods by pressing  whilst in edit mode.

## Setting Up a Text Entry Mode

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

- iTAP**            Let the phone predict each word as you press keys (see page 37).
- Tap**             Enter letters and numbers by pressing a key one or more times.
- Tap Extended**    Enter letters, numbers, and symbols by pressing a key one or more times.
- None**            Hide the Secondary setting (available only for **Secondary Setup**).

## Using Capitalisation

Press  in any text entry screen to change text case. The following indicators show capitalisation status:







**abc** = no capital letters

**Abc** = capitalise next letter only

**ABC** = all capital letters

## Text Entry Mode Indicators

When you select the **Primary** or **Secondary** text entry mode, the following indicators identify the text entry setting:

Primary	Secondary	Description
<b>1</b>	<b>2</b>	Tap, no capital letters
<b>1↑</b>	<b>2↑</b>	Tap, capitalise next letter only
<b>1↑↑</b>	<b>2↑↑</b>	Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalise next letter only
		iTAP, all capital letters

The following indicators identify **Numeric** or **Symbol** entry mode:

**123** = numeric method

**@** = symbol method

## Using Tap Method

This is the standard method for entering text on your phone.

Tap method cycles through the letters and number of the key you press. Tap Extended method also cycles through additional symbols as shown in the chart on page 36.

## Press

1 A keypad key one or more times

2 keypad keys

3 **OK** (👉)

## To

select a letter, number, or symbol

enter remaining characters

 
**Tip:** Press (👉) right to accept a word completion, or (👉) to insert a space.

store the text

In a text entry screen, you can press (👉) to switch entry modes. If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry mode, see page 33.

When you enter text with **Tap** or **Tap Extended** method, the soft key functions change.

Character displays at insertion point

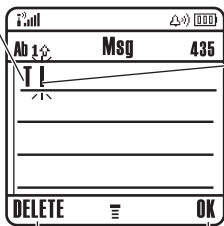

 
After 2 seconds, character is accepted and cursor moves to next position

Press **DELETE** (👉) to delete character to left of insertion point

Press **OK** (👉) to accept and store text

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:

Character displays at insertion point

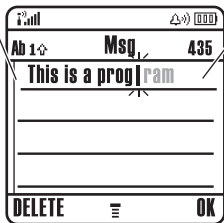
 

 
 
 
 
 






Press  to accept **PROGRAM**, or press  to reject it and enter a space after **prog**.


If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

## Character Chart




Use this chart as a guide for entering characters with **Tap Extended** method.

	.?! , @ ' - _ : ; ( ) & " ~ 1 0 ç j % £ \$ ¥ ¤ € + x * / \ [ ] = > < # §
	a b c 2 á à â ã ç æ
	d e f 3 é è ê ë
	g h i 4 î ï
	j k l 5
	m n o 6 ñ ò ó ô õ ö ø
	p q r s 7
	t u v 8 ú û ü ü
	w x y z 9
	change text case, for capital letters

	enter a space (hold to enter a return)
	change text entry mode (hold for default)

*Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.*

 
## Tap Method Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalised. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

## Using iTAP™ Method

iTAP™ software provides a predictive text entry mode that lets you enter a word using one keypress per letter. This can be faster than **Tap** method, because your phone combines the key presses into common words.

For example, if you press    , letter combinations that match your keypresses display:

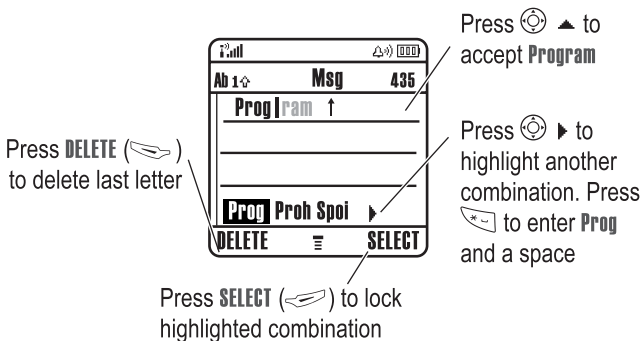


If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

## Entering Words

In a text entry screen, you can press  to switch entry modes. An indicator shows which method is active (see page 34). If **ITAP** method is not available as the **Primary** or **Secondary** entry mode, see page 33.

Press

1 keypad keys (one press per letter)

2  left or right

To

show possible letter combinations at the bottom of the display

highlight the combination you want

Press

3 **SELECT** 

To

lock a highlighted combination

You can press keypad keys to add more letters to the end of the combination.

or




enter the highlighted combination when it spells a word


A space is automatically inserted after the word.

---


If you enter a word your phone does not recognise, the phone stores it to use as one of your word options. When you fill memory space for unrecognised words, your phone deletes the oldest words to add new words.

### *Using Numeric Method*

In a text entry screen, press  to switch entry modes until the **123** (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry mode.

### *Using Symbol Method*


In a text entry screen, press  to switch entry modes until the **@** (symbol) indicator displays.

Press

1 keypad keys (one press per symbol)

To

show possible symbol combinations at the bottom of the display

2  left or right

highlight the combination you want



Press

3 **SELECT** 

To

lock a highlighted combination

You can press keypad keys to add more symbols to the end of the combination.


 
 

 


 
 



or




enter the highlighted combination

## Symbol Chart

Use this chart as a guide for entering characters with symbol method.

	.?! , @ ' - _ : ; ( ) & " ~ 1 0 ç i % £ \$ ¥ ¤ € + x * / \ [ ] = > < # §
	@ _ \ ß
	/ : ;
	" & '
	( ) [ ] { }
	ç i ~
	< > =
	\$ £ ¥ ¤
	# % *
	+ - x * / = > < # §
	enter a space (hold to enter a return)
	change text entry mode (hold for default)

**Note:** This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

## *Deleting Letters and Words*

Place the cursor to the right of the text you want to delete, and then:

### **Action**

Press **DELETE** () to delete one letter at a time.


---


Hold **DELETE** () to delete the entire message.

---

## *Using the Handsfree Speaker*

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** () to turn the handsfree speaker on or off while either dialling a call or during a call.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** () again or turn the phone off.

*Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.*

## *Changing a Code, PIN, or Password*

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

Find the Feature



> **Settings** > **Security**  
> **New Passwords**

## *Locking and Unlocking Your Phone*

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked (see page 54).

### *Locking Your Phone Manually*

Find the Feature



> **Settings** > **Security** > **Phone Lock**  
> **Lock Now**

Press

To

1 keypad keys

enter your unlock code

---

2 **OK** ()

---


lock the phone

---

### *Unlocking Your Phone*

Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.


At the **Enter Unlock Code** prompt:


Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	unlock your phone

---

## *Setting Your Phone to Lock Automatically*

You can set your phone to lock every time you turn it off:

Find the Feature  > **Settings** > **Security** > **Phone Lock**  
> **Automatic Lock** > **On**



Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	activate automatic lock

---

## *If You Forget a Code, PIN, or Password*

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 <b>OK</b> (  )	submit your security code

---

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

## *Locking and Unlocking the Keypad*

You can lock the keypad to prevent accidental key presses (for example, when carrying your phone in a purse or pocket).

Press



To

lock or unlock the keypad

---


*Note: Incoming calls and messages temporarily unlock the keypad.*

## *Using the Phonebook*

This section briefly describes basic phonebook operations. For more information about using the phonebook, see page 64.

**Shortcut:** To open your phonebook from the home screen, press  up or down.

## *Storing a Phone Number*

Enter a phone number in the home screen, then press **STORE** () to create a phonebook entry with that number. Fill in the other fields to complete the entry.

Select **MORE** to store another number (for example, a work number) for the same **Name**.

## *Recording a Voice Name*

*Note: This option is not available for entries stored on the SIM card.*

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (🗨️). When you are ready, press **RECORD** (🗨️) again and say the entry's name (within 2 seconds). When prompted, press **RECORD** (🗨️) and repeat the name. Press **DONE** (🗨️) to store the voice name.

## *Storing a Picture for Caller ID*

*Note: This option is not available for entries stored on the SIM card.*

You can store a picture for a phonebook entry. The picture displays when you receive calls from the entry.

When creating a phonebook entry, scroll to **Picture** and press **CHANGE** (🗨️). Press Ⓞ to select a picture, and press **SELECT** (🗨️) to store it for the entry.

## *Dialling a Number*

Press 📞 > **Phonebook** > *entry to call* 📞.


 

*Note: You can also access the Phonebook from idle display by pressing Ⓞ, depending on local settings.*

**Tip:** To quickly highlight entries in your **Phonebook** list: If your entries are sorted by **Speed No.**, press an entry's speed number to highlight it. For example, press 📞 15 📞 for entry number 15. If your entries are sorted by **Name**, **Voice Name**, or **Email**, enter the first letter of the entry's name to highlight it. For example, press 📞 K 📞 for the first entry that starts with "K".

## *Voice Dialling a Number*

Press  > **Office Tools**, press **Dialling Services** > **Voice Dial**, and say the entry's name (within 2 seconds).

**Tip:** To create a shortcut to **Voice Dial**, press


 
 > **Office Tools** > **Dialling Services**, scroll to **Voice Dial**, and hold the . Your phone prompts you to save the shortcut. To use a shortcut, press  and the shortcut key number.

## *Sorting Phonebook Entries*

Press  > **Phonebook**, press  > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 65.

## *Viewing Entries By Category*

Press  > **Phonebook**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 65.

# Setting Up Your Phone

---

## Storing Your Name and Phone Number





To store or edit your name and phone number information on your SIM card:

Find the Feature



> **Settings** > **Phone Status**  
> **My Tel. Numbers**

**Shortcut:** Press   from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider.

## Setting the Time and Date

Your phone uses the time and date for the **Datebook**. Your phone can synchronise its time and date with the network:

Find the Feature



> **Settings** > **Initial Setup**  
> **Time and Date** > **Autoupdate** > **On**

To set the time and date manually, set **Autoupdate** to **Off** and then set the **Time** and **Date** options:

Find the Feature



> **Settings** > **Initial Setup**  
> **Time and Date** > **Time** or **Date**



## Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an **alert**.

You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 28).

To set a ring style:

Find the Feature



> **Settings** > **Ring Styles** > **Style**

Press

To

1

scroll to the ring style

---

2 **SELECT**

select the ring style

---

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press

> **Settings** > **Ring Styles** > style **Detail**.

**Shortcut:** To change your ring volume from the home screen, press left or right.

## Setting a Wallpaper Image

You can set a picture or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

Find the Feature



> **Settings** > **Personalise** > **Wallpaper**

Press

To








1

scroll to **Picture**

---

2 **CHANGE**

open the picture viewer

Press	To
3  up or down	scroll to a picture/animation Scroll to <b>(None)</b> to turn off the wallpaper image.
4 <b>SELECT</b> 	select the image
5 	scroll to <b>Layout</b>
6 <b>CHANGE</b> 	change the image layout
7 	scroll to <b>Centre</b> , <b>Tile</b> , or <b>Fit-to-screen</b> <b>Centre</b> places the image in the centre of the display. <b>Tile</b> fills the display with multiple copies of the image. <b>Fit-to-screen</b> resizes the image, if necessary, to fit the display.
8 <b>SELECT</b> 	confirm the layout setting
9 <b>BACK</b> 	save wallpaper settings

## Setting a Screen Saver Image

Set a picture or animation as a screen saver image.










The screen saver image displays when the phone is on and no activity is detected for a specified time. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

Turn off the screen saver to extend battery life.

Find the Feature



> **Settings** > **Personalise**  
> **Screen Saver**

Press	To
1 	scroll to <b>Picture</b>
2 <b>CHANGE</b> (  )	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to <b>(None)</b> to turn off the screen saver image.
4 <b>SELECT</b> (  )	select the image
5 	scroll to <b>Delay</b>
6 <b>CHANGE</b> (  )	set the delay interval
7 	scroll to the inactivity interval that starts the screen saver
8 <b>SELECT</b> (  )	confirm the delay setting
9 <b>BACK</b> (  )	save screen saver settings

## Setting Display Colour

Select the colour palette that your phone uses to display indicators, highlights, and soft key labels.

Find the Feature



> **Settings** > **Personalise**  
> **Colour Style**

## Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Find the Feature



> **Settings** > **Initial Setup** > **Backlight**

## *Setting Display Timeout*

Set the display to turn itself off when no activity is detected for a specified time.

Find the Feature



> **Settings** > **Initial Setup**  
> **Display Timeout**

# Calling Features

---

For basic instructions on how to make and answer calls, see page 20.

## Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

*Note: This feature is available only for dual-line-enabled SIM cards.*

Find the Feature



> **Settings** > **Phone Status**  
> **Active Line**

The active line indicator in the display shows the currently active phone line (see page 27).

## Redialling a Number

Press

1 

To

view the last 10 dialled calls list

2 

scroll to the entry you want to call

3 

redial the number

---

## Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

To redial the phone number:

Press



To

activate automatic redial

---

Your phone redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

## Using Caller ID

### Incoming Calls



Calling line identification (Caller ID) displays the phone number for incoming calls in your phone's display.

The phone displays the caller's name (and picture, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID and/or light ID for specific entries stored in your phonebook. For more information, see page 64.

### Outgoing Calls



You can show or hide your phone number as an ID for the calls that you make.

Find the Feature



> **Settings** > **In-Call Setup**

> **My Caller ID**

You can override the default caller ID setting when you make a call. While dialling (with digits visible in the display):

Press

 > **Hide ID/Show ID**

To

hide or show your caller ID for the next call

---

## *Canceling an Incoming Call*

While the phone is ringing or vibrating:

Press

**IGNORE** 

To

cancel the incoming call

---



Depending on your phone settings and/or service subscription, the call may be diverted to another number, go directly to your voice-mail, or the caller may hear a busy signal.

## *Calling an Emergency Number*

Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press

1 keypad keys

To

dial the emergency number


---

2 

call the emergency number


---

## Dialling International Numbers

Press and hold  to insert the local international access code (+) for the country from which you are calling.

## Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialled, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

**Shortcut:** Press  from the home screen to view the dialled calls list.

### Find the Feature



### > Recent Calls

#### Press

#### To

1 

scroll to **Received Calls** or **Dialled Calls**

2 **SELECT** ()

select the list

3 

scroll to an entry

✓ means the call connected.

4 

call the entry's number

or

Press and hold  for 2 seconds to send the number as DTMF tones during a call.

**VIEW** ()

view entry details

or



open the **Last Calls Menu** to view the options available for the entry






The **Last Calls Menu** can include the following options:

Option	Description
<b>Store</b>	Create a phonebook entry with the number in the <b>No.</b> field.
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Hide ID/Show ID</b>	Hide or show your caller ID for the next call.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the phonebook or recent calls lists.
<b>Send Tones</b>	Send the number to the network as DTMF tones.  This option displays only during a call.
<b>Talk then Fax</b>	Talk and then send a fax in the same call (see page 71).

## *Returning an Unanswered Call*

Your phone keeps a record of your unanswered calls, and displays:

- **X Missed Calls**, where **X** is the number of missed calls

Press	<b>To</b>
1 <b>VIEW</b> 	see the received calls list
2 	select a call to return
3 	make the call

## Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature



> **Recent Calls** > **Notepad**

Press



or



or

**STORE** (

To

call the number

open the **Dialling Menu** to attach a number or insert a special character

create a phonebook entry with the number in the **No.** field

---

## Attaching a Number

While dialling (with digits visible in the display):

Press



> **Attach Number**

To

attach a number from the phonebook or recent calls lists



---

## Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique speed dial number.

To see an entry's speed dial number, press > **Phonebook**, scroll to the entry, press **VIEW** ().

To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
3 	call the entry

## *Calling With 1-Touch Dial*

To call phonebook entries 1 to 9, press and hold the single-digit speed dial number for one second.

**Tip:** You must specify which phone number list you want to use with this feature: phone memory phonebook or SIM card phonebook (see page 64).

## *Using Voicemail*

Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Your service provider may include additional information about using this feature.

## *Listening to Voicemail Messages*


Find the Feature



> **Messages** > **Voicemail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

## Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a New Voicemail notification.



Press	To
<b>CALL</b> (  )	listen to the message


---

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

## Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature	 > <b>Messages</b>
	 > <b>Voicemail Setup</b>

Press	To
1 keypad keys	enter your voicemail number
2 <b>OK</b> (  )	store the number

---

You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

## Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received another call.


Press

1 

---

2 **SWITCH** ()

or

**LINK** ()

or

 > **End Call On Hold**      end the call on hold

---

To

answer the new call

switch between calls

connect the 2 calls

end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:


Find the Feature




> **Settings** > **In-Call Setup**  
> **Call Waiting**

## Putting a Call On Hold

Press

**HOLD** () (if available)

or

 > **Hold**

---

To

put the call on hold

## Transferring a Call



You can announce that you are transferring an active call to another party, or you can transfer the call without announcing the transfer.

### Announce the Call Transfer

Find the Feature



> **Hold**

Press

To

1 keypad keys

dial the number where you are transferring the call

2

call the number and speak to the person who answers

3

open the menu

4

scroll to **Transfer**

5 **SELECT** ()

select **Transfer**

6 **OK** ()

confirm the transfer

### Do Not Announce the Call Transfer

Find the Feature



> **Transfer**

Press

To

1 keypad keys

dial the number where you are transferring the call

2

transfer the call









# Phone Features

---

## Feature Quick Reference









This section helps you locate features on your phone that are not described in this guide.

### Calling Features









Feature	Description	
Conference Call	During a call:  > <b>Hold</b> , dial next number, press  , press <b>LINK</b> (  )	
Call Diverting	Set up or cancel call diverting:  > <b>Settings</b> > <b>Call Divert</b>	
Call Barring	Restrict outgoing or incoming calls:  > <b>Settings</b> > <b>Security</b> > <b>Call Barring</b>	

### Messages

Feature	Description	
Send Text Message	Send a text message:  > <b>Messages</b> > <b>New Message</b> > <b>New Short Msg</b>	







Feature	Description	
Send Multimedia Message	Send a multimedia message:  > <b>Messages</b> > <b>New Message</b> > <b>New Multimedia Msg</b>	
Use MMS Template	Open an MMS template with preloaded media:  > <b>Messages</b> > <b>New Message</b> > <b>MMS Templates</b>	
Read Message	Read a new text or multimedia message that you have received:  Press <b>READ</b> (  ).	
Store Message Objects	Go to a multimedia message slide, then:   > <b>Store</b>	











## Chat




Feature	Description	
Start Chat	Start a new chat session:  > <b>Office Tools</b> > <b>Chat</b>  > <b>New Chat</b>	
Receive Chat Request	When you receive a chat request:  Press <b>ACCEPT</b> (  ) or <b>IGNORE</b> (  ).	
End Chat	During a chat session:   > <b>End Chat</b>	



 
 
 


## Phonebook







Feature	Description
Create Entry	Create a new phonebook entry: Type in telephone number > <b>Store</b> > <i>enter other details</i>
Create Group Mailing List	Create a group mailing list as a phonebook entry:  > <b>Phonebook</b>  > <b>New</b> > <b>Mailing List</b>
Dial Number	Call a number stored in the phonebook:  > <b>Phonebook</b> , highlight the phonebook entry, press  to call
Voice Dial Number	Voice dial a number stored in the phonebook: > <b>Office Tools</b> > <b>Dialling Services</b> > <b>Voice Dial</b> When prompted, say the entry's name (within 2 seconds).
Set Ringer ID for Entry	Assign a distinctive ringer alert to a phonebook entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>Edit</b> > <b>Ringer ID</b> > <i>ringer name</i> <b>Note:</b> <i>The Ringer ID option is not available for entries stored on the SIM card.</i>

Feature	Description
Set Picture ID for Entry	Assign a picture to display when you receive calls from an entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>Edit</b> > <b>Picture</b> > <i>picture</i> <i><b>Note:</b> The <b>Picture</b> option is not available for entries stored on the SIM card.</i>
Set Category for Entry	Set the category for a phonebook entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>Edit</b> > <b>Category</b> > <i>category name</i> <i><b>Note:</b> The <b>Category</b> option is not available for entries stored on the SIM card.</i>
Set Category View	Set a phonebook category view:  > <b>Phonebook</b>  > <b>Categories</b> > <i>category view</i>
Sort Phonebook List	Set the order in which phonebook entries are listed:  > <b>Phonebook</b>  > <b>Setup</b> > <b>Sort by</b> > <i>sort order</i>
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers:  > <b>Phonebook</b> , scroll to entry, press  > <b>Set Primary</b> > <i>phone number</i>



 
Feature	Description
Copy Phonebook Entry to Another Device	Copy a phonebook entry to another phone, computer, or device:  > <b>Phonebook</b> , highlight the entry, press  > <b>Send</b> > <b>Bluetooth</b>
1-Touch Dial	Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook:  > <b>Settings</b> > <b>Initial Setup</b> > <b>1-Touch Dial</b>

## Personalising Features





 
Feature	Description
Ring Style	Change the ring alert for an event:  > <b>Settings</b> > <b>Ring Styles</b> > <i>style Detail</i> > <i>select chosen alerts</i>
Ringer IDs	Activate distinctive ring alerts assigned to phonebook entries:  > <b>Settings</b> > <b>Ring Styles</b> > <i>style Detail</i> > <b>Ringer IDs</b>
Ring Volume	Set ringer volume:  > <b>Settings</b> > <b>Ring Styles</b> > <i>style Detail</i> > <b>Ring Volume</b>  <b>Shortcut:</b> Press  right or left in the home screen.
Keypad Volume	Set keypad keypress volume:  > <b>Settings</b> > <b>Ring Styles</b> > <i>style Detail</i> > <b>Key Volume</b>





Feature	Description
Clock View	Display an analogue clock or digital time readout in the home screen:  > <b>Settings</b> > <b>Personalise</b> > <b>Home Screen</b> > <b>Clock</b>
Menu View	Display the main menu as graphic icons or as a text-based list:  > <b>Settings</b> > <b>Personalise</b> > <b>Main Menu</b> > <b>View</b>
Main Menu	Reorder your phone's main menu:  > <b>Settings</b> > <b>Personalise</b> > <b>Main Menu</b> > <b>Reorder</b>
Change Soft Key Labels	Change soft key labels in the home screen  > <b>Settings</b> > <b>Personalise</b> > <b>Home Screen</b> > <b>Home Keys</b>
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > <b>Office Tools</b> > <b>Shortcuts</b> > <i>shortcut name</i>

## Menu Features


Feature	Description
Language	Set menu language:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Language</b>
Master Reset	Reset all options except unlock code, security code, and lifetime timer:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Reset</b>
Master Clear	Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries except SIM card information:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Clear</b>

## Dialling Features





Feature	Description
Fixed Dial	When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.  Turn fixed dialling on or off:  > <b>Settings</b> > <b>Security</b> > <b>Fixed Dial</b> Use the fixed dial list:  > <b>Office Tools</b> > <b>Dialling Services</b> > <b>Fixed Dial</b>
Service Dial	Dial service phone numbers:   > <b>Office Tools</b> > <b>Dialling Services</b> > <b>Service Dial</b>

Feature	Description
Quick Dial	<p>Your service provider may program your phone with one or more quick dial numbers, such as the customer service number. </p> <p>Dial preprogrammed phone numbers:</p> <p> &gt; <b>Office Tools</b> &gt; <b>Dialling Services</b> &gt; <b>Quick Dial</b></p>
DTMF Tones	<p>Activate DTMF tones:</p> <p> &gt; <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>DTMF</b></p> <p>Send DTMF tones during a call:</p> <p>Press number keys.</p> <p>Send stored numbers as DTMF tones during a call:</p> <p>Highlight a number in the phonebook or recent calls lists, then press  &gt; <b>Send Tones</b>.</p>

## *Call Monitoring*







Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.




The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

Feature	Description
Call Times	View call timers:  > <b>Recent Calls</b> > <b>Call Times</b> 
In-Call Timer	Display time or cost information during a call:  > <b>Settings</b> > <b>In-Call Setup</b> > <b>In-Call Timer</b> 

## Handsfree Features



*Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.*

Feature	Description
Speaker-phone	When in an active call, press <b>SPEAKER</b>  . 
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > <b>Settings</b> > <b>Car Settings</b> or <b>Headset</b> > <b>Auto Answer</b> 
Voice Dial (headset)	Enable voice dial with headset send/end key:  > <b>Settings</b> > <b>Headset</b> > <b>Voice Dial</b> 

Feature	Description
<b>Auto Handsfree</b> (car kit)	Automatically route calls to a car kit when connected:  > <b>Settings</b> > <b>Car Settings</b> > <b>Auto Handsfree</b>
<b>Power-Off Delay</b> (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:  > <b>Settings</b> > <b>Car Settings</b> > <b>Power-Off Delay</b>
<b>Charger Time</b> (car kit)	Charge the phone for a specified time after the ignition is switched off:  > <b>Settings</b> > <b>Car Settings</b> > <b>Charger Time</b>












## *Data and Fax Calls*

Feature	Description
<b>Send Data or Fax</b>	Connect your phone to the device, then place the call through the device application.
<b>Receive Data or Fax</b>	Connect your phone to the device, then answer the call through the device application.
<b>Talk Then Fax</b>	Connect your phone to the device, enter the number, then press  > <b>Talk Then Fax</b> , then press  to make the call.






## Bluetooth® Wireless Connections





 



Feature	Description
<b>Make Phone Visible to Other Device</b>	<p>Allow an unknown Bluetooth device to discover your phone:</p> <p> &gt; <b>Bluetooth Link</b> &gt; <b>Setup</b> &gt; <b>Find Me</b></p> <p><b>Tip:</b> After the first connection, you do not need to select <b>Find Me</b> to reconnect.</p> 
<b>Connect to a Handsfree Device</b>	<p>Connect to a handsfree device:</p> <p> &gt; <b>Bluetooth Link</b> &gt; <b>Handsfree</b> &gt; <b>[Look for Devices]</b></p> <p><i><b>Note:</b> If necessary, enter the Bluetooth PIN code for the device (consult the device user's guide, or try 0000).</i></p> 
<b>Connect to a Handsfree Device During a Call</b>	<p>Switch to a headset or car kit during a call:</p> <p> &gt; <b>Use Bluetooth</b></p> 
<b>Disconnect From Device</b>	<p>Disconnect from a device:</p> <p>Highlight the device name and press the <b>DROP</b> key.</p> 
<b>Set Bluetooth Options</b>	<p>Set your phone's Bluetooth options:</p> <p> &gt; <b>Bluetooth Link</b> &gt; <b>Setup</b></p> <p><b>Tip:</b> If you leave <b>Power</b> set to <b>On</b> all the time, your battery will not last as long.</p> 

## Network Features


 
Feature	Description
Network Settings	View network information and adjust network settings:  > <b>Settings</b> > <b>Network</b> 

## Personal Organiser Features
















Feature	Description
Create Datebook Event	Create a new datebook event:  > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press the centre select button, press  > <b>New</b>
View or Edit Datebook Event	View or edit event details:  > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press the centre select button, press <b>VIEW</b> (  )
Event Reminder	View event reminder: <b>VIEW</b> (  ) Close event reminder: <b>BACK</b> (  )
Copy Datebook Event to Another Device	Copy a datebook event to another phone, computer, or device:  > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press the centre select button, highlight the event, press  > <b>Send</b> > <b>Bluetooth</b>









Feature	Description
Set Alarm	Set an alarm:  > <b>Office Tools</b> > <b>Alarm Clock</b>
Turn Off Alarm	Turn off alarm: Press <b>DISABLE</b> (  ) or  . Set 8-minute delay: Press <b>SNOOZE</b> (  ).
Calculator	Calculate numbers:  > <b>Office Tools</b> > <b>Calculator</b>
Currency Converter	Convert currency:  > <b>Office Tools</b> > <b>Calculator</b>  > <b>Exchange Rate</b> Enter exchange rate, press <b>OK</b> (  ), enter amount, and select <b>\$</b> in the bottom of the display.

## Security

Feature	Description
SIM PIN	Lock or unlock the SIM card:  > <b>Settings</b> > <b>Security</b> > <b>SIM PIN</b> <b>Caution:</b> If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays <b>SIM Blocked</b> .
Lock Application	Lock phone applications:  > <b>Settings</b> > <b>Security</b> > <b>Lock Application</b>

## News and Entertainment

Feature	Description	
Launch Micro-Browser	Start a micro-browser session:  > <b>Web Access</b> > <b>Browser</b>	
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press <b>SELECT</b> (  ) , press <b>STORE</b> (  ).	
Web Sessions	Select or create a Web session:  > <b>Web Access</b> > <b>Web Sessions</b>	
Apply Phone Theme	Apply a grouped set of image and sound files to your phone:  > <b>Multimedia</b> > <b>Themes</b> > theme	
Download Game or Application (micro-browser)	Download a Java game or application with the micro-browser:  > <b>Web Access</b> > <b>Browser</b> , highlight the application, press <b>SELECT</b> (  ) , press <b>DOWNLOAD</b> (  )	
Download Game or Application (computer)	Download a Java game or application from a computer: Connect your phone to the computer, press  > <b>Settings</b> > <b>Java Settings</b> > <b>Java App Loader</b> .	

Feature	Description
<b>Launch Game or Application</b>	Launch a Java game or application:  > <b>Games &amp; Apps</b> , highlight the application, press <b>SELECT</b>  
<b>Manage Pictures</b>	Manage pictures and animations:  > <b>Multimedia</b> > <b>Pictures</b> 
<b>Manage Sounds</b>	Manage ring tones, sounds that you have composed or downloaded:  > <b>Multimedia</b> > <b>Sounds</b>
<b>Manage Video Clips</b>	Manage video clips:  > <b>Multimedia</b> > <b>Videos</b>
<b>Create Ring Tones</b>	Create ring tones that you can use with your phone:  > <b>Multimedia</b> > <b>Sounds</b> > <b>[New iMelody]</b>

# *Specific Absorption Rate Data*

---

## **THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by

Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.60 W/kg, and when worn on the body, as described in this user guide, is 0.41 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

---

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

# Index

---

## A

- accessories 15
- accessory mini-USB connector  
1
- active line indicator 27
- active line, changing 52
- alarm clock 74
- alert
  - creating 76
  - defined 48
  - setting 19, 48, 66
  - turning off 19
- animation
  - downloading 75
  - screen saver 49
  - viewing 76
  - wallpaper 48
- answer/send key 1
- answering a call 20
- application, locking and  
unlocking 74
- automatic redial 53

## B

- backlight 50
- barring calls 62

## battery

- charging 18
- extending battery life 16, 50
- installing 17
- level indicator 29
- Bluetooth 66, 72, 73
- browser. *See* micro-browser

## C

- calculator 74
- call
  - alert, turning off 19
  - answering 20
  - barring 62
  - barring password, changing  
41
  - call waiting 60
  - dialled calls list 55
  - dialling 20
  - diverting 62
  - emergency number 54
  - ending 20
  - handsfree speaker 41
  - hold 60
  - international access code 55
  - making 20
  - received calls list 55



- receiving 20
- ring style 19, 48, 66
- speakerphone 70
- timers 70
- transferring 61
- unanswered call 56
- Call Failed, Number Busy
  - message 53
- call waiting 60
- caller ID 53
- calling line identification. *See*
  - caller ID
- category
  - phonebook entry 65
  - view 65
- centre select button 29
- character chart 36
- chat 63
- clock
  - selecting analogue or digital
    - 67
  - setting 47
- codes
  - Bluetooth PIN 72
  - changing 41
  - default 41, 43
  - forgetting 43
- colour, setting 50
- conference call 62
- customising the menu 67

## D

- data call 71
- date, setting 47
- datebook 73
- dialled calls list 55
- dialling a number 20, 68, 69
- display
  - backlight 50
  - colour 50
  - description 25
  - home screen 25
  - language 68
  - personalising 67
  - timeout 51
- distinctive ringer alert 66
- diverting calls 62
- DTMF tones
  - activating 69
  - sending 69

## E

- earpiece volume 19
- emergency number 54
- end key 1
- ending a call 20
- Enter Unlock Code message
  - 43

## F

fax call 71  
5-way navigation key 1, 29  
fixed dial 68

## G

games 75  
GPRS indicator 26

## H

handsfree speaker 41  
headset jack 1  
hold a call 60  
home keys, personalising 67  
home screen  
    defined 25  
    selecting clock view 67

## I

incoming call  
    answering 20  
    diverting 62  
Incoming Call message 53  
indicators  
    active line 27  
    battery level 29  
    GPRS 26  
    location 28  
    message 28

message waiting 23  
ring style 28  
roam 27  
signal strength 26  
text case 34  
text entry method 28, 34  
transmission 27  
voicemail message 28, 59  
international access code 55  
iTAP software 37

## J

Java applications 75  
joystick 1

## K

key  
    answer/send 1  
    centre select button 29  
    end 1  
    5-way navigation 1, 29  
    left soft key 1, 25, 67  
    menu 1  
    power 1  
    right soft key 1, 25, 67  
    voice 1  
    volume control 1, 19  
keypad  
    volume, setting 66

## L

language, setting 68

left soft key

    functions 1, 25

    personalising 67

line, changing 52

location indicator 28

lock

    application 74

    phone 42

    SIM card 74

Low Battery message 29

## M

making a call 20

master clear 68

master reset 68

menu

    entering text 32

    icons, changing in home

        screen 67

    icons, converting to text 67

    language, setting 68

    personalising 67

    rearranging features 67

    using 29

    view, changing 67

menu key 1

message

    chat 63

    MMS template 63

    MMS, defined 21

    multimedia message 63

    reading 63

    text 62, 63

message indicator 28

message waiting indicator 23

micro-browser

    browser setup 75

    Java applications 75

    using 75

    Web sessions 75

MMS template 63

MMS. *See* message

multimedia message

    receiving 23

    sending 21, 63

multimedia messaging service.

*See* message

my telephone number 20, 47

## N

network settings 73

notepad 57

number

    storing your number 47

    viewing your number 20

numbers, entering 39

## O

### 1-touch dial

setting preference 66

using 58

optional accessory, defined 15

optional feature, defined 15

## P

passwords. *See* codes

### phone

active line indicator 27

active line, changing 52

alert, turning off 19

clear stored information 68

codes 41

date, setting 47

language, setting 68

locking 42

network settings 73

open to answer 20

reset all options 68

ring style 19, 48, 66

security code 41

time, setting 47

turning on/off 19

unlock code 41

unlocking 19, 42

### phone number

active line indicator 27

active line, changing 52

attaching 2 numbers 57

international access code 55

redialling 52

storing in phonebook 64

storing your number 47

viewing your number 20

### phone theme 75

### phonebook

attaching 2 numbers 57

category for entry 65

category view 65

copying entries 66

dialling a number 64

group mailing list 64

1-touch dial 58

picture ID 45, 53, 65

primary number, setting 65

ringer ID 64, 66

sorting entries 46, 65

speed dial number 57

storing an entry 64

voice dialling 64

### photo

downloading 75

picture ID 53

### picture

downloading 75

screen saver 49

viewing 76

wallpaper 48

- picture ID
  - caller ID 53
  - setting 45, 65
- PIN code
  - changing 41
  - entering 74
- PIN2 code, changing 41
- power key 1
- predictive text entry 37
- primary text entry method 33

## Q

- quick dial 69

## R

- received calls list 55
- recent calls 55
- redial
  - automatic redial 53
  - busy number 52
- right soft key
  - functions 1, 25
  - personalising 67
- ring style indicators 28
- ring style, setting 19, 48, 66
- ring tone
  - creating 76
  - downloading 75
  - managing 76
- ringer ID

- setting 64
- turning on/off 66
- ringer volume, setting 19, 66
- roam indicator 27

## S

- screen saver 49
- secondary text entry method 33
- security code
  - changing 41
  - default 41
- service dial 68
- shortcuts 67
- signal strength indicator 26
- silent alert, setting 19, 48, 66
- SIM Blocked message 19, 74
- SIM card
  - defined 15
  - installing 15
  - locking 74
  - PIN code entry 19
  - PIN code, changing 41
  - PIN2 code, changing 41
  - precautions 15
  - SIM Blocked message 19, 74
- SIM PIN code
  - changing 41
  - entering 74

- SIM PIN2 code, changing 41
- soft keys
  - functions 25
  - illustration 1
  - personalising 67
- sound
  - creating 76
  - downloading 75
  - managing 76
- Speaker On message 41
- speakerphone
  - activating 70
  - automatic answer 70
- speed dial 57
- standby time, increasing 50
- symbol chart 40
- symbols, entering 39

## T

- tap method text entry 34
- telephone number
  - storing your number 47
  - viewing your number 20
- text
  - capitalisation, changing 34
  - character chart 36
  - entering 32
  - entry method, selecting 33
  - entry method, setup 33

- iTAP software predictive text
  - entry 37
  - numeric method 39
  - symbol chart 40
  - symbol method 39
  - tap method 34
- text case indicator 34
- text entry method
  - selecting 33
  - setup 33
- text entry method indicator 28, 34
- theme 75
- time, setting 47
- timers 70
- transfer a call 61
- transmission indicator 27
- travel charger 18

## U

- unlock
  - application 74
  - phone 42
- unlock code
  - bypassing 43
  - changing 41
  - default 41, 43
  - entering 19

## V

vibrate alert

setting 19, 48, 66

turning off 19

video clip

downloading 63

managing 76

playing 24

voice dial 64, 70

voice key

dialling a number 64

illustration 1

voicemail 58

voicemail message indicator

28, 59

volume

earpiece 19

keypad 66

ringer 19, 66

volume keys 1, 19

## W

wallpaper 48

Web pages 75

Web sessions 75

Welcome 1