Press	То
12 OK (🔘)	set the photo as a photo caller ID attached to the selected caller group

Creating Your Personal Phonebook Entries



You can save your name and phone number in the phone.

Find the Feature



To create the 1st phonebook entry of your own:

	Press	То
1	keypad keys	enter your name
2	OK (🔘)	save your name
3	keypad keys	enter your phone number
4	OK (🔘)	save your phone number

To create additional phonebook entries of your own:

	Press	То
1		open the options menu
2	Ó	scroll to Add
3	OK (🔘)	select Add

	Press	То
4	keypad keys	enter your name
5	OK (\bigcirc)	save your name
6	keypad keys	enter your phone number
7	OK (🔘)	save your phone number

Fixed Dialing



You can restrict outgoing calls to phone numbers that begin with the same digit(s) you set on the fixed dialing list.

Tip: Enter the PIN2 code to use Fixed dial number.

Find the Feature

≂ > Phonebook > Fixed dial number

To turn Fixed dial number on 1st:

	Press	То
1	ON (💽)	select Enable fixed dialing
2	keypad keys	enter the PIN2 code
3	OK (🔘)	turn Fixed dial number on

To create the 1st fixed dial entry:

	Press	То
1	\bigcirc	scroll to Number list

	Press	То
2	OK (🔘)	select Number list
3	OK (🔘)	select Add
4	keypad keys	enter the PIN2 code
5	OK (🔘)	confirm the code
6	keypad keys	enter a name
7	OK (🔘)	save the name
8	keypad keys	enter a phone number
9	OK (🔘)	save the phone number

To create other fixed dial entries:

Fi	nd the Feature	> Phonebook > Fixed dial number > Number list
	Press	То
1	Ó	scroll to any fixed dial entry
2		open the options menu
3	Ó	scroll to Add
4	OK (🔘)	select Add
5	keypad keys	enter the PIN2 code
6	OK (()	confirm the code

enter a name

7

keypad keys

	Press	То
8	OK (🔘)	save the name
9	keypad keys	enter a phone number
10	OK (🔘)	save the phone number

Erasing Fixed Dial Entries

Find the Feature

- > Phonebook
 - > Fixed dial number
 - > Number list

	Press	То
1	Ó	scroll to the desired fixed dial entry
2		open the options menu
3	Ó	scroll to Erase
4	OK (🔘)	select Erase
5	keypad keys	enter the PIN2 code
6	OK (🔘)	confirm the code
7	OK (🔘)	erase the selected fixed dial entry

Voice Dialing

Press the smart key to launch the voice dial application from the idle display. To dial by voice, you can either select **Call name/command** and then say a recorded name (voice tag) into the microphone, or select **Dial number** and then directly say a phone number into the microphone.





Note: If you select **Call name/command**, it is available only for the phone numbers saved on phone memory.

Note: If you select **Dial number**, you can dial phone numbers simply by speaking the number continuously, without pausing between the digits. The phone recognizes the digits "one," "two," "three," "four," "five," "six," "seven," "eight," "nine," "zero," and "oh." The phone cannot recognize numbers such as "1 eight hundred" for "1 800." Say "one eight zero zero" instead.

The voice dial application allows you pronounce English or Chinese phone numbers into the microphone. Listed below is the table of numbers vs. method of pronunciation:

Number	English	Mandarin (Taiwan)	Mandarin (China)
0	zero	 	雨令
1	one	—	—
2	two	<u> </u>	_
3	three	Ξ	Ξ
4	four	四	四

English	Mandarin (Taiwan)	Mandarin (China)
five	五	五
six	六	六
seven	七	七
eight	八	八
nine	九	九
oh		么
	five six seven eight	English (Taiwan) five 五 six 六 seven 七 eight 八

Number	Mandarin (Hong Kong)	Cantonese
0	零	
1	—	—
2	_	<u> </u>
3	Ξ	Ξ
4	四	四
5	五	五
6	六	六
7	七	七
8	八	八
9	九	九
10	么	

Tip: You can use English only to articulate phone numbers in all marketing areas except for Taiwan, Hong Kong and China. In Taiwan's market, use both English and Mandarin (for Taiwan) to articulate phone numbers. In Hong Kong's market, use all the 5 methods of pronunciation above to articulate phone numbers. In China's market, use both English and Mandarin (for China) to articulate phone numbers.

To create voice tags:

Find the Feature

> Phonebook > Search

	Press	То
1	keypad keys	enter the 1st letter(s) of a
		name
2	OK (🔘)	open your phonebook
3	Ó	scroll to the desired entry
4	OK (🔘)	select the entry
-	â	scroll to the desired phone
5	U	number
6	\square	open the options menu
7	Ó	scroll to Add
8	OK (🔘)	select Add
9	Ó	scroll to Add voice tag
10	OK (🔘)	select Add voice tag



	Press	То
11	right soft key (🕞)	launch the voice dial application and then say a name into the microphone
		Tip: If necessary, press START ((

Playing Voice Tags

You can play the voice tags you recorded for voice dial entries.



Find the Feature

> Phonebook > Voice tags

	Press	То
1	Ó	scroll to the desired voice dial entry
2	OK (🔘)	play the voice tag of the
	or	selected voice dial entry
	> OK (○)	

Erasing Voice Tags

Find the Feature

> Phonebook > Voice tags

	Press	То
1	Ó	scroll to the desired voice dial entry
2		open the options menu
3	Ó	scroll to Erase
4	OK (🔘)	erase the selected voice dial entry



Customizing Number Dialing to Your Voice

You can adapt **Number dialing** to your personal accent when using **Dial number**, if necessary. Adaptation involves recording various digits to teach the system your voice.

Find the Feature

🥽 > Tools

- > Voice control
- > Number dialing
- > Adapt digits

Action

Repeat the digits displayed on the screen. Follow the instructions on the screen to complete the adaptation.

Tip: Reset digits allows you to restore the factory-set configurations.

Creating Your Personal Profile

You can create your personal profile in Phonebook.

Find the Feature

> Phonebook > My Own Card > Edit

	Press	То	
1	Ó	scroll to any blank box	
2	keypad keys	enter the suitable words	
3	OK (🔘)	save the settings	



Sending Your Personal Profile

You can determine which information in the profile you want to display before sending it.

Find the Feature	🥽 > Phonebook
	> My Own Card
	> Send my own
	> Info. setting

	Press	То
1	Ó	scroll to the information you want to display
2	ON (💽)	select the information
3	BACK (💽)	return to the previous menu
4	OK (🔘)	save the settings

To send your personal profile:



Find the Feature

- 🔜 > Phonebook
 - > My Own Card
 - > Send my own
 - > Send as SMS/Send as text



To immediately send your personal profile by SMS service (**Send as SMS**), see page 70. To edit and then send your personal profile (**Send as text**), see page 69.

Erasing Your Personal Profile





- > My Own Card
- > Erase

Personalizing Your Phone Selecting a Language

> Initial settings
 > Language

You can specify a language for your phone to use.

Find the Feature

Tip: If you select **Automatic**, you can use the default language predefined by your service provider.

🤜 > Settinas

Customizing the Service Provider Name

You can replace the service provider name shown in the internal idle display with the standby image you downloaded and saved in your phone.

🥽 > Settings
> Display
> Standby Info.
> ON

Note: This option is available only after you have downloaded and stored a standby image in your phone.





Using Home Keys

You can set the 4-way navigation key 🧿 , left soft key

(\bigodot), and right soft key (\bigodot) as the shortcuts to accessing phone features.

Find the Feature

> Settings

> Initial settings

> Home keys

Restoring Factory Settings

You can let the phone use the factory settings after customizing it.



Tip: Enter your phone's lock/unlock code to restore the factory-set configurations.

Creating Application Shortcuts

You can create application shortcuts in **Quick access** to launch the applications you frequently use.

application

Find the Feature	> Tools > Quick access > Edit
Press	То
	scroll to the desired

1

	Press	То
2	OK (🔘)	select the application
3	keypad keys	enter a number
		between 🗔 and 🔤
4	SAVE (💽)	save the setting

To quickly access an application:

Fi	nd the Feature	> Tools > Quick access	
	Press	То	
1	Ó	scroll to the desired application shortcut	E
2	OK (🔘)	open the selected application	

Managing Phone Profiles

You can edit phone profiles, including ring tone, key tone, and vibrator settings. You can also rename phone profiles.

Tip: Press and hold ${\rm OK}$ (\bigcirc) from the idle display to quickly switch among phone profiles.

Selecting a Phone Profile

Find the Feature

🤜 > Profile

> Normal/Meeting/Outdoors/ Car/Customized/Office > Activate

Tip: To use **Handsfree**, plug a handsfree kit in your phone's accessory port. To use **Headset**, plug a headset kit in your phone's headset jack.

Customizing a Phone Profile

You can customize the following options for a phone profile.

Find the Fo	eature > Profile > Normal/Meeting/Outdoors/ Car/Customized/Office/ Handsfree/Headset > Customize
Ringing volume	Select ring tone volume. Maximum is Volume 5 .
Ringing tone	Select a ring tone and it will play when you receive incoming calls.
Incoming call alert	Define how a ring tone works with your incoming calls.
	Tip: Select Off to turn Ringing tone off. If you turn Ringing tone off and turn Vibrating on, the phone vibrates when you receive calls.

Personalizing Your Phone

Vibrating	Turn vibrator on or off.	
Message alert tone	Select an alert tone and it will play when you receive messages.	
	Tip: Select Off to turn Message alert tone off. If you turn Message alert tone off and turn Vibrating on, the phone vibrates when you receive messages.	
Key tone volume	Select key tone volume. Maximum is Level 5.	
Key tone type	Select a key tone.	
	Tip: Select Off to turn key tone off.	
Warning tones	Turn Warning tones on or off. Warning tones is played when battery power is low or there is any operation error.	<i>*</i>
Startup music	Turn Startup music on or off. Startup music is played when you turn the phone on or off.	
Flip music	Turn Flip music on or off. Flip music is played when you open or close the phone flip.	Pers
Voice dial	Turn Voice dial on or off. To edit voice dial entries, see page 114.	onalizii
	Note: To turn Voice dial on or off is available for Handsfree/Headset only.	Personalizing Your Phone
Auto answer	Turn Auto answer on or off.	r Ph
	Note: Auto answer is for Handsfree/Headset only.	one

Renaming a Phone Profile

Find the Feature

🥽 > Profile

- > Meeting/Outdoors/Car/ Customized/Office
- > Rename

Muting the Phone

You can turn all ringers in your phone off.

Find the Feature	🥽 > Profile
	> Silence
	> 0N

Tip: Press and hold *to* quickly mute or unmute your phone from the idle display.

///

Getting More Out of Your Phone

Sending DTMF Tones

You can send Dual Tone Multi-Frequency (DTMF) tones when a call is in progress. For example, enter your account number during a banking service call.

Press	То
keypad keys	enter your account number,
	for example

You can join calls to make a conference if you have subscribed this to your service provider.

Making a Conference Call

اn the idle display:

	Press	То
1	keypad keys	enter a phone number
2	٥ <u>ـ</u>	make the 1st call
3	keypad keys	enter another phone number



	Press	То
4	آم ا	make the 2nd call
		Note: The 1st call is put on hold when the 2nd call is active.
5	OPTIONS (🕞)	open the options menu
6	Ó	scroll to Conference
7	OK (🔘)	make a conference call

Removing a Call from the Conference

You can end any call out of the conference.

	Press	То
1	OPTIONS (💽)	open the options menu
2	Ó	scroll to End calls
3	OK (🔘)	select End calls
4	Ó	scroll to the call you want to end
		or
		scroll to All calls (to end all calls at once)
5	OK (🔘)	confirm your selection
_		

<u>ا</u>

Diverting Calls



You can use **Call divert** to forward incoming calls to another phone number.

Find the Feature

> Settings > Call features > Call divert

Blocking Calls



You can block outgoing and/or incoming calls.

Find the Feature

> Settings > Call features > Call barring

Tip: Enter the password your service provider provided to use **Call barring**.

Making a Fax or Data Call

In addition to voice calls, you can receive or send fax and data calls.



To receive or send fax and data calls, use an optional Motorola Original[™] data cable to connect the phone to your personal computer.



Find the Feature



- > Call features
- > Next call

Connecting to Your Service Provider Network Manually or Automatically

You can either manually connect the phone to your service provider network, or let the phone automatically connect to your service provider network whenever you turn the phone on.

Find the Feature



Setting a Voice Call Connection Reminder

Use a voice call connection reminder to notify you if the call you just made is connected.



🥽 > Settings

> Initial settings

> Connection indication

Tip: Select Off to disable the voice call connection reminder.

Setting a Voice Call Timer Reminder

Use a voice call timer reminder to notify you how much time you have spent on an active call.

🖂 > Settings

> Initial settings > Minute reminder

Tip: Select Off to disable the voice call timer reminder.

Viewing How Much Time You Spent on Calls

You can view the time you spent on different kinds of voice calls.

Find the Feature

Find the Feature

- 🥽 > Recent calls
 - > Call time
 - > Last call/All calls/Received calls/Dialed calls

Clearing Voice Call Time History

You can reset the voice call timer for all different calls.

Find the Feature

- 🥽 > Recent calls
 - > Call time
 - > Clear timer



Viewing How Much Money You Spent on Calls



You can use a voice call cost counter to calculate how much money you spent on different calls.

To set up the voice call cost counter 1st:



Tip: Enter the PIN2 code to configure the voice call cost counter.

To view how much money you spent on the last call or all calls:

Find the Feature



> Call cost

> Last call/All calls

I

Clearing Voice Call Cost History

You can reset the voice call cost counter for all calls.

ind the Feature	🥽 > Recent calls
	> Call cost
	> Clear cost

Tip: Enter the PIN2 code to reset the voice call cost counter.

Displaying Your Voice Call Credit

You can view how much you have to your voice call credit.

Find the Feature

☆ > Recent calls > Call cost > Credit remaining

Tip: Reset the voice call cost counter if you exceed the credit limit and cannot make more phone calls.

Activating the Voice Call Timer and Cost Counter during a Call



You can activate the voice call timer and voice call cost counter when you are on a call.

Find the Feature

- ⇒ Recent calls >
 - > In-call count
 - > Call time/Call cost

Activating the Voice Call Timer and Cost Counter after a Call



You can activate the voice call timer and voice call cost counter shortly after you end a call.

Find the Feature

> Recent calls > Session information

Using STK Services



You can use the SIM Tool Kit (STK) services vour service provider provides on your phone.

Find the Feature



Note: Different operators' may name the STK service differently. Please contact your network operator for more information.



Personal Organizer Features

Using the Alarm Clock

You can set your phone as an alarm clock to remind you of important events. When the alarm clock rings, press **STOP**

(\bigcirc) to permanently turn it off; press **SNOUZE** (\bigcirc) or any key to temporarily turn it off (at this time **Snouze active** displays). Activating the snouze mode makes the alarm clock ring every 5 minutes until you turn it off.

Find the Feature



1 (O) 2 keypad	keys enter text or press O left/
2 keypad	keys
	right to select a feature or press Or right to enable (put a check in) or disable (delete a check from) the vibrator
3 SAVE ({	save the settings and turn the alarm clock on

Creating a Calendar

You can create your personal calendars on the phone.

Find the Feature

- 🥽 > Tools
 - > Calendar
 - > Month mode

To select a date 1st:

Press	То
	scroll to the desired date
	Tip: If you have already assigned a date for your personal calendar(s), the specified date is highlighted. A bold-faced date means the current date.
2 OK (🔘)	select the date

To edit your personal calendar:

 
	Press	То
1	OK (🔘)	select Add new
2	0	scroll to any box




	Press	То
3	keypad keys	enter text or press () left/ right to select a feature or press () right to enable (put a check in) or disable (delete a check from) the vibrator
		Tip: In the Name box or Phone number box, you may press (Interpret Section 2014) > From phonebook to pick up a phonebook entry. If you turn the alarm off in the Alarm box, both the Vibrator and the Alarm tone options will become unavailable.
4	SAVE (💽)	save the settings

Viewing a Calendar

You can read the details of any selected calendar.



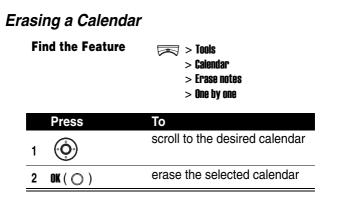

Moving or Copying a Calendar to Another Date

Fi	nd the Feature	> Tools > Calendar > View all notes
	Press	То
1	Ó	scroll to the desired calendar
2	OK (🔘)	select the calendar
3		open the options menu
4	Ó	scroll to Move or Copy
5	OK (🔘)	select Move or Copy

	Press	То
6	keypad keys	enter a date to which the selected calendar will be moved or copied
7	OK (🔘)	move or copy the selected calendar to the specified date

Sending an SMS Message from Calendar



You can select a calendar and compose an SMS message to send.

Find the Feature	🥽 > Tools
	> Calendar
	> View all notes

	Press	То
1	Ó	scroll to the desired calendar
2	OK (🔘)	select the calendar
3		open the options menu
4	Ó	scroll to Send note
5	OK (🔘)	select Send note
6	Ó	scroll to Send as SMS/Send as text



	Press	То
7	OK (🔘)	select Send as SMS/Send as text
		Tip: If you select Send as SMS , see page 70 to immediately send your selected calendar. If you select Send as text , see page 69 to edit and send your selected calendar.

Making a Call from Calendar

You can select a calendar and dial the phone number on it.

Find the Feature	🥽 > Tools
	> Calendar
	> View all notes

	Press	То
1	Ó	scroll to the desired calendar
2	OK (🔘)	select the calendar
3	\mathbb{R}	open the options menu
4	Ó	scroll to Call
5	OK (🔘)	dial the phone number on the selected calendar



Creating an Account Book

You can create your personal account books on the phone.

Find the Feature

- 🥽 > Tools
 - > Calendar
 - > Account book
 - > Make accounts

	Press	То
1	Ó	scroll to any box
2	keypad keys	enter text or press 📀 left/ right to select a feature
3	SAVE (💽)	save the settings

Checking Your Income, Expenses and Balance

Find the Feature

> Tools

- > Calendar
- > Account book
- > Total count
- > Of chosen month/All accounts
- > In/Out/Balance



Erasing Account Books

Find the Feature

- > Calendar
- > Account book
- > Erase accounts

Using the Calculator

You can on the phone perform simple calculations and convert currency as a handheld calculator does.

To perform simple calculations:

To enter numbers enter a decimal point perform Add
enter a decimal point
perform Add
perform Subtract
perform Multiply
perform Divide
display the result

To set an exchange rate:

Find the Feature	🥽 > Tools
	> Calculator

	Press	То
1	OPTIONS (💽)	open the options menu
2	Ó	scroll to Exchange rate
3	OK (🔘)	select Exchange rate
4	Ó	scroll to Foreign unit expressed in domestic units or Domestic unit expressed in foreign units
5	OK (🔘)	select Foreign unit expressed in domestic units or Domestic unit expressed in foreign units
6	keypad keys	enter an exchange rate
		Tip: Press 🔊 to enter a decimal point.
7	OK (💽)	save the setting

To convert currency:

Find the Feature

> Tools > Calculator

	Press	То	E C C C C C C C C C C C C C C C C C C C
1	number keys	enter numbers	
2	OPTIONS (💽)	open the options menu	

	Press	То
3	Ó	scroll to in foreign or in domestic
4	OK (🔘)	display the result

Using the Stopwatch

You can use your phone as a stopwatch to perform split or lap timing.

Find the Feature

🥽 > Tools

> Stopwatch

> Split timing/Lap timing

	Press	То
1	START (💽)	start the split or lap timing operation
2	SPLIT/LAP (💽)	end the current operation and continue to start a new 1
3	STOP (💽)	stop the operation

Saving Timing Records

You can save the timing records after stopping the operation.



	Press	То
1	OPTIONS (💽)	open the options menu
2	Ó	scroll to Save

	Press	То
3	OK (🔘)	select Save
4	keypad keys	enter a name
5	OK (💽)	save the timing records

Resuming the Operation

You can resume the operation after stopping it.

	Press	То
1	OPTIONS (💽)	open the options menu
2	OK (🔘)	resume the operation

Resetting the Timer

You can erase all timing records and reset the timer after stopping the operation.

1 OPTIONS () open the options menu 2) scroll to Reset 3 OK () erase all timing records and react the timer		Press	То
2 O 3 OK (O) erase all timing records and	1	OPTIONS (💽)	open the options menu
	2	Ó	scroll to Reset
	3	OK (🔘)	erase all timing records and reset the timer



Viewing Saved Timing Records

You can read the details of timing records you saved.

Find the Feature > Stopwatch > View times

Erasing Timing Records

Find the Feature

≥ Tools

- > Stopwatch
- > Erase times
- > One By One

Using Voice Launchers

Press the smart key to start voice launchers from the idle display. To launch applications by voice, select **Call name/command** and then say a recorded command (voice command) into the microphone.



Find the Feature

🥽 > Tools

- > Voice control
- > Voice commands

		Press	То
Ċ	1	0	scroll to Add command
	2	OK (🔘)	select Add command
	3	Ó	scroll to the desired application