









Framing Pictures

You can add frames around the images you want to capture.

	Press	To
1		open the options menu
2		scroll to Frame
3	OK ()	select Frame
4		scroll to On
5	OK ()	select On
6		scroll to the desired frame
7	OK ()	select the frame
8	OK ()	prepare to capture images

Tip: This option is available only for pictures with the **128x160** resolution.



Using Multi-Shots

You can capture a number of images at a time while in the **Multi-shot** mode. The **Multi-shot** mode falls into 2 types: **Continuous** and **Composite**. **Continuous** allows you to take 6, 9 or 15 shots successively at a specified speed. **Composite** allows you to take 2 shots over the horizontal or vertical axis.

Icons which work with the **Multi-shot** functionality are described below:



indicates you choose to take 6 shots continuously at the high speed.



indicates you choose to take 9 shots continuously at the high speed.



indicates you choose to take 15 shots continuously at the high speed.



indicates you choose to take 6 shots continuously at the normal speed.



indicates you choose to take 9 shots continuously at the normal speed.



indicates you choose to take 15 shots continuously at the normal speed.



indicates you choose to take 2 shots over the horizontal axis.














indicates you choose to take 2 shots over the vertical axis.



Tip: This option is available only for pictures with the **160x120** or **128x160** resolution.









If you choose **Continuous** to capture 6, 9 or 15 images continuously:

	Press	To
1		open the options menu
2		scroll to Multi-shot
3	OK ()	select Multi-shot
4		scroll to Continuous
5	OK ()	select Continuous
6		scroll to High speed/Normal speed
7	OK ()	select High speed/Normal speed
8		scroll to 6 shots/9 shots/15 shots
9	OK ()	select 6 shots/9 shots/15 shots
10	OK ()	take the specified shots at a time
11	 > Apply all shots as slide show	save the taken pictures in the folder named the starting SlideShow under Media center > Slide show

Tip: You may press **Save all** () or  > **Save** to store photos in **Media center** > **Photo album** > *default photo album*.













Once you store 6, 9 or 15 shots in **Media center** > **Slide show**, you can set those shots as a screen saver image. Those shots will play in the internal or external display when no activity occurs for a while.

	Press	To
1		scroll to the desired slide show folder
2		open the options menu
3		scroll to Apply as screen saver
4	OK ()	select Apply as screen saver
5		scroll to the desired display where the pictures you took will be set as a screen saver image
6	OK ()	select the display
7		scroll to any entry
8	OK ()	set the taken pictures as a screen saver image and save them in Settings > Display/External display > Screen saver










If you choose **Composite** to take 2 shots over the horizontal or vertical axis:

	Press	To
1		open the options menu
2		scroll to Multi-shot
3	OK ()	select Multi-shot
4		scroll to Composite
5	OK ()	select Composite
6		scroll to Horizontal/Vertical
7	OK ()	select Horizontal/Vertical
8	OK ()	take the 1st shot
9	OK ()	take the 2nd shot
10	OK ()	save the taken pictures as a whole one in Media center > Photo album > default photo album




To set the 2-in-1 shot as a screen saver image before saving it:

Press	To
1 	open the options menu
2 	scroll to Apply as screen saver
3 OK ()	select Apply as screen saver
4 	scroll to the desired display where the picture you took will be set as a screen saver image
5 OK ()	select the display
6 	scroll to any entry
7 OK ()	set the taken picture as a screen saver image and save it both in Media center > Photo album > default photo album and in Settings > Display/External display > Screen saver



Using the Twilight Mode

You can use **Twilight mode** in the dark.

Press	To
1 	open the options menu









Press	To
2 	scroll to Twilight mode
3 ON ()	turn Twilight mode on and prepare to capture images

Tip:  indicates **Twilight mode** is turned on.

Using the Self-Timer


You can use **Self timer** to have a 10-second delay before a photo is taken.



Press	To
1 	open the options menu
2 	scroll to Self timer
3 ON ()	turn Self timer on and prepare to capture images
4 OK ()	take a picture in 10 seconds

Tip:  indicates **Self timer** is turned on.

Turning the Shutter Sound On or Off





You can turn **Shutter sound** on or off before taking photos.






Press	To
1 	open the options menu

Press	To
2 	scroll to Shutter sound
3 ON/OFF ()	turn Shutter sound on/off and prepare to capture images

Selecting a White Balance Mode

There are 4 white balance modes for you to choose from before taking photos.






- Auto**  indicates the camera will adjust itself to the environment where you want to capture images.
- Sunlight**  indicates you want to capture images outdoors on a sunny day.
- Fluorescent**  indicates you want to capture images in a room with fluorescent lighting.
- Incandescent**  indicates you want to capture images under incandescent light.

Press	To
1 	open the options menu
2 	scroll to White balance
3 OK ()	select White balance
4 	scroll to the desired white balance mode
5 OK ()	prepare to capture images



Adding Touch-ups

You can use a variety of touch-ups to make pictures more impressive before taking photos.

	Press	To
1		open the options menu
2		scroll to Special efficacy
3	OK ()	select Special efficacy
4		scroll to the desired option
5	OK ()	prepare to capture images

Using the Video Recorder

You can create video clips up to 30 seconds each.






Caution: Obey the local law or regulations when you use the video recorder.

Selecting a Time Length to Record Video Clips

You can specify a time length (up to 30 seconds) to record video clips.

Find the Feature

 > Media center
> Video recorder




Press	To
1 	open the options menu
2 	scroll to Time to record
3 OK ()	select Time to record
4 	scroll to the desired time length
5 OK ()	select the time length



Creating a Video Clip

You can start to record video clips after selecting a time length.


Find the Feature

 > **Media center**
> **Video recorder**

Press	To
1 right soft key ()	start recording
2 right soft key ()	stop recording, if necessary
3 keypad keys	enter a name
4 SAVE ()	save the recorded video clip in Media center > Video

Tip:  indicates the zoom lens control as well as the viewer brightness control. Press  up/down to zoom








images in/out; press  left/right to decrease/increase the image brightness.

Playing a Video Clip

Find the Feature

 > **Media center**
> **Video**





Press	To
1 	scroll to the desired video clip
2 PLAY ()	play the selected video clip
3 right soft key ()	stop playing the selected video clip, if necessary


Tip: Press  or the left soft key () to turn the video recorder off.

Renaming a Video Clip

Find the Feature

 > **Media center**
> **Video**

Press	To
1 	scroll to the desired video clip
2 	open the options menu
3 	scroll to Rename
4 OK ()	select Rename

Press	To
5 keypad keys	enter a new name
6 OK ()	save the new name






Deleting a Video Clip

Find the Feature



> **Media center**

> **Video**

Press	To
1 	scroll to the desired video clip
2 	open the options menu
3 	scroll to Delete
4 OK ()	select Delete
5 OK ()	delete the selected video clip



Sending a Video Clip



You can send video clips to friends via either their phone numbers or email addresses.











Find the Feature






> **Media center**

> **Video**









To send via a phone number:

	Press	To
1		scroll to the desired video clip
2		open the options menu
3		scroll to Send
4	OK ()	select Send
5	keypad keys	enter your message
6	SEND ()	select SEND
7	P.BOOK ()	open your phonebook
8		scroll to the desired entry
9	OK ()	select the entry
		Tip: If the entry includes more than 1 phone numbers, continue the following steps; otherwise, repeat steps 8-9 to add other recipients or go to steps 13-14 to send your selected video clip immediately.
10		scroll to the desired phone number
11	OK ()	select the phone number





Press	To
12 OK ()	return to the previous menu
Tip: Repeat steps 8-9 to add other recipients or continue the following steps to send your selected video clip.	
13 OK ()	return to the previous menu
14 SEND ()	send your selected video clip

To send via an email address:

Press	To
1 	scroll to the desired video clip
2 	open the options menu
3 	scroll to Send
4 OK ()	select Send
5 keypad keys	enter your message
6 SEND ()	select SEND
7 	open the options menu
8 	scroll to New e-mail address
9 OK ()	select New e-mail address
10 keypad keys	enter an email address









Press	To
11 OK ()	add the email address to the Recipients box
	Tip: Repeat steps 7-11 to add other recipients.
12 SEND ()	send your selected video clip

Viewing a Video Clip Info.

You can read the details of video clips.

Find the Feature

 > **Media center**
> **Video**







Press	To
1 	scroll to the desired video clip
2 	open the options menu
3 	scroll to Details
4 OK ()	view the information on the selected video clip

Sorting Video Clips

You can sort video clips by name, size or date.

Find the Feature

 > **Media center**
> **Video**

Press	To
1 	scroll to any video clip
2 	open the options menu
3 	scroll to Sort files
4 OK ()	select Sort files
5 	scroll to the desired sorting type
6 OK ()	sort video clips by the selected sorting type



Managing a Network Profile

Your service provider or network administrator may have configured a network profile (or networking connection settings) before you receive the phone. You can also customize the preset network profile or create a new 1.

Find the Feature

 > **Browser**
> **Profiles**





Connecting to the Internet




You can connect to your service provider or network administrator's homepage, to the favorite bookmarks, and to the desired Web pages on your phone.

If networking connection is established, refer to the following instructions to activate an option, return to the last page, or end networking connection.


To activate an option:

	Press	To
1		scroll to the desired option
2	OK ()	activate the selected option
	or	
	 > OK ()	



To return to the last page:

	Press	To
	BACK ()	return to the last page


To end networking connection:

	Press	To
		end networking connection

To end networking connection alternatively:

	Press	To
1		open the options menu
2		scroll to Exit



Press	To
3 OK ()	end networking connection

Connecting to Your Service Provider or Network Administrator's Homepage

You can browse your service provider or network administrator's homepage which has been set up in your selected network profile.

Find the Feature

 > **Browser**
> **Home**






Connecting to Bookmarks

You can connect to preset or self-created bookmarks.

Find the Feature

 > **Browser**
> **Bookmark**

Press	To
1 	scroll to the desired bookmark
2 OK ()	select the bookmark
3 OK ()	connect to the selected bookmark

Connecting to Web Pages


You can edit a URL address for the Web page you want to surf on.

Find the Feature



> **Browser**

> **Go to address**

Press	To
1 keypad keys	enter a URL address
2 OK ()	connect to the desired Web page

Managing Bookmarks

You can create, edit or erase bookmarks.

Find the Feature



> **Browser**

> **Bookmark**

Tip: To connect to your favorite bookmarks, see page 201.

Downloading Media Objects



You can download media objects from the desired Web sites, such as pictures, ring tones, animations, and video clips.

Find the Feature



> **Media center**

> **Download media**

Customizing the Web Page Display Mode

You can select a style to display the Web pages you are browsing.

Find the Feature



- > **Browser**
- > **Appearance settings**

Allowing or Rejecting Cookies

You can download or reject cookies when you are browsing Web pages.

Find the Feature



- > **Browser**
- > **Download settings**
- > **Cookies**

Clearing Cache Memory

You can delete the temporary files (which were downloaded for you to quickly connect to the frequently-browsed Web pages) from the phone's cache memory.

Find the Feature



- > **Browser**
- > **Clear the cache**



Reading Your Service Provider or Network Administrator's Service Messages



You can receive the networking service messages sent from your service provider or network administrator.



Find the Feature



> **Browser**

> **Service Inbox**

Reading Certificates

You can view the certificates which have been downloaded and saved on your phone when you are browsing Web pages.

Find the Feature




> **Browser**

> **Certificates**

Troubleshooting


Problem with your MOTO? If you have questions or need help, we're here to help. Go to www.motorola.com/consumer/support. If you have returned your phone for repairs, click on Check Repair Status. You can also contact the Motorola Customer Support Center at (852) 2506-3888 (Hong Kong).

Question	Answer
Is your battery charged?	The battery level indicator should have at least 1 segment showing. If it does not, recharge your battery (see page 26).
Have you installed a valid SIM card?	If necessary, turn off your phone and make sure that you have inserted a valid SIM card (see page 22).
Does the phone have a signal?	The signal strength indicator should have at least 1 segment showing. If it does not, move to an area with a stronger signal.
Is the other party unable to hear you?	Your phone may be muted. Press OPTIONS () > Unmute to unmute the phone. Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.




Question	Answer
Has the phone been damaged, dropped, or gotten wet?	Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover these types of damages.
Was a non-Motorola battery or battery charger used?	

The following refers to specific symptoms:


Symptom	Solution
My phone was stolen. To whom should I report this?	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
I forgot my password.	Contact your service provider.
I pressed the power key, but nothing happened.	Be sure to press and hold  (the power key) until you see the welcome display and an alert sounds. This could take several seconds. If nothing happens, check that a charged battery is installed (see page 24).

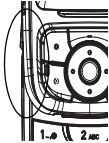



Symptom	Solution
The display shows: Insert SIM Card or Check SIM Card even though I have inserted my SIM card in the phone.	The SIM card may be incorrectly inserted. Check the SIM card to make sure that it is inserted properly (see page 22).
The display shows: SIM Blocked. How do I unblock my SIM card?	Call your service provider to obtain the PIN Unblocking Key (PUK) code.
The display shows: Enter Unlock Code. How do I unlock my phone?	Enter the factory-preset unlock code (1234), or the last 4 digits of your phone number. If this fails, call your service provider.
My phone prompts for an unlock code when I try to open a feature.	The feature you want is locked. If you do not know the unlock code, contact your service provider.
My phone does not ring.	The ringer may be set to Silence even though your phone is set to an audible ring style. To turn off Silence , press and hold  from the idle display.






Symptom	Solution
I tried to place a call and heard an alternating high/low tone.	Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display shows the name of your service provider before placing a call.
I cannot send/receive calls.	<p>Make sure that you have a phone signal (the signal strength indicator should have at least 1 segment showing). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings.</p> <p>Your phone also may have the Call barring feature turned on. If you know the unlock code, you can change this setting in the call barring menu to turn it off:</p> <p> > Settings > Call features > Call barring > Cancel all</p> <p>Also, check to be sure your SIM card is installed and working (see page 22).</p>

Symptom	Solution
My phone has poor reception and drops calls.	Make sure you have a phone signal (the signal strength indicator should have at least 1 segment showing). Stay clear of any obstructions such as bridges, parking garages, or tall buildings.
I cannot hear others on my phone.	<p>While on a call, press the up volume key. Your phone display should show the volume increasing.</p>  <p>Also, make sure that your phone's earpiece is not blocked by its carrying case.</p>
How do I see the calls I sent or received?	<p>To see the most recent calls you dialed or received:</p> <ul style="list-style-type: none">  > Recent calls > Dialed calls or Received calls
My phone's display is too dark.	<p>Use the Adjust brightness feature to change the level of brightness in your display (see page 60).</p> <p>You can also use the Backlight feature to change the length of time that the display backlight stays on (see page 60).</p>



Symptom	Solution
My phone's battery charge doesn't last as long as I expected. What can I do to extend battery life?	Battery performance is affected by charge time, feature use, temperature changes, backlight use, and other factors. For tips on extending battery life, see page 27.
I am unable to record a voice note, voice dial, or voice launcher.	Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into your phone's microphone with a normal tone of voice.
I launched the micro-browser but the display shows: Not Available.	You may be in an area without service, or you may be connected to a network that does not support Internet access.
I launched the micro-browser but the display shows: Request timed out. Gateway is not responding.	Try again in a few minutes. The servers may be temporarily busy.



Symptom	Solution
The handwriting feature does not work properly.	<p>It happens as the Finger Writing Recognition (FWR) technology is vulnerable to the environmental temperature, humidity and electric charge of fingers. The solution is to calibrate the FWR functionality:</p> <p> > Settings > Initial settings > Input mode > Finger writing settings > Calibration</p> <p>For more information, see “Calibrating Your Finger Writing Recognition” on page 45.</p>



Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg^1 . Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.24 W/kg , and when worn on the body, as

described in this user guide, is 0.18 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

A

- accessories 21
- account book, managing 136
- alarm clock 135
- alert
 - setting 124, 130, 131
 - turning off 126, 130, 131
- ambient light sensor
 - turning on/off 64
- animation
 - screen saver 63, 157, 187
 - wallpaper 7, 62
- answering a call 31, 65, 127

B

- backlight 60
- battery
 - charging 26
 - extending battery life 27
 - installing 24
 - level indicator 26
- blocking a call 129

C

- calculator 142
- call
 - alert, turning off 124
 - answering 31, 65, 127
 - barring password, changing 56
 - blocking 129
 - dialing 31
 - ending 31
 - making 31
 - muting 32
 - receiving 31, 65, 127
 - recent calls list, viewing 68
 - redialing 67
 - transferring 129
 - waiting 36, 65
- call counter 132
- call timer 131
- caller group
 - photo caller ID, setting 107
 - ring alert, customizing 106
- camera
 - framing a picture 184
 - multi-shot 185

- composite 188
- continuous 186
- quality 183
- resolution 182
- rotating a picture 176
- screen saver 178
- self-timer 190
- sending a picture 178
- shutter sound, turning on/
off 190
- taking a picture 174
- touch-up 192
- twilight mode 189
- viewer brightness 182
- wallpaper 176
- white balance 191
- zoom lens 181

clock

- setting 54, 61, 62

- closed user group, defined
155

codes

- changing 56

- forgetting 57

- color, setting 60

- contrast, setting 60

- cursor 48, 49, 52, 161

D

- date, setting 61

- datebook, managing 136

- dialing a number 31

display

- backlight 60

- color 60

- contrast 60

- external display 54

- idle display, defined 33,
54

- internal display 33

E

- earpiece volume 30

- end key 31

- ending a call 31

- Enter UnLock Code** message
207

F

- factory preset setting,
restoring 122

- Finger Writing Recognition
(FWR) functionality

- calibrating 2, 45, 58

- commands 47

- customizing 44

- gestures 48

- training 44

- warranty 41

- Finger Writing Recognition
(FWR) text entry

- method 39

fixed dial 111

flip

activating 32

external display 54

screen saver 63

wallpaper 62

G

game

embedded game, playing
156

Java game, playing 173

H

holding a call 65

I

idle display 33, 54

indicators 34

battery level 26

network signal 54

time and date 54

input modes

123 39

finger writing 39

iTAP English 39

symbol 39

TAP English 39

Internet connection 199

bookmark 201

homepage 201

URL 202

iTAP English predictive text
entry method 39

J

Java

configuration, setting 173

game, playing 173

K

key

end key 31

left soft key 33

menu key 37

power key 28

right soft key 33

send key 31, 66

keypad

backlight 60

L

left soft key

functions 33

lock

keypad 155

phone 55, 56

SIM card 56

M

main menu display style,
setting 5

- making a call 31
- making a conference call
 - 127
- making a fax or data call
 - 129
- media object
 - displaying 167
 - downloading 202
 - moving 172
 - sending 168
- menu
 - entering text 37, 38
 - navigating 37
- menu key 37
- message
 - instant message
 - writing 88
 - MMS message
 - activating 72
 - previewing 77
 - saving 80
 - sending 77
 - writing 73
 - SMS message
 - saving 71
 - sending 70
 - writing 69
 - SMS/MMS message
 - deleting 83
 - managing 83
 - reading 81

- my telephone number 30,
 - 31, 66, 67, 68, 71,
 - 77, 84, 91, 96, 98,
 - 103, 105, 110, 111,
 - 114, 127, 129, 140,
 - 207, 208

N

- network connection, setting
 - 199
- number
 - storing your number 22,
 - 37, 38, 68, 69, 73,
 - 84, 86, 91, 96, 98,
 - 105, 110, 112,
 - 114, 116, 129
 - viewing your number 30,
 - 54, 69, 73, 103,
 - 137, 140
- number dialing 114
- numeric text entry method
 - 39

O

- optional accessory, defined
 - 21
- optional feature, defined 21

P

- phone
 - alert, turning off 126

- auto power off, setting 62
- auto power on, setting
 - 135
- codes 56
- date, setting 61
- flip 28, 30, 32, 54, 125,
 - 174
- locking 55, 56
- time, setting 61
- turning on/off 28
- unlocking 55
- phone number
 - storing your number 22,
 - 37, 38, 68, 69, 73,
 - 84, 86, 91, 96, 98,
 - 105, 110, 112,
 - 114, 116, 129
 - viewing your number 30,
 - 54, 69, 73, 103,
 - 137, 140
- phonebook entry
 - adding 96
 - fixed dial 111
 - photo caller ID, setting
 - 100
 - speed dial 104
 - voice dial 114
 - number dialing,
 - speaking 114
 - voice tag, recording
 - 116

picture

- cropping 161
- drawing 156
- screen saver 63, 157,
 - 158, 178, 187, 189
- wallpaper 7, 62, 157,
 - 158, 176
- PIN code
 - changing 56
- PIN2 code
 - changing 56
- power key 28
- PUK code, defined 57, 207
- PUK2 code, defined 57

Q

- quick access menu
 - creating 122
 - using 123
- quick note 69, 73, 85, 89

R

- right soft key
 - functions 33
- ring style
 - ring alert, composing 162
 - ring alert, turning off 124
 - setting 124

S

- safety information 13

- screen saver 63, 157, 158,
178, 187, 189
- security code
 - changing 56
 - forgetting 57
- send key 31, 66
- service light
 - setting 63
- service provider name
 - customizing 121
- shortcut 1, 7, 44, 47, 122
- silent ring alert, setting 124,
126
- SIM card
 - defined 22
 - installing 22
 - PIN code entry 28
 - PIN code, changing 56
 - PIN2 code, changing 56
 - precautions 22
 - SIM Blocked** message 28
- soft keys
 - functions 33
- Specific Absorption Rate
(SAR) value 212
- speed dial/1-touch dial 104
- standby time, increasing
60, 173
- STK service 134
- stopwatch 142
- symbol (and punctuation)
 - text entry method 39

T

- TAP English standard text
entry method 39
- text
 - entering 38
 - entry method, changing
38
 - entry method, predefining
39
 - finger writing input mode
39
 - flashing cursor 37
 - iTAP English input mode
39
 - TAP English input mode
39
- time, setting 61
- transferring a call 129
- travel charger 26

U

- unlock
 - keypad 155
 - phone 55, 56
 - SIM card 57
- unlock code
 - bypassing 57
 - changing 56
 - entering 28, 55, 56, 57,
111, 122, 132,
207, 208

forgetting 57

V

vibrate alert

turning on/off 125

video recorder 192

voice dial 114

number dialing 114

voice tag 116

voice launcher 146

voice command 146

voice recorder 149

voicemail service number,
setting 86

volume

earpiece 30

keypad 125

ring alert 124

W

wallpaper 7, 62, 157, 158,
176

Web pages 202

word completion feature 40

world time, viewing 148