
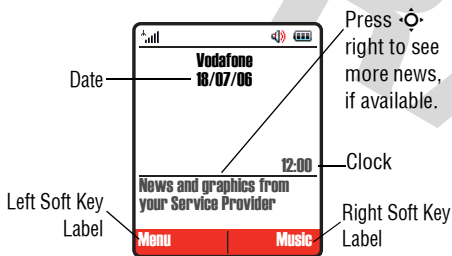 


See page 1 for a basic phone diagram.

10.1 Using the Display

The *home screen* is displayed when you are *not* on a call or using the menu. You must be in the home screen to dial a phone number. To dial a number from the home screen, press the number keys and .



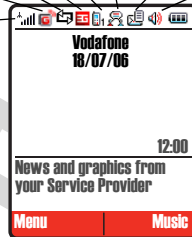 
Note: Your home screen may look different from the display shown above, depending on your service provider.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key or right soft key to



perform the function indicated by the left or right soft key label. For soft key locations see page 1.

The following status indicators can display:


1. Signal Strength
2. GPRS
3. Data
4. Roam
5. Active Line
6. Messaging Presence
7. Messages
8. Ring Style
9. Battery Level



1. Signal Strength Indicator

Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator or  (no transmit) indicator is displayed.





2. GPRS Indicator


 Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include:


-  = GPRS PDP context activate
-  = GPRS attach
-  = GPRS packet data available

3. Data Transmission Indicator


Shows connection and data transmission status. Indicators can include:

-  = secure packet data transfer
-  = unsecure packet data transfer
-  = secure application connection
-  = unsecure application connection

 = secure Circuit Switch Data (CSD) call

 = Bluetooth™ connection is active

4. Roam Indicator

 Shows when your phone is seeking or using another network outside your home network. Indicators can include:

-  = HSDPA home
-  = HSDPA roam
-  = 3G home
-  = 3G roam
-  = 2.5G home
-  = 2.5G roam
-  = 2G home
-  = 2G roam

5. Active Line Indicator

Shows to indicate an active call, or to indicate when call diverting is on. Icons for dual-line SIM cards can include:

= line 1 active

= line 2 active

= line 1 active, call divert on

= line 2 active, call divert on

6. Messaging Presence Indicator

Shows when Instant Messaging (IM) is active. Indicators can include:

= IM active

= invisible to IM

= busy

When a Java application is active, can display here.

7. Message Indicator

Displays when you receive a new message. Indicators can include:

= text message

= voicemail message

= voice and text message

= IM message

8. Ring Style Indicator

Shows the ring style setting.

= loud ring

= soft ring

= vibrate and ring

= vibrate then ring

= vibrate

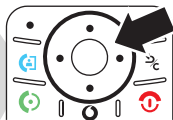 
= silent

9. Battery Level Indicator

Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

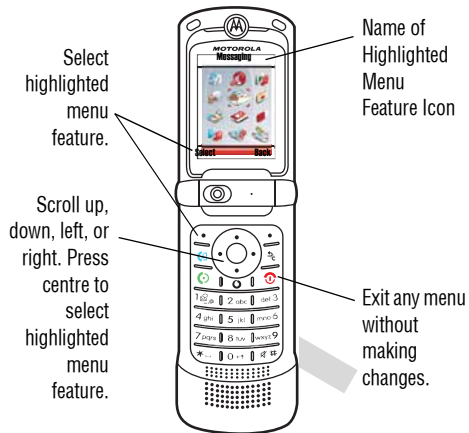 
10.2 Using the 5-Way Navigation Key

Use the 5-way navigation key (◂◃) to scroll up, down, left, or right in the menu system. Press the centre of the key (◂◃) to select a highlighted menu item.



10.3 Using Menus













From the home screen, press ◂◃ to enter the main menu.



Press ◂◃ to scroll to and highlight a menu feature icon in the main menu. The following icons may display in the main menu, depending on your service provider and service subscription options.

10.3.1



Selecting a Menu Feature

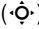 
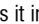 
Icon	Feature	Icon	Feature
	Entertainment		Organiser & Tools
	Vodafone live!		Contacts
	Music		SIM Tool Kit
	Camera		Connectivity
	Messaging		Calls
	My Files		Settings

10.3.1 Selecting a Menu Feature

To select a menu feature, starting from the home screen:

Find the Feature  **Calls > Options > Filter by > Dialed Numbers**

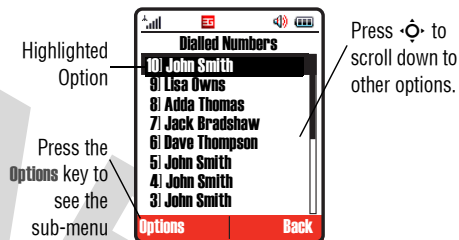 
This example shows that from the home screen, you must press  to open the menu, highlight and select  **Calls > Options > Filter by > Dialed Numbers**, then highlight and select the call.


Press the navigation key () up, down, left or right to highlight items, and press it in () to select items. Press


the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

10.3.2 Selecting a Feature Option



Some features require you to select an option from a list:



- Press  to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.

- When an option has a list of possible values, press  left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

10.4 Smart Key

The smart key gives you another way to do things. For example, when you highlight a menu item, you can press the smart key to select it (instead of pressing ). The smart key usually does the same thing as . To find the smart key, see page 1. To change what the smart key does in the home screen, see page 85.

10.5 External Display

When you close your phone, the external display shows the time, date, status indicators, and notifications for incoming calls and other events. After your phone is inactive for a while, the display shows only a clock. For a list of phone status indicators, see page 54.

To set the phone ring style in the external display:

- 1 Press a volume key to see **Ring Styles**.

- 2 Press the smart key repeatedly, until the style you want appears.
- 3 Press a volume key to return to the home screen.

10.6 Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press the **Speaker** key to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Speakerphone On** in the home screen. The handsfree speaker remains on until you press the **Speaker** key again or turn the phone off.

Note: *The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.*

10.7 Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your

service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code or PIN2 code, if necessary. Your *Personal Identification Number* (PIN) code protects the information stored on your SIM card.

To change a code or password:

Find the Feature  > Settings > Security
> New Passwords

10.8 Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked (see page 70).

10.8.1 Locking Your Phone Manually

Find the Feature  > Settings > Security
> Phone Lock > Lock Now

Press	To
1 keypad keys	enter your unlock code
2 Ok key	lock the phone

10.8.2 Unlocking Your Phone

Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 Ok key	unlock your phone

10.8.3 Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature

 > Settings > Security
> Phone Lock > Automatic Lock
> On

Press

1 keypad keys

2  key

To

enter your unlock code

activate automatic lock

10.9 If You Forget a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

Press

1 

2 keypad keys

3  key

To

display the unlock code *bypass* screen

enter your 6 digit *security code*



submit your security code

If you forget your security code, SIM card PIN code or PIN2 code, contact your service provider.

11.1 Storing Your Name and Phone Number

To store or edit your name and phone number information on your SIM card:

Find the Feature  > Settings > Phone Status
> My Tel. Numbers

Shortcut: Press   from the home screen to view or edit your name and phone number.


Tip: If you want to see your phone number while you are on a call press **Options** > **My Tel. Numbers**.

If you do not know your phone number, contact your service provider.

11.2 Setting the Time and Date

Your phone uses the time and date for the **Calendar**.

Find the Feature  > Settings > Initial Setup
> Time and Date

To synchronise the time and date with the network, press  > **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **On**. 

To manually set the time and date, turn off **Autoupdate**, then, press  > **Settings** > **Initial Setup** > **Time and Date** > *time* or *date*.

To choose an analogue or digital clock for your home screen, press  > **Settings** > **Personalise** > **Home Screen** > **Clock**.

To turn the date on or off on your home screen, press  > **Settings** > **Personalise** > **Home Screen** > **Date**.


11.3 Setting a Ring Style


Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.



You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 56).

To set a ring style:

Find the Feature  > Settings > Ring Styles
> *Style: style name*

Press	To
1  up or down	scroll to the ring style
2 Select key	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Settings** > **Ring Styles** > *style* **Details**.

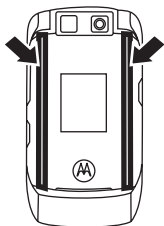 
- If you select the **Silent** ring style, your phone will not use **Auto Answer** (see page 88).
- Java™ applications can make your phone vibrate or light up. You can turn off **App Vibration** and **App Backlight** under  > **Settings** > **Java Settings**.
- To change your ringer volume when your phone is closed, see page 59.
- To turn off alerts for messages that arrive during a call, select  > **Settings** > **In-Call Setup** > **MSG Alert** > **Not in Call**.

11.4 Ring & Event Lights

Your phone has lights on the outside that can pulse for incoming calls or messages.

To set the light for your **incoming calls**, press  > **Settings** > **Ring Styles** > **Ring Lights**.

To set the light for your **incoming messages**, press  > **Settings** > **Ring Styles** > **Event Lights**.



11.5 Setting a Wallpaper Image

You can set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image displays as a faint watermark in text and menu displays.

When you set an animation as a wallpaper image, only the first frame of the animation displays.

Find the Feature

 > **Settings** > **Personalise**
> **Wallpaper**

11.6

Setting a Screen Saver Image

Setting	Description
Picture	Select the picture or animation for the background image in your home screen, or None for no wallpaper.
Layout	Select: Centre to centre the image on the display Tile to repeat the image across the display Fit-to-screen to stretch the image across the display.

11.6 Setting a Screen Saver Image

The screen saver image displays when the phone is on and no activity is detected for a specified time period.

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

You can set a photo, picture, or animation as a screen saver image. The screen saver shows when the flip is open and no activity is detected for a specific time. The image shrinks to

fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

Find the Feature



> Settings > Personalise
> Screen Saver

Setting	Description
Picture	Select the picture or animation for your screen saver or None for no screen saver.
Delay	Select how long your phone must be inactive before the screen saver picture displays. Note: <i>If this setting is longer than your Display Timeout setting, then your display will turn off before you see the screen saver.</i>

11.7 Setting Display Appearance

Note: The **Battery Save** feature tells your phone not to light the display or keypad unless you're in a dark place. To turn on this feature, press > Settings > Initial Setup > Battery Save > On.

To choose a phone **skin** that sets the look and feel of your phone's display:

Find the Feature  > Settings > Personalise
> Skin

To set your display brightness:

Find the Feature  > Settings > Initial Setup
> Brightness

You can set the amount of time that the display and keypad backlights remain on, or turn off backlights to extend battery life. The backlight turns back on when you open the flip or press any key.

Caution: The **Continuous** setting can decrease battery life.

Find the Feature  > Settings > Initial Setup
> Backlight

Note: To turn the backlight on or off for Java applications, press  > Settings > Java Settings > App Backlight.

You can set the display to turn itself off when no activity is detected for a specified time period. The display turns back on when you open the flip or press any key.

Find the Feature  > Settings > Initial Setup
> Display Timeout

11.8 Setting Answer Options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find the Feature  > Settings > In-Call Setup
> Answer Options

Options	
Multi-Key	Answer by pressing any key.
Open to Answer	Answer by opening the flip.


For basic instructions on how to make and answer calls, see page 19.

12.1 Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert

12.2 Changing the Active Line

 Change the active phone line to make and receive calls from your other phone number.


Note: This feature is available only for dual-line-enabled SIM cards and is operator dependent.

Find the Feature	 > Settings > Phone Status > Active Line
-------------------------	---






The active line indicator in the display shows the currently active phone line (see page 56).


12.3 Viewing Call Log


Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.



Shortcut: Press  from the home screen to view the Dialed Numbers list.

Find the Feature  > Calls > Options > Filter by

Press	To
1  up or down	scroll to Received Calls or Dialed Numbers
2  	select the list
3  up or down	scroll to an entry
4 	call the entry's number

Note:  means the call connected.

Tip: Press and hold  for two seconds to send the number as DTMF tones during a call.




Press	To
or 	make a video call to the entry's number
or 	view entry details
or Options	open the Last Calls Menu to perform various operations on the entry

Option	Description
Add Digits	Add digits after the number.
Attach Number	Attach a number from the Contacts or Call Log lists.
Send Tones	Send the number to the network as DTMF tones. This option displays only during a call.

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a contacts entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide Caller ID/ Show Caller ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.

12.4 Redialling a Number

Press	To
1 	view the dialled numbers list
2 	scroll to the entry you want to call
3 	redial the number

12.5 Using Automatic Redial

When you receive a busy signal, your phone displays **Number Busy**.

12.6


Returning an Unanswered Call

With automatic redial, your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays the message **Redial Successful**, and then connects the call.

To turn automatic redial on or off:

Find the Feature  > **Settings** > **Initial Setup**
> **Auto Redial**



When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a busy signal and see **Number Busy**:

Press	To
 or Retry key	activate automatic redial

Your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

12.6 Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays **X Missed Calls**, where **X** is the number of missed calls.

Press	To
1 View key	see the received calls list
2  up or down	select a call to return
3 	make the call

12.7 Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature  > **Calls** > **Notepad**

Press	To
	call the number

Press or Options	To open the Dialing Menu to attach a number or insert a special character
---	--


12.8 Putting a Call On Hold or Mute

Press Options > Hold	To put all active calls on hold
--	---

Press Mute key (if available) or Options > Mute	To put all active calls on mute
---	---

12.9 Using Call Waiting

When you are on a call or downloading a file, an alert tone sounds to indicate that you have received a second call.

Press 1 	To answer the new call
2 Switch key or Link key or Options > End Call on Hold	switch between calls connect the 2 calls end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature  > **Settings** > **In-Call Setup**
> **Call Waiting**

12.10 Using Caller ID

12.10.1 Incoming Calls

Calling line identification (Caller ID) displays the phone number for incoming calls.

The phone displays the caller's name (and picture, if available) if the name is stored in your contacts, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive **Ringer ID** for specific entries stored in your contacts. For more information, see page 82.

12.10.2 Outgoing Calls

You can show or hide your phone number as an ID for the calls that you make.


While dialling (with digits visible in the display), press **Options > Hide Caller ID/Show Caller ID**.

12.11 Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any

circumstances, even when your phone is locked or the SIM card is not inserted. Your service provider can program additional emergency numbers into your SIM card. *However, your SIM card must be inserted in your phone in order to use the numbers stored on it.* See your service provider for additional information on this issue.

Note: *Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.*

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

12.12 Dialling International Numbers

Press and hold **0** to insert the local international access code (+) from which you are calling. Then press the keypad keys to enter the country code and number.

12.13 Calling With Speed Dial

To call contact entries 1 to 9, press and hold the single-digit speed dial number for one second.

You can set speed dial to call the entries in your phone's contacts list or Fixed Dial list.

Find the Feature



> Settings > Initial Setup
> Speed Dial > Phone or Fixed Dial

To add a new contact entry, see page 81 To edit the **Location Number** for a contact entry, press > Contacts, highlight the entry, and press **Options** > Edit Contact.

12.14 Using Voicemail

Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Note: Your service provider may include additional information about using this feature.

12.14.1 Listening to Voicemail Messages

Find the Feature



> Messaging > Call Voicemail

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number, see page 72. If you don't know your voicemail number, contact your service provider.

12.14.2 Receiving a Voicemail Message

When you receive a voicemail message, your phone displays (voicemail message indicator) and **New Voicemail**.

Note: The icon may vary depending on your service provider.

Press

Call key

To

listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

12.14.3 Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature



> Messaging

Press

1 keypad keys

To

enter your voicemail number

2 **OK** key

store the number

You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a contact entry for it. Then, you can use the entry to call your voicemail.

13.1 Navigation Guide

Main Menu



Entertainment

- Games
- Mobile TV



Vodafone live!

- Vodafone live!
- Enter URL
- Shortcuts
- Saved Pages
- History
- Browser Settings
- Internet Profiles
- What's New
- Games
- Ringtones
- Pictures
- News
- Sports

This is the standard main menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available on your phone.



Music

- Recently Played
- My Music
- Radio DJ



Camera



Messaging

- Create Message
- Inbox
- Drafts
- Outbox
- Email
- Messenger
- Call Voicemail
- Browser Msgs
- Info Services
- Templates
- Vodafone Messenger
- Vodafone Mail
- Live! Studio



My Files

- Pictures
- Ring Tones
- My Music
- Videos
- Screen Saver



Organiser & Tools

- SIM Toolkit *
- Alarms*
- Calendar
- Calculator
- Dialling services*



Contacts



SIM Tool Kit *



Alarm Clock *





Connectivity

- Bluetooth
- USB
- Sync*



Calls

- Video call
- All calls
- Filter by
- Notepad
- Call timers
- Call cost
- (press the  or  to scroll through the call lists)



Settings

(see next page)

* optional features

Settings Menu



Personalise

- Home Screen
- Home Keys
- Main Menu
- Skin
- Greeting
- Wallpaper
- Screen Saver



Ring Styles

- Style
- *Style* Detail



Diverts

- Voice Calls
- Video Calls
- Cancel All
- Diverts Status



In-Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Answer Options
- Call Waiting
- MSG Alert



Initial Setup

- Time and Date
- Speed Dial
- Auto Redial
- Display Timeout
- Backlight
- Scroll
- Language
- Battery Save
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info
- Battery Meter
- Storage Devices
- Software Update
- Other Information



Headset

- Auto Answer
- Ringer Options
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-off Delay
- Charger Time



Flight Mode



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Keypad
- Lock Application
- Fixed Dial
- Call Barring
- New Passwords









Java Settings


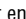 

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight



13.2 Feature Quick Reference

Please note that not all features may be available.

13.2.1 Calling Features



Feature	Description
Conference Call	During a call:  > Hold , dial next number, press  , press the Link key
Call Transferring	During a call: Options > Transfer , dial transfer number, press  
Call Diverting	Set up or cancel call diverting:  > Settings > Diverts You can set how long your phone waits before it diverts a call (5 , 10 , 15 , 20 , or 25 seconds).
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring





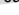 


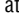 


Feature	Description
Attaching a phone number	Dial an area code or a prefix for a contacts number then: Options > Attach Number
Speed Dialling a Contacts Entry	You can assign the keys  through  to contact entries. Then, when you press and hold a key, your phone calls the entry. Note: <i>Your service provider might have assigned some keys, such as  for your voicemail number. You can only speed dial contact entries that are stored on your phone (not on your SIM card).</i> To assign a speed dial key, see page 84. To use a speed dial key, just press and hold the key in your home screen.



Feature	Description
Voice Dial a Number not Stored in Contacts (Digit Dial)	<p>Press and hold .</p> <p>When prompted, say “digit dial” (within two seconds). When prompted again, say the digits you want to dial (within two seconds per digit).</p> <p>Your phone recognizes the digits you want to dial. To voice dial a contacts entry, see page 81.</p>
adapt your voice dial	<p>You can improve voice dial operations by training the phone to recognize your voice:</p> <p> > Settings > Personalise > Voice Dial Setup > Adapt digits</p>


13.2.2 Messaging



Your phone reads message settings from the USIM card. If you put another USIM card in your phone, your phone sends and receives messages for the phone number on the new card.

Feature	Description
Send Text Message	<p>Send a text message:</p> <p> > Messaging > Create Message > Message</p>
Send Voice Message	<p>While you are creating a message select: </p> <p>Options > Insert > New Voice Note</p> <p>To record the voice message, press the Capture key, speak, then press the Stop key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.</p>

Feature	Description
Use a Postcard	Send a postcard:  > Messaging > Create Message  > Postcard
Read and Manage Messages	 > Messaging > Inbox Icons next to each message indicate if it is read  or unread  . Icons can also indicate if the message is locked  , urgent  , low priority  or has an attachment  . To set message options like Lock or Delete , highlight a message and press Options .
Send Quick Note Text Message	Send a quick note:  > Messaging > Templates > Text Templates Scroll to a note and press the Send key.

Feature	Description
Send Multimedia Message (MMS)	Send a multimedia message:  > Messaging > Create Message > Message > Options > Insert
Use MMS Template	Open an MMS template with preloaded media:  > Messaging > Templates > Multimedia Templates Tip: To rename a template you created, highlight it in this list and press Options > Rename .
Create MMS Template	Save an MMS message to use as a template: While editing a message, press Options > Save as Template . Tip: To download templates or other objects from a Web page, see page 92.

Feature	Description
Insert Pictures and Other Objects	While editing a message: Options > Insert <i>Note:</i> Some files might have a copyright lock that keeps you from forwarding them.
View Sent Messages	☛ > Messaging > Outbox
Read Message	Read a new text or multimedia message that you have received: Press ☛.
Reply to Message	While reading a message: Options > Reply Tip: To change the message type for your replies to MMS messages: ☛ > Messaging Options > Setup > Message Setup > MMS Setup > Composing MMS 

Feature	Description
Store Message Objects	Go to a multimedia message slide, or highlight an object in a message, then: Options > Store
Set Up Text Message Inbox	Set up or edit the text message inbox settings: ☛ > Messaging Options > Inbox Setup > Text Message Setup
Browser Messages	Read messages received by your micro-browser:  ☛ > Messaging > Browser Messages
Info Services	Read subscription-based information services messages:  ☛ > Messaging > Info Services

Feature	Description
Print Message Over Bluetooth™ Connection	<p>You can use a Bluetooth wireless connection to send a message from your phone to a printer.</p> <p>☛ > Messaging > Inbox, Email Inbox, Browser Msgs, or Info Services</p> <p>Highlight the message you want to print and press Options > Print.</p> <p>Note: <i>You cannot print Quick Notes or Postcards.</i></p> <p>For more about Bluetooth connections, see page 44.</p>




13.2.3 Instant Messaging


Feature	Description
Log In	<p>☛ > Messaging > Vodafone Messenger > Log In</p>

Feature	Description
Add Contacts	<p>After you log in:</p> <p>Press Options > Add Contact and enter the contact's IM ID and nickname.</p>
Find Others Online	<p>After you log in:</p> <p>Select Online Contacts to see a list of others online.</p>
Start Conversation	<p>Highlight a name in Online Contacts and press the Send IM key.</p>
Open Active Conversation	<p>Highlight a name in Conversations and press the View key.</p>
End Conversation	<p>From the conversation view:</p> <p>Options > End Conversation</p>
Log Out	<p>Select Log Out from the IM Online Menu</p>
Create or Change IM Accounts	<p>☛ > Messenger, then press Options > IM Account</p> <p>Select an IM account or select New to create a new IM account.</p>




13.2.4 Email



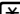 
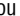 

Your phone is compatible with some push-email servers. If your service provider has a compatible server then your email will automatically be delivered to your phone. Contact your service provider for more information.

Feature	Description
Send Email Message	Send an email message:  > Messaging Create Message > New Email
Read Email Message	Read a new email message that you have received: Press  .
Read Old Email	 > Messaging > Email Select account and choose folder. Press Options to perform various operations on a message.

Feature	Description
Set Up Email Account	Set up or edit the email inbox settings:  > Messaging > Email Select (Create Account) to add new account or select account and press Options > Account Settings to modify account.

13.2.5 Contacts

Feature	Description
Create Entry	<p>Create a new contact entry:</p> <p> > Contacts > Create Contact</p> <p>or</p> <p>Options > Create New > Phone Contact, SIM Contact, Distribution List or Email List</p> <p>Shortcut: Enter a phone number in the home screen, then press the Store key to create an entry for that number.</p>
View All Entry Details	<p>View all the phone numbers, email addresses or URLs associated with a contact.</p> <p> > Contacts, highlight the contact entry, press  left and right to view the other details.</p>

Feature	Description
Dial Entry	<p>Call a number stored in the contacts:</p> <p> > Contacts, highlight the contact entry, press  to call</p> <p>Shortcut: In the contacts, enter the first letters of an entry name to jump to the entry. You can also press  and  to see the entries that you use frequently or entries in other categories.</p>
Voice Dial Entry (Name Dial)	<p>To Voice dial a number stored in the contacts:</p> <p>From idle, press and hold  then when prompted, say “name dial” (within two seconds). When prompted again, say the entry’s name (within two seconds).</p> <p>Your phone matches your voice to a contacts entry name. To voice dial a number not stored in the contacts, see page 76.</p>

Feature	Description
Edit Entry	Edit an entry stored in the contacts: <ul style="list-style-type: none"> • > Contacts, highlight the contact entry, then press • > Options > Edit Contact
Set Ringer ID for Entry	Assign a distinctive ringer alert to a contact entry: <ul style="list-style-type: none"> • > Contacts > <i>entry</i> Options > Edit Contact > Ringer ID > <i>ringer name</i> <p>Note: <i>The Ringer ID option is not available for entries stored on the SIM card.</i></p> <p>Activate ringer IDs: <ul style="list-style-type: none"> • > Settings > Ring Styles > <i>style Details</i> > Ringer IDs </p>

Feature	Description
Set Picture ID for Entry	Assign a photo or picture to show when you receive a call from an entry: <ul style="list-style-type: none"> • > Contacts > <i>entry</i> Options > Edit Contact > Picture > <i>picture name</i> <p>Note: <i>The Picture option is not available for entries stored on the SIM card.</i></p>
Set Picture ID View	Show entries as a text list, or with picture caller ID photos: <ul style="list-style-type: none"> • > Contacts Options > Setup > View by > <i>view name</i>
Set Category for Entry	Set the category for a contact entry: <ul style="list-style-type: none"> • > Contacts > <i>entry</i> Options > Edit Contact > Category > <i>category name</i> <p>Note: <i>The Category option is not available for entries stored on the SIM card.</i></p>

Feature	Description
Set Category View	<p>Set a contacts category view:</p> <p>☛ > Contacts Options > Filter By > Category > <i>category view</i></p> <p>You can show entries in a predefined category, or entries in a category you create.</p> <p>Shortcut: To see other categories in Contacts, press [X] or [#].</p>
Create Group Mailing List	<p>You can put several Contacts entries in a group mailing list, then send a message to the list. To create a list:</p> <p>☛ > Contacts Options > Create New > Distribution List</p> <p>You can select the list name as an address for multimedia messages.</p> <p>Note: <i>A Distribution List cannot include entries stored on the SIM card.</i></p>

Feature	Description
Sort Contacts List	<p>Set the order in which contact entries are listed:</p> <p>☛ > Contacts Options > Setup > Sort by > <i>sort order</i></p> <p>You can sort the contacts list by First Name or Last Name.</p>
Copy Contacts Entry	<p>Copy an entry from the phone to the SIM card, or from the SIM card to the phone.</p> <p>☛ > Contacts, highlight the entry, press Options > Copy to SIM Card or Copy to Phone.</p>
Copy Multiple Entries	<p>Copy multiple contact entries between the phone and the SIM card.</p> <p>☛ > Contacts, highlight one entry, press Options > Select Multiple to then select Copy Phone to SIM or Copy SIM to Phone.</p>


13.2.6

Personalising Features

Feature	Description
Send Contact Entry to Another Device	Send a contact entry to another phone, computer, or device: • > Contacts , highlight the entry, press Options > Send Contact
Print Contacts Entry Over Bluetooth™ Connection	You can use a Bluetooth™ wireless connection to send a contact entry from your phone to a printer • > Contacts Highlight the entry that you want to print, and press Options > Print . Note: You can't print a Mailing List. For more about Bluetooth connections, see page 44.
Speed Dial	Set speed dial to call entries stored in your phone memory contacts or the SIM card contacts: • > Contacts > Entry > Options >> Add to Speed Dial

13.2.6 Personalising Features

Feature	Description
Language	Set menu language: • > Settings > Initial Setup > Language
Scroll	Set the highlight bar to stop or wraparound in lists: • > Settings > Initial Setup > Scroll
Ring Style	Change the ring alert for an event: • > Settings > Ring Styles > <i>style Detail</i> > <i>event name</i>
Activate Ringer IDs	Activate distinctive ring alerts assigned to contact entries and categories: • > Settings > Ring Styles > <i>style Detail</i> > Ringer IDs
Reminders	Set reminder alerts for messages that you receive: • > Settings > Ring Styles > <i>style Detail</i> > Reminders

Feature	Description
Headlines	<p>If your home screen shows rolling headlines from your service provider you can turn them off: </p> <p>• > Settings > Personalise > Home Screen > Ticker > Turn Off Headlines</p> <p>In the Ticker menu, you can also add or change headline channels.</p>
Menu View	<p>Display the main menu as graphic icons or as a text-based list:</p> <p>• > Settings > Personalise > Main Menu > View</p>
Menu Order	<p>Reorder your phone's main menu:</p> <p>• > Settings > Personalise > Main Menu > Reorder</p>
Show/hide menu icons	<p>Show or hide menu feature icons on the home screen:</p> <p>• > Settings > Personalise > Home Screen > Home Keys > Icons</p>

Feature	Description
Change Home Screen Nav Key Shortcuts	<p>Change the features for the soft keys, navigation key and smart key in the home screen:</p> <p>• > Settings > Personalise > Home Screen > Home Keys</p>
Master Reset	<p>Reset all options except unlock code, security code, and lifetime timer:</p> <p>• > Settings > Initial Setup > Master Reset</p>

13.2.6

Personalising Features

Feature	Description
Master Clear	<p>Erase all downloaded files and clear all settings and entries you made except SIM card information, unlock code, security code, and lifetime timer:</p> <p>📍 > Settings > Initial Setup > Master Clear</p> <p>Caution: Master clear erases all information you have entered (including contacts and calendar entries) and content you have downloaded (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.</p>

Feature	Description
Software Update	<p>Your service provider can update your phone software by sending software updates directly to your phone over the air. When you receive a software update, you can choose to download it and install it later. To install a software update you downloaded:</p> <p>📍 > Settings > Phone Status > Software Update > Install Now</p>

13.2.7 Dialling Features

Feature	Description
DTMF Tones	Activate DTMF tones: •☎ > Settings > Initial Setup > DTMF To send DTMF tones during a call, just press the number keys. To send stored numbers as DTMF tones during a call: Highlight a number in the Contacts or Call Log lists, then press •☎ > Send Tones.

13.2.8 Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing •☎ . This time includes busy signals and ringing.




The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.



Feature	Description
Call Timer	View call timers: •☎ > Calls > Call Timers
In-Call Timer	Display time or cost information during a call: •☎ > Settings > In-Call Setup > In-Call Timer
Call Cost	View call cost trackers: •☎ > Calls > Call Cost

13.2.9 Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


Feature	Description
Speakerphone	Activate the speakerphone during a call: Press the Speaker key (if available) or Options > Speakerphone On



Feature	Description
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset.  <ul style="list-style-type: none"> • > Settings > Car Settings or Headset > Auto Answer <p>Note: Your phone will not automatically answer calls if the ring style is set to Silent.</p>
Voice Dial (headset)	Enable voice dial with headset send/end key:  <ul style="list-style-type: none"> • > Settings > Headset > Voice Dial
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  <ul style="list-style-type: none"> • > Settings > Car Settings > Auto Handsfree

Feature	Description
Power-off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off:  <ul style="list-style-type: none"> • > Settings > Car Settings > Power-off Delay
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off:  <ul style="list-style-type: none"> • > Settings > Car Settings > Charger Time

13.2.10 Data Calls


To connect a device to your phone with a USB cable see page 44.

Feature	Description
Send Data	Connect your phone to a device, then place a call through the device application. 

Feature	Description
Receive Data	Connect your phone to a device, then answer a call through the device application. 
Using Sync	You can call an Internet server and synchronise your contacts and calendar entries with the server.  To set up an Internet sync partner, press: <ul style="list-style-type: none"> •> Connectivity > Sync press Options > Setup

13.2.11 Network Features

Feature	Description
Network Settings	View network information and adjust network settings: <ul style="list-style-type: none"> •> Settings > Network

Feature	Description
Software Update	Your service provider can send updated phone software over the air to your phone.  When your phone receives a software update, you can choose to install it now or later. To install the software update now: <ul style="list-style-type: none"> •> Settings > Phone Status > Software Update > Install Now



13.2.12 Personal Organiser Features

Feature	Description
Create Calendar Event	Create a new calendar event: <ul style="list-style-type: none"> •> Organiser & Tools > Calendar, highlight the day, press •, press Options > (New)

13.2.12

Personal Organiser Features

Feature	Description
View Calendar Event	View or edit event details: • > Organiser & Tools > Calendar , highlight the day, press •, scroll to the event, and press Options > View
Send Calendar Event	Send an event in a Multimedia Message: While viewing an event, press Options > Send > Multimedia Message
Copy Calendar Event to Another Device	Copy a calendar event to another phone, computer, or device: • > Organiser & Tools > Calendar , highlight the day, press •, highlight the event, press Options > Send > Bluetooth

Feature	Description
Print Calendar Month, Week or Day Over Bluetooth™ Connection	You can use a Bluetooth™ wireless connection to send a calendar month, week or day from your phone to a printer.  • > Organiser & Tools > Calendar Go to the month, week or day view and press Options > Print . For more about Bluetooth connections see page 44.
Set Alarm	Set an alarm: • > Alarms
Turn Off Alarm	Turn off alarm: Press the Disable key or  . Set 8-minute delay: Press the Snooze key.
Calculator	Calculate numbers: • > Organiser & Tools > Calculator

Feature	Description
Currency Converter	Convert currency: ● > Organiser & Tools > Calculator Options > Exchange Rate Enter exchange rate, press the Ok key, enter amount, press Options > Convert Currency .

13.2.13 Security

Feature	Description
SIM PIN	Lock or unlock the SIM card: ● > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications: ● > Settings > Security > Lock Application

13.2.14 News and Entertainment

Note: The files that you download or receive as attachments might have a copyright lock that keeps you from forwarding them.

You can download for instance pictures, videos, ringtones and games from Vodafone live!

For basic information on the camera see page 29.

Feature	Description
Launch Vodafone live!	Start a Vodafone live! session: ○ or ● > Vodafone live! > Vodafone live! Note: Your phone reads your micro-browser settings from the current USIM card. When you remove the USIM card, your phone clears the browser cache. To edit your settings, see page 92.

Feature	Description
Edit Micro-Browser Settings	You can edit the protocol, host, port and other information for your micro-browser connection: ● > Vodafone live! > Browser Settings
Web Sessions	Select or create a Web session: ● > Vodafone live! > Internet Profiles
Download Objects from Web Page	Download a picture, sound, or other file from a Web page: Press ● > Vodafone live!, go to the page that links to the file, highlight the link, and select it.
Download Game or Application (Browser)	Download a Java™ game or application with the browser: Press ● > Vodafone live!, go to the page that links to the file, highlight the link, and select it.

Feature	Description
Launch Game or Application	Launch a Java™ game or application: ● > Entertainment > Games highlight the application, press the Select key <i>Note: To install and run games stored on your memory card, press ● > Entertainment > Games > [Install New]</i>
Change Game or Application Settings	Change the volume, priority, or other settings for Java™ games or applications: ● > Settings > Java Settings

Feature	Description
Flight Mode	<p>You can switch your phone to flight mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an aeroplane, without interfering with aeroplane communications.</p> <p>•> Settings > Flight Mode > On</p> <p>You can make the flight mode option appear whenever you turn on your phone:</p> <p>•> Settings > Flight Mode > Prompt At Startup > On</p>
Manage Pictures	<p>Manage photos, pictures, wallpaper backgrounds and animations:</p> <p>•> My Files > Pictures</p>
Manage Ringtones and Music	<p>Manage ringtones and music that you have downloaded:</p> <p>•> My Files > Ring Tones/My Music</p>

Feature	Description
Manage Video Clips	<p>Manage video clips:</p> <p>•> My Files > Videos</p>
Photo and Video Camera Settings	<p>Adjust settings for the integrated camera:</p> <p>•> Camera then press Options > Camera Setup</p> <p>or</p> <p>•> Video, then press Options > Video Setup</p> <p>Note: The photo and video cameras use the same settings.</p>

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was ___W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**. In this case, the highest tested SAR value is ___W/kg*.

As SAR is measured utilising the devices highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organisation has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organisation (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

* The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

** Please see the Safety and General Information section about body worn operation.

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.32 W/kg, and when worn on the body, as described in this user guide, is 0.40 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 0.24 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

SAR Data

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

A

- accessories 14, 15, 43, 45, 46, 47, 88, 89, 90
- active line indicator 56
- active line, changing 66
- add contact, IM 79
- alarms 90
- alert
 - lights 63
 - setting 19, 62, 84
 - turning off 19, 66
- animation
 - downloading 51, 92
 - managing 31, 93
 - screen saver 32, 64
 - wallpaper 32, 63
- answering a call 20, 65
- application, locking and unlocking 91
- audio player 40
- automatic redial 67

B

- backlight 64, 65

- barring calls 75
- battery
 - charging 18
 - extending battery life 16, 65
 - installing 17
 - level indicator 56
- battery charger 18
- battery life, extending 64
- Bluetooth™
 - connection 44
 - pairing 45
 - setting options 47
 - turning on and off 44
- brightness, setting 65
- browser 91
 - browser setup 92
 - Java applications 92
 - Web sessions 92

C

- calculator 90
- calendar 89, 90
- call

- alert, turning off 19, 66
- answer options 65
- answering 20
- barring 75
- barring password, changing 59
- call waiting 69
- costs 87
- dialled numbers list 66
- dialling 19
- diverting 75
- emergency number 70
- ending 19
- handsfree speaker 59
- holding 69
- international access code 70
- making 19
- muting 69
- received calls list 66
- receiving 20
- ring style 19, 62, 84
- speakerphone 87
- timers 87
- transferring 75
- unanswered call 68

- Call Failed, Number Busy message 67
- call waiting 69
- caller ID 32, 70
- calling line identification. *See* caller ID
- calls 66
- camera
 - settings 93
 - taking a photo 29
- car kit
 - auto handsfree 88
 - charger time 88
 - power-off delay 88
- category
 - contact entry 82
 - view 83
- centre select button 57
- change account, IM 79
- character chart 24
- clock, setting 62
- codes
 - changing 59
 - default 59, 61
 - forgetting 61
- computer
 - connecting to phone 43
 - conference call 75
 - contacts
 - attaching 2 numbers 75
 - category for entry 82
 - category view 83
 - copying entries 83
 - copying multiple entries 83
 - creating mailing lists 83
 - dialling a number 81
 - editing an entry 82
 - picture ID 32, 70, 82
 - picture ID view 82
 - printing entry 84
 - ringer ID 82, 84
 - sending entry to another device 84
 - sorting entries 83
 - speed dial 71
 - speed dial number 75
 - storing an entry 81
 - voice dialling 81
 - conversations, IM 79
 - copyrighted files 40
 - create new account, IM 79
- currency converter 91
- customising the menu 85

D

- data call 89
 - connecting to external device 43
- date, setting 62
- dialled numbers list 66
- dialling a number 19
- display
 - backlight 65
 - brightness 65
 - description 54
 - home screen 54
 - personalising 85
 - timeout 65
- display appearance
 - phone skin 65
 - setting 64
- distinctive ringer alert 84
- diverting calls 75
- downloading
 - animation 51

- music 51
- photo 51
- picture 31, 51
- ringtone 51
- sound 51
- video clip 35, 51
- wallpaper 51

DTMF tones

- activating 87
- sending 87

E

- earpiece volume 19
- email 80
 - inbox setup 80
- emergency number 70
- end conversation, IM 79
- end key 1
- ending a call 19
- ending a video call 36
- Enter Unlock Code** message 60
- event lights 63
- external device

- connecting to phone 43
- external display 30, 59

F

- 5-way navigation key 1, 57
- flight mode 93
- flip 65
- focus, photos 29
- full screen picture 31, 39

G

- games 92
- GPRS indicator 49, 55

H

- handsfree speaker 59
- holding a call 69
- home keys, personalising 85
- home screen, defined 54

I

- IM 79
 - add contact 79

- change account 79
- create account 79
- end conversation 79
- find others online 79
- logout 79
- message indicator 56
- open active conversation 79
- start conversation 79

in-call timer 87

incoming call

- answering 20
- diverting 75

Incoming Call message 70

indicators

- active line 56
- battery level 56
- GPRS 49, 55
- IM message 56
- message 56
- messaging presence 56
- ring style 56
- roam 55
- signal strength 54
- text case 22

- text entry mode 22
- transmission 55
- voicemail message 56, 71
- info services 78
- instant messaging 79
 - add contact 79
 - change account 79
 - create account 79
 - end conversation 79
 - find others online 79
 - logout 79
 - open active conversation 79
 - start conversation 79
- international access code 70
- iTAP software 25

J

- Java applications 92

K

- key
 - centre select button 57
 - end 1

- 5-way navigation 1, 57
- left soft key 1, 54, 85
 - power 1
 - right soft key 1, 54, 85
 - send 1
 - volume control 1, 19
- keypad 65

L

- language 84
- left soft key
 - functions 1, 54
 - personalising 85
- licenses 40
- light 63
- line, changing 66
- Live Cast
 - channels 53
 - number of messages 53
 - setting up 52
 - ticker speed 52
 - turning on and off 52
- lock

- application 91
 - phone 60
 - SIM card 91
- logout, IM 79
- Low Battery** message 56

M

- making a call 19
- making a video call 36
- master clear 86
- master reset 85
- media files
 - playing 39, 42, 43
 - sending 39
 - viewing 39, 42, 43
- memory card
 - connecting to computer 47
 - free space 15
 - installing 14
- menu
 - entering text 21
 - icons, changing in home screen 85
 - icons, converting to text 85

- language 84
- personalising 85
- rearranging features 85
- using 57
- view, changing 85
- message
 - browser 78
 - creating MMS template 77
 - inbox 77
 - info services 78
 - inserting objects 78
 - MMS template 77
 - multimedia message 77
 - outbox 78
 - printing 79
 - quick note 77
 - reading 78
 - replying 78
 - storing objects 78
 - text 76, 78
 - text inbox 78
 - voice 76
- message indicator 56
- messaging presence indicator 56
- Missed Calls** message 68
- MMS template 77
 - creating 77
- multimedia message
 - sending 77
- music
 - managing 93
- muting a call 69
- my telephone number 20, 62
- N**
 - network settings 89
 - notepad 68
 - number
 - storing your number 62
 - viewing your number 20
 - numbers, entering 26
- O**
 - online contacts, IM 79
 - open to answer 65
 - optional accessory 14, 15, 43, 45, 46, 47, 88, 89, 90
 - optional accessory, defined 14
 - optional feature 14, 55, 56, 62, 66, 75, 76, 77, 78, 85
 - optional feature, defined 14
- P**
 - passwords. *See* codes
 - phone
 - active line indicator 56
 - active line, changing 66
 - alert, turning off 19, 66
 - answer options 65
 - clear stored information 86
 - codes 59
 - connecting to external device 43
 - date, setting 62
 - locking 60
 - network settings 89
 - reset all options 85
 - ring style 19, 62, 84
 - security code 59
 - time, setting 62
 - turning on/off 18

- unlock code 59
 - unlocking 19, 60
 - phone number
 - active line indicator 56
 - active line, changing 66
 - attaching 2 numbers 75
 - international access code 70
 - redialling 67
 - storing in contacts 81
 - storing your number 62
 - viewing your number 20
 - phone skin 65
 - photo
 - downloading 51, 92
 - managing 31
 - picture ID 32, 70
 - screen saver 32
 - sending 29
 - taking 29
 - wallpaper 32
 - picture
 - downloading 31, 51, 92
 - full screen view 31, 39
 - managing 31, 93
 - screen saver 32, 64
 - wallpaper 32, 63
 - picture ID 32, 70
 - setting 82
 - view 82
 - PIN code
 - changing 59
 - entering 91
 - PIN2 code, changing 59
 - playing media files 39, 42, 43
 - postcard 77
 - sending 32
 - power key 1
 - predictive text entry 25
 - printing
 - calendar entries 90
 - contacts entry 84
 - message 79
 - picture 29
- R**
- Radio DJ 43
 - received calls list 66
 - receiving news headlines 52
 - redial
 - automatic redial 67
 - busy number 67
 - right soft key
 - functions 1, 54
 - personalising 85
 - ring lights 63
 - ring style indicators 56
 - ring style, setting 19, 62, 84
 - ringer ID
 - setting 82
 - turning on/off 84
 - ringer volume, setting 19
 - ringtone
 - downloading 51, 92
 - managing 93
 - roam indicator 55
- S**
- screen saver 32, 64
 - scrolling 84
 - security code

- changing 59
 - default 59
 - send key 1
 - sending media files 39
 - signal strength indicator 54
 - silent alert, setting 19, 62, 84
 - SIM Blocked** message 18, 91
 - SIM card
 - defined 14
 - installing 14
 - locking 91
 - PIN code entry 18
 - PIN code, changing 59
 - PIN2 code, changing 59
 - precautions 14
 - SIM Blocked** message 18, 91
 - SIM PIN code
 - changing 59
 - entering 91
 - SIM PIN2 code, changing 59
 - smart key 59
 - soft keys
 - functions 54
 - illustration 1
 - personalising 85
 - software update 89
 - sound
 - downloading 51, 92
 - managing 93
 - speaker volume 19
 - speakerphone
 - activating 87
 - automatic answer 88
 - speed dial 75
 - setting preference 84
 - using 71
 - Spkrphone On** message 59
 - standby time, increasing 65
 - symbols, entering 27
 - synchronising with Internet server 89
- ## T
- tap text entry 22
 - telephone number
 - storing your number 62
 - viewing your number 20
 - text
 - capitalisation, changing 22
 - character chart 24
 - entering 21
 - entry mode, setup 21
 - iTAP software predictive text entry 25
 - numeric mode 26
 - symbol mode 27
 - tap 22
 - text case indicator 22
 - text entry mode
 - setup 21
 - text entry mode indicator 22
 - ticker speed 52
 - time, setting 62
 - timer, in-call 87
 - timers 87
 - transferring a call 75
 - transmission indicator 55
- ## U
- Universal IC Card 14
 - unlock

- application 91
- phone 60
- unlock code
 - bypassing 61
 - changing 59
 - default 59, 61
 - entering 19
- USB cable 44
- USIM 14

V

- vibrate alert
 - setting 19, 62, 84
 - turning off 19, 66
- video call
 - ending 36
 - making 36
 - swapping views 37
- video camera, settings 93
- video clip
 - downloading 35, 51
 - managing 35, 93
 - recording 34

- viewing 35
- viewing media files 39, 42, 43
- Vodafone live!
 - animation 51
 - background sessions 51
 - picture 51
 - ringtone 51
 - using 49, 91
- voice dial 81, 88
 - adapt 76
 - digit dial 76
- voice message 76
- voicemail 71
- voicemail message indicator 56, 71
- volume
 - earpiece 19
 - games 92
 - ringer 19
 - speaker 19
- volume keys 1, 19

W

- wallpaper 32, 63

- managing 93
- Web pages 49, 91
- Web sessions 92