



MOTOMANUAL

S705
SoundPilot™ Bluetooth®
Stereo Controller for
Wired Headphones
DRAFT 2 - 8/1/06

motorola.com

S705 Bluetooth Stereo Controller for Headphones

Congratulations on purchasing your new SoundPilot!

The first Class 1 Bluetooth stereo controller on the market, the Motorola S705 SoundPilot offers music and communication in perfect harmony. Innovatively designed, the S705 empowers you to listen to and wirelessly control your favorite tunes without the worry of missing a call. All with the freedom of using your own favorite headphones.

With superior sound and power, the Motorola S705 SoundPilot is light in weight but heavy in style and functionality - so go ahead, take control, and never miss a beat or a call.

Package Contents

- S705 Bluetooth Stereo Controller for wired headphones
- Motorola S2xx (model # to be confirmed) headphones
- Detachable shirt clip
- Lanyard
- Wall charger
- User's Guide (this manual)
- Quick Start Guide

DRAFT

Motorola, Inc.

Consumer Advocacy Office

1307 East Algonquin Road

Schaumburg, IL 60196

www.hellomoto.com

www.hellomoto.com/Bluetoothsupport

1-877-MOTOBLU (Motorola Bluetooth® support)

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. SoundPilot is a trademark of Motorola, Inc. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. iPod is a registered trademark of Apple Computer, Inc. registered in the U.S. and other countries. naviPlay is a trademark of TEN Technology, Inc. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2006.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 6809504A42-0

Contents

 
S705 Bluetooth Stereo Controller for Headphones	1
Package Contents	2
Overview	9
Getting Started	13
Charging Your S705	13
Pairing Your Bluetooth Device(s) with Your S705	16
Attaching Shirt Clip to Your S705 ..	21
Attaching Lanyard to Your S705 ..	23
Connecting Your Headphones to Your S705	25
Operation	27
Turning Your S705 On and Off ..	27
Operating the S705	30
Listening to Music	34
Listening to FM Radio	41

Making and Receiving Calls	45
Locking/Unlocking Keys	52
Customize	55
Setting Language	55
Putting S705 in Bluetooth Discoverable Mode	56
European Union Directives Conformance Statement	58
Caring for the Environment by Recycling	59
Recycling Mobile Phones and Accessories	59
Safety and General Information . .	60
Smart Practices While Driving . . .	63
Industry Canada Notice to Users .	66
FCC Notice To Users	67
Motorola Limited Warranty for the United States and Canada	69
Export Law Assurances	78

Index	79
--------------------	----

Overview

The Motorola S705 Bluetooth Stereo Controller allows you to both listen to music and place and receive phone calls wirelessly using your favorite headphones .

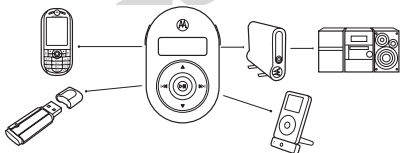

Along with making and receiving phone calls using your Bluetooth-enabled mobile phone, there are several typical scenarios for using your S705 Bluetooth Stereo Controller with your music devices.

Application	Description
Streaming music from your home stereo	Listen to music from your home stereo using Motorola DC800 Bluetooth Home Stereo Adapter.
Streaming music from your PC	Listen to music from your PC using Motorola PC850 Bluetooth Stereo PC Adapter.
Streaming music from your iPod®	Listen to music from your iPod using TEN Technologies naviPlay™ Bluetooth Stereo Adapter for iPod.
Streaming music from your phone	Listen to music from your phone that supports Bluetooth streaming capabilities.

The following Bluetooth profiles are utilized by the S705 and must be supported by your connected mobile phone or music source device.

Profile	Description
HFP (Handsfree Profile)	Telephony / Call management: operations related to placing/ receiving phone calls
A2DP (Advanced Audio Distribution Profile)	Stereo music streaming
AVRCP (Audio Video Remote Control Profile)	Remote music control (for example, ability to remotely Play / Pause or Stop music)

DRAFT

Getting Started

Charging Your S705

First-Time Use — Before you can use your S705, charge its self-contained battery for two hours.

Recharging — When the S705's battery meter indicates low charge (🔋), the S705 battery needs recharging.

Over time, batteries gradually wear down and require longer charging times. This is normal. The more you use your S705 with your Bluetooth devices, the less standby time your battery has.

 


The rechargeable batteries that power your S705 must be disposed of properly and may

need to be recycled. Contact your local recycling center for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode.

- 1 Plug the Motorola charger into the S705's charging port as shown.

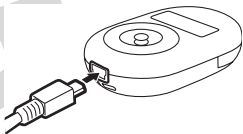

- 2 Plug the other end of the charger into an electrical outlet.
 - When powered on, the S705's battery meter indicates charging (🔋).
 - When powered off, the S705's joystick backlight light is on.

Once complete, the S705's battery meter indicates full charge (🔋).

Note: The S705 can be used while charging.

- 3** When charging completes (about 2 hours), remove charger from the electrical outlet, and detach charger from the S705.

Note: You can also use a Motorola Original Vehicle Power Adapter to charge the S705 battery while in your vehicle.

A fully charged S705 battery provides approximately:

- 6 hours of stereo music listening and/or phone call talk time.
- 75 hours of standby time .

Pairing Your Bluetooth Device(s) with Your S705


Note: The S705 is a Class 1-capable Bluetooth device. Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors.

You must pair (link) your S705 and your Bluetooth-enabled phone and/or music devices before you can make/receive calls or listen to music.

“Pairing” links two *Bluetooth* equipped devices, and allows your Bluetooth device to remember your S705’s unique

ID. After your S705 and Bluetooth device are paired, your S705 automatically connects to the device when you turn it on.

Perform the following steps to pair (link) your S705 with your Bluetooth devices:

- 1 From the off position, press and hold the  button until the Motorola logo is displayed. After a few moments, you see:



Note: If this screen is not displayed, see “Putting S705 in Bluetooth Discoverable Mode” on page 56 to place S705 in Bluetooth discoverable mode.

- 2 Using your Bluetooth phone or music device, perform a Bluetooth device discovery (refer to your phone or music device manual for detailed instructions on accessing Bluetooth and searching for discoverable devices).

When pairing with a Motorola phone, you can find the Bluetooth option under the Main Menu or Connections menu:

After accessing Bluetooth:

- a Select **Look for Devices**.

The phone lists Bluetooth devices it finds.

- b Select **Motorola S705**.

- c Select **OK** or **Yes** to pair your S705 with your phone.

- d Enter the passkey: **0000**

e Select **OK**.

Note: These steps are for most Motorola phones. For other phones, see your phone's user's guide for instructions on performing a Bluetooth device discovery.

- 3** Verify your S705 has successfully paired with your phone or music source device:
- The Phone Connected (☎) icon displays when successfully paired with your Bluetooth phone. A Bluetooth Handsfree Phone (HFP) connection is established with your phone.
 - The Streaming Music Connected icon (🎵) displays when successfully paired with your music source (phone or other device). A Bluetooth Streaming

Music (A2DP) connection is established with your music source device.

 
Note: Your S705 can store pairing information for up to eight different Bluetooth devices. Device IDs are stored in the “Paired Device List” in memory in the order entered. If you try to pair more than eight devices, the oldest paired device is removed from the list.

When any of the eight paired devices is turned on and close to the S705, it automatically pairs with the S705. To connect your S705 to another device in the paired device list, start the connection from that device. The last device to start a connection with the S705 becomes the “last connected” device.


Attaching Shirt Clip to Your S705

Your S705 comes with a detachable shirt clip. Perform the following steps to attach the shirt clip to your S705:


- 1** Remove rubber plug from back of S705 as shown.

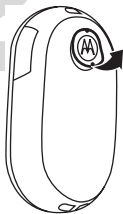

 - 2** Insert shirt clip onto the back of the S705 as shown.

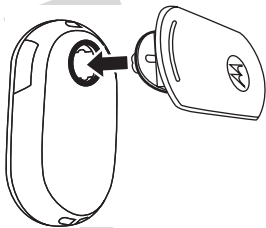

 
- 3** Turn shirt clip to lock into place on the S705 as shown.

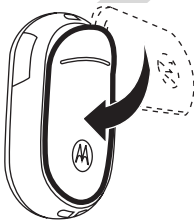

Attaching Lanyard to Your S705


Your S705 comes with a detachable lanyard. Perform the following steps to attach the lanyard to your S705:

 - 1 Detach lanyard cord from quick release mechanism as shown.

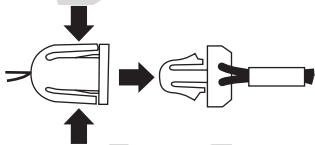


- 2 Attach quick release mechanism to S705 as shown.

 Note: Release mechanism can be attached to either end of S705.

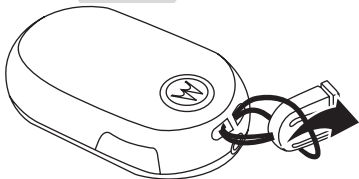


 - 3 Reattach lanyard cord to quick release mechanism as shown.



Connecting Your Headphones to Your S705

 
Your S705 comes with 3.5mm headphones. To utilize your S705, connect these headphones (or your own favorite headphones) to the headphone jack as shown.

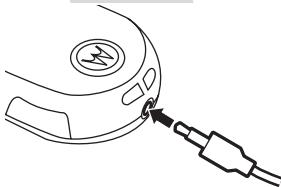

DRAFT

Operation

Turning Your S705 On and Off

To turn on or off your S705, press and hold  button for at least 5 seconds until the Motorola logo is displayed.

When turned on, the S705 automatically establishes handsfree phone and streaming music connections with the last paired Bluetooth devices (phone and/or music devices).

Note: If not paired with any Bluetooth device(s), your S705 automatically enters Bluetooth discoverable mode. See “Pairing Your Bluetooth Device(s) with Your S705” on page 16 for details

on pairing your Bluetooth device(s) with your S705.

Connecting to Your Bluetooth Devices

When connection to a streaming music source is established, the Music Idle screen is displayed.



The Streaming Music Connection (🎵) icon is displayed along with the Phone Connected (☎️) icon when a handsfree phone connection is also established.

When only a handsfree phone connection is established (no streaming

music connection), the Radio Idle screen is displayed.




The Phone Connected (⌘) icon is displayed.

Whenever a Bluetooth connection exists (streaming music and/or handsfree phone), the text **-Connected-** is displayed from either Idle screen.

No Bluetooth Connection

 
If no Bluetooth device connections are established, the S705 is placed in Bluetooth discoverable mode for 3 minutes.

During this period, you can access menus (and cancel discoverable mode)

by pressing the  button. Otherwise, when the discoverable mode times out, the S705 automatically turns off.

Operating the S705

A combination of display panel, buttons, and navigation joystick are used to operate your S705. Here's a quick anatomy lesson of the S705.

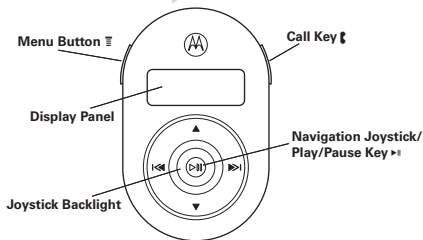






Status Indicators

Your S705 displays graphical icons to indicate status of battery, music streaming, and Bluetooth connections.



The following indicators are displayed for status:

Indicator	Indicates
	Battery charge level
	Battery charge low
	Battery charging
	Phone connected (Handsfree connection)
	Streaming music connected (A2DP connection)

Indicator Indicates (Continued)

PLAY  Streaming music playing

 
PAUSE  Streaming music paused

 FM radio playing

 Keys locked

Menus

Your S705 provides menus for performing certain operating and configuring tasks.

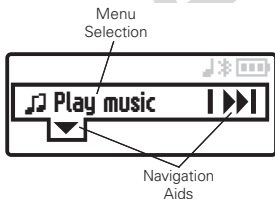

Menus are accessed by pressing the ☰ button. Use the following guidelines for navigating the menus:

- Scroll through menus by pressing ▲ and ▼ with joystick.
- Make a menu selection by pressing ▶▶ with joystick.
- Press ☰ button in menu to step backwards (or return to exit menus from top level).

Buttons and Navigation Joystick

Several push buttons and multi-position navigation joystick allow you to perform tasks with your S705. The actions performed by these controls depend on the screen displayed.

On most screens, a selection box indicates the most logical action to perform.





For example, from the screen above, pressing the **Answer** button answers the phone.

Listening to Music

Your S705 allows you to select from multiple Bluetooth streaming music sources to listen to music with your headphones.

 
Selecting Streaming Music Source

To select a Bluetooth streaming music source:

- 1 Press  button to access menus.
- 2 Press  with joystick until you see the music source to which you want to connect.



- 3 Press  with joystick



- 4 Press ►| with joystick to connect.
You see:



Playing Streaming Music

To play music from your selected Bluetooth streaming music source:

- Press ►|| button from Music Idle screen (shown on page 28), or
- Select **Play Music** from menus.

You hear music playing and see the Music Playing screen.



From the Music Playing screen, you can do the following:

To do this...	Do this
Pause/resume music	Press ► button. When music is paused, the Music Paused (PAUSE) icon is displayed.
Change music volume	Press ▲ and ▼ with joystick. When reaching minimum/maximum volume, you are hear a beep.
Fast-forward song	Press and hold ►► with joystick.

**To do
this...****Do this**

Skip to next
song

Press ►► with joystick.

Note: If playing last
song on list, music is
paused.

Rewind
song

Press and hold ◀◀ with
joystick.

Play
previous
song

Press ◀◀ twice with
joystick.

Lock keys

Press and hold ►||
button.


Make voice
dial call

Press ☎ button.

Music is paused. When
call is ended, music is
resumed.

**To do
this...****Do this**

Redial last
call

Press and hold  button.

 
Music is paused. When call is ended, music is resumed.

Deleting Streaming Music Source


You can remove a paired Bluetooth music source from your S705's memory.

- 1 Press  button to access menus.


- 2 Press ▼ with joystick until you see the music source to which you want to delete.




- 3 Press ►►| with joystick

 

 - 4 Press ▼ with joystick until you see **Delete/**



- 5 Press ►| with joystick to delete.
You see:

 

- 6 Press ►| with joystick to confirm delete.

Listening to FM Radio

Your S705 allows you to listen to FM radio with your headphones.

Playing FM Radio

To listen to FM radio:

- Press ►|| button from Radio Idle screen (shown on page 29), or
- Select **FM Radio** from menus.

You hear radio playing and see the Radio Playing screen. On this screen, both the radio station and Radio Data System (RDS) text are displayed..



From the Radio Playing screen, you can do the following:

To do this...

Do this

Mute/unmute radio

Press ►|| button.

When radio is mute, **-Mute-** is displayed.

**To do
this...****Do this**

Change
radio
volume

Press ▲ and ▼ with joystick.

Note: When reaching minimum/maximum volume, you are hear a beep.

Seek
station
forward

Press and hold ►► with joystick.

Skip to next
station

Press ►► with joystick.

Seek
station
backward


Press and hold ◄◄ with joystick.


Skip to
previous
station

Press ◄◄ with joystick.

**To do
this...****Do this**

Lock keys Press and hold ►||
button.

Make voice
dial call Press  button.
Radio is muted. When
call is ended, radio is
resumed.

Redial last
call Press and hold  button.
Radio is muted. When
call is ended, radio is
resumed.

Making and Receiving Calls

Your S705 allows you to make and receive phone calls from your Bluetooth phone.

Note: Some features are phone/network dependent.

Making a Voice Dial Call

Note: To make a voice dial call, your phone must support voice dial features.

 
- 1 Press **[Voice]** button. If music /radio is playing, it is paused/muted. You see:



- 2 Speak name of person to call. Name is repeated over headphones and phone number is dialed. You see:



Once connected, the On Call screen is displayed.



Making a Handset Dial Call

- 1 Dial the phone number using the phone handset. You will hear dialing over headphones. (If music /radio is playing, it is paused/muted).

- 2** Press Send button on the phone.
Ringing is heard over headphones.
You see:



Once connected, the On Call screen is displayed.



 
Making a Call Using Last Dialed Phone Number

Press and hold **⏻** button. If music /radio is playing, it is paused/muted. After a few moments, ringing is heard over

headphones and phone number is dialed. You see:



Once connected, the On Call screen is displayed.



Receiving a Call


When an incoming call is active, the following is displayed.




Answering a Call

To answer an incoming call, press **⏻** or **▶||** button. If music/radio is playing, it is paused./muted. If you are currently on a call, it is placed on hold.

 Once connected, the following On Call screen is displayed when one call is connected.



 When two calls are connected, the following On Call screen is displayed.








Rejecting a Call

To ignore an incoming call, press  button.

Performing In-Call Actions






While on a call, you can do the following:

To do this...	Do this
Mute / unmute a call	Press  button. When call is muted, -Mute- is displayed.
Change the call volume	Press  and  with joystick.
Answer a second incoming call	Press  and  buttons. First call is placed on hold.


To do this...


Do this

Reject a second incoming call

Press  button or press , , ,  with joystick

Switch between two active calls

If first call is active, press  with joystick to switch to second call.

If second call is active, press  with joystick to switch to first call.

Note: If only one call is active, you cannot put that call on hold using the S705.

**To do
this...**

Do this

End a call

Press  button.

If music/radio was playing before call, it will resume. If two calls were connected, the other call becomes active.

Locking/Unlocking Keys

You can lock/unlock your S705's keys to avoid inadvertent key presses.

To lock or unlock your S705 keys, press and hold ►|| button. When locked, the following is displayed.



When keys are locked and not on a call, you can answer/ignore a call or unlock the S705. While on a call, however, keys are not locked.

To unlock keys, press and hold ►|| button. You see the following displayed until the keys are unlocked.





 
DRAFT

Customize


This section provides instructions for customizing operations for your S705.

Setting Language

- 1 Press  key to access menus.
- 2 Press  with joystick until you see the following.




- 3 Press  with joystick

 

- 4 Press ▲/ ▼ with joystick to scroll to desired language.
- 5 Press ►►| with joystick to select language.


Putting S705 in Bluetooth Discoverable Mode

 - 1 Press ☰ key to access menus.
- 2 Press ▼ with joystick until you see the following.



- 3 Press ►►| with joystick.

 If S705 is currently connected to a Bluetooth device, you see:



Press ►► with joystick. The S705 is placed in Bluetooth discoverable mode:



The S705 remains in Bluetooth discoverable mode for 90 seconds.

 
Notes: For details on pairing and connecting your S705 with Bluetooth devices, see "Pairing Your Bluetooth Device(s) with Your S705" on page 16.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

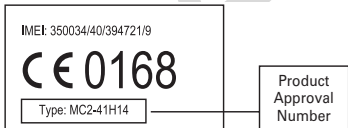

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Recycling Mobile Phones and Accessories

Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR DEVICE.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your mobile device to exceed RF energy exposure guidelines and may void your mobile device's warranty. For a list of approved Motorola accessories, visit our Web site at: www.motorola.com.

Electromagnetic Interference/Compatibility

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

Turn off your mobile device in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your mobile device when on board an aircraft. Any use of a mobile device must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Hearing Aids





 


Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Batteries and Chargers

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Smart Practices While Driving

Drive Safe, Call Smart SM

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to www.motorola.com/callsmart for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.



- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.¹

1. Wherever wireless phone service is available.

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

FCC Notice To Users

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Motorola Limited Warranty for the United States and Canada

What Does This Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal wear and tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & misuse. Defects or damage that result from:
(a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized service or modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software embodied in physical media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT embodied in physical media. Software that is not embodied in physical media (e.g. software that is downloaded from the Internet), is provided “as is” and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575

TTY	1-888-390-6456
------------	----------------

For **Accessories** and **Software**, please call the telephone number designated above for the product with which they are used.

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS

OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Product Registration

Online Product Registration:

[direct.motorola.com/hellomoto/
Motosupport/source/registration.asp](http://direct.motorola.com/hellomoto/Motosupport/source/registration.asp)

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Index

motorola.com