

INSTRUCTION MANUAL

A preliminary draft of the User's Manual follows this page.
The text on the following three pages will be added to the user manual.

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.17 W/kg, and when worn on the body, as described in this user guide, is 0.34 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 0.10 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

SAR Data

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

FCC Notice To Users

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MOTORAZR™ K1S 3G EMEA

User's Guide 08/11/06

Dummy Page - To be discarded before printing

 
Use this template with A6MotoLandscape StructApps.

This template provides formatting for a User Guide and an embedded Legal Guide.


All semantically-named elements within the Legal Guide content must have their Role attributes set to LG.

HELLOMOTO

Introducing your new **MOTORAZR™** K1S 3G wireless phone. Here's a quick anatomy lesson.

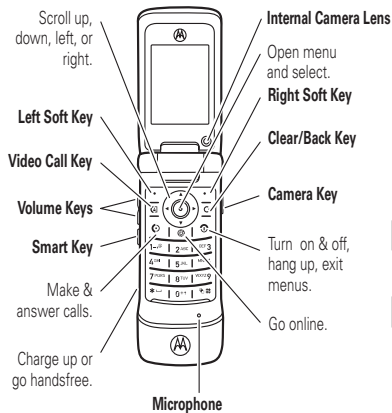

 
*Make sure your fingers do not cover microphone during calls.

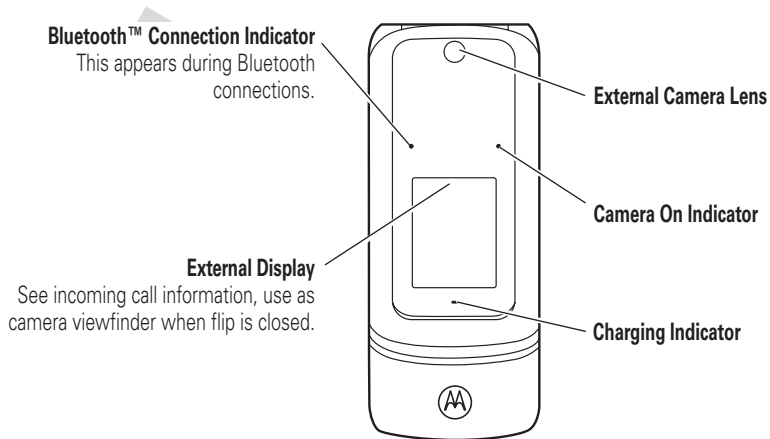

To change your automatic key lock, see page 54.

Home Screen





2 Press the Center Key  key to open the **Main Menu**.

1 Press and hold the **Power Key**  for a few seconds or until the display lights up to turn on your phone.

Main Menu



3 Press the Navigation Key **up, down, left, or right** () to highlight a menu feature.

4 Press the Center Key () to select it.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2006.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68XXXXX147-0

contents

menu map	7	main attractions	24	external display	53
Safety Information	9	Bluetooth™ wireless	24	handsfree speaker	54
Use and Care	14	audio player	30	codes & passwords	54
EU Conformance	15	voice commands	32	lock & unlock phone	54
Recycling Information	16	photos	34	lock & unlock external keys	55
essentials	17	videos	36	customise	56
about this guide	17	video calls	38	ring style	56
SIM card	17	text messages	39	time & date	57
battery	18	memory card	41	wallpaper	57
turn it on & off	20	cable connections	43	screen saver	58
make a call	21	phone updates	44	themes	58
answer a call	21	basics	45	display appearance	59
store a phone number	21	display	45	answer options	59
call a stored phone number	22	text entry	48	calls	61
your phone number	22	volume	52	turn off a call alert	61
		navigation key	53	recent calls	61
		smart key	53		

redial	62
return a call	63
caller ID	63
emergency calls	64
voicemail	64
other features	66
advanced calling	66
phonebook	71
messages	75
personalising	78
call times & costs	80
handsfree	81
data calls	82
network	84
personal organiser	84
security	87
fun & games	87
service and repairs	91
SAR Data	92
Warranty	93

WHO Information	97
index	98

menu map

main menu



Video Camera



Tools

- My Services *
- Calculator
- Calendar
- Alarm Clock
- Dialling Services
 - Fixed Dial *
 - Service Dial *
 - Quick Dial
- World Clock



Camera



Multimedia

- Media Finder
 - Music
 - Pictures
 - Videos
 - Voice Notes
 - Ring Tones
 - Wallpapers
- Themes
- Camera
- Video Camera
- Voice Record



Web Access

- Browser
- Bookmarks
- History
- Go To Page
- Stored Pages
- Browser Setup
- Web Sessions *



Games & Apps

- HELPMEMOTO *



Messages

- Create Message
- Voicemail
- Message Inbox
- Email
- Browser Messages
- Info Services *
- Outbox
- Drafts
- Templates



Recent Calls

- (press the  or  to scroll through the call lists)



Phonebook



Settings

- (see next page)



Connection



- Bluetooth™ Link
- USB Settings
- MOTOSYNC™ *



Voice Message

* optional features

This is the standard main menu layout. Your phone's menu may be a little different.

Tip: Press  to exit the current menu, or  to exit all menus.

Tip: For feature help, select **HELMEMOTO** under  **Games & Apps**.

settings menu



Personalise

- Home Screen
- Main Menu
- Voice dial setup
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



Ring Styles

- Style
- style Detail



Connection

- Bluetooth™ Link
- USB Settings
- MOTOSYNC™ *



Call Divert *

- Voice Calls
- Video Calls
- Cancel All
- Divert Status
- Push to Call Fwd No.



In-Call Setup

- Date and Time
- In-Call Timer
- Call Cost Setup *
- My Caller ID
- Answer Options
- Call Waiting
- MSG Alert



Initial Setup

- Time and Date
- Speed Dial
- Auto Redial
- Display Timeout
- Backlight
- Charging Lights
- Scroll
- Text Marquee
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- User Accounts *
- Active Line *
- Battery Meter
- Download Location
- Storage Devices
- Voice Dial Languages
- Other Information



Headset

- Auto Answer
- Ringer Options
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List *
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- External Key Lock
- Lock Application
- Fixed Dial *
- Restrict Calls *
- Call Barring *
- SIM PIN
- SIM PIN 2 *
- Hide Private Entries *
- New Passwords
- Certificate Mgmt *



Java™ Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority *
- App Backlight
- Set Standby App *
- DNS IP *



Aeroplane Mode

- Aeroplane Mode
- Prompt at Startup

* optional features

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorised antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an aeroplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks

on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorised Service centre. Do not attempt to dry it with an external heat source, such as a microwave oven.





 


Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

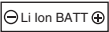

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the

lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

 
Don't drop your phone.

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

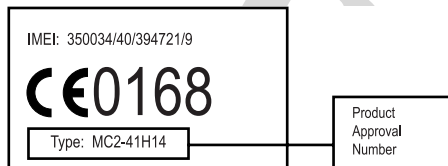

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Telephone and Accessories

Please do not dispose of mobile telephones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems have been set up to handle waste electrical and electronic items. Please contact your regional authorities for more details. If no suitable scheme exists, you may return unwanted mobile telephones and electrical accessories to any Motorola Approved Service Centre in your region.


 




essentials

about this guide

This guide shows how to open a menu feature as follows:

Find it:  >  **Messages** > **Create Message**

This means that, from the home screen:

- 1 Press the *centre key*  to open the menu.
- 2 Press the *navigation key*  to scroll to  **Messages**, and press the *centre key*  to select it.
- 3 Press the navigation key  to scroll to **Create Message**, and press the centre key  to select it.

symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

SIM card

 
 
Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone

number and phonebook entries. It can also contain your voicemail, text message, and Internet access settings. If you put your SIM card in another phone, that phone uses your phone number.

To insert and use a **memory card**, see page 41.

Turn off your phone and remove your battery before you install or remove a SIM card.

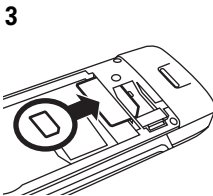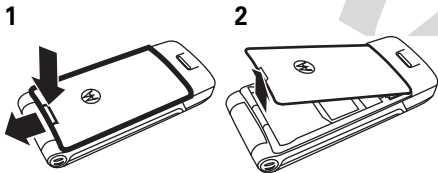

battery

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling centre for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

 
Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

battery installation


1




2

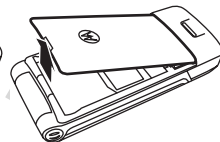

3

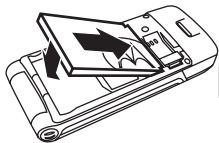 


4

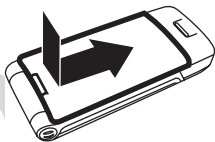 

battery charging

 New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. Your display shows **Charge Complete** when finished. Your phone's battery charging

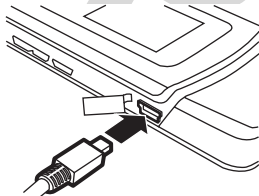

indicator (see page 2) lights up while the battery is charging.


Tip: Your battery will perform best after you fully charge and discharge it a few times.

Note: The battery charger shipped with this device is designed for Motorola 3G mobile phones. Other chargers might take longer to charge your battery, or cause your calls to fail during charging.

turn it on & off

Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.


To turn on your phone,


press and hold  for a few seconds or until the keypad or display lights up. If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.




To turn off your phone, press and hold  for a few seconds.

make a call

 
Enter a phone number and press  to make a call.


To “hang up,” close the flip or press .

To make video calls, see page 38.

Tip: Press and hold  to use voice commands, see page 32.

answer a call


When your phone rings and/or vibrates, just open the flip or press  to answer.

To “hang up,” close the flip or press .


store a phone number

You can store a phone number in your



Phonebook:

- 1 Enter a phone number in the home screen.
- 2 Press the **Store** key.
Select **Create Contact**, if necessary.
- 3 Enter a name and other details for the phone number. To select a highlighted item, press the *centre key* .
- 4 Press the **Done** key to store the number.

To edit or delete a **Phonebook** entry, see page 71.


To store an email address from the home screen, press  >  **Phonebook** then press **Options** > **Create New** > **Phone Contact**. Enter the new contact's name and **Email** information.

call a stored phone number





Find it:  >  **Phonebook**

1 Scroll to the phonebook entry.



Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.

2 Press  to call the entry.



Note: You can show contacts stored in your phone's memory or on your SIM card. To choose which contacts you see, press

 >  **Phonebook**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**. Contacts on the SIM card only have a **Name** and **Number**. To choose where you store contacts, go back to the home screen and press  >  **Phonebook**, then press **Options** > **Setup** > **Store Contacts to** > **Phone** or **SIM Card**.

your phone number

From the home screen, press *the clear key*  then  to see your number.

Tip: Want to see your phone number while you're on a call? Press **Options** > **My Tel. Number**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  , select an entry, press the **View** key, press the **Options** key,



and select **Edit**. If you don't know your phone number, contact your service provider.

DRAFT

main attractions

You can do much more with your phone than make and receive calls!

Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or

restricted in certain areas. Always obey the laws and regulations on the use of these products.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.


use a headset or handsfree car kit


Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device).

Find it:  >  Connection > Bluetooth Link > [Add Audio Device]



Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press the *centre key* .
- 2 Press the **Yes** or **OK** key to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press the **OK** key.

When your phone is connected, the Bluetooth indicator  shows in the home screen, and the external Bluetooth indicator light flashes.


You cannot play some copyrighted files over a Bluetooth connection.

Shortcut: When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device, or move it near the phone. During a call or while playing a sound file, you

can press **Options** > **Use Bluetooth** to connect to a headset or handsfree device you have used before.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

copy files to another device

You can copy a media file, phonebook entry, calendar event, or Web shortcut from your phone to a computer or other device. 


Note: You can't copy some copyrighted objects.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
 - **Manage** > **Copy** for media files.

- **Share** > **Contact** for phonebook entries.
- **Send** for calendar events.

3 Select a recognised device name, or **[Look For Devices]** to search for the device where you want to copy the file.

If your phone could not copy the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection. To change a device's **Access** setting, see page 29.



receive files from another device

If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's Bluetooth feature by pressing  >  > **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**.



1 Place your phone near the device, and send the file from the device.


If your phone and the sending device don't recognise each other, place your phone in discoverable mode so the sending device can locate it. Press

 >  > **Connection** > **Bluetooth Link** > **Find Me**.

2 Press the **Accept** key on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, press the **Save** key to save the file.

send files to a printer

You can use a Bluetooth connection to send a picture, message, phonebook entry, or calendar view from your phone to a printer. 

Note: You cannot print message **Templates** or a phonebook **Mailing List**.

- 1 On your phone, scroll to the object that you want to print, then press **Options > Print > Bluetooth**. In the calendar, you can print the month, week, or day.





Tip: If you see it, you can print it. After you capture a picture in the camera, you can press the **Options** key and select **Print**.



- 2 If available, choose additional objects or print options.
- 3 Select a recognised printer name listed in the **Printers** menu, or **[Look For Devices]** to search for the printer where you want to print the object.



Note: If you see **Service Not Supported** when you try to print, select **Options > Manage > Copy > Bluetooth** instead. Always use this option to print 4x6 photos.






advanced Bluetooth features

A device is *recognised* after you connect to it once (see page 24).

features	
make phone visible to other device	Allow a Bluetooth device to discover your phone:  >  > Connection > Bluetooth Link > Find Me
connect to recognised device	Connect your phone to a recognised handsfree device:  >  > Connection > Bluetooth Link > Audio Devices > <i>device name</i>

features	
drop connection with headset or handsfree device	 >  > Connection > Bluetooth Link > Audio Devices Scroll to the device name and press the Drop key.
switch to headset or handsfree device during call	During a call, press Options > Use Bluetooth to switch to a recognised headset or car kit. Your phone connects automatically or shows a list of devices you can select.

features	
play sound files on a recognised headset	<p>While playing a sound file, press </p> <p>Options > Listen via Bluetooth to switch to a recognised headset.</p> <p>Your phone connects automatically, or shows a list of devices you can select.</p> <p>You cannot play some copyrighted files over a Bluetooth connection.</p>
move multimedia object to device	<p>Caution: Moving an object deletes the original object from your phone.</p> <p>Scroll to the object, press </p> <p>Options > Manage > Move, select the device name.</p>

features	
copy multimedia object to device	<p>Scroll to the object, press </p> <p>Options > Manage > Copy, select the device name.</p>
edit device properties	<p> >  > Connection </p> <p>> Bluetooth Link</p> <p>> Found Devices</p> <p>Scroll to the device name and press the <i>centre key</i> .</p> <p>Note: The Access setting can restrict how this device connects to your phone. You can choose Automatic (always connects), Always Ask (asks you before connecting), Just Once, Never, or Custom.</p>

features

set Bluetooth options

•◂ >  > Connection 
> Bluetooth Link > Setup

Note: The **Bluetooth Connection Indicator** (see page 2) lights when your phone has a Bluetooth connection. To disable this indicator, choose **Bluetooth Lights > Off** under the **Setup** menu.

audio player

Your phone can play and store AU, WMA, and MP3 song files. You can use a removable memory card with your phone to store more songs (see page 41).

Find it: •◂ >  **Multimedia > Media Finder > Music** 




Press •◂ up or down to scroll to an option, and press the *centre* key •◂ to select it:

options

All Songs	Show and play individual songs. Note: All of your phone's songs appear in this list. Some songs do not have any Artist , Album , or Genre information, so they don't appear in those lists.
Recently Played	Show songs you played recently.
Playlists	Create or play a playlist (see page 32).
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.

options	
Genres	Select a type of music to show or play songs.
Composers	Select a composer to show or play songs.

When you select a song:

- **Play or pause** the song by pressing the *centre key* .
- **Skip back or forward** by pressing  left or right.
- **Change volume** by pressing the volume keys.
- **Hide the player** by pressing **Options** > **Hide**. This lets you use other phone features while the song plays. To stop the hidden audio player, press  in the home screen.

Tip: You can listen to music as you travel. Use Bluetooth™ A2DP enabled devices, such as stereo headphones, for enhanced music quality and use Bluetooth AVRCP enabled devices, such as car stereos, to control playback (see page 24). If you're on a plane, use a wired headset and *aeroplane mode* to make your phone safe to use (see page 90).

Your phone also has a **Ring Tones** player. To use it, press  >  **Multimedia** > **Media Finder** > **Ring Tones**.

play music with your phone closed

You can close your phone while you listen to music. When your phone is closed, the external display shows the song, artist, title, and time. To control your music playback:

- **Change volume** by pressing the volume keys.

- Press the **smart key** to open the audio player menu. Press the volume keys to scroll through the menu, and press the **smart key** to select a menu item.
- Press and hold the **smart key** to lock or unlock the side keys.
- The controls close after 4 seconds, if you don't use them.


load music files

To download songs from the Internet, see page 89. To copy files between your phone and a computer, see page 43.

Note: Your phone may not play MP3 files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

create a playlist

Find it:  >  **Multimedia** > **Media Finder** > **Music** > **Playlists** > **[Create New Playlist]**

Open a song list, and press the *centre key*  to select each song you want. After you press the **Done** key, enter a name for your list.

To hear your playlist, highlight it under **Playlists** and press **Options** > **Play**.


voice commands

You can use voice commands to make calls, and to open and use some phone applications.

Note: Not all phone languages support voice recognition and voice commands.

open applications

To open the **Camera** or **Voicemail** applications, **Redial** (dialled calls list), or **Received Calls** list:


- 1 Press and hold .
Your phone prompts you say a command.
- 2 Say one of the following commands:
“Camera,” “Voicemail,” “Redial” (dialled calls list), or “Received Calls.”
Your phone opens the application.

make a call

You can use voice commands to make a call:

- Use **name dial** to dial a phonebook entry by speaking the entry’s name.
- Use **digit dial** to dial any phone number by speaking its digits.

Tip: Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.


- 1 Press and hold .
Your phone prompts you say a command.
- 2 Say “name dial” or “digit dial”.
- 3 When prompted, say the name of the phonebook entry or speak the digits in the phone number.
If your phone recognises the name or number, it makes the call.

Note:

- Your phone may prompt you to repeat a name or number. If the name/number isn’t valid, the phone doesn’t make the call.
- If the phone does not recognise the name or number, the display shows a

list of names/numbers, asks, “Did you say ...,” and highlights the first item in the list. Say “Yes” to call the highlighted number, or “No” to go to next list item.

To select the name or number manually, scroll to the name/number on the list and press the **Select** key.

- You can improve voice dial operations by training the phone to recognise your voice. Press  >  **Settings** > **Personalise** > **Voice Dial Setup** > **Adapt digits**.

photos

 
To view, edit, or delete photos you’ve taken, see page 88.

Your camera lens is on the back of your phone when the phone is open.

Note: Below your phone’s external lens is a **camera on indicator**. This can blink when your camera is on, to let people around you know that they might be in your photo or video.



- 1 Press > **Camera** to see the camera viewfinder.

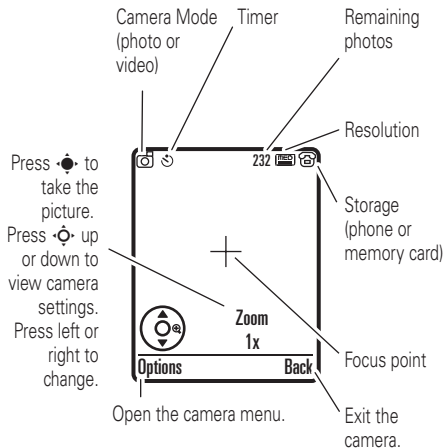

- 2 Press the *centre key* to take the photo in the viewfinder. You can:

- Press the **Options** key to store or discard the photo.


If you press **Options** > **Print**, you can print the picture over a Bluetooth™ connection (see page 27).

- Press the **Send** key to send the photo in a message.

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.

- Press to discard the photo and return to the active viewfinder.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
Go To Pictures	See stored pictures and photos.
Go To Video Mode	Switch to the video camera.
Internal / External View	Switch to the camera facing you (Internal) or facing away from you (External).
Auto-Timed Capture	Set a timer for the camera to take a photo.
Camera Setup	Open the setup menu to adjust photo settings.
Switch Storage Device	Choose to store videos on your phone or a memory card. 

options

Free Space

See how much memory remains.

Note: Your service provider may store some content in user memory before you receive the phone.

self portrait

If you close your phone while the viewfinder is active, the external display shows the image. Press the volume keys to zoom, or press the smart key to capture and store the image.

videos

 
To view, edit, or delete videos you've recorded, see page 88.

Your camera lens is on the back of your phone, when your phone is open.

Note: Below your phone's external lens is a **camera on indicator**. This can blink when your camera is on, to let people around you know that they might be in your photo or video.




Press  >  **Video Camera** to see the video viewfinder.

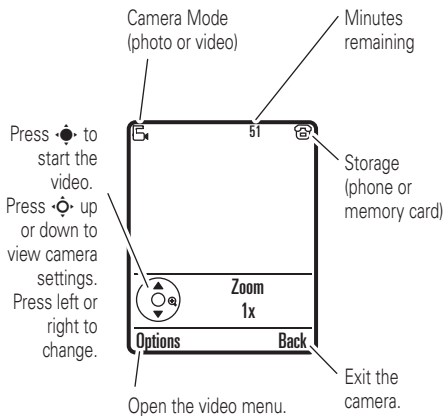



Note: The number of minutes remaining is an estimate.

Tip: If you want to send your video in a message, the video length must be set to **MMS**. To set length, press

Options > **Video Camera Setup** > **Video Length**.


- 1 Press the *centre key*  to start recording the video in the viewfinder.
- 2 Press the **Stop** key to stop recording the video. You can:
 - Press the **Options** key to preview, store, or discard the video.

To play a stored video from the home screen, press  >  **Multimedia** > **Media Finder** > **Videos** > **All Videos** > *video name*.


- Press the **Send** key to send the video in a message. 

Enter text and press **Send To**, then scroll to a recipient address and press the *centre key*  to select it. Press the **Options** key to enter a new number. To send the message, press the **Send** key.

Note: Some other phones or networks do not support messages with videos.

- Press  to discard the video and return to the active viewfinder.



video calls

If you call someone who has a 3G video phone, you can see each other while you talk. If your phone is roaming on a **non-3G network**, video calls will not work (see the Roam indicator on page 47). 

Note: Below your phone's external lens is a **camera on indicator**. This can blink when your camera is on, to let people around you know that they might be in your photo or video.




make a video call

- 1 Enter a phone number and press  to see the video call preview.
- 2 Press  to make the call.

During the call:

- Press the **Stop Video** key to change the call to a voice call with the speakerphone on.
- If you accept another **incoming voice call**, your phone changes this video call to a voice call.
- If you accept another **incoming video call**, your phone ends this video call.

- 3 To end the call, press .

text messages

To create a group mailing list, see page 73.
For more message features, see page 75.

send a text message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and you can put text and media objects on each page. You can send a message to other compatible phones or to email addresses.



Find it:  >  Messages > Create Message > New Message


- 1 Press keypad keys to enter text on the page (for details about text entry, see page 48).

To insert a **picture, sound, or other object** on the page, press **Options > Insert**. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press **Options > Insert > New Page**. You can enter more text and objects on the new page.

- 2 When you finish the message, press the **Send To** key.
- 3 To **send** the message, press the **Send** key.

receive a text message

When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as .



Press the **Read** key to open the message.

To view see all of your text messages:

Find it:  >  **Messages > Message Inbox**

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.
- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.
- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/filename and press the **View** key (image), **Play** key (sound), or **Open** key (phonebook vCard, calendar vCalendar entry, or unknown file type).

memory card

You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).



Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

 
install or remove a memory card

1 Remove the battery door (see page 19).

2 To install the memory card, make sure the memory card's metal contacts are facing down, and slide the top of the memory card under the metal band.

To remove the memory card, slide it back out of the holder.

3 Replace the battery door.

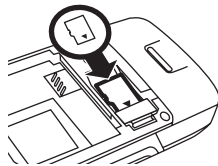

see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list, such as **Pictures** (see page 88). Icons can indicate if a file is stored in your phone memory (📁) or on your memory card (📁). To copy or move a file from your phone to your memory card, highlight it in the list and press **Options > Manage > Copy** or **Move > Memory Card**. You cannot copy or move some copyrighted files.

To **copy files** between your memory card and a computer, you can use a cable connection (see page 43) or a Bluetooth connection (see page 24).

To see your **memory card name, available memory**, and other information about the card:

Find it: ⌂ > ⚙️ **Settings > Phone Status > Storage Devices**

 
- 1 Press ⏪ to scroll to the memory card that is installed.
- 2 Press the *centre key* ⏩ to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press **Options** to see the **Storage Device** menu, which lets you **Format** or **Rename** the memory card.

cable connections

 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

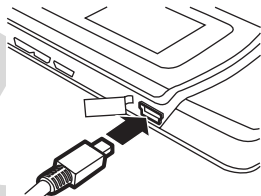

Note: Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need. To make **data calls** through a connected computer, see page 82.



connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Disconnect the cable from your phone, if it is connected, then press  >  > **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

This directs the USB connection to your memory card.

Connect the cable to your phone and to an available USB port on your computer. Then follow these steps:

On your computer:

- 1 Open your “My Computer” window, where your phone’s memory card shows as a “Removable Disk” icon.
- 2 Click on the “Removable Disk” icon to access the files on your phone’s memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows:
audio files: > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture
video clips: > mobile > video
- 4 When you finish, disconnect your phone by selecting the “Safely Remove Hardware” icon in the system tray at the bottom of your computer screen. Then disconnect the “USB Mass Storage Device.”

- 5 Disconnect the cable from your phone and computer.

On your phone:

To return to **Data** as your USB default connection, press  >  > **Connection** > **USB Settings** > **Default Connection** > **Data Connection**.

phone updates

Sometimes we think of ways to make your phone’s software faster or more efficient after you’ve purchased your phone. You can find out if your phone can be updated and register for free update notifications at: <http://www.hellomoto.com/support/update>



Note: Software updates do not affect your phonebook entries or other personal entries. If you receive a software update but choose to install it later, see page 84.

basics

 
See page 1 for a basic phone diagram.

Tip: Want some help? Press

☰ > 🎮 **Games & Apps** > **HELPMEMOTO**. Use **HELPMEMOTO** options to find information about phone features.


display


The *home screen* shows when you turn on the phone.

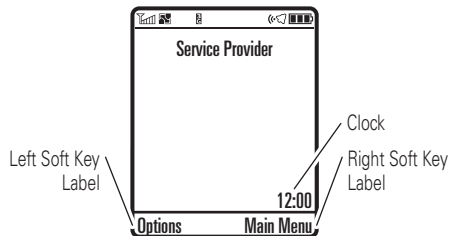

Note: Your home screen might look different from the one shown, depending on your service provider.

To dial a number from the home screen, press number keys and .

Press  up, down, left, or right in the home screen to open basic menu features.

Press the *centre key*  to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

Status indicators can show at the top of the home screen:

 
1. Signal Strength

2. EDGE / GPRS

3. Data

4. Roam

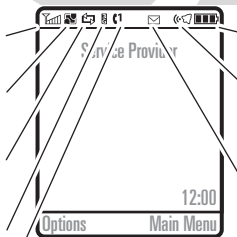

5. Active Line



8. Battery Level

7. Ring Style

6. Message

1 Signal Strength Indicator – Vertical bars show the strength of the network connection. You can't make or receive calls when  or  shows.

2 EDGE/GPRS Indicator – Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) or *General Packet Radio Service* (GPRS) network connection. Indicators can include:




GPRS PDP context active



EDGE



GPRS packet data available


3 Data Indicator – Shows connection status. 

 secure packet data transfer

 unsecure packet data transfer

 secure application connection

 unsecure application connection

 secure *Circuit Switch Data* (CSD) call

 unsecure CSD call

 *High-Speed Downlink Packet Access* (HSDPA) data transfer

 Bluetooth™ connection is active

4 Roam Indicator – Shows when your phone is seeking or using a 

network outside your home network. Indicators can include:

 2G home

 2G roam

 2.5G home

 2.5G roam



 3G home

 3G roam


 HSDPA home

 HSDPA roam


HSDPA is *High-Speed Downlink Packet Access*, available on some networks.


5 Active Line Indicator – Shows  to indicate an active call, or  to indicate when call diverting is on. Indicators for dual-line-enabled SIM cards can include:

 line 1 active

 line 1 active, call divert on

 line 2 active

 line 2 active, call divert on

When an alarm is activated,  can show here.

6 Message Indicator – Shows when you receive a new message. Indicators can include: 

 text message  voice message

7 Ring Style Indicator – Shows the ring style setting.

 
 loud ring  vibrate & ring
 soft ring  vibrate then ring
 vibrate  silent

8 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

text entry

Some features let you enter text.

For indicator descriptions, see following section.

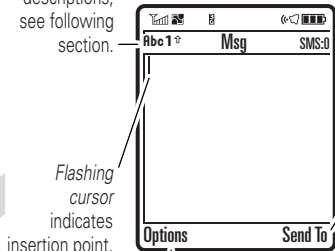

After you enter text, press the **Send To** key to enter recipients.

Press the **Options** key to open the sub-menu.

Press **#** in a text entry view to select an entry mode:

entry modes	
1 or 1	Your Primary text entry mode can be set to any iTAP™ 1 or tap 1 mode.
2 or 2	Your Secondary text entry mode can be set to any iTAP™ 2 or tap 2 mode, or set to None if you don't want a secondary entry mode.
123	Numeric mode enters numbers only.
@%	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

iTAP™ and tap mode tips

- Press **0** in a text entry view to change text case to all capital letters

(**ABC**), no capitals (**abc**), or next letter capital (**Abc**).

 
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP or Tap mode.
- Press **1** to enter punctuation or other characters.
- Press **⦿** to move the flashing cursor to enter or edit message text.
- Press **C** to delete the character to the left of the cursor. Hold **C** to delete the word.
- To cancel your message, press **⏏**.

iTAP™ mode

Press **#** in a text entry view to switch to iTAP mode. If you don't see **1** or **2**, press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press **7 7 6 4**, your display shows:

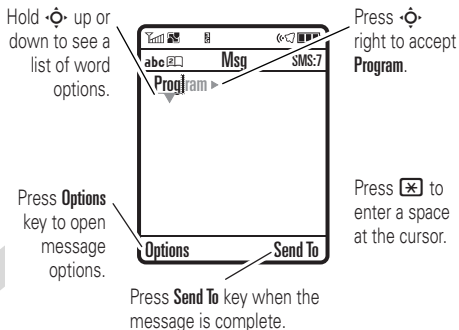

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.

Tip: Don't worry if you forget how iTAP works. In a text entry display, you can press

 
Options > **Text Setup** > **Text Tutorial** to see an explanation.

tap and tap extended modes

Press **#** in a text entry view to switch to tap mode. If you don't see **Abc 1** or **Abc 2**, press **Options** > **Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **Tap** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. The **Tap Extended** mode works the same way, but includes more special characters and symbols.

For example, if you press **7** one time, your display shows:

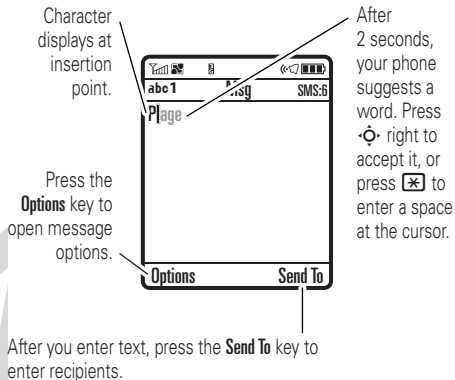


The first character of every sentence is capitalised. If necessary, press **⌂** down to change the character to lowercase before the cursor moves to the next position.

numeric mode

Press **#** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

Shortcut: You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Tap modes. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.

 
symbol mode

Press **#** in a text entry view until your phone shows a list of symbols. Scroll to the symbol you want, then press the *centre key* .

volume

Press the volume keys to:

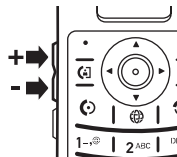

- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

 


Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Silent** or back by holding **#** in the home screen.



To change your ringer volume when your phone is closed, see page 53.

navigation key

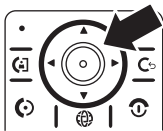Press the *navigation key*  up, down, left, or right to scroll to items in the display. When you scroll to an item, press the *centre key*  to select it.



smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the *centre key* ). The smart key usually does the same thing as pressing the *centre key* . To find the smart key, see page 1. To change what the smart key does in the home screen, see page 80.

external display

When you close your phone, the external display shows the date, status indicators, and notifications for incoming calls and other events. For a list of phone status indicators, see page 46.

set phone ring style in external display

- 1 Press a volume key to see **Ring Styles**.
- 2 Press the smart key repeatedly, until the style you want appears.
- 3 Press a volume key to return to the home screen.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Options** key and select **Speakerphone On** to turn the handsfree speaker on. Your display shows **Speakerphone On** until you turn it off or end the call.


Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it:  >  **Settings** > **Security**
> **New Passwords**

You can also change your **SIM PIN** or call barring passwords.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:
Press  >  **Settings** > **Security** > **Phone Lock**
> **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  >  **Settings** > **Security**
> **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 64). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

lock & unlock external keys

When your phone is closed, your external keys (the smart key, volume keys, and camera key) lock to prevent accidental key presses.

To change how long your phone waits before it automatically locks your external keys:

 >  **Settings** > **Security** > **External Key Lock**
> **Timer** > *a time interval* or **Off**

Note: If you choose **Off**, you can still manually lock your external keys by holding the smart key.

To **unlock** your external keys, press **smart key** once, then hold the **smart key** (the key below your volume keys).

customise


ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

 Loud

 Vibe & Ring

 Soft

 Vibe then Ring



 Vibrate

 Silent

The ring style profile's indicator shows at the top of your home screen. To choose your profile:

Find it:  >  **Settings** > **Ring Styles**
> **Style:** *style name*

Shortcut: In the **home screen**, press the volume keys up or down to quickly change your ring style profile. With your **phone closed**, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.


Tip: Do you get a lot of text messages? If you don't want to hear incoming message alerts during phone calls, press  >  **Settings** > **In-Call Setup** > **MSG Alert** > **Not in Call**.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.



Find it:  >  **Settings** > **Ring Styles**
> *style Detail*

Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Scroll to the alert you want, then press the *centre key* .
- 3 Press the **Back** key to save the alert setting.

time & date

Your phone needs the time and date for the calendar.

To **synchronise** the time and date with the network: Press  >  **Settings**
> **Initial Setup** > **Time and Date** > **Autoupdate** > **On**.



To **manually** set the time and date, turn off **Autoupdate**, then: Press  >  **Settings**
> **Initial Setup** > **Time and Date** > *time* or *date*.

To choose an **analog, digital, or no** clock for your home screen, press  >  **Settings**
> **Personalise** > **Home Screen** > **Clock**.


wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Note: Your *theme* can also set your wallpaper (page 58).

Find it:  >  **Settings** > **Personalise** > **Wallpaper**

options

Picture	Press  up or down to select a picture, or select None for no wallpaper.
----------------	--

options

Layout Select **Centre** to centre the image in the display, **Tile** to repeat the image across the display, or **Fit-to-screen** to stretch the image across the display.

screen saver


Set a photo, picture, or animation as a screen saver. The screen saver shows when the flip is open and no activity is detected for a specified time.

Note: Your *theme* can also set your screen saver (page 58).

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

Find it:  >  **Settings** > **Personalise**
> **Screen Saver**

options

Picture Press  up or down to select a picture or animation, or select **None** for no screen saver.

Delay Select the length of inactivity before the screen saver shows.

themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more.




To **apply** a theme, press  >  **Multimedia**
> **Themes** > *theme*.

To **download** a theme, see page 89.

To **delete themes you downloaded**, press  >  **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Delete** or **Delete All**.

To **preview** a theme, press  >  **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Preview**.

display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press  >  **Settings** > **Personalise** > **Skin**. Your *theme* can also set your phone skin (page 58).

To set your display **brightness**: Press  >  **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns on when you open the flip

or press any key. To set how long your phone waits before the backlight turns off:

Press  >  **Settings** > **Initial Setup** > **Backlight**.

Note: To turn the backlight on or off for Java™ applications, press  >  **Settings** > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup** > **Display Timeout**.

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it:  >  Settings > In-Call Setup
> Answer Options

options	
Multi-Key	Answer by pressing any key.
Open to Answer	Answer by opening the flip.

calls


To make and answer calls, see page 21.

turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.



recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see a list of dialled calls.



Find it:  >  **Recent Calls**, press  or  to select > **Dialled Calls**, **Received Calls** or **Missed Calls**

Scroll to a call. A ✓ next to a call means the call connected.


- To call the number, press .
- To see call details (like time and date), press the *centre key* .
- To see the **Last Calls Menu**, press **Options**. This menu can include:


options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.



options	
Video Call	Make a video call to the number.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID / Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Send Voice Msg	Record and send a voice message to the number.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.

options	
Send Tones	Send the number to the network as DTMF tones. Note: This option shows only during a call.
Filter by	Select dialled or received calls.
Notepad	Open the number in a text editor.
Call Times	Open your call time information. 
Call Cost	Open your call cost information. 

redial


- 1 Press  from the home screen to see a list of recent calls.

- 2 Scroll to the entry you want to call, then press .


If you hear a **busy signal**, and you see **Call Failed**, you can press  or the **Retry**  key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.

return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.
- 2 Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID)  shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.


You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 72).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options > Hide ID/Show ID**.


emergency calls

Your service provider programs one or more emergency phone numbers, such as 999, or 112 that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.


Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number. 

Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:

Find it:  >  **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.

DRAFT

other features

advanced calling

features

attach a phone number



Dial an area code or prefix for a phonebook number, then press **Options** > **Attach Number**.

features

notepad

Press > **Recent Calls**, press the **Options** key, then > **Notepad**.

- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialling Menu** to attach a number or insert a special character, press **Options**.

features

international calls



If your phone service includes international dialling, press and hold **0** to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

hold a call

Press **Options > Hold** to put all active calls on hold.

mute a call

Press the **Mute** key (if available) or **Options > Mute** to put all active calls on mute.

features

call waiting



When you're on a call, you'll hear an alert if you receive a second call.

Press **☎** to answer the new call.

- To switch between calls, press the **Switch** key.
- To connect the two calls, press the **Link** key.
- To end the call on hold, press **Options > End Call On Hold**.


To turn the call waiting feature on or off, press **☎ > ⚙ Settings > In-Call Setup > Call Waiting > On or Off**.

features

conference call




During a call:

Dial next number, press , press the **Link** key.

transfer a call



During a call:

Options > **Transfer**, dial transfer number, press 

features

automatic call diverting



Set up or cancel automatic call diverting:

 >  **Settings** > **Call Divert**

Choose **Voice Calls** or **Video Calls** to set up diverting, or **Cancel All** to cancel diverting.

You can set how long your phone waits before it diverts a call (**5**, **10**, **15**, **20**, or **25** seconds).

features

manual call diverting



You can set your phone to divert an incoming call only when you press a key.

To set the number where your phone diverts the calls:

•📶 > ⚙️ **Settings** > **Call Divert**
> **Push to Call Fwd No.**, and enter the phone number

To choose which key you press to divert incoming calls:

•📶 > ⚙️ **Settings** > **Personalise** > **Home Screen**
> **Home Keys**, select one of the key presses in the list, and then select **Push to Call Forward**

features

restrict calls



Restrict outgoing or incoming calls:

•📶 > ⚙️ **Settings** > **Security** > **Restrict Calls**

Tell your phone to allow **All**, **None**, or only the calls from your **Phonebook**.

call barring



Restrict outgoing or incoming calls:

Restrict your voice or video calls to block all calls, international calls, or all calls except ones on your home network.

•📶 > ⚙️ **Settings** > **Security** > **Call Barring**

features

fixed dial



When you turn on fixed dialling, you can only call numbers stored in the fixed dial list.

Turn fixed dialling on or off:

☎ > ⚙ **Settings** > **Security** > **Fixed Dial**

Use the fixed dial list:

☎ > 📞 **Tools** > **Dialling Services** > **Fixed Dial**

Note: Fixed dial is PIN2 password protected.

service dial



Your service provider might give you phone numbers for taxi companies or other services. These phone numbers are stored on your SIM card. To see them:

☎ > 📞 **Tools** > **Dialling Services** > **Service Dial**

features

quick dial



Dial preprogrammed phone numbers:

☎ > 📞 **Tools** > **Dialling Services** > **Quick Dial**

DTMF tones

Activate DTMF tones:

☎ > ⚙ **Settings** > **Initial Setup** > **DTMF**

To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press **Options** > **Send Tones**.



phonebook

features

assign a speed dial key to a phonebook entry

You can assign the keys **1** through **9** to phonebook entries. Then, when you press and hold a key, your phone calls the entry.

Note: Your service provider might assign some keys, such as **1** for your voicemail number. You can only speed dial the phonebook entries stored on your phone (not on your SIM card).

Press  >  **Phonebook** and scroll to the phonebook entry. Then, press **Options** > **Add to Speed Dial** and pick a speed dial key.



features



use the speed dial key for a phonebook entry

To **use a speed dial key** that you assigned to a phonebook entry, just press and hold the key while in your home screen.

edit or delete a phonebook entry

Edit a number stored in the phonebook:

 >  **Phonebook**, scroll to the phonebook entry, and press **Options**. You can select **Edit Contact**, **Delete Contact**, or other options.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press  and  to see the entries you use frequently or entries in other categories.

features

set ringer ID for a phonebook entry

Assign a ring alert (ringer ID) to an entry:

☛ > 📖 **Phonebook** > *entry*, then press
Options > **Edit Contact** > **Ringer ID** > *ringer name*

Note: The **Ringer ID** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74.

Activate ringer IDs:

☛ > ⚙️ **Settings** > **Ring Styles** > *style Detail*
> **Ringer IDs**

features

set picture ID for a phonebook entry

Assign a photo or picture to show when you receive a call from an entry:

☛ > 📖 **Phonebook** > *entry*, then press
Options > **Edit Contact** > **Picture** > *picture name*

Note: The **Picture** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74.

set picture ID view for phonebook

Show entries as a text list, or with picture caller ID photos:

☛ > 📖 **Phonebook**, then press **Options** > **Setup**
> **View by** > *view name*

features

set category for a phonebook entry

•☎ > ☑ Phonebook > *entry*, then press
Options > Edit Contact > Category > *category name*

Note: The **Category** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74.

When you open your phonebook, press ☒ or ☑ to see your categories.

set category view for phonebook

•☎ > ☑ Phonebook, then press Options
> Filter by > Category > *category name*

You can show **All** entries, entries in a predefined category (**General**, **Friends**, **Family**, **Work**), or entries in a category you create.

Shortcut: When you open your phonebook, press ☒ or ☑ to see your categories.

features

create group mailing list

You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:

•☎ > ☑ Phonebook, then press
Options > Create New > Message List

You can select the list name as an address for multimedia messages.

Note: A **Message List** cannot include entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74.

sort phonebook list

Set the order in which entries are listed:

•☎ > ☑ Phonebook, then press
Options > Setup > Sort by > *sort order*

You can sort the phonebook list by **First Name** or **Last Name**.

features


copy one phonebook entry

Copy an entry from the phone to the SIM card, or from the SIM card to the phone:

•◉ >  **Phonebook**, scroll to the entry, press **Options** > **Copy to SIM Card** or **Copy to Phone**

copy multiple phonebook entries

Copy multiple phonebook entries between the phone and SIM card:

•◉ >  **Phonebook**, scroll to one entry, press **Options** > **Select Multiple to**, then select **Copy to SIM Card** or **Copy to Phone**

features

send phonebook entry to another device

Send a phonebook entry to another phone, computer, or device:

•◉ >  **Phonebook**, scroll to the entry, press **Options** > **Share** > **Contact**

For more information about copying files to another device, see page 25.

print phonebook entry over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer.

•◉ >  **Phonebook**

Scroll to the entry you want to print, and press **Options** > **Select Multiple to** > **Print**.

You cannot print a **Mailing List**. For more about Bluetooth connections, see page 24.

messages

For basic text message features, see page 39.

Your phone reads message settings from the USIM card. If you put another USIM card in your phone, your phone sends and receives messages for the phone number on the new card.

features

send email



••• > ✉ Messages > Email > Create Email

Note: To use email, you might need to enter a **User ID** and **Password** in your email settings (see page 78).

features

send voice message



••• > ✉ Messages > Create Message
> New Voice Msg

To record the voice message, press the **Record** key, speak, then press the **Stop** key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.

use a message template






 


••• > ✉ Messages > Templates
> Text Templates or Multimedia Templates

Select a template to create a new message based on the template.


features

read and manage messages

 >  Messages > Message Inbox

Icons next to each message indicate if it is read  or unread . Icons can also indicate if the message is locked , urgent , or low priority , or if it has an attachment .

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.


To open a message, press . Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

features

read and manage email

 >  Messages > Email

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.

To open a message, press . Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

store message objects

Go to a multimedia message page, or scroll to an object in a message, then:

Options > **Store**

features

print message over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a message from your phone to a printer.

••• > ✉ **Messages** > **Message Inbox, Email, Outbox, or Drafts**

Scroll to the message you want to print and press **Options** > **Print**.

You cannot print message **Templates**. For more about Bluetooth connections, see page 24.

features

store text messages on your SIM card

To store incoming text messages on your SIM card, press:

••• > ✉ **Messages**, then press **Options** > **Setup**
> **Message Setup** > **Text Msg Setup** > **Default Storage**
> **SIM Card**

features

edit email settings



You can edit the settings for your Email connections. To use email, you need to store your email **User ID** and **Password**.

•◉ > ✉ **Messages**, then press **Options** > **Setup** > **Email Msg Setup** > **Account Settings**

If you have more than one email account, select an account to edit.

Your phone shows a list of email settings. Here is where you store your email **User ID** and **Password**.

Note: To create a new account, select **New Entry** in the **Account Settings** list. Your display shows a folder for each email account under

•◉ > ✉ **Messages** > **Email**.

features

browser messages



Read messages received by your micro-browser:

•◉ > ✉ **Messages** > **Browser Messages**

info services



Read subscription-based information services messages:

•◉ > ✉ **Messages** > **Info Services**

personalising

features

language

Set menu language:

•◉ > ⚙ **Settings** > **Initial Setup** > **Language**

features

scroll

Set the scroll bar to **Up/Down** or **Wrap Around** in menu lists:

•◂ > ⚙ Settings > Initial Setup > Scroll

text marquee

Set the speed for scrolling text in your display:

•◂ > ⚙ Settings > Initial Setup > Text Marquee

activate ringer IDs

Activate ringer IDs assigned to phonebook entries and categories:

•◂ > ⚙ Settings > Ring Styles > *style* Detail > Ringer IDs

ring volume

•◂ > ⚙ Settings > Ring Styles > *style* Detail > Ring Volume

features

keypad volume

•◂ > ⚙ Settings > Ring Styles > *style* Detail > Key Volume

reminders

Set reminder alerts for messages that you receive:

•◂ > ⚙ Settings > Ring Styles > *style* Detail > Reminders

menu view

Show the main menu as graphic icons or as a text-based list:

•◂ > ⚙ Settings > Personalise > Main Menu > View

main menu

Reorder your phone's main menu:

•◂ > ⚙ Settings > Personalise > Main Menu > Reorder

features

show/hide menu icons

Show or hide menu feature icons in the home screen:

 >  **Settings** > **Personalise** > **Home Screen**
> **Home Keys** > **Icons**

change home keys

Change features for the soft keys, navigation key, and smart key in the home screen:

 >  **Settings** > **Personalise** > **Home Screen**
> **Home Keys**

master reset

Reset all options **except** unlock code, security code, and lifetime timer:

 >  **Settings** > **Initial Setup** > **Master Reset**


features

master clear







Caution: Master clear **erases all information you have entered** (including phonebook and calendar entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

 >  **Settings** > **Initial Setup** > **Master Clear**

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features
call times 
Show call timers:  >  Recent Calls , press the Options key, then > Call Times
in-call timer 
Show time or cost information during a call:  >  Settings > In-Call Setup > In-Call Timer

features



in-call date and time display

Show the current date and time during voice calls:

 >  **Settings** > **In-Call Setup** > **Date and Time**

call cost








Show call cost trackers:




 >  **Recent Calls**, press the **Options** key, then > **Call Cost**

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the


laws and regulations on the use of these products.

features	
speakerphone	
Activate the speakerphone during a call: Press the Speaker key (if available), or Options > Speakerphone On .	
auto answer (car kit or headset)	
Automatically answer calls when connected to a car kit or headset:  >  Settings > Car Settings or Headset > Auto Answer	
voice dial (headset)	
Enable voice dial with headset send/end key:  >  Settings > Headset > Voice Dial	

features	
auto handsfree (car kit)	
Automatically route calls to a car kit when connected:  >  Settings > Car Settings > Auto Handsfree	

data calls

To connect your phone with a USB cable, see page 43.

features	
send data	
Connect your phone to the device, then place the call through the device application.	

features

receive data

Connect your phone to the device, then answer the call through the device application.

setting up Exchange ActiveSync



You can use the Internet to synchronise your phone's phonebook and calendar entries with an email account on a Microsoft® Exchange 2003 Server.

You need to know the email account's **user name** and **password**, the Microsoft® Exchange **server name**, and the **user domain name**. Confirm that the **Mobility** option is enabled on the email account, and that **data service** is activated with your phone service provider.

features

using Exchange ActiveSync

Once you set up an Exchange ActiveSync partner, you can schedule your phone to synchronise with the account automatically.

To schedule synchronization, press  >  **Connection** > **MOTOSYNC** > **Exchange**, press the **Options** key, then > **Auto Sync Setup**. Enter the time and days you want your phone to synchronise.

network

features

network settings



See network information and adjust network settings:

📶 > ⚙️ **Settings** > **Network**

software update



Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded:

📶 > ⚙️ **Settings** > **Phone Status** > **Software Update**
> **Install Now**

personal organiser


features

set alarm

📶 > 🛠️ **Tools** > **Alarm Clock**

turn off alarm

When an alarm happens:

To turn off the alarm, press the **Disable** key or . To set an eight-minute delay, press the **Snooze** key.

Note: The **Snooze** key is available only if the phone is already powered on when the alarm sounds.

features

add new calendar event or task

Your calendar can store events (with a start and end time that can repeat) or tasks (with a due date).

•◂ > 🗄️ **Tools** > **Calendar**, scroll to the day, press •◂, press **Options** > **Create New Event** or **Create New Task**

see calendar event or task

See or edit event or task details:

•◂ > 🗄️ **Tools** > **Calendar**, scroll to the day, press •◂

Tip: Keeping up with life can be tough work. To see a list of your upcoming events or tasks, open the calendar and press **Options** > **View** > **Organised Events** or **Organised Tasks**.

features

change calendar settings

•◂ > 🗄️ **Tools** > **Calendar**, then press **Options** > **Setup**

You can choose the **Default View** that appears when you open your calendar, and you can show or hide the **Tasks On Day View**. You can tell your phone to **Power On** if it is turned off when a calendar alert occurs. Turn on **Lunar Calendar** if you do not want to use a solar calendar.

event reminder

When an event reminder happens:
To see reminder details, press the **View** key.
To close the reminder, press the **Back** key.

features

send calendar event to another device

Send a calendar event to another phone, computer, or device:

•• >  **Tools** > **Calendar**, scroll to the day, press ••, scroll to the event, press **Options** > **Send**

print calendar month, week, or day over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a calendar month, week, or day from your phone to a printer.

•• >  **Tools** > **Calendar**

Go to the month, week, or day view and press **Options** > **Print**.

For more about Bluetooth connections, see page 24.

features

create voice record

•• >  **Multimedia** > **Voice Record**

Press ••. When prompted, speak into the phone.

Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.

play voice note

Play back a voice note:



•• >  **Multimedia** > **Media Finder** > **Voice Notes** > **All Voice Notes** > *voice note*

calculator

•• >  **Tools** > **Calculator**

features

currency converter

 >  Tools > Calculator, then press
Options > Exchange Rate

Enter exchange rate, press the **OK** key, enter amount, and press **Options > Convert Currency**.



security

features

SIM PIN

Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows **SIM Blocked**.

Lock or unlock the SIM card:




 >  Settings > Security > SIM PIN

features

lock feature

 >  Settings > Security > Lock Application

fun & games

Note: Icons next to a picture, sound, or other object can indicate if the file is locked () , or if it is stored on your phone () or on your memory card () .


For basic information on the camera, see page 34.

features

view, delete, or manage pictures

Manage photos, pictures, and animations:

•📶 > 📺 Multimedia > Media Finder > Pictures
> All Pictures

To **copy or move** a file from your memory card (📁) to your phone memory (📱), highlight it in the list and press **Options > Manage > Copy or Move > Memory Card**. You cannot copy or move some copyrighted files. 

features


view, delete, or manage video clips

•📶 > 📺 Multimedia > Media Finder > Videos
> All Videos

To **copy or move** a file from your memory card (📁) to your phone memory (📱), highlight it in the list and press **Options > Select Multiple to > Copy or Move > Memory Card**. You cannot copy or move some copyrighted files. 

start micro-browser

Just press .


Your phone reads micro-browser settings from the USIM card. When you remove the USIM card, your phone clears the browser cache. To edit your settings, press **•📶 > 🌐 Web Access > Web Sessions**. 

features

download objects from Web page



Download a picture, sound, or other object from a Web page:

Press , go to the page that links to the file, scroll to the link, and select it.

Web sessions



A *Web Session* stores settings that your phone uses to access the Internet. To select or create a Web session:

 >  **Web Access** > **Web Sessions**

clear micro-browser history



Clear the micro-browser's history, cache, or cookies:


 >  **Web Access** > **Browser Setup**
> **Clear History, Reset Cache, or Clear Cookies**

features

download game or application






You can download a Java™ game or application the same way you download pictures or other objects:

Press , go to the page that links to the file, scroll to the link, and select it.

start game or application



Start a Java™ game or application:

 >  **Games & Apps**, scroll to the game or application, press the *centre key* 

Note: To install and run games stored on your memory card, press

 >  **Games & Apps** > **[Install New]**.

features

aeroplane mode

You can switch your phone to aeroplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an aeroplane, without interfering with aeroplane communications.

◆ > ⚙ Settings > **Aeroplane Mode**
> **Aeroplane Mode** > **On**

You can make the aeroplane mode option appear whenever you turn on your phone:

◆ > ⚙ Settings > **Aeroplane Mode**
> **Prompt At Startup** > **On**

service and repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support centre at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.10 W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 0.20 W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental

requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorised Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorised service centres, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorised Repair centre. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int./peh-emf>

DRAFT

index

A

accessories 17, 81
active line indicator 47
aeroplane mode 90
alarm clock 84
alarm indicator 48
alert
 set 52, 53, 56
 turn off 52, 56, 61
animation 88
answer a call 21, 59
attach a number 62, 66
audio player 30

B

backlight 59
battery 19, 20

 extending battery life 18
battery indicator 48
battery life, extending 58, 59
Bluetooth connection
 calendar entry, printing 86
 calendar entry, sending
 86
 description 24
 indicator 25, 30
 messages, printing 77
 phonebook entries 74
 restricting access 29
brightness 59
browser messages 78
browser. See micro-browser

C

cables 43
calculator 86
calendar 85
call
 answering 21, 59
 barring 54, 69
 diverting 68, 69
 end 21
 ending 21, 39
 making 21
 timers 81
 waiting 67
call divert indicator 47
caller ID 62, 63, 72
camera 34
camera key 1

car kit 81
categories 73
centre key 53
centre select key 17
clear/back key 1
clock 57
codes 54
conference call 68
copy files 25
costs, tracking 81

D

data call 82, 83
data indicator 47
date, setting 57
dial a phone number 21, 70
dialled calls 61
digital audio 30
display 3, 45, 59
divert calls 68, 69
downloaded files

from Web pages 89
in messages 76
DTMF tones 62, 70

E

earpiece volume 52
EDGE indicator 46
email
 reading and managing 76
 sending 75
 settings 78
emergency number 64
end a call 21, 39
end key 1, 21
Enter Unlock Code message
 54
external display 36, 53

F

fax call 82, 83
fixed dial 70

flip 21, 60

G

games 89
GPRS indicator 46
group mailing list 73

H

handsfree speaker 54
headset 81
hold a call 67
home screen 3, 45, 80

I

in-call indicator 47
Incoming Call message 63
information services 78
international access code 67
iTAP text entry mode 50

J

Java applications 89

K

keypad 60, 79

L

language 78

linking. See Bluetooth
connection

lock

application 87

phone 54

SIM card 87

Low Battery message 48

M

make a call 21

master clear 80

master reset 80

Media Finder 30

memory card 41

menu 3, 17, 46, 79

menu icons 46, 79, 80

message 75, 76, 77

message alerts 56

message indicator 40, 48

message reminders 79

micro-browser 78, 88, 89

Missed Calls message 63

MMS, defined 39

MP3 sound files 30, 32

multimedia message 39, 75,
76, 77

mute a call 67

N

navigation key 17, 53

network settings 84

notepad 66

number. See phone number

numeric entry mode 52

O

object exchange 25

open to answer 60

optional accessory 17

optional feature 17

P

pairing. See Bluetooth
connection

passwords. See codes

personalise 78

phone number 22

phonebook 62, 66, 71

photo 34, 88

picture 88

picture ID 63, 72

PIN code 21, 54, 87

PIN2 code 54

play music with phone
 closed 31
power key 1, 21
printing 27

Q

quick dial 70

R

received calls 61
recent calls 61
redial 62
reminders 79
restrict calls 69
return a call 63
ring style indicator 48
ring style, setting 52, 53, 56
ringer ID 63, 72, 79
ringer volume 52, 79
roam indicator 47

S

safety information 9
screen saver 58
scrolling 79
security code 54
send key 1, 21
service dial 70
signal strength indicator 46
SIM Blocked message 20,
 87
SIM card 17, 21, 54, 70, 77,
 87
skin 59
smart key 1, 32, 53, 80
soft keys 1, 46, 80
software update 84
speakerphone 81
speed dial 71
store your number 22
symbol entry mode 52
synchronising 83

synchronizing 83

T

tap text entry mode 51
telephone number. See
 phone number
text entry 48
text marquee 79
text message 76, 77
themes 58
time, setting 57
timers 81
transfer a call 68
turn on/off 20

U

unlock
 application 87
 phone 21, 54
 SIM card 87
unlock code 54

USB cables 43

V

video call key 1

video clip 88

videos 37

voice commands 32

voice dial 82

voice message 75

voice note 86

voice recognition 32

voice record 86

voicemail 64

voicemail message indicator
48, 64

volume 52, 79

volume keys 1, 31

W

wallpaper 57

warranty 93

102 index

Web pages 88

Web sessions 89

Y

your phone number 22

U.S. patent Re. 34,976