INSTRUCTION MANUAL

A preliminary draft copy of the Users Manual follows:

The following text will be added to the manual

15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: IHDT6JC1

15.105

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not in-stalled and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:—Reorient or relocate the receiving antenna.—Increase the separation between the equipment and receiver.—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.—Consult the dealer or an experienced radio/TV technician for help.

Welcome

Thank you for purchasing Motorola mobile phone with world leading mobile communication technology. Motorola's mobile communication equipment are designed and produced in compliance with its strict in-house standards and the international standards. They are subject to the strict quality tests including temperature, humidity, dust, vibration and drop tests. We are sure that you will be highly satisfied with the Motorola products made through these processes.

Thank you again for choosing Motorola, and we hope that you would succeed in your business with our product.

- * Any content of this manual and any function of this product are subject to change according to situation.
- * We suggest that you set your phone on vibration at a public place.

Prohibition of Illegal IMEI Modification

Removal or change of IMEI (International Mobile Equipment Identity) installed in the mobile phone manufactured and supplied by Motorola, or an attempt to reproduce and enter another IMEI in the mobile phone is strictly prohibited and subject to maximum 10-year prison sentence or a fine up to 20 million Won in pursuant of Article 347 of the Criminal Act. In addition, such illegal modification may damage the software installed in the phone.

Therefore, be aware that you may get harm or inconvenience from such illegal modification. Furthermore, we inform you that product with illegal modification can not receive any services provide by Motorola.



Safety Information

Read this 'For your safety' carefully in order to secure safety of the user and to prevent damage to property. Please keep this manual in the place which can be accessed at any time by the user.

CAUTION!

- Do not lend your own phone to other person inadvertently.
- Please observe the proprieties in public places.
- For repairs or other alter services, contact our designated service center.
- If your phone has got lost or stolen, immediately report to the relevant telecommunications service provider.
- You are required to refrain from using unauthorized devices.
- Using chargers, hands-free kits, data communication cables, batteries, or equipment other than genuine ones may deteriorate this product's performance or cause malfunction, external deformation or breakage.
- Use the accessories like an earphone cautiously.
- If you are exposed to loud sound for long periods of time, damage to your hearing can occur.
- Make it rule to record important data separately.
- Input data such as telephone numbers for a mobile phone may be corrupted due to user's inadvertence or unexpected problems.
- Make sure not to be in water or moisture.
- If either mobile phone or battery is immersed in 'water' or 'liquid', the color of immersion-checking label affixed to the mobile phone
 or battery will be changed. In the case of malfunction due to such reason, free service warranted by Motorola will be rejected.
- # This product should not be added with any separate equipment that may cause an alteration to its original performance as described on type registration.

To use the mobile phone safely and for a long time,



Make sure to use authentic goods only.

Using an unauthorized battery or charger will shorten a life cycle of the mobile phone or deteriorate its performance.



Be careful not to cause damages to the glass of mobile phone display.

- The LCD may be damaged if it is given a strong impact or is dropped to the ground.
- If the glass gets damaged, please do not touch it by hands, but contact the nearest Motorola service center immediately.



Do not dry an immersed mobile phone with a heating apparatus.

If you dry an immersed mobile phone or battery with a heating apparatus may cause a mobile phone's explosion and external deformation or failure. Do not turn on the power while the phone is wet. Instead, separate a batter from the phone and contact a service center designated by Motorola.



Read this 'For your safety' carefully in order to secure safety of the user and to prevent damage to property. Please keep this manual in the place which can be accessed at any time by the user.

To use the mobile phone safely and for a long time,



Use and keep the phone at room temperature.

If a mobile phone or batter is placed at very hot places (inside a car in summer, an airtight place under the direct sunlight, near the fire, etc), it may run into a danger of explosion fire or external deformation. If it is used and kept at very cold places, it may reduce the capacity and lifetime of the battery.



Keep the mobile phone clean.

- If there are foreign substances on a metal part of a charger or battery-charging contact, the phone may not be charged
- Use smooth cloth to clean the mobile phone. Using chemicals (such as alcohol, benzene, thinner, etc.) for cleaning purpose may cause a fire.



Do not give strong impact to the mobile phone, and do not disassemble or modify it.

Giving a strong impact or dropping the mobile phone or battery may cause the phone to run into failure or explosion. In case of disassembling or modifying the mobile phone inadvertently, a free service will be rejected



Do not use the phone while charging.

If you use the mobile phone while charging it with a charger or USB data cable, you may have a risk of electric shock or fire. Make sure that you use the phone alter separating it from USB data cable or charger.



Use a ground-available outlet for PC power when using an USB data cable.

If you connect the phone with PC (personal computer) via an USB data cable, you may encounter a risk of electric shock depending on the grounding state of the PC power.



Do not place items containing magnetic components.

The magnetic strip such as a credit card, phone card or transportation ticket, can be damaged by the phone.

Read this 'For your safety' carefully in order to secure safety of the user and to prevent damage to property.

Please keep this manual in the place which can be accessed at any time by the user.

To use the mobile phone safely and for a long time,



Make a back-up record of the input information in mobile phone.

- Input information like telephone numbers can be deleted upon user's inadvertency, upgrade, repair or unexpected problem.
- A manufacturer shall not be responsible for any information loss.



Do not hold the antenna when the phone is in use.

If you hold the antenna, it can affect call quality, it also may cause the phone to operate as higher power level that needed and shorten talk and standby times.



Keep the phone out of reach of animals or children.

If children or animals suck or bite the mobile phone or battery, they may run into a risk of having an electric shock, explosion, exposure to electromagnetic wave, damaged parts (rubber stopper) stuck in the throat, and suffocation. In case a child use the phone, make sure that they are fully aware of this precaution.



Be careful when you use a necklace or cord for the mobile phone.

Be careful that using a necklace or cord for the mobile phone may cause you to run into dangerous accidents like being caught in train, electric railway or car doors.



Make sure to use authentic goods only.

- Paint or metallic content on the phone may cause an allergic reaction, eczema, itching, swell, and etc.
- If any of the above symptoms occurs, stop using the phone and visit a doctor.

8 • •

Read this 'For your safety' carefully in order to secure safety of the user and to prevent damage to property. Please keep this manual in the place which can be accessed at any time by the user.

Locations for using the mobile phone,



Do not use the mobile phone in a potentially explosive atmosphere.

Turn off your phone in a potentially explosive atmosphere like construction sites and military areas. Obey all the instructions and signals posted in a potentially explosive atmosphere. Construction crews often use remote control RF devices to set off explosives.



Do not use the mobile phone in near inflammable materials.

Do not install or use accessories onto your phone in a potentially explosive atmosphere including gas station, gas leak areas, and deck on boats.



Do not use the mobile phone in a prohibited area like air crafts and hospitals.

Using a mobile phone may cause accidents in some aircrafts and hospitals using RF equipment.



Do not use the mobile phone near pacemakers.

- The Health Industry Manufactures Association recommends to keep a minimum of 15cm (6 inches) from the pacemaker when the phone is switched on.
- Person with pacemaker should always use the phone in the opposite side of the pacemaker and maintain a separation of 15cm or more.

Using the mobile phone while driving,



Refrain yourself from using the mobile phone while driving.

- Using the mobile phone in driving a car may cause direct and indirect car accidents.
- Check the laws and regulations on the use of mobile phones in the areas when you drive.
 Such an act is fined penalties and demerits under the Road Traffic Act.



Do not install a hands-free device near air bag.

An air bag inflates with great force in a moment. Do not leave your phone or set up the hands-free kit near to the air bag. You may be seriously injured when the air bag is activated.

10

0 0 0 1

Read this 'For your safety' carefully in order to secure safety of the user and to prevent damage to property. Please keep this manual in the place which can be accessed at any time by the user.

Using battery and charger,



A battery for charging is consumable.

The repetition of charge/discharge will shorten its service time gradually.



The flicker of the lamp while charging the mobile phone and the battery means that the charge is not processed.

Check the charger to avoid the trouble that may occur to each device.



If the temperature of the battery is over 45°C while charging, stop the charging for your own safety.



Mobile phone and battery cover need to be combined at all time.

If not, it may cause malfunction



In case of separating a battery from the mobile phone, please turn off the power.

If not, it may cause malfunction.



Make sure to use only the TTA-authorized battery.

Using unauthorized charger may cause fatal accidents like degraded battery safety, shorter service life, explosion or fire.



Do not expose the phone direct sunlight or use it in places with high humidity.

Store in the room between 0°C ~ 40°C. It may damage the phone and cause the phone to explode.



Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.

It may damage the phone and cause the phone to explode.



Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.

It may damage the phone and cause the phone to explode

12 • •

Menu Table



S	T Service		
	Roaming	60	
	M Service Center	61	
	T Service	62	
	NATE	63	
	W	64	
	Game Box	68	
	Sounds		
-	Sounds		
	Ringtone Style	84	
	Download Ringtone	84	
	Vibrate Style	85	
	Call Alert Style	85	
	Volume	86	
	Operation Effects	87	
	D	07	
	Reminder Alerts	8/	
	System Alerts		
		88	
	System Alerts	88 88	

Display	Contents
Main Display92	Ringtone Box100
Download Wallpaper93	Wallpaper Box100
External Display94	Font Box101
Download Font Mate 94	Photo/Movie Album 101
Menu Type95	MIMS Contents Box102
Screen Design95	@Playon103
Dialing Font96	June Contents Box 105
Backlight Control97	Live Box108
Visual Expression97	Video Chatting Box108
	Flashcon Contents Box109
	Memory Manager109

8	My Moto
	Camera112
	Bluetooth127
	Subway Map134
	Dictionary136
	File Viewer138
	E-book139
	Stopwatch139
	Astro/Yoga/Acupress140
	USB Mass Storage 142

	USB Mass Storage	142
e	Organizer	
	Morning call/Alarms	146
	Calendar	148
	Scheduler	149
	Memo	150
	Diary	15
	Calculator	15
	World Time	154

Messag	ge	
Message	Box	.156
New Mes	sage	.160
Mobile Me	essenger	.163
e-mail .		.163
Report sp	am/Service.	.164
Contents	Box	.165
Settings .		.166

Ì	Phonebook	Settings
	Search Number168	Phone Settings17
	Add New Contact170	Call Settings17
	Edit Group171	Nate Settings17
	Edit Speed Dial171	Powersave17
	Call History/Time172	USIM Setting17
	Block Calls172	Set Time18
	Memory Usage173	Lock/Password18
	Automatic Backup173	Language18
	My Number173	Reset18
		Moto Customer Service 18

About

E7	Organizer	
	Morning call/Alarms	146
	Calendar	148
	Scheduler	149
	Memo	150
	Diary	151
	Calculator	153
	World Time	154

Contents

Prohibition of illegal	
modification of IMEI	
Safety precautions	
Menu table	1

O1 Before Using the Phone

Oi	Delote Ostrig the f	
01 Cc	mponents	2
02 Pa	rts of the phone	2
03 Mu	uti-access	2
04 Or	-screen Icons	2
05 Me	enu move buttons	2
06 US	SIM card	3
Ir	nstalling USIM card	3
F	Removing USIM card	3
07 Ba	ttery	3
lr	nstall/Remove battery	3
C	Charging battery	3
Е	Battery status	3
C	Charging time	3
C	perating time	3
L	ow battery alarm	3

O2 Basic Operation

1	Power On/Off	37
	Power on	38
	Power off	38
2	Video call	39
	Before making a video call	39
	Using T LIVE	39
	Making a video call	41
	Answering a video call	42
	In-video call functions	42
3	Voice call	45
	Placing a voice call	45
	Receiving a voice call	47
	In-voice call functions	48
4	Menu from the call history list	51
5	Missed calls	52
6	My Menu settings	52
7	Using menu after entering numbers	53

O3 Entering Text

1	Entering text mode	-56
	Writing Korean	
	Writing English and numbers	.57
2	Using menu when entering text	-58
	Emoticons	-58

O4 T Service

01 Roaming	60
Select system	60
Roaming auto dial	60
02 M Service Center	61
03 T Service	62
04 NATE	63
05 W	64
Move to W menu	64
Mobile Web Internet	64
e-mail	65

O4 T Service _ continued

Mobile Messenger

June video	65
Real-time TV	66
i's box	66
tossi	66
June contents	66
06 Game Box	67
07 MONETA	67
Membership & Life	68
MONETA Home	68
Preference	68
08 Melon	69
Melon Contents	70
Music search	70
Melon	72
Preference	73
Melon mp3	74

O4 T Service _ continued

Befor Using T MAP...

09 T MAP

NATE Pedestrian Navigation	78
Emercency Call	···· 78
Register Mobile Security	79
10 WINC(Mobile Address)	80
11 NATE Mobile Homepage	81
12 T Interactive	81
O5 Sounds	
O5 Sounds 01 Ringtone Style	84
01 Ringtone Style	84

O5 Sound _continued

05 Volume	- 86
06 Operation Effects	87
07 Reminder Alerts	87
08 System Alerts	88
09 Time Alert	88
10 My Etiquette	89

O6 Displa

1	Main Display	9
	Setting Standby Screen	92
)2	Download Wallpaper	9
)3	External Display	9
)4	Download Font Mate	9
)5	Menu Type	9

Contents (cont'd)

Ob Display _ continued	
06 Screen Design	. 9
07 Dialing Font	. 9
08 Backlight Control	. 9
09 Visual Expression	. 9

O/ Display

O7 Contents

O/ Contents	
01 Ringtone Box	100
02 Wallpaper Box	100
03 Font Box	101
04 Photo/Movie Album	101
Photo Album	101
Movie Album	102
05 MMS Contents File	102
06 @Play On	103
07 june Contents Box	105
Video Album	106
Menu when plaving music content	107

O7 Contents _continued	
08 Live Box	108
09 Video Chatting Box	108
10 Flashcon Content	109
11 Managing Memory	109

O8 IVIY IVIOTO
01 Camera114
Before using camera112
Photo114
Video118
Cyworld118
i's box122
Photo Frame122
Printing Service124
Video Coloring/Lettering 124
Preference 125

O8 My Moto _continu	ed
Managing Memory	126
Help	126
2 Bluetooth	127
Before using bluetooth	127
Setting bluetooth mode	128
Connecting bluetooth device	e129
Preference	132
My device	133
3 Subway Map	134
View Route Map	134
Search Route	134
My Route	135
Station Info	135
Lost Property Office	135
Settings	135
Help	135

O8 My Moto _ continued	Ŀ
04 Dictionary	136
English-Korean	136
Korean-English	137
My Vocabulary	137
My History	137
Settings	137
05 File Viewer	138
06 E-book	139
07 Stopwatch	139
08 Astro/Yoga/Acupress	140
Astrology	140
Yoga	140
Acupressure Guide	141
09 USB Mass Storage	142
USB data cable	142
Installing External memory	143

O9 Organizer	
01 Moring call/alarms	146
Easy alarm	146
Morning call	147
My alarm	147
02 Calendar	148
03 Scheduler	149
Schedule	149
To-do	149
Anniversary	149
D-day	150
Meeting planner	150
04 Memo	150
05 Diary	151
Photo diary	151
Diet diary	152
06 Calculator	152

07 World Time

	10 Message
146	01 Message Box
146	02 New Message
147	Using background
147	Using Avata
148	03 Mobile Messenger
149	04 e-mail
149	05 Report Spam/Service
149	06 Contents Box
149	07 Settings
150	
150	
150	11 Phonebook
151	01 Search Number
151	Search All

154

- 1	Jivioobago
01	Message Box
02	New Message
	Lleing background

2 New Message 1
Using background1
Using Avata 1
3 Mobile Messenger 1
4 e-mail1
5 Report Spam/Service 1
6 Contents Box 1
7 Settings 1

Search Number	16
Search All	16
Group	16
Speed Dial	16
Number	16

Contents (cont'd)

FIIOHEDOOK _continued
02 Add New Contact 170
Save by phone170
Save by USIM170
03 Edit Group171
04 Edit Speed Dial171
05 Call History/Time 172
06 Block calls172
07 Memory Usage 173
08 Automatic Backup173
09 My number175

11 Dhanahaak

12 Set	ttings _	continued		
01 Phone 9	Settings		17	76
Sound	s		17	76
Display	y		17	76
Messa	.ge		17	76
Came	a		17	76

12 Settings _continued	
june Setting	176
Bluetooth	177
T LIVE Settings	177
02 Call Settings	177
Answer Options	177
Auto area code	177
Airplane Mode	178
Network Settings	178
03 Nate Settings	178
04 Powersave	179
05 USIM Setting	179
06 Set Time	180
07 Lock/Password	181
Phone Lock	181
Privacy Lock	181
Service Key Lock	181
Restric Call	182

Change Password

182

12 Settings _ continued	
08 언어/Language	182
09 Reset	183
10 Moto Customer Service	183
Call Center	183
Search Service Center	184
Troubleshooting	184
11 About	184
13 Appendix	
01 Accessories	186
02 Troubleshooting	186
03 Spec and Feature	187
04 Authentication label	187
05 Specific Absorption Rate	188

06 Collecting wasted-mobile phones - 189




Before Using the Phone

Components	22
Parts of the phone	23
Multi-access	26
On-Screen Icons	28
Menu move buttons	29
USIM card	31
Battery	33

1. Components

Before using the phone, make sure that you have received all the components.

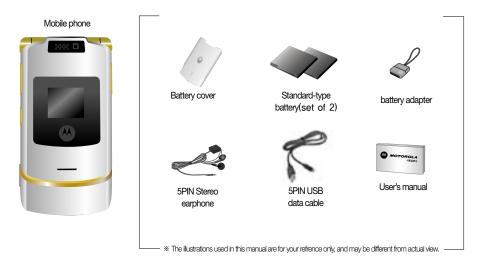

2. Parts of the phone

Part names




2. Parts of the phone

Part names



Keypad

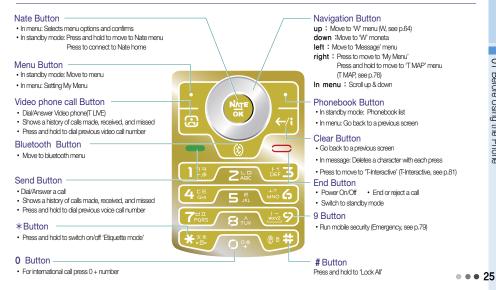

3. Multi-Access

You can use Message, @Playon, June contents, Motorola features, running function, W, NATE, and voice/video phone. Ex) You can place a voice call while using the internet.



Run Multi-Access





- If you press Multi access buton while using Message, @Playon, june contents, Motorola features, running function, W, NATE, or Voice/Video call, multi-access icon will appear on the standby screen.
- Select the function and press (**).

Note

- When using Multi-Access, Help runs automatically on the standby screen. You can set on/off of viewing Help function.
- When you have turned off Help function, you can press and hold (Left) to view Help again.







Setting up Help screen

Multi-Access screen

- When Multi-Access function is retricted, information window displayed on the screen.
- · You can only use Multi-Access functions from the system memory. (Except when the function could effect the phone's stability.)

Icon description

	Message	Move to new message and message box. (Message, see p.156)
***	@Playon	Use the short cut key functions in @Playon menu. (@Playon, see p.103)
	june contents	Move to june contents box and play the downloaded content.
8	Motorola Functions	Use Organizer (Scheduler(see p.149), Memo(see p.150), World Time(see p.154), Subway Map(see p.134), Dictionary(see p.136), Calculator(see p.153), E-book(see p.139)].
	Running Functions	Using the current Multi-Access function, check the running fuctions from the list.
0	W	Move to W menu and use the various functions. (W, see p.64)
N	NATE	Connect to NATE or june Contents Box.
(A)	Voice/Video call	Use the recent call history, phonebook, and placing a call functions.

4. On-Screen Icons



U JII JII	, , ,	U⊗	
C	Voice call or Nate is connected.	0	The stereo earset is connected.
\n	Video call is connected.		You have recieved voice or text message.
@	You have received a e-mail.	B	The external memory card is inserted.
6	Phone is locked. (Lock all,Privacy,Lock service)	6	Bluetooth is being used. (Bluetooth, see p.128)
	The alarm has been set and is on. (Simple alarm,Morning call,My alarm)	â	Touch pad is locked
()	Incoming calls has set to Bell mode.		
	Tells you the status of Tells you the status of Tells you the status of Tells you the status of		
量到	USB cable is connected. (It varies depending on the receive mode selected)		
☆	You have set the phone as flight mode.	1	The phone is charging through USB cable or car charger
R	The roaming service (general) is being used.	BGR	The roaming service (3G) is being used.

Service is not available.

Tells you the strength of the network signal.

5. Menu move buttons

How to move between menu in external LCD



How to use the menu displayed on the bottom of the screen



How to move the cursor and select a menu



5. Menu move buttons (Cont'd)

When a scroll bar is displayed



If ▶ is displayed on a side of the menu



If ◀ ▶is displayed on the screen



If
is displayed on the screen



6. USIM card

Insert USIM(Universal Subscriber Identity Module) card supports from SKT in order to use the phone.

Installing USIM card



- Remove the battery cover and the battery.
- Lift to remove the battery.Lift to remove the battery.
- Insert and slide the USIM card into the USIM card holder.
 - Make sure that the USIM card is inserted properly and that the gold contact area on the card is facing downwards.
- 4 Push down and place the battery.
- Slide the battery cover upwards until it snaps back into place.

30 • •

6. USIM card (cont'd)

Removing USIM card



- Remove the battery cover and the battery. (see p.33)
- **2** Push upward to remove the USIM card.
- Place back the battery and the battery cover properly. (see p.33)

- Emergency call can be made with out the USIM card.
- Press (Right) and enter the emergency number and press (when USIM card is not in the phone.
- You can use menu on standby screen without USIM card.

Note

- For your privacy, set the USIM card password before you use.
 (USIM preference, see p.179)
- The metal contact of the USIM card can be easily damaged by scratches.
- Be careful not to loose or transfer the ownership to the other person.

 The call charge fee and other service fee is charged to USIM holder.
- The battery life can be shorten when using the USIM card with the transportation card.
- · Make sure the vbefore you install the USIM card.
- The phone can not be recognized the LISIM card when the power is o
- For more details about the USIM card, please contact SKT service center.

7. Battery

Installing the battery



- The battery charge terminal and the phone charge terminal should be engaged as shown in the figure.
- Push down the battery until it snaps.

Place the battery cover to the battery cover home, slide the battery cover upwards until it snaps.

Removing the battery



- Push and slide down the battery cover and lift up from the battery cover home as shown in the figure.
- **2** Hold and lift up the battery removal home as shown in the figure.
- Separate the battery from the phone.

CAUTION

- \bullet Make sure the power is off all time when removing the battery.
- Removing the battery when the power is on could damage your phone.

7. Battery (cont'd)

** The battery is not fully charged when you purchase it, make sure to charge the battery before using the phone.

 
* You must use a travel charger or a car charger in order to recharge a completely discharged battery.

 
Charging the battery



Charging a battery with a battery charger 1) Connect the trougle phonon cookie to the receive of the

- 1) Connect the travel charger cable to the rear port of the battery charger.
- Connect the power cord of the travel charger to an electric outlet, and check if the triangular lamp on the travel charger cable jack flickers in amber. (100V~220V)
- 3) Insert the battery to the battery charger socket.
- (When inserting or removing a battery to/from the charger, check the direction of the battery release button on the charger.)
- 4) The charging status is displayed on the triangular lamp on the travel charger cable lack.





- 2) Connect the travel charger cable jack to the port of the charger adapter.
- 3) Connect the charger adapter cable lack to the charger connector in the left side of the handset.
- 4) The charging status is displayed on the triangular lamp on the travel charger cable jack.
- 5) If the charger lamp flickers while charging the battery with the travel charger, connect the charger adapter to the handset, and then connect the travel charger.



Optional travel charger

Travel chargers are not included in the package for conservation of resources. You can purchase one from the shop or a service center.



Charging a battery with a USB data cable

- You can charge your phone by connecting it to the PC through a 5PIN USB data cable or a 24PIN USB data cable using a charger adapter.
 - In order to use the charging function with a 5PIN USB data cable, you should have SKT intergrated USB driver in your PC.
 - A 5PIN USB data cable supports both the charging and data communication functions.
 - A 24PIN USB data cable using charger adapter only supports the charging function.

Note

Display icon when charging

The charging icon is displayed if you charge the battery with a 5 PIN USB data cable or a car charger



 The screen when charging the battery while the phone is off



Battery icons when power is off



When charging a battery with a travel charger, the charger lamp shows if the battery is fully charged (turned into green from red)

7. Battery (cont'd)

Battery charging status

Type	Charging in progress	Charging competed
Travel chargqer cable jack	Red	Green

The lamp blinks in red

- The charging terminal has a poor contact. Check if the battery is clean and try again.
- The battery or other part is defective. Contact our service center.

The lamp blinks in amber

 The battery is being charged in a too hot or cold place. The lamp turns to red and start charging when the room temperature is returned.

Battery charging time

Туре	Standard battery (950mAh)		
Time	Apprx. 160 minutes		

- . The chaing time is depending on the battery status and the charger.
- The charging time may increased if the rated voltage of the charger is low.

Bttery operating time

Туре	Standard hold time	Voice call time	Video call time
Standard battery(950mAh)	Approx. 200	Approx. 240	Approx. 130
	hours	minutes	minutes

- * Based on a new battery/Bluetooth mode off/no external memory
- The above service time of a battery pack is measured on the basis of the measurement of cell
 phone battery service time and display standard by SKT. Depends on the usuage, measurement
 may be different from the manual.
- If you use a bluetooth function, the amount of battery consumption will be larger.
- If you have more call time, it would be more convenient to charge a battery everyday.
- In call time, using NATE, @Playon, WINC, MP3, takes more energy and shorten the operating time.
- . When receiving a call, it takes energy as much as sending a call.
- · Hold time becomes shorter in out-of-service areas.
- Service time may vary according to change status, temperature (high/low), wave status in the place, background light and light status.

Low battery alarm

- If a battery is almost used up, its ' \(\equiv \) ' will flash with a comment of 'Recharge your battery."
- Even if you press the button while ' 🔳 ' is flashing, the lamp of the screen and buttons will not be on.
- Charge the battery immediately, the functions of the phone may not work normally.



O2

Basic Operation

Power On/Off	37
Video phone	39
Voice phone	45
Menu from the call history list	51
Missed calls	52
My Menu settings	52
Menu after entering numbers	53

1. Power On/Off



Power On

Press and hold the button for 3 seconds while the phone is off.

The graphic set by the user is displayed, then the phone switches into the standby mode,

Power Off

Press and hold the button for 3 seconds while the phone is on.


A graphic dissapears and the power is turned off.

Note

You can change the graphic by selecting
. (Left) button ▶ Display ▶ Main Display. (Download Wallpaper, see p.92)

2. Video Call

You can make a video call. (Only if the receiver's phone supports the video call service)

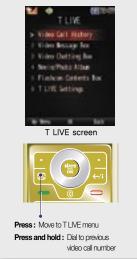

Before making a video call

- Call quality can be different depends on a base station.
- Check if the receiver's phone supports video call service.
- If the receiver's phone does not supports the video call service, call may be change to a voice call.
- Use the stereo earset if you can't hear the receiver's voice because of the noises.
- Depends on the usage preferences, battery consumption increases.

T LIVE

Press the 🖾 button on standby screen

Move to T LIVE where you can manage all video call functions.

VT Call History

Press the

button on standby screen ▶ Press

- Press to check all, outgoing, incoming, and missed call history.
- After entering the phone number press to check the call info. and press to use various menu functions.

38 ● ● ●

Press

2. Video Call (Cont'd)

You can make a video call. (Only if the receiver's phone supports the video call service)

T LIVE (Con't)

Video Message Box

When fail to make a video call, you can check a video message, save, and delete in the video message box.

Press ☐ on standby screen ▶ Press 골

Menu description

Video Messages: If he/she fails to receive the video call, you can check his/her message and delete, connect to MMC, and connect to voice call by pressing

MMC Connection: you can check his/her video message.

 $\boldsymbol{\mathsf{MMC}}$ Register : Register the user to MMC.

MMC Direct Register: Register direct MMC service.

MMC Cancellation: Cancel the MMC function.

VTC Contents Box

Using the VTC contents box function, you can manage recent text messages.

Press ☐ on standby screen ▶ Press ☐ 3

 you can set the fuctions such as protect/lock, delete(delete, delete all) by pressing
 (Left).

Movie/Photo Album

You can manage a photo or a movie file.

Press ② on standby screen ▶ Press 45

Select and photo or movie and press
 to set it as a default movie file.
You cannot set the file that is in the external memory.)

6 T LIVE Settings

You can set the preferences about a video call.

Press ☐ on standby screen ▶ Press ☐ Menu description

Spk Setting: On/Off the speaker during a video call

To voice: If the receive does not support the video call.


it connects to a voice call

Alert VT call: Informs you if the receiver's phone supports the video call

Screen Mode Control: Allow/block release the display mode during a video call

Making a video call

Enter the phone number ▶ Press 🖾

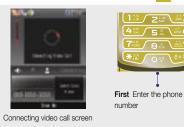

After conneting with the receiver, you can set the camera lens and speaks through a speaker phone.

- Use the stereo earset if you can't hear the receiver's voice because of the noises.

If you press and hold you can call directly to the most recent call number.

It connects to the video call, only if the receiver's phone supports the video call service.


Press when you end a call.

2. Video Call (Cont'd)

You can make a video call. (Only if the rreceiver's phone supports the video call service)

Receiving a Video Call


Press or open the folder when you receive a call

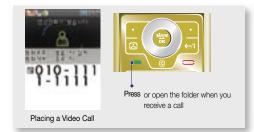

- If you press and hold Volume button when receiving a call, bell/vibrate switches.
- After conneting with the caller, you can set the camera lens and speaks through a speaker phone.
- Use the stereo earset if you can't hear the caller's voice well because of the noises.
- Press when you end a call.

In-Video Call Functions

Button information in-video call

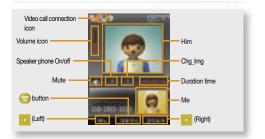

- Press to send selected picture/image to him.
- You can express your emotion as a image by pressing (Right).
- When bluetooth and stereo earphone is connected to the phone, call still continues even if you close the folder.

In-call functions

Speakerphone Off	Set speakerphone off/off.
Mute	block the sound to be sent to him/her.
vt chatting	Live chatting service. In vt chatting press (Left) to use vt call mode, speakerphone off, mute, rec_cap, hide me, phonebook. Khatting messages are save into Live Box. (Live Box, see p.108)
Rec_Cap	You can capture/record him, or capture/record me and save into your phone.
Chg_Disp	Switch the screen display to main me/him full me/him.
Chg_lmg	Select and send from photo/movie album and flashcon.
Set_Cam	Switch the camera between the internal/external camera and use zoom, bright, contast, effects, and rotate functions.
New Mesage	Send SMS (Short message).
Send flashcon	Send flashcon (moving emoticon).
Phonebook	Search and manage the phone numbers saved in the phone.
To Voice	Switch to a voice call.

2. Video Call (Cont'd)

You can make a video call. (Only if the receiver's phone supports the video call service)

In-Video Call Functions

Video chatting

You can send a message in-video call.



- You can write maximum Korean 40 letters, and English 80 letters.
- In-video call, you can use phonebook, turn on/off the speakerphone, mute, record/capture, and change image by pressing
 (Left).

Record/Capture


You can record/capture him/her or yourself and save it to the phone.

Press
☐ (Left) during a call ► Select Record/Capture



- When recording the video call, press
 (Right) to cancel or press
 to save it into Movie Album
- · You can find captured photo in Photo Album.
- In-video call, you can't use recorded his/her video as your main image.

3. Voice Call

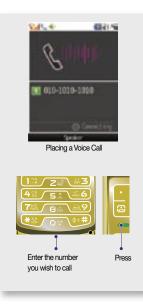

Before Placing a voice call

- If you press and hold in the standby screen, the last connected number in the 'Call List' is dialed.
- If 'All Lock' is set in the phone, you must enter the password to place a emergency numbers (111, 112, 113, or 119) or the speed dial number 1 and 9 (Mobile Security).

Placing a Voice Call

1 Placing a call by entering a phone number

Enter a phone number on the standby screen and press

- When you start to enter a number, the easy calling function runs to find the matching number from the recent call list. You can select a number with and place a call with.

 *Easy Calling: Easy calling service finds the matching recent call number when entering the phone number.
- You can change the number style pressing Camera button.
 (Dialing Font. see p.96)

Operation

3. Voice Call (Cont'd)

Placing a Voice Call (Cont'd)

Placing a call to a number stored in the phonebook

- You can search the numbers in the phonebook to place a call. (Search Number, see p.168)
- If you press after selecting a person, the 'representative number' of the selected person is dialed.

Placing a call with speed dial

Press and hold the last digit of the speed dial number

Example

Speed dial number 17	Press 1 32 and then press and hold 788
Speed dial number 173	Press 13 and 78 and then press and hold 83

 You can easily place a call with the speed dial number stored in the phonebook. (Edit Speed Dial, see p. 171)

Placing a call with electronic dialing


Enter a phone number ▶ Enter 'P' or 'T' with ﴿ , and enter the number to be dialed electronically ▶ Press



- You can have the phone to memorize several numbers according to the voice announcement when you use ARS.
- You can cancel the electronic dialing by pressing 🚜 at any time during a call.

Buttons for electronic dialing

(9)	Р	The numbers entered after 'P' are transmitted only when you press or (Left).
9	Т	The numbers entered after Υ are transmitted automatically in a short while.

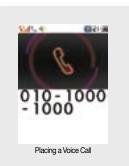



Press or open the folder to answer the call

Receiving a Voice Call

For an incoming call, open the folder or press — to receive the call.

- The phone rings or vibrates depending on the setting. In order to switch ring or vibration to mute, press and hold Volume button.
- You can hang up the phone by pressing .

Note

You can download graphics from NATE, and change the setting in 'Main Display' of the 'Display' menu.

- Depending on the size of the graphic, it may take some time to loading up.

(Download Wallpaper, see p.92)

3. Voice Call (Cont'd)

Receiving a Call (Cont'd)

Receiving a call with a stereo earset

Press the stereo earset key to receive the incoming call.

- After the call is finished, press or press and hold the sereo earset key to hang up the call.
- If a call is incoming as the stereo earset is connected, the stereo earset rings regardless of the ring/vibration settings. Once a call is connected, it continues even if you close the folder.

Receiving a call setting

Press · (Left) ▶ Press -> Press -> Press -> Press -> Press ->

· For incoming calls, you can answer the call depending on the mode you have selected.

Menu description

Open the folder: Open the folder to receive calls.

All key: Press any key except to receive calls

Send key: You can receive calls only by pressing

Auto connect in 3 sec .: The call is connected automatically in 3 seconds

after the ring.

In-Voice Call Functions

You can use various eonvenient functions during a call

during a call and select the menu.



New Message

(Left) during a call Press

 You can send short message (SMS) only. (New Message, see p.160)

Phonebook

- · You can use the phonebook menu during a call. (Phonebook menu description, see p.169)
- · While you are searching the phonebook, you cannot edit the number or use some of the menu function such as 'call me free'
- * Call me free The receiver, not the caller, pays the call charge.

Mute

(Left) during a call Press

- · You can mute your voice over the phone during a call.
- . To release the function, select Release Key Tone.
- When you use the function, is displayed.
- . This function is released automatically if the call is finished.

O DTMF Off

Press (Left) during a call ▶ Press 488

- You can block the key tone during a call.
- . To release the function, select Release Key Tone.
- This function is released automatically if the call is finished.

6 Send My number

Press • (Left) during a call ▶ Press 55

 Your number is displayed while the phone is sending the number, and after the number is sent, the phone returns to the call mode.

(1) Hold All On

Press (Left) during a call ▶ Press 56

- You can hold the call temporary.
- You can also press (Right) button to hold the call.

3. Voice Call (Cont'd)

In-Voice Call Functions (Cont'd)

New Call

- · The multiparty or conference service is available.
- you can swap between calls by pressing
 and when the second call is connected, the first call is automatically placed on hold.
- Place one call on hold and while the active call is on, press and then select Join all to setting up a conference call.
- * If you are not registered multi-call service from SKT, new call service is not available. Contact SKT Customer Center for further information.

1 Using Speaker

Press (E) during a call

- When you use the speaker,

 is displayed. Press
 to release the function.
- When you use the speaker, the microphone must face the user at a distance of not farther than 30 cm
- . This function is released automatically after the call is finished.

Voice in call

Press Volume button In-voice call

- · You can adjust the voice in call.
- Placing the second call

Using various ways you can make a multiparty or conference call.

Placing a call from phonebook

Placing a call from the recent call history

Press Multi-Access button during a cal ► Select voice/video call ► Select the recent call number ► Select the number ► Press

Placing a call using new call menu

Press (Left) during a call ► Select New Call from the menu ► Enter the number ► Press ■

4. Using Menu from Call History/Time





Search the number from the Call History list ▶ Press (Left)

- For restricted numbers, you can only use Time Info, Repeated Calls on, and Delete functions.
- e-mail function is available only when sender and receiver have registered e-mail.


Menu description

New Message	Send a message.
@Messenger	Real-time messenger service. (@Messenger, see p.163)
Cyworld	Connect to the mobile homepage. (NATE mobile homepage, see p.81)
Send/Connect	Send a e-mail: Send a e-mail to the number you have entered. (e-mail, see p. 163) Voice message: Record and send a voice message to the number you have entered. (The receiver gets the text message for detail) Call me free: The receiver, not the caller, pays the call charge. Number via message: The receiver, not the caller, pays the call charge.
Time Info	Check the call duration.
New Contact	Save the phone number in the phonebook, if it's not saved in the USIM card.
Repeated Calls on	Manage all repeated calls.
Block Number	Block the selected number.
Delete	Delete all or delete the selected number.

50 ●●●

5. Missed Call


If you fail to receive a call, following image is displayed on the screen.

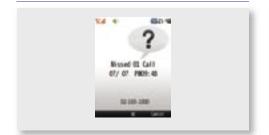

- If you press → when 'Missed Call' message box is displayed, you can check the list of incoming calls.
- To check missed calls from the menu go to 'Phonebook' ➤ 'Call HistoryTime' ➤ 'Received Calls'.
- To check from the call history list, press
- By pressing , your call will be connecting to missed call number.

6. My Menu Settings

You can register up to 12 frequently used menu in My Menu.

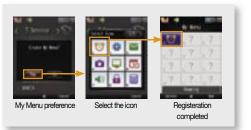

Select a menu ▶ press (Left) ▶ Select 'Yes' ▶ Press (to select the icon

- Press on the standby screen to check My Menu, Register or
- The menu will not be deleted even if you copy to My Menu.

7. Using Menu after entering a number

You can use the following simple function in relation with the phone number.





Menu description

New message	Send a message
@Messenger	Real-time messenger service (Mobile Messenger, see p.163)
Cyworld	Connect to the mobile homepage (NATE Mobile Homepage, see p.81)
Send/Connect	Send a e-mail: Send a e-mail to the number you have entered. (e-mail, see P.163) Voice message: Record and send a voice message to the number you have entered. (The receiver gets the text message for detail) Call me free: The receiver, not the caller, pays the call charge.
Search Number	Search the number from phonebook
Hide My Number	Hide my phone number to the receiver
Go to Calendar	Move to the date on the schedule calendar corresponding to the number entered

52 ●●●