



# 09

 **Organizer**




<b>1</b> Morning call/Alarms .....	146
<b>2</b> Calendar .....	148
<b>3</b> Scheduler .....	149
<b>4</b> Memo .....	150
<b>5</b> Diary .....	151
<b>6</b> Calculator .....	153
<b>7</b> World Time .....	154

# 1. Morning call/Alarm

The phone provides bell or vibrates at the designated time.

Press **•** (Left) ▶ Press **AT MNO 6** ▶ Press **1**

 
## Note

- If an alarm is on,  is displayed on the screen and when it is off, icon is no longer displayed on the screen.
- If the phone is set to 'Vibrate' or 'Etiquette mode', the phone vibrates instead of rings. (The phone rings for morning call.)
- When alarms set to the same time, operate in the following priority order: (Easy Alarm → Morning Call → My Alarm 1~5)
- You can turn off the alarm by opening/closing the folder when alarm rings.
  - You can also turn off the alarm by pressing the Volume button, Camera button, , , Hold switch or **•** (Right).
- If you set the morning call to repeat more than once, you must press **•** (Right) to turn off the morning call.

## Easy Alarm

When the time reaches to the period user have set, the alarm rings once.

Press **•** (Left) ▶ Press **AT MNO 6** ▶ Press **1** ▶ Press   
▶ Press  after selecting Easy Alarm

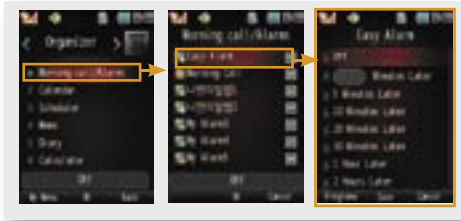




- If the designated timer for easy alarm expires, the alarm rings once.
  - After alarm rings once, it automatically turns off.
- You can set time by 1~999min.

## Morning Call

 You can set the repeat count and cycle for morning call at the required time.

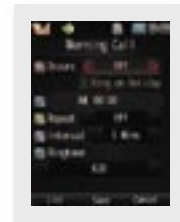Press **•** (Left) ▶ Press **AT MNO 6** ▶ Press **1** ▶ Press   
▶ Press  after selecting Morning Call




- You can set alarm at the desired day of a week by selecting a day with **•** (Right) and setting the desired time in the cycle field.
- If a morning call sounded with one or more repeat times previously set, you can set Morning Call Standby function by pressing .
  - If the repeat time set is ended or you do not press **•** (Right), the internal and external screens are waiting for Morning Call.
- Even if you open or close the folder or press the Volume button and Camera button, the phone is set to Morning Call Standby and the morning call is sounded at the time of repeat previously set.
- If you press  upon Morning Call sounding, Morning Call of the day will be cleared regardless of a repeat time previously set.

## My Alarm

 You can set the Alarm to ring at a desired time.


Press **•** (Left) ▶ Press **AT MNO 6** ▶ Press **1** ▶ Press   
▶ Press  after selecting My Alarm

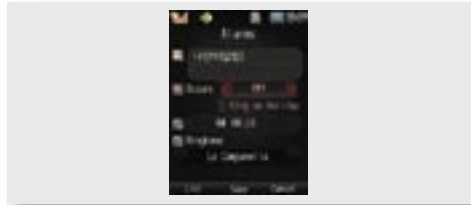

- You can set an alarm to be sounded at a desired time by setting a time and interval.
- You can enter maximum 20 Korean characters and 40 English character for memo, a message content will be displayed when an alarm is sounded.
- You can set alarm at the desired day of a week by selecting a day with **•** (Right) and setting the desired time in the cycle field.

## 2. Calendar

 If you set and save a schedule, alarm rings on a corresponding date and displays the stored content.

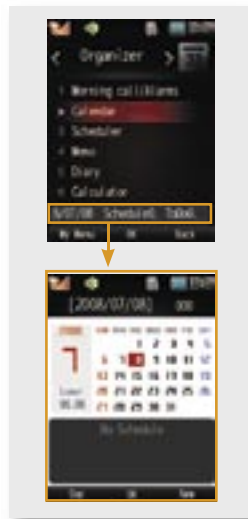

Press **•** (Left) ▶ Press **ALT MING 6** ▶ Press **Z LID ABC**

■ You can select New Schedule, New Things To-do, New Anniversary Date, New D-Day, and New Meeting Planner by pressing **•** (Right) at a desired date.  
(You can add 180 items for schedule, things to do and anniversary date, 30 items for d-day and 50 items for meeting planner.)

■ If you select 'Calendar top/bottom' or '3 Months top/bottom' in 'Set Standby', the current month is displayed with the scheduled dates in different color.

■ When schedules set to the same time, alarm operate in the following priority order:  
– D-Day → Anniversary → Schedule → Meeting Planner

■ Schedule start up page is the monthy calendar.

– Press **•** (Left) to find the schedules by Day/Month/Year.

■ Press **•** (Left) to use Month, Week, Go to a date, Delete, Delete by day or month, and Delete all.

– When setting View by week, select a day of a week and press **ALT DAY** to check the daily schedule.

### Menu description

**New schedule :** The phone provides the alarm and displays memo in accordance with the alarm cycle until the cycle is expired.

**New to-do :** The to-do item is displayed as a block from the start date to the end date.

**New anniversary :** The phone provides the alarm and dispys memo at the designated anniversary.

**New D-Day :** Days remaining to or passed from a specific day is displayed on the standby screen.

The alarm rings on the designated date.

 
**New meeting planner :** If you enter a time, the times of major cities of the world are displayed. The alarm rings and the memo appears until the end date of the selected period.

## 3. Scheduler

You can view or add schedule you have entered in.

### Schedule

Press **•** (Left) ▶ Press **J-L DEF 3** ▶ Press **J-L DEF 3** ▶ Press **1 LID**

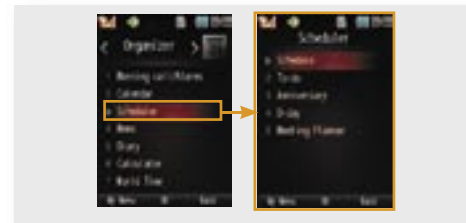

■ Press **•** (Left) to use View by month, Delete or Delete all.

■ Press **•** (Right) to add a new schedule.

### To-do

Press **•** (Left) ▶ Press **ALT MING 6** ▶ Press **J-L DEF 3** ▶ Press **Z LID ABC**

■ Press **•** (Left) to use View by month, Delete or Delete all.

■ Press **•** (Right) to add a new to-do.

### Anniversary

Press **•** (Left) ▶ Press **ALT MING 6** ▶ Press **J-L DEF 3** ▶ Press **J-L DEF 3**

■ Press **•** (Left) to use View by month, Delete or Delete all.

■ Press **•** (Right) to add a new schedule.

## 3. Scheduler (Cont'd)

You can view or add schedule you have entered in.

### D-day

Press **•** (Left) ▶ Press **6** (MNO) ▶ Press **3** (DEF) ▶ Press **4** (GHI)

- Press **•** (Left) to use View by month, Delete or Delete all.
- Press **•** (Right) to add a new d-day.
- If you select the calculation by date for D-day setting, D-day will be indicated from a current date based on the date entered. If you select the calculation by a certain date, entering remaining dates or passing dates based on the date entered will indicate D-day.

### Meeting Planner

 
Press **•** (Left) ▶ Press **6** (MNO) ▶ Press **3** (DEF) ▶ Press **5** (JKL)

- Press **•** (Left) to use View by month, Delete or Delete all.
- Press **•** (Right) to add a new meeting plan.

## 4. Memo

You can store upto 50 memos in the phone.

Press **•** (Left) ▶ Press **6** (MNO) ▶ Press **4** (GHI)

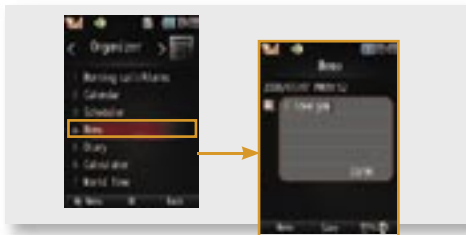

- Press **•** (Right) to add a new meeting plan.
- You can enter a memo of upto 48 Korean letters or 96 English letters.
- When checking a written memo, you can edit it by pressing **•** (Right).
- Press **•** (Left) on the list to delete, protect/lock or delete all.


## 5. Diary

 You can write the photo diary or diet diary on the phone.

### Photo Diary

You can write and manage diary with the photos.

Press **•** (Left) ▶ Press **6** (MNO) ▶ Press **5** (JKL) ▶ Press **1** (ABC)

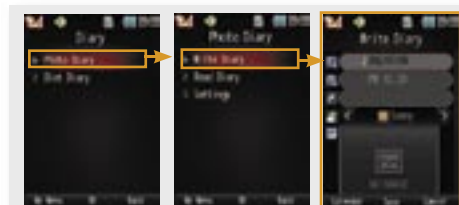

### 1 Write Diary

- The photos used in the photo diary are not deleted even if the same photos are deleted from 'Photo Album'.
- You can store upto 180 photo diaries and cannot duplicate diaries on the same date.
- You cannot use photos saved in the external memory.

### 2 Read Diary

- You can check, delete, or edit the stored photo diary.

### 3 Settings

- You can set font color and diary background.

 
## 5. Diary (Cont'd)

You can write the photo diary or diet diary on the phone.

### Diet Diary

Set goals for weightloss, this can help from this function or diet.

Press **•** (Left) ▶ Press **LT MNO 6** ▶ Press **5 JKL** ▶ Press **Z ABC**

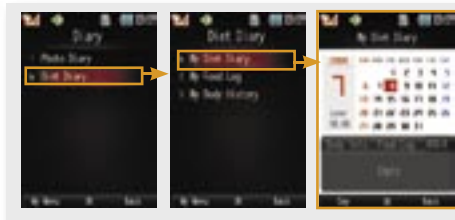

### 1 My Diet Diary

#### How to Record My Body Info

Press **•** (Left) to select a desired date on the calendar and press **None on** to record.

Press **•** (Right) to input the body info.

–You can check standard weight, B.M.I., and B.M.R.

#### How to Record Food Log

Press **None on** to select the food, press **•** (Right) to find out the total calories.

Press **•** (Left) to select [User Input] or [Add Food].

#### Note

- When searching dates on the calendar, you can search daily/monthly/yearly/records by pressing **•** (Left).
- Dates indicating that body and meal records are kept on the calendar are displayed in color, and you can check their contents on the bottom of the screen.

### 2 My Food Log

- The records are displayed.
- Press **None on** to check the monthly record.
- Press **•** (Right) to add a record.
- Press **•** (Left) to view/delete/delete all of diet records lists and graphs.

 
### 3 My Body History

- The records are displayed.
- Press **None on** to check the monthly record.
- Press **•** (Right) to add a record.
- Press **•** (Left) to view/delete/delete all of diet records lists and graphs.

## 6. Calculator


You can make simple calculation with the phone.

Press **•** (Left) ▶ Press **LT MNO 6** ▶ Press **LT MNO 6**

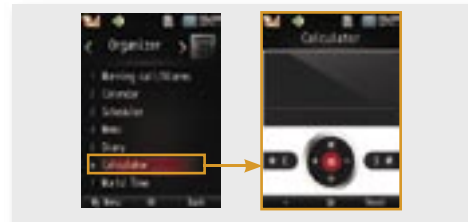

- Press **•** (Right) to make the calculation again.
- When entering numbers or symbols, press **←/i** to delete a character, press and hold to delete all.
- You can use the operators several times in a calculation.


#### Operators

 

# 7. World Time

You can check a current time of world main cities (50 countries) and city information, and set various functions.

 Press **•** (Left) ▶ Press **6** ▶ Press **7**

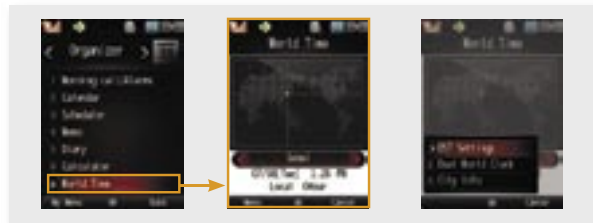

■ Press **•** to display the country, country code, area code, emergency number/information of the selected cities.

## Menu description

Summer Time(DST)	You can set summer time periods by cities. <ul style="list-style-type: none"><li>• The local time of your area and the selected city are displayed on the standby screen.</li></ul>
World Clock	<ul style="list-style-type: none"><li>• You can change the clock type on the standby screen, and you can see preview by pressing <b>•</b> (Right). (However you cannot use this function if a phone theme or flash is selected.)</li></ul>
City Info.	You can check desired city information.

 


# 10 Message

1 Message Box	156
2 New Message	160
3 Mobile Messenger	163
4 e-mail	163
5 Report Spam/Service	164
6 Contents Box	165
7 Settings	166

# 1. Message Box

You can view and manage the received messages.

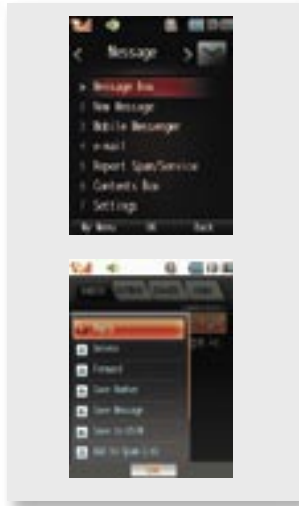

Press (Left) ▶ Press ▶ Press


- When you receive the message, the icon is displayed on the standby screen.
  - The information on the latest message received is shown at the top.
- When you receive the message with the phone number shown on the screen, press to make a call to the person who sent the message.
- If you press when receiving a voice message, you are connected to the voice mailbox, and you can listen to the recorded voice message.
- When checking the message, press to move to the previous or the next message.
  - When checking the message, press to move to the other message box.
  - When checking the text message, press Volume button to zoom in/out the screen.

## Note

 - If the capacity for received message is exceeded, the oldest message deleted first.
- You can check the received message in the standby screen using the Message Alarm and Preview. (Settings, see p.166)

## INBOX

Press (Left) ▶ Press ▶ Press ▶ Select INBOX

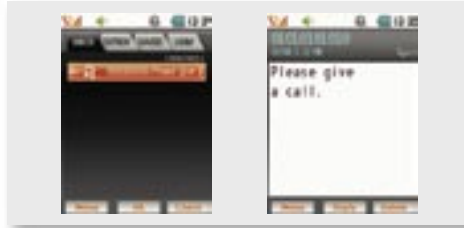

- You can check and manage the received messages. (Including voice messages)
- Select a message and press to read the message.
- The content attached to the multi-mail is automatically played.

## Icon description

	unconfirmed SMS Message		confirmed SMS Message
	unconfirmed MMS Message		confirmed MMS Message
	unconfirmed Movie Message		confirmed Movie Message

## Menu description

 
- Reply** : You can reply the message to the sender.
- Delete** : You can delete the selected message.
- Forward** : You can forward the received message to other person.
- Save Number** : You can save the phone number indicated in the message in the phonebook.
- Save Message** : You can save the selected message in SAVED box.
- Save to USIM** : If the selected message is SMS, you can save the message in USIM box.
- Add to Spam List** : Register a selected message as a spam number to block the message.
- Sort Message** : You can sort the message into name/time/size order.
- Message Search** : You can search and find the message by name/number/string.
- Delete All** : You can delete all saved message in the inbox.

# 1. Message Box (Cont'd)

You can view and manage the received messages.

## OUTBOX

Press **•** (Left) ▶ Press **7** (More) ▶ Press **1** (Outbox) ▶ Select OUTBOX

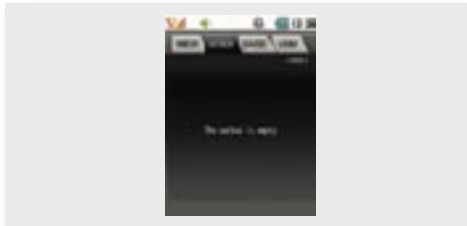

- You can manage sent message, draft message, and failed message.
- Select the message and press **More** to check the content of the message.
- While writing the message, press **•** (Left) to save the message.
  - You can press **More** to continue and rewrite the message.

### Icon description

 
	Temporary saved message
	SMS sent message
	MMS sent message

### Menu description

- Delete** : You can delete the selected message.
- Forward** : You can forward the received message to other person.
- Save Number** : You can save the phone number indicated in the message in the phonebook.
- Save Message** : You can save the selected message in SAVED box.
- Delete All** : Delete All : You can delete all saved message in the inbox.

## SAVED


Press **•** (Left) ▶ Press **7** (More) ▶ Press **1** (Outbox) ▶ Select SAVED

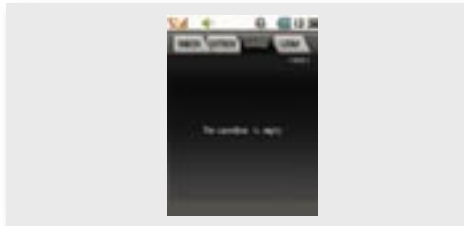

- You can move the selected messages from the inbox or outbox to the saved box.
- For outbox message, press **•** to delete, forward, save number, save message, and delete all.
- For inbox message, press **•** to reply, delete, forward, save number, save message, save to USIM, add to spam list, sort message, message search, and delete all.

## USIM

 Press **•** (Left) ▶ Press **7** (More) ▶ Press **1** (Outbox) ▶ Select USIM

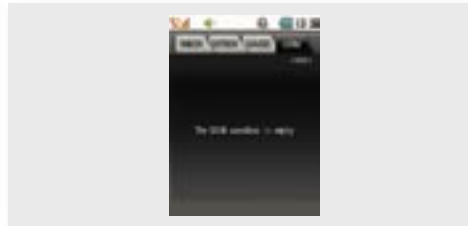


- You can manage and save the message by selecting a message in the inbox, and select the menu 'Save to USIM'.



## 2. New Message

 The integrated MMS function enables you to attach content to the long text message and send to the mobile phone or e-mail address.

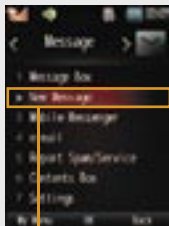

Press **•** (Left) ▶ Press **7** 7번 누르면 ▶ Press **2** 2번 누르면

- A message can be sent to upto 20 people at a time.
- You can answer a call while you are writing a message, and return to the message screen after the call.
- You can send 3 image files (photo or picture) and 1 music and movie file.
- After writing a message, you can preview the message with **•** (Right).
- ※ **MMS is an SKT's new multimedia transmission service integrating the text message function and the color mail function.**

### Note

#### Cautions in writing messages

- Messages are sent as SMS in default. However In the following cases, they are changed to MMS and additional data fee is charged: message exceeding 40 Korean letters/80 English letters, font color changed, emoticon added, avatar added, paper set, content attached (photo, movie, background music, etc.).
- If a message is changed to MMS, a message 'Converted to MMS' is displayed on the message window.

 
#### MMS fee


- The same information fee is charged for long text message, changed font color, paper set, avatar set, and emoticon added between MMS and SMS.
- Additional service fee is charged. No data call fee is charged for sending and receiving MMS. Visit SKT T-World homepage (<http://www.tworld.co.kr>) or contact SKT Customer Center for further information.

### Letter Paper

You can select the various background.

Select  **편지지** ▶ Press 

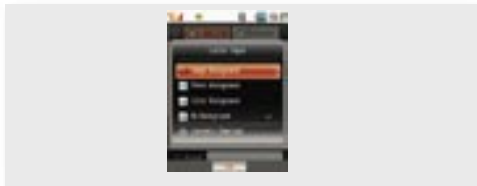


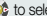
- Image Background** : You can select a image stored in the phone and set the image as a background.
- Photo Background** : You can select a photo stored in the photo album and set the photo as a background. (Press  to select.)
- Color Background** : You can select the background color of the letter paper. (Note that the content might not be identified if the letters are written on the paper of the same color.)
- No Background** : You can set the background as a white paper.
- Contents Download** : You can connect to NATE content shop and download the latest contents.

### Avatar

The character or the photo of the sender is displayed on the message receiver's phone.

 Select  **아바타** ▶ Press 

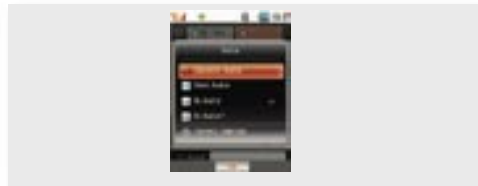


- Character Avatar** : You can set a character in the photo album as a avatar.
- Photo Avatar** : You can set the photo in the photo album as a avatar. (Press  to select.)
- No Avatar** : No avatar is displayed on the receiver's phone.
- An Avatar?** : Description on avatar is displayed.
- Contents Download** : You can connect to NATE content shop and download the latest contents.



## 5. Report Spam/Service

 To promote convenience of the user and to prevent damage caused by illegal spam, you can report the received spam messages to the spam handling center of Korea Information Security Agency.

Press **•** (Left) ▶ Press **7** 신고 Report ▶ Press **5** 신고

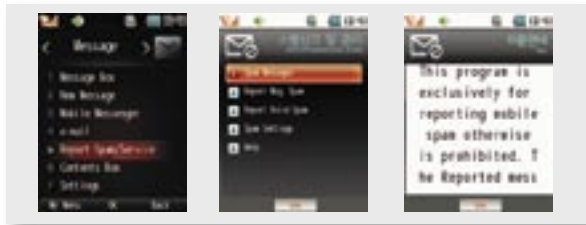

### Menu description

Spam Messages	You can check received spam messages.
Report Msg. Spam	You can report spam by selecting the spam message and press <b>•</b> (Right).
Report Voice Spam	You can report spam by selecting the spam number and press <b>•</b> (Right).
Spam Settings	You can block the number or message to set as a spam.
Help	You can check the guide for spam report.

 
### Note

- Visit the spam handling center of Korea Information Security Agency ([www.spamcop.or.kr](http://www.spamcop.or.kr)) for further information.

## 6. Contents Box

You can manage and check attachment of the received MMS.

Press **•** (Left) ▶ Press **7** 받은 메시지 POB ▶ Press **6** 콘텐츠 Content

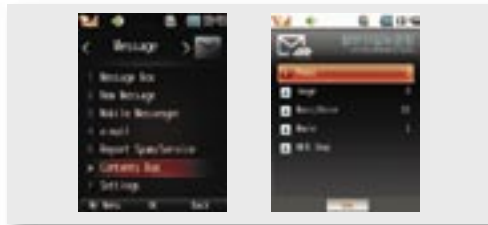

### Menu description




 


Photo	You can view and manage the attachable photos.
Image	You can store and manage the images downloaded from NATE.
Music/Voice	You can view and manage the attachable music, and voice files.
Movie	You can view and manage the attachable movie files.
Nate Shop	You can connect to NATE content shop and download the latest contents.

- If you select **최신 인기 콘텐츠** and press **•**, you can connect to NATE content shop and download the latest contents.
- Press **•** (Left) to use Send MMS, Set Background, Rename, Delete, Protect/Release, and Delete All functions.

# 7. Settings

▮ You can set preferences for the message functions.

Press  (Left) ▶ Press  ▶ Press 

- MMS Settings** : You can select and set various contents when writing messages.
- **Background Settings** : You can select the background of the message. (Letter Paper, see p.161)
  - **Avatar Settings** : You can send the character or photo with the message. (Avatar, see p.161)
  - **Font Color Settings** : You can select the font color. (Press  or  to select font color.)
  - **Photo Size Settings** : You can set the size of photos transmitted from the phone via wireless Web (Internet).
  - **Set Name Card** : You can determine whether to attach your phone name card to all the messages.
  - **MMS mode change** : You can set alarm when switching SMS to MMS message.
- Signature Settings** : You can attach the designated sentence at the end of the message.
- **Edit Signature** : You can change font color or enter emoticon by pressing  (Left), and change letter input mode by pressing  (Right).
  - **Signature Setting** : You can set the designated sentence at the end of the message.
- MSG Noti. Setting** : You can set ring volume, alarm type, and alarm on calls.
- Msg. Notification** : You can set to display the message on the standby screen when a message is received.
- Sent Msg. Auto Save** : You can set auto save option on/off for sent messages.
- Spam Settings** : You can block the message from the designated phone number and string.
- **Number Block** : You can check the number, or cancel block, add, or delete all by pressing  (Left).
  - **String Block** : You can check the blocked phone number and use cancel block, add, delete all by pressing  (Left).
  - **Spam Setup/Release** : You can set to block spam number or sentence.
- Phrase Settings** : You can set the frequently used phrase.



 
## 11 Phonebook

- 1 Search Number ..... 168
- 2 Add New Contact ..... 170
- 3 Edit Group ..... 171
- 4 Edit Speed Dial ..... 171
- 5 Call History/Time ..... 172
- 6 Block Calls ..... 172
- 7 Memory Usage ..... 173
- 8 Automatic Backup ..... 173
- 9 My Number ..... 174

# 1. Search Number

You can search the saved phone number list.

Press **•** (Left) ▶ Press **8** <sup>א</sup><sub>ת</sub> ▶ Press **1** <sup>א</sup><sub>א</sub>

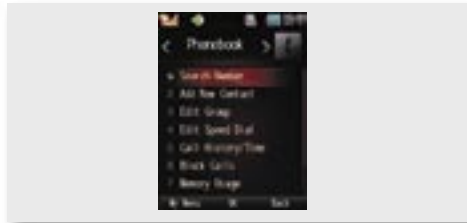

- You can check or edit phone numbers.
- If you press **•** (Right) on the standby screen, 'Search All', 'Group', 'Speed Dial', and 'Number' are displayed.
- Select a phone number and press **☎** to place a call to the number.
- You cannot delete the default mobile security number.

## Note

• You can see the phone number and group saved in USIM card only when USIM card is mounted in the phone.

## Search All

Press **•** (Left) ▶ Press **8** <sup>א</sup><sub>ת</sub> ▶ Press **1** <sup>א</sup><sub>א</sub> ▶ Press **1** <sup>א</sup><sub>א</sub>

- Phone numbers beginning with the entered character are listed.
- If you enter the first sound of a name, all the names starting with the sound are searched.

## Group

Press **•** (Left) ▶ Press **8** <sup>א</sup><sub>ת</sub> ▶ Press **1** <sup>א</sup><sub>א</sub> ▶ Press **2** <sup>ב</sup><sub>א</sub>

- It is displayed in the order of groups. You can search for the phone number by moving to a group you want.
- If you enter the first sound of a name, all the names starting with the sound are searched.

## Speed Dial

Press **•** (Left) ▶ Press **8** <sup>א</sup><sub>ת</sub> ▶ Press **1** <sup>א</sup><sub>א</sub> ▶ Press **3** <sup>ג</sup><sub>א</sub>

- Saved speed dial number is searched when entering speed dial key.

## Number

Press **•** (Left) ▶ Press **8** <sup>א</sup><sub>ת</sub> ▶ Press **1** <sup>א</sup><sub>א</sub> ▶ Press **4** <sup>ד</sup><sub>א</sub>

- Pressing the number you want to search for displays the phone number including the number you entered.

## Menu description

New Message	Send message to selected number.
@Messenger	Real-time messenger service. (@Messenger, see p.163)
Video Call	Place a video call to selected number.
Cyworld	Connect to the mobile homepage. (NATE Mobile Homepage, see p.81)
Send/Connect	Use e-mail, Voice Message Call, Call Me Free, Number Via Message, and Via Bluetooth functions for selected number. (Bluetooth, see p.130)
Add New Contact	Save the phone number in the phonebook, if it's not saved in the USIM card.
Add Speed Dial	Assign selected number as a speed dial.
Set as Primary #	Assign a specific number as a primary number.
View	Set view of the number saved in the phone or USIM card. (This will affect search all and number screen.)
Move/Copy to USIM	Copy or move the saved phone number in USIM card to the phone. (You can only save the phone number and email information when copy/move USIM file. – Depends on the USIM card capacity, some data may not be stored due to available space.)
Delete	Delete all or delete the selected number.

## 2. Add New Contact

You can save phone numbers in the phone or USIM card.

### Save by phone

 
Press **[Left]** ▶ Press **[B row]** ▶ Press **[Z Add]**



- Including mobile security numbers, you can save up to 2000 numbers.
- When saving as a new contact, you can select the saving location (phone, USIM card).
- If you select 'Add to Contact' when saving phone number on the standby screen, you can add or modify the existing phone number of the phonebook.

- Press **[Left]** to set the primary number, and **[Right]** to assign as a speed dial number.

#### Icon description



### Save by USIM

Press **[Left]** ▶ Press **[B row]** ▶ Press **[Z Add]**



- You can save the phone number up to USIM card capacity.
- When saving as a new contact, you can select the saving location (phone, USIM card).
- If you select 'Add to Contact' when saving phone number on the standby screen, you can add or modify the existing phone number of the phonebook.

- Press **[Left]** to set the primary number, and **[Right]** to assign as a speed dial number.
- When saving by USIM, you can save name, group, mobile1, mobile2, and e-mail. Depends on the USIM card capacity, some data may not be stored due to available space.

#### Note

• You can visit Motorola homepage ([www.mymotorola.co.kr](http://www.mymotorola.co.kr)), download PC Sync program, and save, edit, and send phone number to PC.

## 3. Edit Group

You can manage the groups in the phonebook.

Press **[Left]** ▶ Press **[B row]** ▶ Press **[3]**

 


- Press **[Right]** to select the saving location (by phone or by USIM) and add a group.
- If you press **[Left]**, you can use 'Edit', 'Move Members', 'Move/Copy to USIM', and 'Delete Members'.
- If you delete a group, the phone numbers in the group are moved to 'Other' group. For group saved in USIM, numbers are moved to 'None'.
- You cannot delete or rename the default groups.
  - Phone: Family, Other, Office, Friend
  - USIM: None

## 4. Edit Speed Dial

You can assign speed dial numbers to the frequently used phone numbers.

Press **[Left]** ▶ Press **[B row]** ▶ Press **[4]**

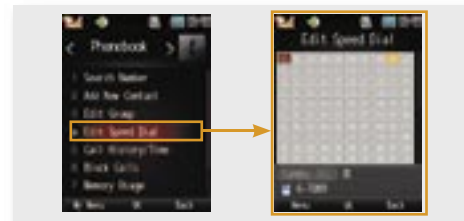

- On the standby screen, if you press the registered speed dial number, holding the last digit, the phone dials the registered phone number. (Placing a call with speed dial, see p.46)
- You can store up to 200 speed dial numbers (including mobile security numbers) in the phonebook.
- If you press **[Left]**, you can use 'Edit Speed Dial', 'Change Speed Dial', 'View List', and 'Delete'.
- You cannot delete the mobile security number.

## 5. Call History/Time

■ You can view the call history and time.

Press **•** (Left) ▶ Press **8** (row) ▶ Press **5** (row)

 


- If you press **•** (Left) while viewing the call time, the call time is reset to zero.
- The call time is counted from the point the ringer is generated, and charging begins after the call is connected.

## 6. Block Calls

■ You can register a phone number you want to block.

Press **•** (Left) ▶ Press **8** (row) ▶ Press **6** (row)

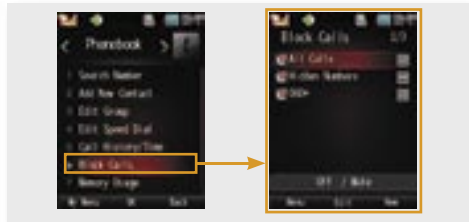

- Press **•** (Right) to add a phone number to the block phone number list.
- Press **•** to set/release and edit block calls.

### Menu description

All Calls : You can block all incoming calls.

 
Hidden Numbers : You can block all restricted calls.

060\* : You can block calls starting with 060 numbers.

## 7. Memory Usage

■ You can check the memory status of the phonebook.

Press **•** (Left) ▶ Press **8** (row) ▶ Press **7** (row)

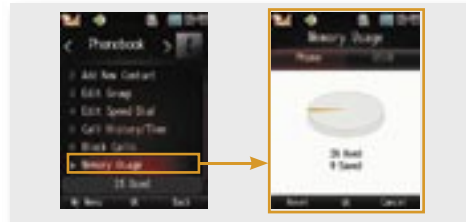


- Press **•** (Left) to reset memory.
  - All phone numbers in the phone except mobile security are deleted.

## 8. Automatic Backup

 ■ The phone updates the phonebook everyday to the server.

Press **•** (Left) ▶ Press **8** (row) ▶ Press **8** (row)

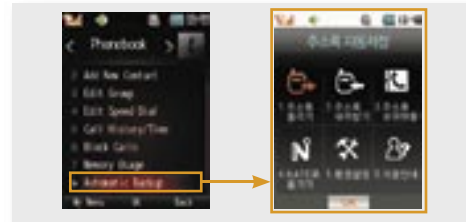

## 8. Automatic Backup (Cont'd)

### Menu description

**Upload Address Book** : You can view changed address and upload to the server.

**Download Address Book** : You can download saved address in the server.  
(Additional fee is charged when downloading.)

**Address Book Info** : You can check the information of the most recent saved address book to the server.

**Move to NATE** : You can view phonebook saved in the phone or NATE web phonebook. The phonebook in the phone is synchronized with NATE.

**Settings** : You can set various preferences such as password, phonebook automatic backup, time, delete, and update.

**Help** : You can view guidelines on the phone automatic backup services.

 
### Note



- In order to use automatic backup service, you have to register first and additional service fee is charged. Contact SKT Customer Center for further information.

## 9. My Number

You can view your own number.

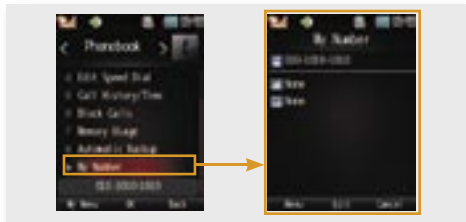Press  (Left) ▶ Press  ▶ Press 



- Press  to register user information in the phone.
- Press  (Left) to send via message or send via bluetooth.  
(Bluetooth, see p.127)

# 12

## Settings

<b>1</b> Phone Settings .....	176
<b>2</b> Call Settings .....	177
<b>3</b> Nate Settings .....	178
<b>4</b> Powersave .....	179
<b>5</b> USIM Setting .....	179
<b>6</b> Set Time .....	180
<b>7</b> Lock/Password .....	181
<b>8</b> 언어/Language .....	182
<b>9</b> Reset .....	183
<b>10</b> Moto Customer Service .....	183
<b>11</b> About .....	184



# 1. Phone Settings

Integrated menu for phone setting.

## Sounds

You can set the sound functions in the sound menu.

Press **[Home]** (Left) ▶ Press **[App Drawer]** ▶ Press **[1]** ▶ Press **[1]**

■ (Sound, see p.84)

## Display

You can set the display functions in the display menu.

Press **[Home]** (Left) ▶ Press **[App Drawer]** ▶ Press **[1]** ▶ Press **[2]**

■ (Display, see p.92)

## Message

You can set the message functions in the message menu.

Press **[Home]** (Left) ▶ Press **[App Drawer]** ▶ Press **[1]** ▶ Press **[3]**

■ (Settings, see p.166)

## Camera

카메라환경설정 메뉴로 이동하여 카메라 기능 관련 환경을 설정할 수 있습니다.

Press **[Home]** (Left) ▶ Press **[App Drawer]** ▶ Press **[1]** ▶ Press **[4]**

■ (Camera, see p.125)

## june Setting

You can set the june contents box functions in the june contents box menu.

Press **[Home]** (Left) ▶ Press **[App Drawer]** ▶ Press **[1]** ▶ Press **[5]**

**Play Setting :** You can set the preference for content play.

**Display :** You can change settings for skin, preview, or recommended content.

**Live screen sound :** You can select the background sound when a live screen is set in the standby screen.

**Memory :** You can check the total space, used space, and free space of internal/external memory.

## Bluetooth

You can set the bluetooth functions in the bluetooth menu.

Press **[Home]** (Left) ▶ Press **[App Drawer]** ▶ Press **[1]** ▶ Press **[6]**

■ (Preference, see p.132)

## T Live

You can set the T Live functions in the T Live menu.

Press **[Home]** (Left) ▶ Press **[App Drawer]** ▶ Press **[1]** ▶ Press **[7]**

■ (T LIVE Settings, see p.41)

# 2. Call Settings

Integrated menu for call setting.

## Answer Options

You can set the call answer mode.

Press **[Home]** (Left) ▶ Press **[App Drawer]** ▶ Press **[2]** ▶ Press **[1]**

**Open Phone :** Receive a call when opening the folder.

**Any Key :** Receive a call when pressing any buttons except **[Power]**.

**[Send] Key Only :** Press **[Send]** to receive calls.

**After 3 Seconds :** The call is connected automatically in 3 seconds after the ringtone.

## Auto Area Code

You can set an area code that you use frequently.

Press **[Home]** (Left) ▶ Press **[App Drawer]** ▶ Press **[2]** ▶ Press **[2]**

- If you enter a number starting with '0' on the standby screen after setting an auto area code, the area code is not displayed and only the number you entered is displayed. (Ex : Mobile phone number, international call number, and other area codes)
- If you select 'Off' in area code list, the area code display will be cleared.
- You can enter upto 5 numbers for auto area code.

## 2. Call Settings (Cont'd)

Integrated menu for call setting.

### Airplane Mode

You can use all the mobile phone functions (MP3, game, organizer).

- Except the communication services (sending/receiving call/message, network communication including internet).

Press **•** (Left) ▶ Press **1-9** ▶ Press **2** ▶ Press **3** ▶ Password

- Press **•** (Left) to see the description on the plane mode.

### Network Settings

You can use this setting only in international roaming.

Press **•** (Left) ▶ Press **1-9** ▶ Press **2** ▶ Press **4**

- You can edit/change network setting to use the phone in the foreign contry.
- You can have difficulties of using the phone regarding of phone call services if you change it within your own discretion.

## 3. Nate Settings

You can change NATE preferences.

Press **•** (Left) ▶ Press **1-9** ▶ Press **3**

### NATE Setting Menu

**Home URL** : You can set the initial access address for wireless internet.

**Proxy** : If the service provider extends the proxy, and adds or deletes address, you can set the proxy at your own discretion.

**Reset** : If you correct Home URL and Proxy, you can recover them to the factory-set default.


### Note

- Proxy is the server located between the user and the service server to speed up data transmission. When the user request a specific data, the data in the proxy, rather than the concerned server, are sent to the user.

## 4. Powersave

When the folder is opened without using it, backlight turns off and change to powersave mode.

Press **•** (Left) ▶ Press **1-9** ▶ Press **4**

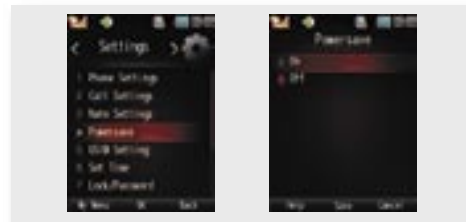


- Powersave mode manages backlight of display and keypad to increase battery life.
- You can press **•** to move and select on/off by pressing **OK**.

## 5. USIM Setting

To prevent loss of information when lost or stolen the phone, you can set lock and PIN.

Press **•** (Left) ▶ Press **1-9** ▶ Press **5**

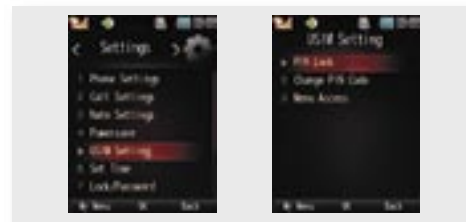

- PIN Lock** : You can set PIN code when turning on/off the mobile phone.
- Change PIN Code** : You can change PIN code.  
(Set PIN lock to use this function)
- Menu Access** : You can lock the menu when USIM card is not mounted in the phone.  
(Set PIN lock to use this function)

## 5. USIM Setting (Cont'd)

To prevent loss of information when lost or stolen the phone, you can set lock and PIN.

 
### Note

- If you have entered in wrong PIN code for 3 times, it turns to PIN unlock code (PUK). If you have entered in wrong PUK code 10 times, you have to replace USIM card.
  - PIN(Personal Identification Number) Code : This is to prevent others from using your phone.  
(Upon purchasing the product, the password is '0000'.)
  - PUK(PIN Unlock Key) Code : This code is 8 digit number to reset USIM code, if you have entered in wrong PIN code for 3 times. This number can be found on the USIM card envelope or card holder.
- If you have lost PIN/PUK code, visit SKT retail center to reset the password.

## 6. Set Time

You can set current time in the phone.

Press **•** (Left) ▶ Press **1-9** ▶ Press **4-6**

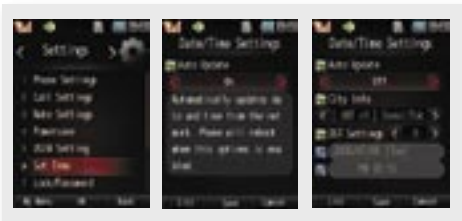

- If you set to manual, you have to input the time or select city info and summer time(DST).

**Auto** : Set the time automatically from service provider.  
**Manual** : The user inputs the information manually.


## 7. Lock/Password

You can set the password of the phone to prevent unapproved use. (The default password is '0000')

### Phone Lock

All the phone functions are locked. (except receiving the call)

Press **•** (Left) ▶ Press **1-9** ▶ Press **7** ▶ Input Password  
▶ Press **1**

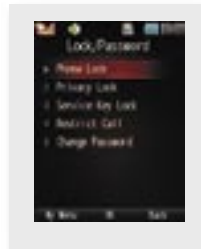

- You can set phone lock by pressing and holding **•** on the standby screen.
  - You can still receive the call even when the phone is locked.
- The phone maintains the lock even if you switch on/off the phone.
- You can still place the emergency calls (111, 112, 113, 119, 125, 127) or use the Speed Dial 1 and 9 (Mobile Security) even when phone is locked.

- When you receive a call, the lock mode is released temporarily, and the phone returns to the lock mode after the call.
- In order to release the lock mode completely, press and hold **•** and enter the password, or select 'Unlock' in the Phone Lock menu.

### Privacy Lock

You can select the menu and set lock.

Press **•** (Left) ▶ Press **1-9** ▶ Press **5** ▶ Input Password  
▶ Press **2**

- If you set lock for a menu, you need to enter the password to use the selected function. This will protect your privacy.
- Press **•** (Left) to select all and lock all menu. In order to unlock the menu press **•** (Left) again.
- Press **•** (Right) to select and lock several menu. In order to unlock the menu press **•** (Right) again.
- If you select 'Hide Phonebook Name', sender names stored in phonebook are not displayed. However the calling number is displayed. (When a message is received, the 'Hide Phonebook Name' function is not applied.)

### Service Key Lock

When connecting to wireless internet, you have to input the password.

Press **•** (Left) ▶ Press **1-9** ▶ Press **5** ▶ Input Password  
▶ Press **3**

- You need to enter the password to use the one-touch dial button (NATE, W, T MAP, GXG, @Playon, etc). This will protect your privacy, and prevent from paying additional fee for unwanted wireless internet service.

## 7. Lock/Password (Cont'd) 8. Language

You can set the password of the phone to prevent unapproved use. (The default password is '0000')

### Restrict Call

You can restrict origination to overseas of 700/060 numbers.

Press **•** (Left) ▶ Press **1** (wxyz) ▶ Press **5** (JKL) ▶ Input Password  
▶ Press **4** (F.E.S.H)

### Change Password


You can change the password.

Press **•** (Left) ▶ Press **1** (wxyz) ▶ Press **5** (JKL) ▶ Input Password  
▶ Press **5** (JKL)

- Be sure not to forget your password.
  - If you lose your password, you have to visit the service center in person with the ID card.
- Motorola takes no responsibility for any damage caused by leakage of password.

You can select the language to be used in the phone.  
(Language : Korean/English)

Press **•** (Left) ▶ Press **1** (wxyz) ▶ Press **8** (TUV)

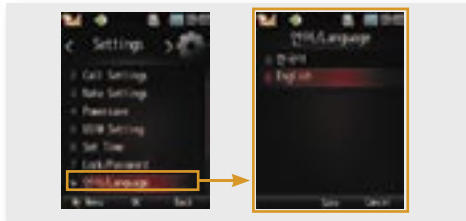


■ Even if you select English, some functions are displayed in Korean.

## 9. Reset

You can reset the phone to default setting.

Press **•** (Left) ▶ Press **1** (wxyz) ▶ Press **9** (WXYZ)

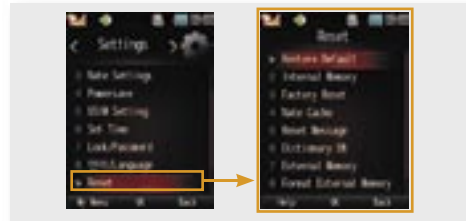

- To reset the phone, you need to input the password.
- The phone gets automatically switched off and rebooted.
  - If the phone fails to reboot, press **•** to turn on the power.
- You can view function description of the item you wish to reset by pressing **•** (Left).


## 10. Moto Customer Service

You can receive the service guide about the phone.

### Call Center

Representative number and business hours of Motorola Customer Call Center is displayed.

Press **•** (Left) ▶ Press **1** (wxyz) ▶ Press **0** (0) ▶ Press **1** (1)

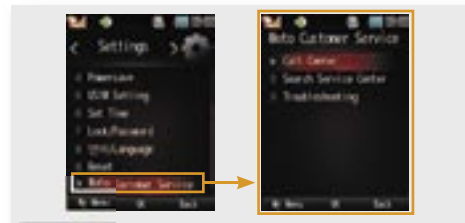

■ Press **•** to place a call to the customer center.

## 10. Moto Customer Service (Cont'd)

You can receive the service guide about the phone.

### Search Service Center

You can check the local customer center number and how to get there.

Press **[\*]** (Left) ▶ Press **[1-800-9]** ▶ Press **[0+]** ▶ Press **[2]** L ABC

■ Press **[\*]** to place a call to the customer center.

– Press **[\*]** (Left) to save the local customer center number.

### Troubleshooting

You can check the solution against phone failure.

Press **[\*]** (Left) ▶ Press **[1-800-9]** ▶ Press **[0+]** ▶ Press **[3]** L DEF

## 11. About

You can check the S/W version of the phone.

Press **[\*]** (Left) ▶ Press **[1-800-9]** ▶ Press **[\*]** L DEF

### S/W upgrade

If you wish to upgrade the software to the recent version, or if you need to upgrade software due to a bug, you can visit Motorola homepage ([www.mymotorola.co.kr](http://www.mymotorola.co.kr)) and easily upgrade it with the Moto Upgrade program without having to visit a Motorola service center.

- Visit the Motorola homepage, sign up and log in.
- Select 'MOTOPRODUCT INFORMATION' and click Version Upgrade.
- Before starting the Moto Upgrade program, make sure to read 'Prerequisites', and run the program in accordance with the procedure. (Some software versions require you to visit the service center for upgrade. If you visit the nearest Motorola service center for free Moto Upgrade.

Contact the Motorola Customer Center (1588-6633) for details.


# 13

## Appendix

01 Accessories.....	186
02 Troubleshooting.....	186
03 Spec and Feature.....	187
04 Authentication label.....	187
05 Specific Absorption Rate.....	188
06 Collecting wasted-mobile phones..	189

# 1. Accessories

You can purchase optional items at the nearest Motorola service center or accessory shop. Contact the service provider or visit Motorola homepage ([www.mymotorola.co.kr](http://www.mymotorola.co.kr)) for details.

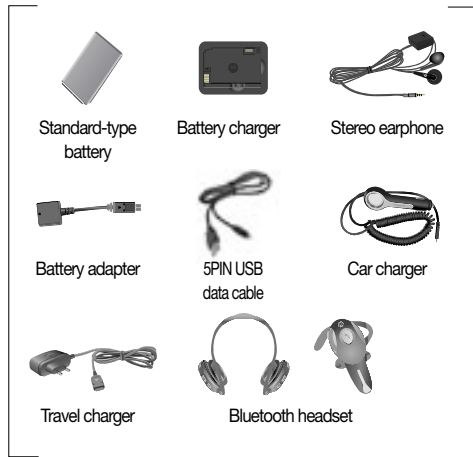

# 2. Troubleshooting



### Nothing is displayed on the screen

- Check the battery.

### No antenna bar is displayed on the screen

- Move to other place and then attempt a call again.

### It sounds 'Toot-Toot' when a call is placed

- There is no communication channel available or your phone has failed in communicating with a base station. Press  to clear the call and press  to redial the number.

### The charging lamp of the charger blinks in red

- Check the battery position or clean the terminals before reattempting charging. If the lamp keeps blinking, contact the nearest service center.

### Battery operating time does not comply with the User Manual

- The battery operating time reduces slowly as the battery repeats charging and discharging. The operating time reduces rapidly if the battery is left in a cold or hot place for a long time.

### Malfunction or failure to power On

- Remove the battery and reinstall it, and then turn the power on.

# 3. Spec and Feature

	Wireless communications service	Bluetooth
Transmit frequency	1942.8~1977.2MHz	2402~2480MHz
Receive frequency	2132.8~2167.2MHz	2402~2480MHz
TX power	230mW	0.1mW
Number of channel	8CH	79CH
Type of emission	G7W	F1D
Modulation system	QPSK	GFSK
Communication mode	duplex operation system	semi-duplex operation
Transformer	PLL	
Power	DC 3.7V	
Exterior, weight	53.00(W)mmX102.90(L)mmX14.99(T)mm, 112g	
Relative humidity	-20°C~+50°C, 0%~95%	

# 4. Authentication label

1. Name of the model : Wireless communications service device (MS500W)
2. Authentication number : MOT-W-MS500W-0109
3. Authentication Trade name : Motorola Korea Inc.
4. The date of manufacture : . . .
5. Manufacturer/country : Motorola Korea Inc. / China

### Notice to Users

※ The manufacturer and the installer are not allowed to provide the service that affects people's lives since there can be an interference of in this equipment.

## 5. Specific Absorption Rate

This mobile phone satisfies the Standard of Human Body Protection against Electromagnetic Wave specified on No.2008-37 notified by Ministry of Information and Communication Republic of Korea.

The phone is designed and manufactured to limit or not to exceed RF exposure level as a wireless transceiver. The limit requirement is a part of the synthetic guideline to define the permissible value of high frequency for general users. The guidelines are based on the standard developed through regular and thorough research & evaluation at a separate research institute. One of them is the practical safety limit which is to seek everybody's safety regardless of age and health condition.

The exposure standard of mobile phone has been established by the use of Specific Absorption Rate (SAR), a measuring unit. SAR limit is set to 1.6 W/kg in this model. SAR test is done; the mobile phone in normal operation is tested under which transmission is done at the maximum output level authorized in all tested frequency band. SAR is set at authorized maximum output level, but real SAR level of a phone in operation is likely to be lower than the maximum level. Because the phone is designed to be operated at various output levels in order to use only output required to reach wireless base station. In general, the nearer the base station, power gets lower.

We test our products to confirm if they satisfy these requirements before sales for general users. The phones are tested at the position subject to the test method determined by professional standard institute. The maximum SAR level is 0.41 W/kg when the phone is tested under which it is placed on a user's ear.

SAR level is subject to change depending on places where each phone is used, but it satisfies our governments safety exposure requirements. SAR level of next models may vary thanks to improved functions of the phone but we hope you understand our products are designed to satisfy the above guidelines in any case.

## 6. Collecting wasted-mobile phones

The collected wasted-mobile phones are utilized as resources and the residues are treated ecologically. Motorola is willing to do its best to protect environment not only today but in the future also. We kindly inviting you to participate in this movement for the protection of environment.

### Motorola phone collecting centers



### Recycling of wasted-mobile phone

- Return the old one to the distributor when you purchase a new phone. ■ Visit a near-by representative of the manufacturer or A/S center.
- Return your mobile phone to a representative of mobile service provider.
- Utilize a collecting bag with no charger (arranged in provincial office, distributor, representative)

### Guidelines for collecting discarded Motorola mobile phones



Please think of environment when you discard your phones and accessories. Do not discard old mobile phones or accessories such as battery pack, battery charger, etc. together with household waste. In some countries and areas, they have established a system to treat useless electronic and electrical products and batteries. Please contact your area for more information. If there is no appropriate system available, please send useless mobile phone and accessories to a near-by Motorola service center.

# FCC Notice to User

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:IHDT6JC1 on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC.
- All other relevant EU Directives

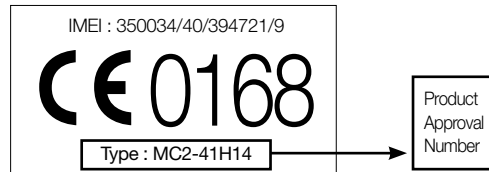

The above gives an example of a typical Product Approval Number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte). To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.



# MEMO

A large green rounded rectangle containing ten horizontal dotted lines for writing a memo.

## Bluetooth

- Bluetooth mode : (Left)[Menu] ▶ 5 ▶ 2 ▶ 1
- Connect bluetooth : (Left)[Menu] ▶ 5 ▶ 2 ▶ 2
- Settings : (Left)[Menu] ▶ 5 ▶ 2 ▶ 3
- My Device Info : (Left)[Menu] ▶ 5 ▶ 2 ▶ 4

## Dictionary

- English-Korean : (Left)[Menu] ▶ 5 ▶ 4 ▶ 1
- Korean-English : (Left)[Menu] ▶ 5 ▶ 4 ▶ 2
- My Vocabulary : (Left)[Menu] ▶ 5 ▶ 4 ▶ 3
- Previous Key Word : (Left)[Menu] ▶ 5 ▶ 4 ▶ 4
- Settings : (Left)[Menu] ▶ 5 ▶ 4 ▶ 5

## Photo Capture

- In standby screen, press and hold Camera button.

## Movie Capture

- In standby screen, press and hold Camera button ▶ 2 ▶ 1

# Summary Table

## Saving Phone Number

- Save number from menu : (Right)[Phonebook] ▶ (Right)[Add New]
- Save number in standby screen: Enter number ▶ (Right)[Save]

## Searching Phone Number

- In the standby screen, press and hold (Right)[Phonebook] and select Speed/All/Group/Number ▶

## Messages

- Checking message : ▶ 1
- Writing message : ▶ 2

## T LIVE

- Recent video list : ▶ 1
- Video message box : ▶ 2
- VTC contents box : ▶ 3
- Movie/Photo album : ▶ 4
- T LIVE settings : ▶ 6

## Main Menu Setting

- Sounds : (Left)[Menu] ▶ 9 ▶ 1 ▶ 1
- Display : (Left)[Menu] ▶ 9 ▶ 1 ▶ 2
- Message : (Left)[Menu] ▶ 9 ▶ 1 ▶ 3
- Camera : (Left)[Menu] ▶ 9 ▶ 1 ▶ 4
- June setting : (Left)[Menu] ▶ 9 ▶ 1 ▶ 5
- Bluetooth : (Left)[Menu] ▶ 9 ▶ 1 ▶ 6
- T LIVE settings : (Left)[Menu] ▶ 9 ▶ 1 ▶ 7

## One-Touch Dial

- Set/Release Etiquette : In standby screen, press and hold \*#
- Lock/Unlock : In standby screen, press and hold ##
- W : In standby screen, press
- Moneta : In standby screen, press
- My Menu : In standby screen, press
- T MAP : In standby screen, press and hold
- NATE : In standby screen, press and hold
- Operation Effects : In standby screen, press the Volume button
- T interactive : In standby screen, press and hold

## Warranty Policy

Thank you for purchasing a Motorola product. This product has passed a strict quality control and inspection of the Motorola Technology Team. If a defect is found in your product during the warranty period, it will be repaired free of charge at a Motorola Service Center.

### Warranty Period

- Terminal Equipment : 1 year
- Lithium ion battery : 6 months
- Other Accessories : 1 year

### Free Warranty Service

Free warranty service will be provided for one year (warranty period) after purchasing.

Type of defects or trouble	Compensation	
	Under warranty	After expiry of warranty
Critical repair service request resulting from performance and function failures occurred in normal operation within 10 days after purchasing	Exchange or refund	N/A
Critical repair service request resulting from performance and function failures occurred in normal operation within 1 month after purchasing	Exchange or repair	
Critical repair service request within 1 month of exchange	Refund	
Exchange the product is impossible	Free service	Paid service
Repairable	Exchange or refund	Paid service
Non-repairable	Exchange or refund	Refund the price deducted by the depreciation amount
lost of repair request product by the user	Exchange or refund	Refund the price deducted by the depreciation amount and added by its 10%

Model	Serial No.		
Purchase Date	Year Month Day	Customer	
Distributor		Price	

※ When you purchase the product, please fill the blanks on the Warranty Policy and keep it together with the receipt in order to obtain more beneficial service.

### Paid Service

- Reasons other than defects  
Service requests for symptoms other than defects will be charged after expiry of the warranty period. Carefully read the User's Manual before you visit a service center.
- Defects resulting from user's errors
  - Defects caused by careless handling (soaking, impact) or improper repairing and remodeling.
  - Defects caused by using improper power supply.
  - Defects caused by repairs done at a place other than the Motorola Service Centers.
  - Defects caused by using accessories not provided by Motorola. (hands free, quick charger, charger, battery, stereo headset, battery cover, etc.)
  - Defects or damages resulting from dropping while moving the product.
- Others
  - Defects resulting from natural disasters such as fire, earthquake, flood, etc.
  - Expiry of life time of consumables (battery, stereo headset, external memory, antenna, and various accessories)



# Safety and General Information

---

**This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.**

## Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

## Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: [www.motorola.com](http://www.motorola.com).

## RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.