

HELLOMOTO

Introducing your new **MOTO** Yintai RF GSM and TD-SCDMA wireless phone.



Note: The pictures used in the manual are only used as the function illustration pictures. Maybe your mobile phone displays differently. Please take your mobile phone as the standard.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation. Macintosh is a registered trademark of Apple Computer, Inc.

© Motorola, Inc., 2008.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include

copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68XXXXX184-O

Content

HELLOMOTO.....	1
Content.....	3
Safety and General Information.....	5
FCC Notice To Users	8
Use and Care	9
European Union Directives Conformance Statement..	10
Caring for the Environment by Recycling	11
Disposal of your Mobile Telephone and Accessories ..	11
Esentials.....	12
About this guide	12
SIM card	12
Battery	12
Turn it on & off.....	13
Make a call	13
Answer a call.....	13
Your phone number.....	13
Basics.....	15
Indicator bar	15
Navigation key.....	15
Text entry.....	15
5-way navigation key	16
Unlock keypad.....	16
Speakerphone	16
Volume key.....	16
Codes & passwords	16
Lock & unlock phone.....	17
Share information.....	17
Customize	18
Profiles	18
Home screen.....	18

Main menu	18
Themes	18
Wallpaper	18
Set time & date.....	19
Auto key lock	19
Backlight time	19
Language.....	19
Master reset	19
Master clear.....	19
Airplane mode	19
Lock application	19
Network settings.....	19
Open source.....	20
Calls	21
Redial	21
Cancel incoming call	21
Close incoming call message	21
Adjust volume during call	21
Hold or mute a call	21
Emergency calls	21
International calls	21
Dial extension number directly	21
Dial extension number during a call	21
Recent calls	22
Turbo dial	22
Call waiting	22
IP code.....	22
Dial new call during the call	23
Conference call.....	23
Record a voice call	23
Video calls	23
Make a video call	23
Video conference.....	23

Call forwarding	23
Caller ID.....	23
Call barring.....	24
Fixed dial.....	24
Call times & costs.....	24
Use handsfree device.....	24
Auto answer	24
Voice mail.....	24
Phonebook	25
Contact list	25
Add new contact.....	26
Search.....	26
View	26
Delete contact.....	26
Select Multiple to	26
Manage Contacts	26
Copy contact.....	26
Storage status.....	26
View and edit contact details	26
Messages.....	28
Signature	28
Send text messages.....	28
Receive text message.....	28
Send multimedia message.....	28
Receive multimedia message.....	29
Unsent messages	29
Sent message	29
Drafts	29
Hot messages.....	29
Quick notes	29
Set up message inbox	30
Storage status.....	30
Browser messages	30
Information services	30
Office applications.....	32

Alarm	32
Unit converter.....	32
Calculator.....	32
Calendar	32
Anniversary.....	33
World clock	33
Notepad	33
Currency.....	33
Countdown.....	33
Stopwatch.....	33
Media applications.....	34
Browser	34
Game and appications	35
USAT	36
Media player	36
Camera	36
Video camera.....	37
Voice recorder	37
Extra applications	38
Sync between and mobile.....	38
Modem.....	38
Bluetooth™ wireless	38
Service and repairs.....	40
Specific Absorption Rate Data.....	41
Information from the World Health Organization	42

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Note: The information provided in this document supersedes the general, safety information in user's guides published prior to April 2008.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country. DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid

Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following

precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Operational Warnings

obey all posted signs when using mobile devices in public areas,

such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.





 


Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**



Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or

receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

FCC Notice To Users

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



the ground

Don't drop your phone.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.


European Union Directives Conformance Statement

European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

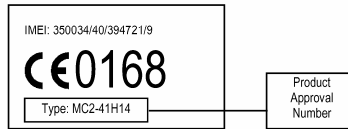

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

The above gives an example of a typical Product Approval Number. You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.



Disposal of your Mobile Telephone and Accessories

Please do not dispose of mobile telephones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems have been set up to handle waste electrical and electronic items. Please contact your regional authorities for more details. If no suitable scheme exists, you may return unwanted mobile telephones and electrical accessories to any Motorola Approved Service Centre in your region.

Essentials

About this guide

This guide describes the basic features of your Motorola wireless phone.

Symbol	Definition
	This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.

SIM card

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and contacts list.

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt. Turn off your phone and remove the battery before you install or remove the SIM card.

1 Press the bottom of the battery door and slide it down to remove the door.

2 Hold the SIM card with the notch in the lower left corner and the gold plate facing down. Slide the SIM card under the metal tabs and into the card slot.

Battery

Battery installation

Caution: Always turn off your phone before you remove the battery.

1 Slide the battery door down and lift it off of the phone.

2 Insert the battery under the tab at the top of the battery compartment. Push the battery up under the tab and lower it into the battery compartment.

3 Slide the battery down toward the bottom of the battery compartment to lock it in place.

4 Place the battery door on the phone and slide it up to lock shut.

Battery charging

New batteries are not fully charged. Open the protective cover on your phone's USB port, then plug the battery charger into the phone. Plug the other end into an electrical outlet. Your phone might take several seconds to start charging the battery, and might require several hours to charge fully. The display shows Charge completed when finished.

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

Note: You can charge the battery when the phone is off or the battery is completely discharged.

Note: You can charge your battery by connecting a cable from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.



Battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries. and/or chargers.

- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

Turn it on & off

Caution: On power up, the phone may prompt you to enter your SIM card PIN code to unlock the SIM card. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows SIM blocked. Contact your service provider.

To turn on your phone, press and hold the

Power key. If prompted, enter your SIM card PIN code.

If you don't insert a SIM card, your phone shows Emergency only.

You can turn off the phone's **Airplane Mode** where wireless phone use is prohibited, or when you just want to use the phone's

non-calling features (games, personal

organizer, multimedia player). In standby screen, press OK to enter main menu, press Airplane Mode from Settings to select On or Off.

To turn off your phone, press and hold power key.

Make a call

1 In standby screen, press number keys to enter phone number.

2 Press Voice Call from Options or Send1 key to make a voice call, or press Video Call from Options or Send2 key to make a video call.

3 When you have finished, press End key to end the call.

Tip: 1. In standby screen, press number key and # key to get phone number in corresponding position of SIM card, then press Send1 key or press Voice Call from Options to make a voice call, or press Send2 key or press Video Call from Options to make a video call.

2 In contact list of Phonebook, select one contact, press Send1 key to make a voice call or Send2 key to make a video call.

3. In standby screen, hold down number key 2-9 to make quick dial (need setting).

4. In a list of answered calls, missed calls or dialed calls, press Send1 key to make a voice call or Send2 key to make a video call.

Answer a call

When you receive a call, your phone rings and/or vibrates and shows an incoming call message.

Press Answer or Send key to answer the call, and press Reject to hang up the call.

Tip: You can press the volume keys shortly to mute the ringer before answering the call, or hold down the volume key to hangup the call.

Tip: If you prefer not to answer the call, you can press Reject to hang up on the caller and transmit a busy tone signal to the caller.

Your phone number

To **view** your phone number:

1. In standby screen, press OK key to enter main menu screen.
2. In main menu screen, hold down number 0 key to enter My Number screen.
3. Press Phonebook. In contact list of Phonebook, press Options and then My Number to view own phone number.

To **store** or edit your name and phone number on your SIM card:

1. In standby screen, press OK key to enter main menu screen.
2. In main menu, hold down number 0 key to enter My Number screen; or in contact list of Phonebook, Press My Number from Options to enter my number screen.
3. Press Edit to enter number editor.
4. Enter your phone number and press OK to store the information.


If you don't know your phone number, contact your service provider.

Basics

Indicator bar

In standby screen, you can get status of your mobile from indicator bar.

It includes the following indicators:

- 1 Signal strength** – Vertical bars show the strength of the network connection. You can't make or receive calls when the no signal indicator  shows.
- 2 TD-SCDMA/GPRS** – The indicator T shows when your phone is using a high-speed TD-SCDMA network connection. Alternatively, the indicator G shows when your phone is using a high-speed GPRS network connection.
- 3 Bluetooth** – Shows the status of Bluetooth.
- 4 Battery level** – Vertical bars show the battery charge level. Recharge the battery when your phone shows Low battery.
- 5 Roam** – Shows that you are out of your network coverage.
- 6 Ring style** – Shows the ring style setting.
- 7 Reminder** – Shows reminder icon when you set an alarm, or an alert for a calendar event.
- 8 Message** – Shows new message.

Note: The indicator is up to the status of your mobile.

Navigation key

Press the navigation key up, down, left, or right to scroll to items in the display. When you scroll to an item, press the center key to select it.

Text entry

Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

In text entry, press # key to switch input methods and press * key to

enter symbol input method.

There are following input method in your phone:

- PINYIN input method;
- Stroke input method;
- Number input method;
- English smart initial input method;
- English smart lowercase input method ;
- English capitalization input method;
- English lowercase input method;

PINYIN input method

The icon is as follows:



With this input method, press the number key with the letter and input the spelling letters of Chinese characters. Press left or right key to move focus and then center key to enter candidate area. In candidate area, press left key or right key to move focus left or right, up or down key to go to previous or next page. After move focus to the character you desire, press OK to finish.

Stroke input method

The icon is as follows:



With this input method, you can input the Chinese character according to its stroke on the number 1-9 key.

Number input method

The icon is as follows:



With this input method, you can input number by pressing number 0-9 keys.

English smart initial input method

The icon is as follows:



Press number keys 2-9 to input the corresponding letter. In candidate area, press left key or right key to move focus left/right, or up key or down key to go to previous/next page. Press center key to finish selecting.

English smart lowercase input method

The icon is as follows:



This input method is similar with English smart initial input method. The difference is that all inputted letters are lowercase.

English capitalization input method

The icon is as follows:



This input method is similar with English smart initial input method. The difference is that all inputted letters are capital.

English lowercase input method

The icon is as follows:



This input method is similar with English capitalization input method. The difference is that all inputted letters are lowercase.

Symbol input method

In text entry area, press * key to enter symbol input method.

Press left, right, up, down key to select the symbol you desire and then press center key to confirm.

5-way navigation key

Press the five-way navigation key up, down, left, or right to scroll to and highlight menu items. When you highlight something, press center key to select it.

Unlock keypad

When Auto Key Lock function is enabled, your phone automatically locks the side phone keys after a period of inactivity, to prevent

accidental keypresses (for example, when carrying the phone in a purse or pocket). To unlock the phone keys, press center key and * key one by one to unlock.

Speakerphone

When you activate your phone's handsfree speakerphone, you can talk to the other party without holding the phone to your ear. During a call, press Handfree to turn the handsfree speakerphone on. The handsfree speakerphone remains on until you press Speaker or turn the phone off.

The handsfree speakerphone may be disabled when you connect your phone to a handsfree headset accessory.

Volume key

Press the volume keys to:

- press the volume keys shortly to turn off an incoming call alert or event alert and hold down to reject the call
- change the earpiece or speakerphone volume during a call
- change the speaker volume when playing a song or video clip

Codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them. You can also change your **SIM PIN** password.

To change a code or password,

1. In standby screen, press center key to enter main menu;
2. Press Settings.
3. Press Security
4. Press SIM PIN and then PIN1 or PIN2
5. Press Change PIN to change PIN code.

You can also change your **initial** password.

1. In standby screen, press center key to enter main menu;
2. Press Settings.

3. Press Security.
4. Press Change Initial Password.

If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

Lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the speaker verification passphrase or four-digit unlock code.

1. In standby screen, press center key to enter main menu;
2. Press Settings.
3. Press Security.
4. Press Phone lock.
5. Press Activate to enable or disable the phone lock. Press Change Password to change the phone lock password.

Tip: Your phone's unlock code is originally set to 1234.

Note: You can make emergency calls on a locked phone.

Share information

You can share information with another phone, PC, or hand-held device. You can share phonebook contacts, calendar events, notepad, voice records, pictures, photos, and sound files by sending or receiving the data through a Bluetooth wireless connection, or in an MMS.

Send data

- 1** Locate the data you want to share (such as contact details, or a list of files in Multimedia).
- 2** Press Options and then Send MMS or Send via Bluetooth to send the data via MMS or Bluetooth.
- 3** Complete the setup procedure for the transfer method you selected.
- 4** Press OK key to send the data via Bluetooth, or press Send key to send the data by MMS.

Receive data

The sending device must establish a transmission link with your phone through a Bluetooth or MMS connection. If necessary, turn on Bluetooth power on your phone to let the other device establish a wireless link.

Your phone alerts you when it receives a data transfer request from the other device.

Customize

Profiles

You can quickly change your phone's ring alert profile to match your activity, environment, or personal requirements. Each profile uses a different set of sounds or vibrations for incoming calls and other events. The Silent profile silences your phone until you set another profile. Here are the profiles you can choose:

Loud;

Soft;

Vibrate;

Vibe & Ring;

Vibe Then Ring

Silent

The profile indicator shows in the indicator bar of the standby screen.

Set the ring alert profile

1. In standby screen, press center key to enter main menu.
2. Press Settings
3. Press Ring Styles
4. Move up/down key to select the profile and press center key to enable it.

Edit a ring alert profile

1. In standby screen, press center key to enter main menu.
2. Press Settings
3. Press Ring Styles
4. Move up/down key to select the profile and press Edit to adjust alert settings to personalize the profile. You can change the alerts used to notify you of incoming calls and messages, info Svcs, datebook and anniversary, and adjust alert volume, and ring volume.

Home screen

You can set home keys and layout:

1. In standby screen, press center key to enter main menu.
2. Press Settings
3. Press Personalize
4. Press Home Screen
5. Press Icons to show or hide icon; press Layout to adjust the layout

Main menu

Set the show style of main menu.

1. In standby screen, press center key to enter main menu.
2. Press Settings
3. Press Personalize
4. Press Main Menu and then View to set whether to display the main menu by icon or list.

Themes

Set the theme of mobile.

1. In standby screen, press center key to enter main menu.
2. Press Settings
3. Press Personalize
4. Press Themes and select the theme you like.

Note: This feature changes the look and feel of the phone's user interface.

Wallpaper

Set a photo or picture as a wallpaper (background) image in your phone's display.

1. In standby screen, press center key to enter main menu.
2. Press Settings
3. Press Personalize
4. Press Wallpaper and select the picture you like. Press center key to preview and then press Set to set it as wallpaper.

Set time & date

- 1 In standby screen, press center key to enter main menu.
- 2 Press Settings
- 3 Press Initial Setup and then Time&Date to set time, time format and date.

Auto key lock

- 1 In standby screen, press center key to enter main menu.
- 2 Press Settings
- 3 Press Initial Setup and then Auto Key Lock to enable or disable this function.

Backlight time

- 1 In standby screen, press center key to enter main menu.
- 2 Press Settings
- 3 Press Initial Setup and then Backlight Time to adjust backlight time.

Note: Your phone's display is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you tap the screen or press any key.

Language

Set the language.

- 1 In standby screen, press center key to enter main menu.
- 2 Press Settings
- 3 Press Initial Setup and then Language to set the language.

Master reset

Reset all default phone settings **except** for the lifetime timer:

- 1 In standby screen, press center key to enter main menu.
- 2 Press Settings
- 3 Press Initial Setup and then Master Reset.

You need to input correct security code.

Master clear

Master clear **erases all information you have entered** (including phonebook and calendar entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it. Clear all settings and entries you made **except** SIM card information, erase downloaded pictures and sound files, and reset all options **except** for the lifetime timer:

- 1 In standby screen, press center key to enter main menu.
 - 2 Press Settings
 - 3 Press Initial Setup and then Master Clear.
- You need to input correct security code.

Airplane mode

After airplane mode is enabled, you just want to use the phone's non-calling features (games, personal organizer, multimedia player).

- 1 In standby screen, press center key to enter main menu.
- 2 Press Settings
- 3 Press Initial Setup and then Airplane Mode to enable or disable the mode.

Lock application

Protect the application you desire.

- 1 In standby screen, press center key to enter main menu.
- 2 Press Settings
- 3 Press Security and then Lock Application to enable/disable the function and set the application you want to protect.

Network settings

View and set the network settings.

1. In standby screen, press center key to enter main menu screen.

2. Press Settings and then Network.
3. Press Operator Selection to select the operator by auto or manual or set preferred network; press Network Mode to make corresponding setting; press Connection Settings to set the connection profile.

Open source

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, which may be subject to GNU's General Public License, please send an e-mail to ossmanagement@motorola.com".

Besides, you may send your request in writing to:

MOTOROLA, INC.

OSS Management

600 North US Hwy 45

Libertyville, IL 60048

USA.

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licenses, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please do as follows:

1. In standby screen, press centerkey to enter main menu and then press Settings.
2. Press Open Source to learn information about it.

Calls

Redial

With this function, if you dial a call and hear a busy signal and you see call failed, number busy, the mobile will automatically redial the number.

To set redial function:

1. In standby screen, press center key to enter main menu screen.
2. Press Settings and then In-Call-Setup.
3. Press Auto Redial to enable or disable this function.

Cancel incoming call

While the phone is ringing or vibrating, press Reject to cancel the incoming call.

Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.

Close incoming call message

If there is an incoming call message, hold down volume keys to close the message.

Adjust volume during call

During the call, press the volume keys to adjust the volume.

Hold or mute a call

To put all active calls on hold, press Hold from Options. Press Active to resume the call.

To turn off your phone's microphone during a call, press Mute from Options. Press Unmute to resume the call.

Emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country.

Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

1. In standby screen, press number key to enter phone number.
2. Press Send key to make the call.

International calls

In standby screen, hold down 0 key to input +. Then, press the keypad keys to dial the country code and phone number.

Dial extension number directly

1. In standby screen, press number key to open dial pad.
2. Hold * key to enter P at the cursor location.
3. Enter the extension number.
4. Press Send1key or Voice Call from Options to make a voice call; press Send2 key or Video Call from Options to make a video call.

Your phone dials the phone number, waits for the call to connect, then dials the remaining digits.

Dial extension number during a call

1. Press number key to enter extension number.
2. Press Back to the in-call screen.

Recent calls

Your phone keeps lists of answered, missed and dialed calls. The most recent calls are listed first. The oldest calls are replaced by new calls.

Shortcut: In standby screen, press the send1 or send2 key to go to the recent call list. Press the five-way navigation key to scroll to a number, then press Send1 or Send2 key to call it.

To **dial** a number in the recent calls list:

1. In standby screen, press center key to enter main menu screen.
2. Press Call History.
3. Press Answered Calls, Missed Calls, or Dialed Calls to select a call list.
4. Press an entry.
5. Press Send1 key to make a voice call and press Send2 key to make a video call.
6. Press center key to view detail like time, date and duration.
7. Press Options to open the menu as follows:

Options	Definition
Go To	Switch between missed, dialed and answered calls.
Store	Stored the number to phonebook contact.
Send SMS	Open a new SMS with the number in the To field.
Send MMS	Open a new MMS with the number in the To field.
Voice Call	Make a voice call to the entry.

Video Call	Make a video call to the entry.
IP Dial	Make an IP call to the entry.
Delete	Delete the entry.
Delete All	Delete all entries.

Turbo dial

You can store up to nine phone numbers in the turbo dial list, then dial the numbers by holding a single keypad number key.

To **set up** the turbo dial numbers list:

1. In standby screen, press center key to enter main menu screen.
2. Press Settings and then Initial Setup.
3. Press Speed Dial to open the turbo dial list. Press 5-way navigation to select one number and then center key to enter number editor. After enter the number, press OK to finish bonding. Press Delete to cancel bonding.

Call waiting

To set the call waiting:

1. In standby screen, press center key to enter main menu screen.
2. Press Settings and then In-Call-Setup.
3. Press Call Waiting to enable or disable the function.

IP code

To set IP code:

1. In standby screen, press center key to enter main menu screen.
4. Press Settings and then Initial Setup.

5. Press IP Code to open IP code editor. After enter the number, press OK to finish.

Dial new call during the call

During the call, you can make a new call:

1. Press number key to enter number; press New Call from Options and enter phone number.
2. Press OK to dial the call. The first call will be on hold.

Conference call

During the call, press number key to enter phone number and press Send1 key to make a new call. When the call connects, press Conference to link these two calls.

Repeat to add additional parties to the call.

Record a voice call

Note: Recording of phone calls is subject to varying national laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.

You can record a voice call as a voice record.

During a voice call:

1. Press Record from Options to start recording.
2. Press Stop Recording from Options to stop recording the call and store the voice record.

The recording stops automatically if the call ends, holds or you reach your memory limit.

To view the voice record:

1. In standby screen, press center key to enter main menu.
2. Press Multimedia and then Ring Tone.
3. Press Sounds and then Voice Memo.

Video calls

If you call someone who has a 3G video phone, you can see each other while you talk. If your phone is roaming on a non-3G network, video calls will not work.

Make a video call

1 Enter a phone number, then press Send2 key to make the call. During the call, press Options to carry out function as follows: Brightness, Zoom, Camera On/Off, Camera Switch, Screen Mode, Mute, Applications.

When there is an incoming video call message, press Send1 key to change the video call to voice call and press Send2 key to answer the video call.

Video conference

You can use the handset to make video and voice call of multi-party. You can dial specific number to join video conference. During the conference, you can adjust brightness, zoom and so on.

Call forwarding

Set up or cancel call forwarding:

1. In standby screen, press center key to enter main menu screen.
2. Press Settings and then Call Forward.
3. Press Voice Calls to setup call forwarding of voice call.
4. Press Video Call to setup forwarding of video call.
5. Press Cancel All to cancel all call forwarding.
6. Press Forward Status to get information of forward status.

Caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your phone's display.

To show or **hide your phone number** for the calls that you make:

1. In standby screen, press center key to enter main menu screen.
2. Press Settings and then In-Call-Setup.
3. Press My Caller ID to make corresponding setting.

Call barring

Restrict outgoing or incoming calls:

1. In standby screen, press center key to enter main menu.
2. Press Settings and then Security.
3. Press Call Barring to set up incoming voice call, incoming video calls, outgoing voice calls, outgoing video calls, cancel voice call barring, cancel video call barring and modify password.

Fixed dial

When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

Turn fixed dialing on or off:

1. In standby screen, press center key to enter main menu.
2. Press Settings and then Security.
3. Press Fixed Dial to enable or disable it.

Call times & costs

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For **billing information, contact your service provider.**

1. In standby screen, press center key to enter main menu.
2. Press Call History and then Call Times to view call time of last call, dialed call, received call and total time. Press Clear to reset the timer.

Use handsfree device

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving.

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Auto answer

When the handset connects to earphone, handsfree device or other external device, you can set the handset to answer the call in few seconds.

1. In standby screen, press center key to enter main menu.
2. Press Settings and then Car Settings.
3. Press Auto answer to enable or disable this function.

Voice mail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.

Note: Your service provider may include additional information about using this feature.

To check voicemail messages:

1. In standby screen, press center key to enter main menu.
2. Press Messages and then Voice Mail.

Shortcuts: In standby screen, hold number 1 key to enter voice mail screen.

Phonebook

You can store a contact list of names, phone numbers, and email addresses in your phone's electronic address book.

Contact list

Shortcut: In standby screen, press down key to enter contact list.

1. In standby screen, press center key to enter main menu.
2. Press Phonebook to enter contact list.
Press Options to do as follows:

Options	Definition
Send SMS	Send SMS to the contact.
Send MMS	Send MMS to the contact.
Create New	Add a new contact.
View	Switch show type of contacts.
Find	Find contact by name or number.
Delete Contact	Delete the contact.
Select Multiple to	Carry out operation to multiple contact.
Manage Contacts	Synchronise contact, send the contact as quick dial and edit phone group.
Copy to Phone/SIM	Copy contact between SIM card and phone.
My Number	View and edit my phone number.
Storage Status	View storage status.

Add new contact

Note: You can enter only a name and a single phone number for each contact that you store

on the SIM card.

1. In standby screen, press center key to enter main menu.
2. Press Phonebook to enter contact list.
3. Press Options and then Create New.
4. Select contact type and enter relative entry.
5. Press OK to finish it.

Search

1. In standby screen, press center key to enter main menu.
2. Press Phonebook to enter contact list.
3. Press Options and then Find to search contact by .name or number.

Your phone shows the search result, or notifies you that no match can be found.

View

Set up view type:

In contact list, press View to set the type optionally.

Delete contact

1. In standby screen, press center key to enter main menu.
2. Press Phonebook to enter contact list.
3. Select one entry and press Options
4. Press Delete Contact and then OK to confirm deletion.

Select Multiple to

1. In standby screen, press center key to enter main menu.
2. Press Phonebook to enter contact list.
3. Press Options and then Select Multiple to.

4. Carry out operations as follows to multiple contacts: Send SMS, Send MMS, Delete, Copy Phone to SIM and Copy SIM to Phone.

Manage Contacts

1. In standby screen, press center key to enter main menu.
2. Press Phonebook to enter contact list.
3. Press Options and then Manage Contacts to carry out operations as follows: Synchronise, Speed dial and edit phone group.

Copy contact

You can copy contacts between your phone and SIM card. This procedure does not delete the original contact.

Note: The SIM card can store only a name and one phone number per contact. When you copy an entry from the phone to the SIM card, your phone prompts you to specify the number you want to store for the contact.

1. In standby screen, press center key to enter main menu.
2. Press Phonebook to enter contact list.
3. Select the entry, and press Options.
4. Press Copy to Phone/SIM to copy the entry to phone/SIM.

Storage status

View the storage status of the handset.

1. In standby screen, press center key to enter main menu.
2. Press Phonebook to enter contact list.
3. Press Options and then Storage Status.

View and edit contact details

1. In the contact list, select the entry and press center key to shows complete contact details.
2. Press Edit Contact or center key directly to edit contact information

3. When you are finished editing contact information, press OK to store your changes and return to the contact list.

Messages

You can send and receive short text-based SMS messages, and multimedia MMS messages containing media objects, such as photos, pictures, sounds, voice records, and video clips.

It includes the following function:

Create Message: Create SMS/MMS.

Message Inbox: Store received message.

Outbox: Store messages that are not sent successfully.

Sent: Store the messages that are sent successfully.

Drafts: Store the messages that are not finished.

Hot Messages: Store the messages that are transferred from inbox.

Quick Notes: Store SMS templates.

Settings: Make SMS and MMS settings.

Storage Status: View the storage status of messages.

Info Services: A network service, such as stock updates, news headlines, or sports scores.

Voice Mail: Store the voicemail messages you receive

Signature

You can store your signature, and automatically append it to MMS you send.

1. In standby screen, press center key to enter main menu.
2. Press Messages and then Settings.
3. Press MMS Settings and then Send.
4. Press Auto Signature to enable, disable and edit the signature.

Send text messages

Send SMS to other contact.

1. In standby screen, press center key to enter main menu.
2. Press Messages and then Create Message.
3. Press SMS to enter new SMS screen.

Edit receiver

Press the navigation keys and scroll to **To**.

Press center key or right key to enter contact list to select receiver; press center key to select the contact and then OK to finish selection.

If there is receiver, press center key to enter number editor.

Press Options to do as follows: Phonebook, Group, Enter Number, Receiver List, Save to Drafts and Cancel Message.

Note: If there is receiver, RSK changes to Send. Press Send or jSend key to sent the message out.

Edit content

Press the navigation keys and scroll to **Body**. Press center key to enter content editor.

In content editor, press Options to do as follows: Send, Insert Contact, Insert Quick Note, Save as Quick Note, Save to Drafts, Cancel Message.

Receive text message

When you receive a message, your phone plays an alert, and the display shows New Message with a message indicator. Press View to open the message.

In reading SMS screen, press Options to do as follows: Reply, Delete, Forward, Get Number, Get Email, Get Link URL, Voice Call, Video Call, IP Dial, Copy to SIM/Phone, Move To Hot Messages, Save as Quick Note.

Send multimedia message

Send SMS to other contact.

1. In standby screen, press center key to enter main menu
2. Press Message and then Create Message
3. Press MMS to enter new MMS screen.

Edit receiver

Press the navigation keys and scroll to **To**.

Press center key or right key to enter contact list to select receiver; press center key to select the contact and then OK to finish selection.

If there is receiver, press center key to enter number editor.

Press Options to do as follows: Phonebook, Group, Enter Number, Receiver List, Read Report On/Off, Delivery Report On/Off, Save to Drafts, Preview, and Message Details.

Note: If there is receiver, RSK changes to Send. Press Send or Send key to sent the message out.

Edit Subject

Press the navigation keys and scroll to **Subject**. Press center key to enter subject editor.

Edit content

Press the navigation keys and scroll to **Body**. Press center key to enter content editor.

In content editor, press Options to do as follows: Insert (Insert picture, video, ring tone, quick note, or call camera, video camera or voice recorder), Edit Text, preview, arrange, delete (delete picture, video, ring tone and text), multi-slide.

Receive multimedia message

In message list of message inbox, press the MMS to enter details screen and then Center key to read it.

In MMS details screen, press Options to do as follows: read, reply, delete, forward, get number, get Email, get link URL, voice call, video call, IP dial, move to hot messages.

Unsent messages

Outgoing messages that failed to send are stored in the outbox.

1. In standby screen, press center key to enter main menu and then press Messages.

2. Press Outbox to enter message list.

3. Press one message to read it. In detail screen, press Options to carry out operations as follows: Resend, Edit and Delete.

Sent message

The sent messages are stored in Sent.

1. In standby screen, press center key to enter main menu and then press Messages.

2. Press Sent to enter message list.

3. Press one message to read it. In detail screen, press Options to carry out operations as follows: Forward and Delete.

Drafts

Messages that you are still writing are stored in the drafts folder.

1. In standby screen, press center key to enter main menu and then press Messages.

2. Press Drafts to enter message list.

3. Press one message to read it. In detail screen, press Options to carry out operations as follows: Edit and Delete.

You can edit the message while it is open, and then send it immediately.

Hot messages

The messages that are moved from inbox are stored in Hot Messages.

1. In standby screen, press center key to enter main menu and then press Messages.

2. Press Hot Messages to enter message list.

3. Press one message to read it. Press Options to carry out operations as follows: Read and Delete.

Quick notes

The text templates are stored in Quick Notes.

1. In standby screen, press center key to enter main menu and then press Messages.

2. Press Quick Notes to enter message list.

3. Press one message to read it. Press Options to carry out operations as follows: Create, Edit and Delete.

Set up message inbox

1. In standby screen, press center key to enter main menu and then press Messages.
2. Press Settings to make SMS and MMS settings.

SMS settings

Note: Actual field names and values may vary depending on the technologies available to your service provider. Some settings may not be available for all phone models.

Settings	Definition
Send type	Set the type of sending SMS.
SMS Center	Set number of the center that handles your outgoing text messages.
Valid Period	Set the maximum time that outgoing messages can store in message center.
Delivery Report	Send a delivery report for an incoming MMS message when requested.
Storage Type	Set the save location of messages
Reset	Reset SMS settings

MMS settings

Note: Actual field names and values may vary depending on the

technologies available to your service provider. Some settings may not be available for all phone models.

Settings	Definition
Connection Settings	Setup MMS network profile.
Send	Set Validity period, Read report, Delivery report, Priority and Auto Signature.
Receive	Set Auto Receive and Reply Read Report.
Black List	Set a filter list
Reset	Reset MMS settings

Storage status

View the storage status of messages.

Browser messages

Your network's Web server can send you *browser messages* that you read.

1. In standby screen, press center key to enter main menu and then press Messages.
2. Press Inbox to enter message list.
3. Press one WAP Push message.
4. Press center key to read it. In detail screen, press Options to carry out as follows: Browse, Add To Bookmark, Delete.

Information services

Information service messages are broadcast messages that you can receive, such as stock updates, news headlines, or sports scores.

Note: You must set up your information services message inbox **before** you can receive information service messages.

Usually, your service provider has already set up the information services message inbox for you.

1. In standby screen, press center key to enter main menu and then press Messages.

2. Press Info Services.

3. Press Receive to enable or disable info service on your phone. Press Topics to carry out operations such as Add, Edit and Delete.

Office applications

Alarm

Your phone has an alarm clock with five separate alarms that you can set to alert you at the time(s) you specify.

1. In standby screen, press center key to enter main menu and then press Tools.
2. Press Alarm Clock.
3. Press one alarm to enter setup screen.
4. Press Status to activate/deactivate it.
5. Press Time to set the desired time,
6. Press Ring to set the ring of alarm alert.
7. Press Volume to set the volume of alarm alert.
8. Press Period to set the alert frequency.
9. Press Snooze to activate/deactivate the function.
10. Press Name to rename the alarm.

When the alarm expires, your phone shows an alarm reminder and sounds an alert.

In the event that the handset is power off, the alarm will still work and may be stopped by any key.

Unit converter

1. In standby screen, press center key to enter main menu and then press Tools.
2. Press Unit Converter.
3. Press the content you want to set, press Select or center key to edit window. After select Type, Unit, Amount, the result appears automatically.

Calculator

You can use your phone as a calculator.

1. In standby screen, press center key to enter main menu and then press Tools.
2. Press Calculator.

3. Press the numeric and calculation keys to perform a calculation. Press center key to get the result.

Press the following keys to perform the described functions:

Settings	Definition
0-9	Enter number.
Up	Execute addition
Down	Execute subtraction
Left	Execute multiplication
Right	Execute division
*	Change the entry's sign (positive/negative).
#	Enter decimal
Center key	Get the result.
Left soft key	Delete the inputted character one by one.

Calendar

You can use your phone's calendar to Schedule.

1. In standby screen, press center key to enter main menu and then press Tools.
2. Press Datebook.
3. Press Options to carry out operations as follows.

Input Date

After the first access, the current date is shown; press left/right key to move focus left/right and press number key to enter date, press

center key to locate the date in calendar screen.

Create new event

Note: You must create an event to use the reminder alarm.

1. In standby screen, press center key to enter main menu and then press Tools.
2. Press Datebook.
3. Press Options and then Create New Event.
4. Press Subject to enter subject editor.
5. Press Location to enter location editor.
6. Press Date to enter date editor.
7. Press Time to enter time.
8. Press Note to add content about the schedule.
9. Press Period to set set the alert frequency.
10. Press Status to enable or disable the schedule.

Alert

Set the schedule alert.

Datebook list

View all datebook events.

In list screen, press Options to do as follows:

1. Press View to view the schedule.
2. Press Create New Event to add new schedule.
3. Press Send via Bluetooth to send the schedule out by Bluetooth.
4. Press Send All via BT to send all events by Bluetooth.
5. Press Delete to delete the schedule.
6. Press Delete All to delete all events.

View summary

View the total/unused number of schedule events.

Anniversary

1. In standby screen, press center key to enter main menu and then press Anniversary to enter anniversary list.
2. Press Options to do as follows: View, Create New Event, Delete,

Delete All.

If no anniversary event, press Create to add new event.

World clock

1. In standby screen, press center key to enter main menu and then press Tools.
2. Press World Clock. Press up/down key to select city of one time zone and press left/right key to select time zone.

Notepad

1. In standby screen, press center key to enter main menu and then press Tools.
2. Press Notepad. Press Options to do as follows: Edit Item, Send SMS, Delete, Delete All.

Currency

1. In standby screen, press center key to enter main menu and then press Tools.
2. Press Currency. Select From, To, Rate, Amount and get the result.

Countdown

1. In standby screen, press center key to enter main menu and then press Tools.
2. Press Countdown. Move left/right key to move focus and enter number key to input number.

Stopwatch

1. In standby screen, press center key to enter main menu and then press Tools.
2. Press Stopwatch. Press Start to start counting; press Record to record current count, press Pause to pause the count. In pause screen, press Continue to continue counting and press Reset to clear the count.

Media applications

Browser

The browser lets you access Web pages and Web-based applications on your phone. Contact your service provider to set up access, if necessary.

Start a browser session

1. In standby screen, press center key to enter main menu.
2. Press WebAccess.

If you are unable to establish a network connection with the browser, contact your service provider.

Offline status

1. In standby screen, press center key to enter main menu.
2. Press WebAccess to do as follows:

Function	Definition
Browser	Launch homepage.
Web Shortcuts	View websites stored in bookmark. Press Options to do as follows: Go TO URL, View, Edit, Reset. If the bookmark is not edited, it has only "Edit" in Options.
Stored Pages	View offline pages. Press Options to do as follows: Browse, Delete, Delete All.
History	See a list of Web sites you have visited. . Press Options to do as follows: Browse, Delete, Delete All.
Go to URL	Input URL and access it.
Go to Last Page	Link the last page that is accessed.
Browser Setup	Set up network connection settings, clear cache, enable or disable image download and background music as well as set character set.
Data Traffic	View and clear data traffic.

Access network

Pull down the scroll bar to scroll through a text page or option list.

Some Web pages may contain text fields for exchanging information with a Web site. Press the field and enter text in the usual way.

Press Options to perform various browser operations. The browser menu can include the following options:

Function	Definition
Add To Bookmark	Add the URL as bookmark.
Homepage	Launch homepage.
Web Shortcuts	View websites stored in bookmark. Press Options to do as follows: Go TO URL, View, Edit, Reset. If the bookmark is not edited, it has only "Edit" in Options.
Go to URL	Input URL and access it.
Refresh	Refresh the webpage.
Options	Save snapshot or show URL. If there is picture and sound, the option Save Music and Save Picture appear.
Stored Pages	View offline pages. Press Options to do as follows: Browse, Delete, Delete All.
History	See a list of Web sites

	you have visited. . Press Options to do as follows: Browse, Delete, Delete All.
Browser Setup	Set up clear cache, enable or disable image download and background music as well as set character set.
Data Traffic	View data traffic.

Download file

You can download a file, game, or application from a Web page onto your phone by selecting its link.

Your phone must have sufficient memory storage space to store the file.

Notes:

- Call charges apply during download sessions.
- Some games might make your phone vibrate. Some ring tones vibrate automatically. If you use one of these tones, your phone vibrates even when it is not set to a vibrate ring style.

Close the browser

Press Power key to exit from browser.

Game and applications

In the handset, there are some preset game and applications.

You can also download game and applications to your handset.

1. In standby screen, press center key to enter main menu.
2. Press Games&APP.

To make Java settings:

1. In standby screen, press center key to enter main menu.
2. Press Settings and then Java Settings to setup items.

USAT

Your SIM card may contain additional SIM Toolkit (STK) applications that add features and functionality to your phone.

Some screens may contain text fields where you must provide information in order to use a service or feature. Press the field and enter text in the usual way.

1. In standby screen, press center key to enter main menu.
 2. Press Tools and then USAT. Press a service or feature to select it. Your phone shows the service or feature screen.
- For more information about the USAT applications available on your USIM card, contact your service provider.

Media player

Your phone has media player that you can use to play audio, video and streaming files.

1. In standby screen, press center key to enter main menu.
 2. Press Multimedia and then Media Player.
- Press Options to do as follows: press Open File to open local files or go to URL to access browser; press Settings to set cycle mode, step setting and connect settings; Press Minimize to play music in background; press Play List to enter play list, press the play list to play the list; press Website List to enter the list, press the list and play the file online.
- In the media player window:
- Press up key to play or pause playing;
- Press down key to stop playing;
- Press left/right key shortly to go to previous/next file and hold left/right key to step backward/forward.
- Press volume key to adjust the volume.

Camera

Your phone has two camera lens and one of them is 2 megapixel camera that can take photos at up to 1200 x 1600 pixels resolution.

Shortcut: In standby screen, press the camera key to activate the camera. Press the camera key again to take a photo.

1. In standby screen, press center key to enter main menu.

2. Press Multimedia and then Camera.

The active viewfinder image appears in the display.

Use the viewfinder

Point the camera lens at the photo subject. Press up/down key as indicated to zoom in/out and press left/right key as indicated to adjust image brightness. Alternatively, you can press the volume keys to zoom in or out.

Take a photo

Press center key to take a photo. Alternatively, you can press the camera key to take a photo.

In single mode, after shooting picture, press Options to do as follows: press Save to save the picture; press Send MMS to send the picture by MMS; press Apply As Wallpaper to set the picture as wallpaper; press Apply As contact to set the picture as the head picture of contact.

In burst mode, after shooting picture, press Options to do as follows: press Save to save the picture, press Save All to save all pictures; press Auto Show to view the pictures automatically; press Single to switch to single picture mode.

View and delete photos or video clips

To **view** a photo or video clip:

1. In viewfinder screen, press Options and then My Favorites to open the file where your photos or video clips are stored.
2. Press one photo or video to view or play the video.

To **delete** photos or video clips:

1. In viewfinder screen, press Options and then My Favorites to open the file.
2. Press Options and then Delete, Multi-delete or Delete All.
3. Press Delete or Delete All to pop up the prompt screen and press OK or center key to delete the picture(s) or video(s).
4. In multi-delete screen, press center key to select the entry, * key to select all, # key to deselect all and then Confirm Select from Options.

In delete prompt screen, press OK or center key to confirm deleting.

Setup options

In viewfinder screen, press Options and then Settings to open the photo setup menu.

You can set or adjust the following options:

Options	Definition
Camera Switch	Switch between front and rear camera.
Switch to Video Camera	Go to video camera.
Mode	Set the shooting mode.
My Favorites	Enter corresponding folder to view photo or video that you shoot.
Settings	Set the environment, effect, shutter sound or other item. The items is up to the shooting mode.

Delay timer

1. In standby screen, press center key to enter main menu.
2. Press Multimedia and then Camera.
3. Press Options and then Settings.
4. Press Self Timer to enable or disable the function.

The timer indicator appears in the upper-right corner of the viewfinder.

The timer counts down from several seconds, and then takes a photo.

Video camera

Shortcut: In standby screen, press the camera key to activate the

camera. Press Switch to Video Camera to enter video camera. Press the camera key again to start recording.

1. In standby screen, press center key to enter main menu.
2. Press Multimedia and then Video Camera. Press center key or camera key to start recording and press center key or camera key again to stop recording.

Voice recorder

You can record personal messages and phone calls on your phone.

Note: Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone conversations.

Always obey the laws and regulations on the use of this feature.

Make a recording

1. In standby screen, press center key to enter main menu.
2. Press Multimedia and then Voice Recorder.
3. Press center key or REC from Options to start recording.
4. Press Stop or center key to stop recording. Then press center key to save the voice record. Press Options to do as follows: press Preview to listen to the record; press Save to store the record.

Play a recording

1. In standby screen, press center key to enter main menu.
2. Press Multimedia and then Voice Recorder.
3. Press Options and then Recorder List.
4. In recorder list, press one record to play it. Press option to play or rename the record.

Extra applications

Sync between and mobile

You can use a USB cable connection to transfer and synchronize data between your phone and a PC.

Note: You may use Sync to synchronize contacts, schedule, SMS and other data between your phone and PC. Not all devices are compatible with a cable connection. Check your PC to determine the type of cable you need. If use sync function, you should activate modem mode as follows:

1. In standby screen, press center key to enter main menu.
2. Press Connect and then USB Mode to enable or disable Modem Mode.

Modem

You can use your phone as a modem, to connect your PC to the Internet or transfer data to/from the PC. To use the phone as a modem, you must connect it to the PC using a Bluetooth wireless connection or USB cable connection.

Bluetooth™ wireless

Your phone supports Bluetooth wireless *pairing* (also called *linking* or *bonding*).

You can pair your phone with a Bluetooth headset to make handsfree calls, or pair your phone with a phone or computer that supports Bluetooth connections to exchange files.

Effective distance of Bluetooth is ten meters.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving.

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

For maximum Bluetooth security, you should always pair Bluetooth devices in a safe, private environment.

Bluetooth visibility

1. In standby screen, enter into main menu by pressing center key and then select Bluetooth in Connection application.
2. Press Visibility to turn on or off visibility of phone. If you forget to disable the visibility, your phone will close the visibility in 3 minutes.

Device manage

If your phone has paired with other Bluetooth, it will display device list.

1. Press center key in standby screen to enter into main menu.
 2. Press Connection to select Bluetooth. If necessary, turn on Bluetooth.
 3. Press My Devices to view device list.
 4. Press Add to search new device if it is not paired with other device; Press Search More in Option to search new device if it is connected with device
 5. Your phone shows a list of device(s) located within range of the phone.
 6. User can select a device to pair.
- To connect to a device, select it from the list and press Pair. The device may request permission to bond with your phone. Enter the correct PIN code to create a secure connection with the device. Paired Bluetooth must be stay in standby, BT Data Exchange and Modem screen.

Setup

1. Press center key in standby screen to enter into main menu.
2. Press Connection to select Bluetooth.
3. Press Setup to launcher related setup.
4. Press Activation on/off to open and close Bluetooth function.
5. Press My Phone's Info to set Phone's Name, Phone's Address and Bluetooth Services.

BT Data Exchange

1. Press center key in standby screen to enter into main menu.
2. Press Connection to select Bluetooth.
3. Press BT Data Exchange to enter into data exchange screen.

Exchange files with another device

You can exchange multimedia files and electronic file by Bluetooth wireless connection with other devices (Phone, Computer and so on). At this time, your phone must be stayed in BT data exchange screen.


Send files to another device

1. Press file you want and then press Options to select Send via Bluetooth.
2. Display device list.
3. Press device name that you want in list, or you can search new device by pressing Search More in Options.
4. Press center key to send the file after pair successfully. If necessary, input correct password to create secure connection with device.

Receive files from another device

When receiving request that ask to transfer files from other device, the phone will prompt. Press center key to receive files. If necessary, input correct password to create secure connection with device.

Connect Bluetooth stereo earphone

1.  First make Bluetooth stereo earphone stay in pair mode when you want to use Bluetooth stereo earphone and use search device function to find Bluetooth stereo earphone.
2. Press Bluetooth stereo earphone name you want in device list and then press Pair to bond with Bluetooth stereo earphone. At this time, your phone will auto bond using default password.

Tips: User can view details of the earphone by pressing name of Bluetooth stereo earphone

3. After bonding, it will pop up menu, press center key to connect the earphone. .

Note: Please use description about detailed operation step.

Service and repairs

If you have questions or need assistance, we're here to help.

Go to

www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is **1.26 W/kg**, and when worn on the body, as described in this user guide, is **0.41 W/kg**. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int./peh-emf>