

INSTRUCTION MANUAL

Preliminary Manual attached.

Complete Manual attached.

FP7 SLK Manual updates ver 0.1

TEXT REMOVALS:

- Remove 3rd Note under **To Set Channel and Code** regarding voice verification of settings.
- Remove section on **To Check Channel and Code**.
- Remove **Belt Clip**

FEATURE REVISIONS:

After **Let's Talk About Your New Radio** section, insert:

Batteries

Talk About SLK radios operate on either 3 AA alkaline batteries or a nickel metal hydride rechargeable battery pack, providing ????

- installation of both types to be noted

Set The Channel And Code

1. Current channel is the large number on the LCD
2. Press the Mode Button once, Channel indicator will appear on display. Use the Scroll Button to set new channel.
3. Press the Mode Button twice, current code (small number) will flash and radio beeps to indicate code change mode.
4. Use Scroll buttons to select a new code while number is flashing.

Note:

- To talk to other radios that do not have Interference Eliminator Codes, set your code to 0.
- Radio automatically saves new code after 3 seconds.

Lock

Lock allows you to disable the radios primary settings so they can not be changed accidentally. To activate the Lock feature, press the Lock button. The radio will beep and the Lock indicator will appear on the display. Only the Push-To-Talk (PTT), Monitor, Light, and Power buttons will remain active.

- verify with software statement of work

The radio will beep if any disabled buttons are pressed. To disable the Lock feature, press the Lock button again. The radio will beep and the Lock indicator will disappear.

Light

Talk About radios have a backlit display for usage in low-light conditions. To activate the Light, press the Light button. The light will turn on for five seconds. Pressing any other buttons on the radio will extend the period of time the display is backlit.

Scan (TalkAbout SLK 200 only)

Scan allows you to monitor the radio's channels and code. When the radio detects channel activity on your radio's code, it stops Scanning and locks in on the active channel. It allows you to listen and talk back automatically to the person transmitting without having to switch channels.

The Scan function is user adjustable to monitor either selected Interference Eliminator Codes, all Interference Eliminator Codes, or all frequency usage.

Note:

- To communicate in selected Interference Eliminator Code Scan, your radio must be set to the same code as the other radio(s) in your group. If your radio is set to a different code, the Scan feature in this setting will not detect channel activity in your group.
- When selected Scan type is all Interference Eliminator Codes, you will hear all channel activity except from radios without codes (CSQ). To hear uncoded radios, set the Scan type to setting 3 to hear all Interference Eliminator Codes and CSQ.

To use Scan Feature

1. Press the Scan button, radio will beep and flashing Scan indicator will appear on the display.
2. When the radio detects channel activity, you will hear the message. The Scan indicator will stop flashing and the display will indicate the active channel.
3. Press Push-To-Talk button to talk back on the active channel. If channel activity ceases, the radio will return to Scan mode after three seconds. The display will return to the primary channel and the Scan indicator will begin to flash again.
4. In Scan, you will always transmit back to the channel visible on the display.
5. To turn off Scan, press the Scan button again. The radio will beep and the Scan indicator will disappear.

Notes:

- In Scan, after you receive a message, the radio will remain on the active channel for three seconds before returning to Scan mode. This will be indicated by the flashing Scan indicator.
- In Scan, you will not be able to change the primary channel or code setting. To change the primary channel or code, first disable Scan operation by pressing the Scan button again.

Call (TalkAbout SLK 200 only)

The TalkAbout SLK 200 has 9 user-selectable call alert tones to alert other radio users to an incoming message and identify the transmitting radio. Other radio users will hear your call

alert tone before receiving the incoming message. To use the call feature, press the Call Button before pressing the Push-To-Talk button.

To change Call Tone

1. Press the Mode button four times, the call indicator will appear on the display and the call number will appear on the display.
2. Use the Scroll buttons to change the call tone.

VOX REVISIONS:

To Use VOX Feature:

1. Make sure the radio is off.
2. Open accessory jack cover and plug accessory's connector into jack.
3. Turn radio on and lower volume before placing accessory on head or in ear. The VOX indicator will appear on the display to indicate that the VOX feature is active.
4. Press Monitor button while rotating Volume Dial to adjust volume to a comfortable listening level.
5. To transmit, speak into accessory microphone. To receive, stop talking.

Note: There will be a brief delay between when you start or stop talking and radio transmission.

Reset to Push-To-Talk Mode:

1. Press Push-To-Talk button once. The VOX indicator will disappear.
2. To transmit, press Push-To-Talk button on radio. To receive, release the Push-To-Talk.
3. To return to VOX mode, turn the radio off, then on again.

Note: The accessory jack cover is not detachable and should be closed when not in use.