

# SSE 5000 Portable Radio Quick Guide

## Product Safety and RF Exposure Compliance




Caution

Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

### ATTENTION!

This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 6881095C98) to ensure compliance with RF energy exposure limits.

### Radio Control Top

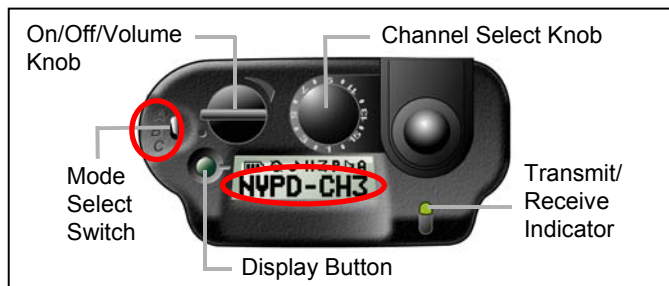

#### Radio On/Off:

- **ON:** Turn the **On/Off/Volume knob** clockwise.
- **OFF:** Turn the **On/Off/Volume knob** counter-clockwise.

#### Mode/Channel Selection:

- **MODE:** Toggle the **Mode Select switch** to A, B, C, D, E or F (see the mode/channel map).
- **CHANNEL:** Turn the **Channel Select knob** to your desired channel (see the mode/channel map).


#### Display Backlight/Flip:

- **BACKLIGHT:** Press the **Display button**.
- **FLIP:** Press and hold the **Display button** for 2 seconds.

#### Volume:

- **RAISE:** Turn the **On/Off/Volume knob** clockwise.
- **LOWER:** Turn the **On/Off/Volume knob** counter-clockwise.

## Radio Side Buttons

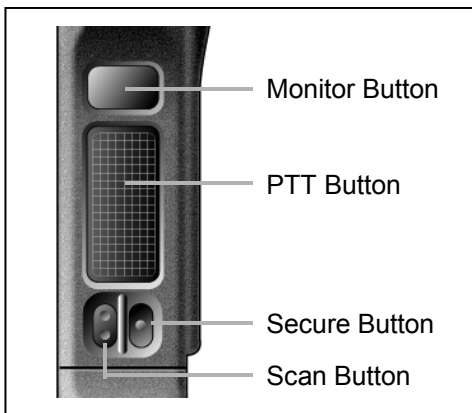

### Transmit/Receive:

- *TRANSMIT*: Press the **PTT button**.
- *RECEIVE*: Release the **PTT button**.

### Monitoring:

- *CARRIER SQUELCH*: Press the **Monitor button**.
- *OPEN SQUELCH*: Press and hold the **Monitor button** for 2 seconds.

### Secure Operation:

*ON/OFF*: Press the **Secure button**.




 




### Scan:

- *ON/OFF*: Press the **Scan button**.
- *NUISANCE CHANNEL DELETE*: Press and hold the **Scan button** for 2 seconds.
- *NUISANCE CHANNEL RESTORE*: Press the **Scan button** to turn scan off, then press it again to turn scan back on.



# SSE 5000 Portable Radio Quick Guide

## Display Icons

   <b>H</b> <b>Z</b> <b>P</b>  <b>A</b>			
<b>A MAN Z3</b>			
	Low battery	<b>Z</b>	Scan
	Secure	<b>P</b>	Priority
	Call received		Monitor
<b>H</b>	Power level	<b>A</b>	Mode

## Alert Tones

--	Low battery (2 high tones)
—	Button press (1 medium tone)
-- --	Call received (2 medium tones)
-- -- -- --	Page received (4 medium tones)
—	TOT warning or invalid button press (1 low tone)
————	TOT limit or invalid mode (long low tone)

## LED Indications

- Solid red – Transmitting
- Flashing red – Low battery
- Solid green – Incoming call alert page or selective call
- Flashing green – Channel is busy
- Double flashing green – Incoming secure call

# Mode/Channel Map

Channel	Mode		
	A	B	C
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			





Channel	Mode		
	D	E	F
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			

# SSE 5000 Portable Radio Quick Guide

## Accessory Installation


### Antenna:



Location of  
antenna  
connector


- **ATTACH:** With the radio turned off, twist the antenna clockwise onto the connector on the top of the radio.
- **REMOVE:** With the radio turned off, twist the antenna counter-clockwise to remove it from the radio.

### Battery:

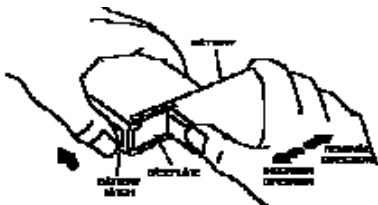

- **ATTACH:** With the radio turned off, align the baseplate on the bottom of the radio with the groove on the top of the battery, and slide the battery toward the latch until it clicks into place.
- **REMOVE:** With the radio turned off, slide the battery latch up and hold it while sliding the battery away from the latch.

### Belt Clip:

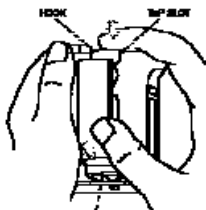

- **ATTACH:** With the battery removed, hook the top of the belt clip into the slot near the top of the radio in the back. Press the bottom of the belt clip into the slot near the base of the radio until it clicks into place.
- **REMOVE:** With the battery removed, use a small, flat-bladed screwdriver to disengage the locking tab on the bottom of the belt clip from the base of the radio. Lift the belt clip up and away from the radio.

