

Motorola
iDEN
Digital Multi-service Data-capable Phone

i670 Phone User's Guide

SIGNOFF DRAFT



NNTN6806A

IMPORTANT NOTICE: PLEASE READ PRIOR TO USING YOUR PHONE

The SIM card provided in this kit is intended for use with the phone provided in this package.

Loss of certain features will result when using a SIM card from one of the following models: *i30sx*, *i35s*, *i50sx*, *i55sr*, *i58s*, *i60c*, *i80s*, *i85s*, *i88s*, *i90c*, *i95c* series, and the *i2000* series.

For more information on SIM card compatibility, go to www.motorola.com/iden/support.

Defects or damage to your Motorola phone that result from the use of non-Motorola branded or certified Accessories, including but not limited to replacement housings and or other peripheral accessories, are excluded from warranty coverage. Please refer to the text of Motorola's Limited One Year warranty located in this user's guide for complete details.

Contents

| | |
|---|-----------|
| Getting Started | 1 |
| Locating Your SIM Card..... | 3 |
| Battery | 3 |
| Activating Service..... | 6 |
| Powering On and Off..... | 6 |
| Enabling Over-the-Air Security..... | 7 |
| Phone Programming | 7 |
| Finding Your Phone Number and Private ID..... | 7 |
| Phone Basics | 8 |
| SIM Card Security | 12 |
| Antenna | 17 |
| Accessories..... | 17 |
| For More Information..... | 18 |
| Making Calls | 19 |
| Phone Calls..... | 19 |
| Private Calls | 19 |
| Receiving Calls..... | 19 |
| Ways to Enter Calls..... | 20 |
| Missed Phone Calls..... | 22 |

| | |
|------------------------------------|----|
| Using Speakerphone..... | 23 |
| Using Mute | 23 |
| Making Emergency Phone Calls | 23 |

| | |
|---|-----------|
| MOTotalk™ | 25 |
| Channels and Codes..... | 26 |
| Private MOTotalk Calls..... | 28 |
| Making Emergency Calls while in MOTotalk™ Mode | 29 |
| Setup Options | 29 |

| | |
|---------------------------------|-----------|
| Call Alerts | 31 |
| Sending Call Alerts..... | 31 |
| Receiving Call Alerts | 31 |
| Using the Call Alert Queue..... | 31 |

| | |
|---|-----------|
| Recent Calls | 33 |
| Calls and Call Alerts..... | 33 |
| My Info From Other Phones..... | 33 |
| Contact Information From Other Phones | 34 |
| Viewing the Recent Calls List..... | 34 |
| Storing Items to Contacts | 35 |
| Deleting Items | 35 |
| Making Calls From the Recent Calls List | 35 |

| | | | |
|--|-----------|--|-----------|
| Contacts | 37 | Making International Calls..... | 49 |
| Viewing Contacts..... | 38 | Setting One Touch PTT | 49 |
| Creating Entries..... | 39 | Setting Flip Actions | 50 |
| Storing Numbers From the Idle Screen..... | 40 | Call Timers | 51 |
| Editing Entries | 41 | Using Your Phone as a Modem | 52 |
| Deleting Entries | 41 | Features for the Hearing Impaired | 53 |
| Checking Capacity | 41 | | |
| Creating Pauses and Waits..... | 42 | Group Calls and | |
| International Numbers | 42 | Selective Dynamic Group Calls | 56 |
| Accessing Contacts with GSM Phones | 43 | Group Calls | 56 |
| | | Selective Dynamic Group (SDG) Calls | 58 |
| Call Forwarding..... | 44 | Memo | 63 |
| Forwarding All Calls | 44 | | |
| Turning Off Call Forwarding | 45 | Ring Tones | 64 |
| Forwarding Missed Calls | 45 | Setting Your Phone to Vibrate..... | 64 |
| Viewing Call Forwarding Settings..... | 46 | Ring and Vibrate | 65 |
| | | Assigning Ring Tones to Contacts | 65 |
| Advanced Calling Features..... | 47 | Viewing Ring Tone Assignments | 65 |
| Call Waiting | 47 | Downloading More Ring Tones..... | 66 |
| Switching Between Calls | 47 | Managing Memory | 66 |
| Putting a Call on Hold..... | 48 | Deleting Custom Ring Tones | 66 |
| Calling 2 People | 48 | | |
| Creating Pauses and Waits While Dialing..... | 49 | | |

| | | | |
|---|-----------|---|-----------|
| Entering Text | 67 | My Pictures | 78 |
| Using Alpha Mode | 67 | Viewing Pictures..... | 78 |
| Using Word Mode..... | 67 | Getting File Information..... | 78 |
| Special Function Keys..... | 68 | Deleting Pictures | 78 |
| Using Numeric Mode..... | 69 | Managing Memory | 78 |
| Using Symbols Mode | 69 | My Info | 79 |
| Messages | 70 | Viewing My Info..... | 79 |
| Message Notifications | 70 | Editing My Info | 79 |
| Message Center | 71 | Setting Sending Options | 80 |
| Voice Mail Messages | 72 | Using Send via PTT | 81 |
| Receiving a Message..... | 72 | Sending a Picture..... | 81 |
| Accessing Voice Mail from the Message Center | 72 | Receiving a Picture | 82 |
| Sending Unanswered Calls to Voice Mail | 72 | Sending My Info and Contact Information | 83 |
| MOSMS Messages | 73 | Datebook | 85 |
| Setting Up..... | 73 | Viewing Datebook | 85 |
| Receiving a Message..... | 73 | Creating Events..... | 86 |
| Reading from the Message Center | 74 | Editing Events | 88 |
| Creating and Sending Messages | 74 | Deleting Events | 88 |
| Sorting Messages..... | 77 | Receiving Reminders | 89 |
| Managing Memory..... | 77 | Making Calls From Datebook..... | 89 |
| | | Customizing Datebook Setup..... | 90 |

| | | | |
|--|------------|--|------------|
| Digital Rights Management (DRM) | 92 | Voice Records | 110 |
| Managing Items | 92 | Creating Voice Records | 110 |
| Java Applications | 94 | Playing Voice Records | 110 |
| Installing Applications | 94 | Labeling Voice Records | 110 |
| Running Applications | 94 | Deleting Voice Records | 111 |
| Suspending Applications | 94 | Locking Voice Records | 111 |
| Resuming Applications | 95 | Managing Memory | 111 |
| Ending Applications | 95 | Customizing Your Phone | 112 |
| Downloading Applications | 95 | Setting the Volume | 112 |
| Deleting Applications | 95 | Setting Your Phone to Vibrate | 112 |
| Managing Memory | 96 | Changing the Look of Your Phone | 112 |
| Shortcuts on the Main Menu | 96 | Airplane Mode— | |
| Java Applications and GPS Enabled | 97 | Temporarily Turning Off Calls | 114 |
| GPS Enabled | 100 | Using Settings | 114 |
| IMPORTANT: Things to Keep in Mind | 100 | Profiles | 119 |
| Making an Emergency Call | 101 | Viewing Profiles | 119 |
| Viewing Your Approximate Location | 102 | Switching Profiles | 119 |
| Enhancing GPS Performance | 103 | How Changing Settings Affects Profiles | 119 |
| Updating Satellite Almanac Data | 105 | Temporary Profiles | 120 |
| Setting Privacy Options | 106 | Creating Profiles | 121 |
| Using GPS with Map Software | 107 | Editing Profiles | 121 |

| | | | |
|---|------------|---|------------|
| Deleting Profiles | 121 | Hearing Aid Compatibility | 137 |
| Setting Call Filtering | 122 | Caring for the Environment by | |
| Shortcuts | 124 | Recycling | 138 |
| Creating a Shortcut | 124 | Disposal of your Mobile Telephone and | |
| Using a Shortcut..... | 124 | Accessories | 138 |
| Editing a Shortcut..... | 125 | MOTOROLA LIMITED WARRANTY | 139 |
| Deleting Shortcuts..... | 125 | Patent and Software Provisions | 142 |
| Using a Headset..... | 126 | Limited Warranty | |
| Attaching a Headset..... | 126 | Motorola Communication Products | |
| Using a Remote PTT Button | 126 | (International)..... | 144 |
| Understanding Status Messages | 127 | Patent and Trademark Information | 148 |
| Safety and General Information | 129 | Index | 149 |
| RF Operational Characteristics | 129 | Driving Safety Tips..... | 155 |
| Portable Radio Product Operation and | | | |
| EME Exposure..... | 129 | | |
| Electromagnetic Interference/Compatibility... | 132 | | |
| Medical Devices | 132 | | |
| Operational Warnings..... | 133 | | |
| Operational Cautions..... | 134 | | |
| Accessory Safety Information..... | 135 | | |

DECLARATION OF CONFORMITY

Per FCC CFR 47 Part 2 Section 2.1077(a)



Responsible Party Name: Motorola, Inc.

Address: 8000 West Sunrise Boulevard
Plantation, FL 33322 USA

Phone Number: 1 (800) 453-0920

Hereby declares that the product:

Product Name: i670

Model Number: **H91XAN6RR4AN**

Conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a),
15.107(d) and section 15.109(a)

Class B Digital Device

 
 
As a personal computer peripheral, this device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.


If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:





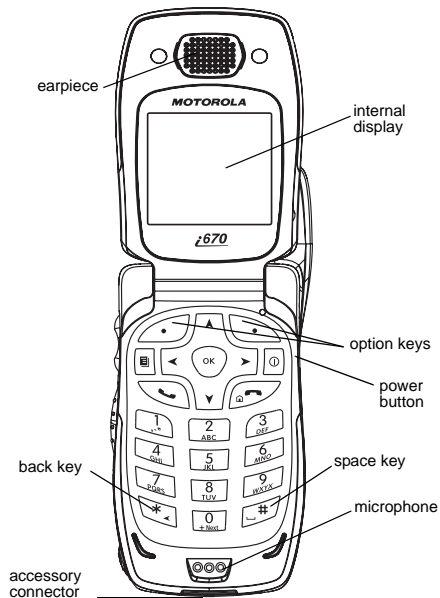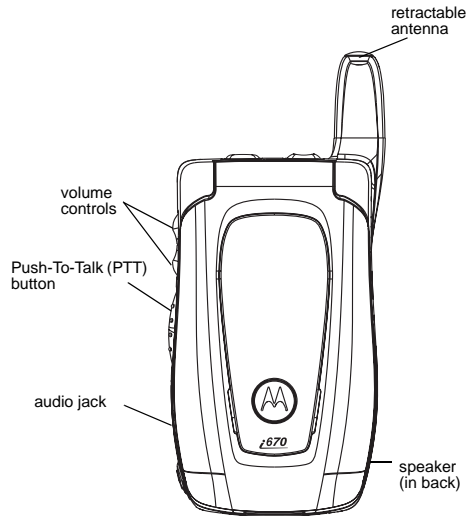

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

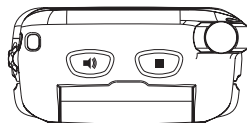

Getting Started



Getting Started



-  Power button.
-  Navigation key — press the arrows to scroll through menus and lists.
-  OK key — selects highlighted item; answers calls.
-  Menu key — accesses context-sensitive menus.
-  Option key — selects the option appearing above it on the display.
-  Send key — places phone calls.
-  End key — ends phone calls; returns to idle screen.

-  Turns speaker on; used with voice names and voice records.
-  Sends incoming calls to voice mail.

To start using your i670 phone:

- Make sure your SIM card is in place.
- Charge the battery.
- Activate your service.
- Enable over-the-air security if you are prompted to.

 
Getting Started

- **Private** — Your Private ID is the number that others use to contact you using Private calls. It is filled in when you receive your first Private call.
- **Group ID** — the number of the Talkgroup you have joined.
- **Carrier IP** — the IP address assigned to your service provider. It is filled in when you register for packet data services.
- **IP1 Address** and **IP2 Address** — the IP addresses you use to access the Internet with your phone.
- **Circuit Data**— Your circuit data number is the number you use if you want to use your phone to transfer circuit data. See “Using Your Phone as a Modem” on page 52. You receive this number from your service provider.

Note: The context-sensitive menu under My Info contains information that may be used by your service provider if there is a problem with your phone.

Phone Basics

Any time your phone is powered on, the display provides you with information and options.

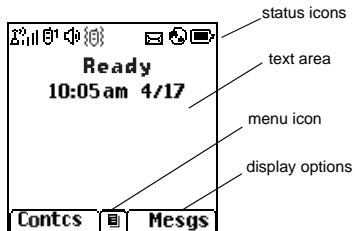

The screen shown is the idle screen. The text that appears on your idle screen depends on your service provider. The idle screen appears when your phone is on, but not engaged in any activity.

Text Area

This area displays menus, messages, names, phone numbers, and other information.

Display Options



Two display options appear at the bottom of most screens. You select a display option by pressing the option key below it.

Menus and Lists


Your phone's features are arranged in menus, submenus, and lists.

To access the items in a menu or list, scroll using the navigation key at the top of your keypad. This key lets you scroll up, down, left, or right. Holding down the appropriate part of the navigation key speeds up scrolling.


In this guide, this symbol > tells you to select a menu or list item. For example, **Settings > Security** means:

- 1 Scroll to **Settings** on the main menu.
- 2 Press  to see the **Settings** screen.
- 3 Scroll to **Security**.
- 4 Press  to see the **Security** screen.

Quick Access to Main Menu Items



Each arrow in the navigation key and  can be used to access a main menu item from the idle screen. Each of these keys is assigned to a main menu item when you receive your phone. To assign different main menu items, see "Personalize Features" on page 116.

OK Key

Pressing :

- Selects the highlighted menu item or list item
- Sets options
- Confirms actions
- Places and answer calls









Menu Key










Many features provide context-sensitive menus that let you access related features and actions. This icon  appears any time a context-sensitive menu is available. Press  to access the menu.

 
Getting Started


Main Menu

All your phone's features can be accessed through the main menu. You can set the main menu to appear as a list or as large icons.

-  **Browser** Browse the Web.
-  **Java Apps** Java applications on your phone. See page 94.
-  **Settings** Customize your phone. See page 112.
-  **Ring Tones** Assign ring tones and turn ringer off. See page 64.
-  **My Pictures** Access stored pictures. See page 78.
-  **VoiceRecord** Record and play audio messages. See page 110.
-  **My Info** View personal phone information, including phone number and Private ID. See page 7.
-  **GPS** Find your approximate geographical location. See page 100.

-  **Contacts** Create, view, store, edit Contacts and SDG lists. See page 37.
-  **Messages** Access messages. See page 70.
-  **Call Forward** Set call forwarding options. See page 44.
-  **Datebook** Schedule appointments. See page 85.
-  **Memo** Store a number to access later. See page 63.
-  **Call Timers** Phone usage information. See page 51.
-  **Recent Calls** Lists recent calls. See page 33.
-  **Shortcuts** Create shortcuts to screens. See page 124.
-  **Profiles** Groups of settings you apply together. See page 119.


 **Call Alert** Lists call alerts. See page 31.


 **MOTotalk/MT Options** Launch/Exit MOTotalk
Access MOTotalk Setup and Help. See page 25.


Note: MOTotalk may not be offered by your service provider.


Status Icons

Status icons appear at the top of the display. Some appear at all times. Others appear only when your phone is engaged in certain activities or when you have activated certain features.

  **Battery Strength** — A fuller battery indicates a greater charge.

 **Signal Strength** — More bars next to the antenna indicate a stronger signal.

 **Phone In Use** — Your phone is active on a phone call.

 **Private In Use** — Your phone is active on a Private call.



Talkgroup In Use — Your phone is active on a group call.



SDG Call In Use — Your phone is active on a SDG call.

Note: Selective Dynamic Group Calling (SDGC) may not be offered by your service provider.



Active Phone Line — 1 indicates phone line 1 is ready to make calls; 2 indicates phone line 2 is ready to make calls.



MOTotalk — Your phone is set to MOTotalk mode.



Call Forward — Your phone is set to forward calls. See page 44.



Ringer Off — Your phone is set not to ring. See page 64.



Messages — You have one or more messages. See page 70.



Internet — You are ready to browse the internet.

Getting Started



Airplane Mode — Your phone is set to airplane mode. See page 114.



Packet Data — You are ready to transfer packet data or are transferring packet data. See page 52.



TTY — You are ready to use your phone to make calls using a teletypewriter device. See page 54.



Roaming — You are using your phone outside your carrier's network.

SIM Card Security

Your SIM card protects your personal information. The SIM card stores all your Contacts information. Since this information is stored on your SIM card, not in your phone, you can remove the information by removing your SIM card.

Note: Except for making emergency calls, your phone will not function without the SIM card.

To prevent unauthorized use of your phone, your SIM card may be protected by a PIN that you enter each time the phone is powered on. You can change the PIN or turn off the requirement that it be entered.

Entering the PIN

You may be required to enter a SIM PIN when you first use your phone.

When you receive your phone, the SIM PIN is 0000. Change your PIN to prevent fraudulent use of the SIM card.

Important: If you enter your PIN incorrectly 3 times, your SIM card is blocked. To unblock your SIM card, you must contact your service provider. See “Unlocking the PIN” on page 13.

- 1 When the **Enter SIM PIN Code** screen appears, enter your SIM PIN. An asterisk appears for each character entered.
- 2 Press  under **Ok**.

Changing the PIN

- 1 From the main menu, select **Settings > Security > Change Password > SIM PIN**.
- 2 At the **Enter Old SIM PIN** screen, enter the current SIM PIN.

To use these services, you must install the iDEN Wireless Data Services software (available separately). For more information on setting up your computer and your i670 phone for packet and circuit data calls, refer to the *Wireless Data Services User's Guide* or contact your service provider.

Features for the Hearing Impaired

Using Your Phone With a Hearing Aid

Setting your phone for use with a hearing aid affects sounds from the phone's earpiece when you are in a phone call.

Choosing Your Hearing Air Setting

Note: Your phone may not include this feature.

 
- 1 From the main menu, select **Settings > Phone Calls > Hearing Aid**.
- 2 Set this option to **Telecoil**. Telecoil coupling is now optimized. **-or-**

Set this option to **Microphone**. Microphone coupling is now optimized.

If Your Hearing Aid Is Equipped With a Telecoil

Activate the telecoil setting for your behind the ear hearing aid (BTE). Once the telecoil is activated your hearing aid will be adjusted for optimum handset use. When the telecoil is active the microphone is inactive eliminating any chance of feedback (squeal). The handset is inductively coupled directly to your hearing aid enabling clear, feedback free telephone usage.


Note: Please refer to your hearing aid user guide to find out if your hearing is equipped with a telecoil.

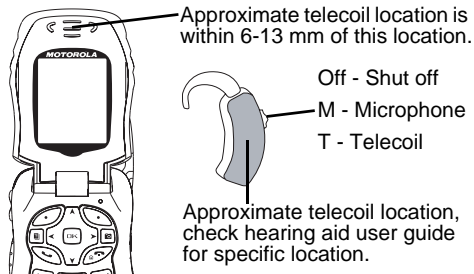

Advanced Calling Features

Optimize Your Handset Orientation

 Slide your phone up and down, left and right, then rotate for the best coupling alignment of the telecoil in the hearing aid with the telecoil in the phone.

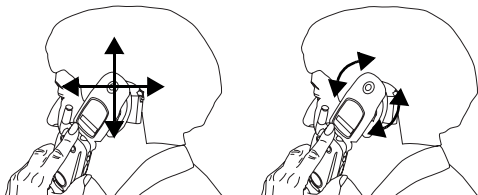

Making TTY Calls



Note: This feature may not be offered by your service provider.

To use your phone to make phone calls using a teletypewriter (TTY) device:

- 1 Connect one end of a 2.5mm cable into the audio jack on your phone. Connect the other end of the cable to your TTY device.
- 2 Make sure that your phone's TTY feature is on and select the TTY mode you want to use.

- 3 Use your phone to enter phone numbers and make calls.

When you make a TTY call, these icons appear on the phone's display:

-  Phone call is active.
-  Phone call is on hold.

TTY device features such as Turbo-Code, High-Speed, and Interruption are not supported by your phone. These features must be turned off or disabled to use your TTY device with your phone.

Turning On the TTY Feature

Your phone's TTY feature must be on if you want to make TTY calls, set the TTY mode, or change the TTY baud rate. To make sure the TTY feature is on:

From the main menu, select **Settings > Phone Calls > TTY > Use TTY**. This field must say **On**.

Choosing a Mode

Your phone supports these TTY modes:

- **TTY** — You type and read text on your TTY device.
- **VCO** (Voice-Carry-Over) — You speak into your phone and read text replies on your TTY device.

- **HCO** (Hearing-Carry-Over) — You type text on your TTY device and listen to voice replies on your phone speaker.

To change mode while not in a call:

- 1 From the main menu, select **Settings > Phone Calls > TTY > Type**.
- 2 Select the TTY mode you want.

When you make a TTY call, the call begins in the TTY mode you last selected.

To change mode during a call using your phone:

- 1 Press **□**.
- 2 Select **In Call Setup > TTY > Type**.
- 3 Select the mode you want.

To change mode during a call using your TTY device, issue one of the following commands:

- “VCO please” — to select VCO mode
- “HCO please” — to select HCO mode
- “HCO off please” — to turn off HCO mode

Important: When you are using HCO, the sound coming from your phone speaker may be uncomfortably loud. Use caution when putting the phone to your ear. (For information on setting the volume of your phone speaker, see “Setting the Volume” on page 112.)

Changing the TTY Baud Rate

By default, your phone’s TTY baud rate is set to 45.45, the baud rate required for TTY calls within the U.S. To make calls outside the U.S., set your TTY baud rate to 50.0.

To change the TTY baud rate:

- 1 From the main menu, select **Settings > Phone Calls > TTY > Baud**.
- 2 Select the baud rate for your location.

Customizing Your Phone

Setting the Volume

Of the Earpiece and Speaker

- 1 From the main menu, select **Settings > Volume**.
- 2 Scroll to **Earpiece** to set the earpiece volume.
-or-

Scroll to **Speaker** to set the speaker volume.

- 3 To set the volume:

Scroll left or right. **-or-**

Press the volume controls.

Of the Ringer

Press the volume controls.

Setting Your Phone to Vibrate

To set your phone to vibrate instead of making a sound when you receive phone calls, Private calls, group calls, SDG calls*, message notifications, and call alerts, see “Setting Your Phone to Vibrate” on page 64.

To set your phone to vibrate instead of making a sound when you receive Private calls, group calls, and SDG calls*, even if you want your phone to ring for other features:

- 1 From the main menu, select **Settings > 2-Way Radio > Alert Type**.

Tip: If **Alert Type** does not appear: From the main menu, select **Ring Tones**. Make sure **VibeAll** is set to **Off**. Repeat step 1.

- 2 Select **Vibrate** to set your phone to vibrate.

Tip: Select **Silent** in step 2 to set your phone to neither vibrate nor make a sound.

* *Selective Dynamic Group Calling (SDGC) may not be offered by your service provider.*


Changing the Look of Your Phone

Wallpaper

A wallpaper is an image that appears on the idle screen.

Choosing a Wallpaper

- 1 From the main menu, select **Settings > Display/Info > Wallpaper > Wallpaper**.
- 2 Select the wallpaper you want.

Tip: If you want to see what the wallpaper looks like, press  under **View**.

Setting Wallpaper to Change Automatically

Note: This feature may not be offered by your service provider.

- 1 From the main menu, select **Settings > Display/Info > Wallpaper > Auto Cycle**.
- 2 Select how often you want the wallpaper to change.

Any of the wallpapers in your phone may appear on your idle screen.

Setting Text Size

To set the size of the text on the internal display:

- 1 From the main menu, select **Settings > Display/Info > Text Size**.
- 2 Select the option you want:
 - **Zoom** — 11 characters per line
 - **Standard** — 14 characters per line
 - **Compressed** — 18 characters per line

To set your phone to briefly display very large digits when you enter numbers at the idle screen:

- 1 From the main menu, select **Settings > Display/Info > Large Dialing**.
- 2 Set this option to **Large Digits**.


Setting Contrast

To set the contrast of the display:

- 1 From the main menu, select **Settings > Display/Info > Contrast**.
- 2 Scroll left or right to set the contrast.

Setting the Menu View

You can set the items on your main menu and Java applications menu to appear as large icons or a list:

- 1 From the main menu, select **Settings > Display/Info > Menu View**. -or-
From the main menu: Press . Select **Main Menu Setup > Menu View**.
- 2 To choose a list, select **List View**. -or-
To choose large icons, select **Icon View**.

Setting the Backlight

A backlight lights the display and keypad when you make or receive a call, open or close the flip, or press keys or buttons.

To control how long the backlight stays on:

- 1 From the main menu, select **Settings > Display/Info > Backlight > Backlight**.

Customizing Your Phone

2 Select the number of seconds you want the backlight to stay on. **-or-**

Select **Off** if you never want the backlight on.

To set the keypad backlight to light up only in low light conditions:

1 From the main menu, select **Settings > Display/Info > Backlight > Sensor**.

2 Set this option to **On**.

Airplane Mode—Temporarily Turning Off Calls


Sometimes you may want to have your phone on, but turn off its ability to make and receive calls, such as when you are on an airplane.

To set your phone so that it cannot make or receive phone calls, Private calls, or group calls; or transfer data:

1 From the main menu, select **Settings > Advanced > Airplane Mode**.

2 Set this option to **On**.

This icon  appears.

Note: Pressing  for more than 5 seconds also turns on Airplane mode.

To restore your phone's ability to do all these things:

Set this option to **Off**.

Using Settings

Settings contains many submenus that let you customize your phone.

For information on applying groups of settings to your phone together, see “Profiles” on page 119.

Display/Info Features

The Display/Info menu controls how the keypad and display appear:

- **Wallpaper** — changes the wallpaper that appears on the idle screen.
- **Palette** — changes the color scheme of the display.
- **Text Size** — sets the size of text on the display.
- **Home Icons** — controls whether main menu icons appear on the idle screen.
- **Backlight** — controls backlight illumination.
- **Clock** — controls whether the time and date appear on the idle screen; sets time and date format; sets year.

- **Menu View** — controls whether the items on your main menu and Java applications menu appear as large icons or a list.
- **Large Dialing** — sets large digits to appear on the idle screen when you enter a number.
- **Contrast** — sets the contrast of the display.
- **Language** — sets the language that your phone displays.

Phone Calls Features

The Phone Calls menu controls how your phone handles phone calls:

- **Set Line** — sets phone line 1 or phone line 2 as the active line for outgoing calls.
- **Any Key Ans** — If this feature is on, you can answer calls by pressing any key on the keypad.
- **Auto Redial** — sets your phone to automatically redial calls you make when the system is busy.
- **Call Waiting** — See “Call Waiting” on page 47.
- **Auto Ans** — sets your phone to automatically answer an incoming call after a specified number of rings. When this feature is on, the phone answers by connecting you to the caller; it does not send the call to voice mail, unless you are out of coverage or on the line.

- **Flip Activation** — See “Setting Flip Actions” on page 50.
- **Minute Beep** — causes a beep to sound every minute of an active call.
- **Call Duration** — causes the duration of a call to appear on the display when the call ends.
- **TTY** — See “Making TTY Calls” on page 54.
- **Notifications** — See “Message Notifications” on page 70.
- **Java App Control** — If you have installed a Java application that answers phone calls, this setting lets you turn that application on.

2-Way Radio Features

The 2-Way Radio menu controls how your phone handles Private calls, group calls, and SDG calls*:

- **Tkgrp Silent** — controls whether you hear group calls to your Talkgroup. See “Group Calls” on page 56.
- **Tkgrp Area** — lets you define your Talkgroup area.
- **One Touch PTT** — See “Setting One Touch PTT” on page 49.


Customizing Your Phone

- **Alert Type** — controls how your phone notifies you when you receive Private calls, group calls, and SDG calls*.

* *Selective Dynamic Group Calling (SDGC) may not be offered by your service provider.*

Personalize Features

The Personalize menu makes main menu items easier to access.

- **Menu Options** — **Reorder Menu** lets you change the order of the items on the main menu by grabbing and moving them; **Add/Remove Apps** lets you create a shortcut to a Java application on the main menu.
- **Up Key** — sets the main menu item you access when you scroll up from the idle screen.
- **Down Key** — sets the main menu item you access when you scroll down from the idle screen.
- **Left Key** — sets the main menu item you access when you scroll left from the idle screen.
- **Right Key** — sets the main menu item you access when you scroll right from the idle screen.
- **Center Key** — sets the main menu item you access when you press  from the idle screen.

- **Left Sftkey** — sets the main menu item you access when you press the left option key from the idle screen.
- **Right Sftkey** — sets the main menu item you access when you press the right option key from the idle screen.
- **Power Up** — sets the main menu item you see when you power on your phone. To set the idle screen to be the first thing you see when you power on your phone, select **Default Ready**.

Volume Features

The Volume menu sets the volume of sounds your phone makes:

- **Line 1** — sets ringer volume for phone line 1.
- **Line 2** — sets ringer volume for phone line 2.
- **Messages** — sets the volume of message notifications and Datebook reminders.
- **Earpiece** — sets the volume of sound coming out of the earpiece.
- **Speaker** — sets the volume of sound coming out of the speaker.
- **Keypad** — sets the volume of sound associated with pressing keys and buttons.

- **Java Earpiece** — sets the volume of sound associated with Java applications coming out of the earpiece.
- **Java Speaker** — sets the volume of sound associated with Java applications coming out of the speaker.
- **Data** — sets the volume of sounds that notify you that you are receiving a circuit data call.

Security Features

The Security menu lets you turn security features on and off and change passwords:

- **Phone Lock** — turns on a feature that locks your phone: **Lock Now** takes effect immediately; **Auto Lock** takes effect when your phone is powered off and then on. An unlock code is required to enable this feature, to unlock the phone, and to set a new unlock code. Contact your service provider for your default unlock code.
- **Keypad Lock** — locks the phone's keypad, either immediately or automatically after a set period of inactivity.
- **SIM PIN** — enables and disables your phone's SIM PIN security feature. See "Turning the PIN Requirement On and Off" on page 13.

- **GPS PIN** — enables and disables your phone's GPS PIN security feature. See "Setting the GPS PIN Security Feature" on page 106.
- **Change Passwords** — changes your phone unlock code, security code, SIM PIN, and GPS PIN.

Advanced Features

The Advanced menu contains advanced and rarely used Settings features.

- **Alert Timeout** — sets the amount of time a tone continues to sound when you receive a message notification, call alert, or Datebook reminder.
- **Headset/Spkr** — sets headset option. See "Using a Headset" on page 126.
- **Connectivity** — **Network ID** sets the phone's network IDs and their roaming options under the direction of your service provider; **Master Reset** lets your service provider reset your service in the event of a security or provisioning problem.
- **Reset Defaults** — **Reset Settings** returns all settings to their original defaults; **Reset All** returns all settings to their original defaults and erases all stored lists. Use only under the direction of your service provider.

Customizing Your Phone

- **Return to Home** — controls how long the recent calls list displays after calls.
- **Airplane Mode** — prevents your phone from making or receiving phone calls, Private calls, group calls, or SDG calls*; or transferring data.
- **Phone Only** — prevents your phone from making or receiving Private calls, group calls, or SDG calls*; or transferring data.
Note: This feature may not be offered by your service provider.
- **Baud Rate** — sets the baud rate at which your phone communicates with a laptop computer, PC, or similar device.

* *Selective Dynamic Group Calling (SDGC) may not be offered by your service provider.*

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.

READ THIS INFORMATION BEFORE USING YOUR INTEGRATED MULTI-SERVICE PORTABLE RADIO.

RF Operational Characteristics

Your radio product contains a radio frequency transmitter to convey the information you wish to send as well as occasional automatic signals used to sustain connection to the wireless network, and a receiver which enables you to receive communication and connection information from the network.

Portable Radio Product Operation and EME Exposure

Your Motorola radio product is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy (EME):

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR part 2 sub-part J.
- American National Standards Institute (ANSI) / Institute of Electrical and Electronics Engineers (IEEE). C95. 1-1992.
- Institute of Electrical and Electronics Engineers (IEEE). C95. 1-1999 Edition.
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998.
- Ministry of Health (Canada). Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999.
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation - Human Exposure) Standard 2003.
- ANATEL, Brasil Regulatory Authority, Resolution 303 (July 2, 2002) "Regulation of the limitation of exposure to electrical, magnetic, and electromagnetic fields in the radio frequency range between 9 kHz and 300 GHz." "Attachment to Resolution 303 from July 2, 2002."

Safety and General Information

To assure optimal radio product performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:

Phone Operation

When placing or receiving a phone call, hold your radio product as you would a wireline telephone. **Speak directly into the microphone.**

Two-way radio operation

Your radio product has been designed and tested to comply with national and international standards and guidelines regarding human exposure to RF electromagnetic energy, when operated in the two-way mode (at the face, or at the abdomen when using an audio accessory) at usage factors of up to 50% talk/50% listen.

Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the Push-To-Talk (PTT) button. To receive calls, release the PTT button. Transmitting 50% of the time or less, is important because this radio generates measurable RF energy only when transmitting (in terms of measuring for standards compliance).

When using your radio product as a traditional two-way radio, **hold the radio product in a vertical position with the microphone one to two inches (2.5 to 5 cm) away from the lips.**



Body-worn operation

To maintain compliance with FCC RF exposure guidelines, if you wear a radio product on your body when transmitting, always place the radio product in a **Motorola approved clip, holder, holster, case or body harness for this product.** Use of non-Motorola-approved accessories may exceed FCC RF exposure guidelines. **If you do not use a Motorola approved body-worn accessory and are not using the radio product in the intended use positions along side the head in the phone mode or in front of the face in the two-way radio mode, then ensure the antenna and the radio product are kept the following minimum distances from the body when transmitting**

- **Phone or Two-way radio mode: one inch (2.5 cm)**
- **Data operation using any data feature with or without an accessory cable: one inch (2.5 cm)**

ALL MODELS WITH FCC ID AZ489FT5844 MEET THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.¹ Tests for SAR are conducted using standard operating positions reviewed by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the

body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.05 W/kg and when tested on the body, as described in this user guide, is 1.15 W/kg during packet data transmission. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID **AZ489FT5844**.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>.

- ¹ In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- ² The SAR information reported to the FCC includes the FCC-accepted Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Safety and General Information

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the radio product and may violate FCC regulations.

DO NOT hold the antenna when the radio product is “IN USE”. Holding the antenna affects call quality and may cause the radio product to operate at a higher power level than needed.

Approved Accessories

For a list of approved Motorola accessories call 1-800-453-0920, or visit our website at www.motorola.com/iden.

Electromagnetic Interference/Compatibility

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your radio product in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your radio product when on board an aircraft. Any use of a radio product must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

The Advanced Medical Technology Association (AdvaMed) recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld wireless radio product and a pacemaker. These recommendations are consistent with those of the U.S. Food and Drug Administration.

Persons with pacemakers should:

- **ALWAYS** keep the radio product more than 6 inches (15 cm) from their pacemaker when the radio product is turned ON.

- Not carry the radio product in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the radio product OFF immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless radio products may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of radio products in the area where you drive. Always obey them.

When using the radio product while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.

- Pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings



For Vehicles with an Air Bag

Do not place a portable radio product in the area over the air bag or in the air bag deployment area. Air bags inflate with great force. If a portable radio is placed in the air bag deployment area and the air bag inflates, the radio product may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your radio product prior to entering any area with a potentially explosive atmosphere, unless it is a radio product type especially qualified for use in such areas as “Intrinsically Safe” (for example, Factory Mutual, CSA, or UL approved). Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Safety and General Information

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn off your radio product when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

Operational Cautions

Batteries

All batteries can cause property damage and/or bodily injury, such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any



charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. To reduce the risk of injury, batteries should not be exposed to fire, disassembled, or crushed.

Cleaning and Drying Considerations

Using a leather carry case may help protect the surfaces and help prevent liquids (e.g., rain) from entering into the interior of the radio product. This product is not water proof, and exposing the unit to liquids may result in permanent damage to the unit.

If your radio product interior gets wet, then do not try to accelerate drying with the use of an oven or a dryer as this will damage the radio product and void the warranty. Instead, do the following:

- 1 Immediately power off the radio product.
- 2 Remove Battery and SIM card (if so equipped) from radio product.
- 3 Shake excess liquid from radio product.
- 4 Place the radio product and battery in an area that is at room temperature and has good air flow.
- 5 Let the radio product, battery, and SIM card dry for 72 hours before reconnecting the battery and/or powering on the radio product.

Accessory Safety Information

If the radio product does not work after following the steps listed above, contact your dealer for servicing information.


Clean the external surfaces of the radio product with a damp cloth, using a mild solution of dishwashing detergent and water. Some household cleaners may contain chemicals that could seriously damage the radio product. Avoid the use of any petroleum-based solvent cleaners. Also, avoid applying liquids directly on the radio product.

Accessory Safety Information

Important: Save these accessory safety instructions.

- Before using any battery or battery charger, read all the instructions for and cautionary markings on (1) the battery, (2) the battery charger, which may include a separate wall-mounted power supply or transformer, and (3) the radio product using the battery.

- Do not expose any battery charger to water, rain, or snow as they are designed for indoor or in-vehicle use only.

| | |
|---|--|
|  | Warning: To reduce the risk of injury, charge only the rechargeable batteries described in “Battery” on page 3. Other types of batteries may burst, causing personal injury and damage. |
|---|--|

- To reduce the risk of damage to the cord or plug, pull by the plug rather than the cord when you disconnect the battery charger from the power source outlet.
- Do not operate any battery charger with a damaged cord or plug — replace them immediately.
- Battery chargers may become warm during operation, but not hot. If it becomes hot to the touch, unplug it from the power outlet immediately and discontinue its use.
- Use of a non-recommended attachment to a battery charger may result in a risk of fire, electric shock, or injury to persons.
- Make sure the battery charger power cord is located so that it will not be stepped on, tripped over, or subjected to damage or stress.

Safety and General Information

- An extension cord should not be used with any battery charger unless absolutely necessary. Use of an improper extension cord could result in a risk of fire and electric shock. If an extension cord must be used, make sure that:
 - The pins on the plug of the extension cord are the same number, size, and shape as those on the plug of the charger.
 - The extension cord is properly wired and in good electrical condition.
 - The cord size is 18AWG for lengths up to 100 feet and 16AWG for lengths up to 150 feet.
 - Do not operate any battery charger if it has received a sharp blow, has been dropped, or has been damaged in any way; take it to a qualified service technician.
 - Do not disassemble a battery charger; take it to a qualified service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
 - Maximum ambient temperature around the power supply or transformer of any battery charger should not exceed 40°C (104°F).
 - The output power from the power supply or transformer must not exceed the rating given on the Desktop Dual-Pocket Charger.
- The disconnection from the line voltage is made by unplugging the power supply from the AC receptacle.
- To reduce risk of electric shock, unplug any battery charger from the outlet before attempting any maintenance or cleaning.

For optimum charging performance, turn off the radio product while charging it in any battery charger.

Hearing Aid Compatibility

When some mobile phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more “immune” than others to this interference noise, and mobile phones can also vary in the amount of interference noise they may generate at any given time. ANSI standard C63.19 was developed to provide a standardized means of measuring both mobile phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their particular hearing device. Not all mobile phones are rated for compatibility with hearing devices, but mobile phones that are rated should have the rating available. This rating may depend on the position of a retractable antenna.

Results will vary depending on the user’s hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise, even a mobile phone with a higher rating may still cause unacceptable noise levels in the hearing device. Evaluate your personal needs by trying out the mobile phone with your hearing device.

“M” Rating: Mobile phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than phones that are not labeled. (M4 is the “better” or higher of the two ratings.)

“T” Rating: Mobile phones rated T3 or T4 meet FCC requirements for compatibility with telecoil-type (“T Switch” or “Telephone Switch”) hearing devices and are likely to be more usable with such hearing devices than unrated phones. (T4 is the “better” or higher of the two ratings.)

Hearing devices may also be measured for immunity to interference noise from mobile phones. In some cases, hearing devices can be modified or “hardened” to improve operation with a mobile phone. Your hearing device manufacturer or hearing health professional may help you improve the interaction of your mobile phone and hearing device. Not all hearing devices are rated for compatibility with mobile phones, but hearing devices that are rated should have the rating available. Be sure to evaluate your personal needs by trying out this mobile phone with your specific hearing device, using both antenna positions if this mobile phone is equipped with a retractable antenna.

More information about hearing aid compatibility may be found at:
<http://commerce.motorola.com/consumer/QWhtml/accessibility/default.html> (www.motorola.com),
www.fcc.gov, www.fda.gov, and
www.accesswireless.org.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Telephone and Accessories

Please do not dispose of mobile telephones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems have been set up to handle waste electrical and electronic items. Please contact your regional authorities for

more details. If no suitable scheme exists, you may return unwanted mobile telephones and electrical accessories to any Motorola Approved Service Centre in your region.

MOTOROLA LIMITED WARRANTY

Note: FOR IDEN SUBSCRIBER PRODUCTS, ACCESSORIES AND SOFTWARE PURCHASED IN THE UNITED STATES OR CANADA

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its Motorola iDEN Digital Mobile and Portable Handsets ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-Roms or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. **This limited warranty is a consumer's exclusive remedy, and applies as follows to new Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:**

PRODUCTS COVERED

Products as defined above.

Accessories as defined above.

Products or Accessories that are Repaired or Replaced.

Software as defined above. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).

LENGTH OF COVERAGE

One (1) year from the date of purchase by the first consumer purchaser of the product.

One (1) year from the date of purchase by the first consumer purchaser of the product.

The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Ninety (90) days from the date of purchase.

MOTOROLA LIMITED WARRANTY

What is not covered? (Exclusions)

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Ornamental Decorations. Ornamental decorations such as emblems, graphics, rhinestones, jewels, gemstones and their settings, and other decorative elements, are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and

Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, including without limitation, software changes, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, antennas, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products, Accessories or Software is excluded from coverage.

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

Who is covered? This warranty extends only to the first consumer purchaser, and is not transferable.

What will Motorola Do? Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information? To obtain service or information, please call:

Motorola iDEN Customer Services
1-800-453-0920 or 954-723-4910

TTY-877-483-2840

Or visit us online at
<http://www.motorola.com/iden/support>

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There? ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS

MOTOROLA LIMITED WARRANTY

THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Patent and Software Provisions

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and Motorola will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- a. That MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;

Index

Numerics

2-way radio **115**

see also Private calls, group calls, SDG calls, and call alerts

3-way calling **48**

A

Accessories **17**

safety **135**

Airplane mode **114**

settings **118**

turning on and off **114**

Alpha mode **67**

Antenna **17**

B

Backlight **114**

Battery

care **5**

charging **4, 5**

door **3**

inserting **4**

safety **134**

Baud rate **118**

C

Call alerts **31**

deleting **32**

queue **31**

receiving **31**

responding **31, 32**

sending **31**

sorting **32**

viewing **32**

Call filtering **122**

Call forwarding **44**

all calls **44**

missed calls **45**

off **45**

Call Timers **51**

Call Waiting **47**

off **47**

Calls

3-way **48**

answering automatically **115**

answering with any key **19, 115**

emergency **23**

ending **20**

entering number **20**

from Contacts **21**

from Datebook **21**

from memo **63**

from recent calls **20, 35**

group, see Group calls

international **49**

making **19**

on hold **48**

phone calls **19**

Private calls **19, 22, 115**

receiving **19**

redialing **21, 115**

remote PTT **126**

SDG, see SDG calls

Speed Dial **22**

TTY, see TTY calls

Turbo Dial **22**

voice name **22**

Circuit data **52**

Clock **114**

Contact information

receiving **34, 84**

Index

- sending **83**
- Contacts **21, 37**
 - capacity **41**
 - creating entries **39**
 - deleting **41**
 - icons **37**
 - iDEN Phonebook Manager **43**
 - international numbers **42**
 - searching **38**
 - showing all entries **39**
 - showing only Private IDs **39**
 - SIM card **37**
 - storing from idle screen **40**
 - storing from Memo **63**
 - storing from recent calls **35**
 - type **37**
 - viewing **38**
 - voice name **40**
 - with non-i670 phones **43**

D

- Datebook **21**
 - profiles **88**
- Digital rights management , see

- DRM
- Direct Launch **29**
- Display
 - backlight **114**
 - contrast **113, 115**
 - options **9**
 - screen **8**
- Drafts **76**
 - see also MOSMS messages, drafts
- DRM **92**
 - count-based usage **92**
 - definition **92**
 - deleting items **93**
 - expired items **93**
 - managing items **92**
 - renewing items **92**
 - renewing license **92**
 - time-based usage **92**
 - viewing license information **92**

E

- Email **38, 40, 52**
- Emergency calls **23**

- End key **2**

F

- Faxes
 - receiving **52**
 - sending **52**
- Flip action **19, 50**

G

- GPS Enabled **100**
 - almanac data **105**
 - best results **103**
 - emergency calls **23, 101**
 - map software **107**
 - privacy options **106**
 - security **106**
 - viewing location **102**
- GPS PIN **117**
- GPS, see GPS Enabled
- Group calls **56, 115**
 - making **57**
 - off **57**
 - receiving **57**

H

- Handset, see phone

Headset **126**

Hearing Aid Compatibility **137**

I

Icons

Contacts **37**

SDG **61**

status **11**

text entry **67**

iDEN Phonebook Manager **43**

Idle screen **8**

creating MOSMS messages
75

storing to Contacts **40**

International numbers **49**

calling **49**

storing **42**

J

Java applications

deleting **95**

memory **96, 111**

K

Keypad **2**

locking **117**

L

Language **115**

Lists, see menus

M

Memo **63**

calling from **63**

creating **63**

editing **63**

storing to Contacts **63**

viewing **63**

Memory

Java applications **96, 111**

MOSMS messages **77**

pictures **78**

ring tones **66**

voice records **111**

Menu key **2, 9**

Menus **9**

context-sensitive **2, 9**

main menu **10**

SDG list **58**

Message center **70, 72**

see also messages

MOSMS messages **74**

Message notifications **70**

setting options **70**

Messages **70**

see also voice mail, MOSMS
messages, and SMS
messages

receiving **70**

MOSMS messages **73**

creating **74**

deleting **76, 77**

drafts **76**

memory **77**

message center **74**

quick notes **75**

receiving **73**

sending **74**

sent messages **76**

setting up **73**

sorting **77**

MOTotalk

channels **26**

codes **26**

emergency calls **29**

private MOTotalk calls **28**

setup options **29**

Index

talk range **26**

using **25**

Mute **23**

My Info **79**

editing **79**

receiving **33, 84**

sending **80, 83**

viewing **79**

N

Navigation key **2**

Numeric mode **69**

O

One Touch PTT **22**

setting **49**

Over-the-air programming **7**

P

Packet data **52**

Passwords **117**

Patent information **148**

Pauses

dialing **49**

storing **42**

Phone **1, 8**

active line **115**

flip action **19, 50**

locking **117**

modem **52**

off **6**

on **6**

only **118**

setting up **2**

Pictures

memory **78**

receiving **82**

Send via PTT **81**

sending **81**

viewing **78**

Profiles **119**

call filtering **122**

changing settings **119**

creating **121**

Datebook **88**

deleting **121**

editing **121**

switching **119**

temporary **120**

viewing **119**

Programming, over-the-air **7**

PUK code **13**

Q

Quick notes **75**

see also MOSMS messages,
Quick notes

R

Radio frequency **129**

Recent calls **20, 33, 35**

call alerts **33**

contact information **34**

creating MOSMS messages
75

deleting **35**

display time **118**

storing to Contacts **35**

viewing **34**

Redialing **21, 115**

Ring tones **37, 64**

deleting **66**

downloading **66**

memory **66**

off **64**

setting **64**

- setting in Contacts **39, 65**
 - vibrate **64**
 - viewing assigned **65**
- Ringer **112**
- see also Ring tones off **112**

S

Safety 129

- accessory **135**
- battery **134**
- driving **155**
- electromagnetic interference **132**
- medical devices **132**
- radio frequency **129**

SDG Calls

- status icons **11**

SDG calls

- icons **61**
- lists, adding numbers **58**
- lists, creating **58**
- lists, deleting **60**
- lists, removing members **60**
- lists, sending **61**

- lists, storing faster **60**
 - making **60**
 - receiving **61**
 - settings **115**
 - starting **60**
- Security **117**
- Selective Dynamic Group Calls,
see SDG calls
- Send via PTT **81**
- contact information **83**
 - My Info **83**
 - pictures **81**
 - SDG lists **61**
 - setting for pictures **82**
- Service, activating **6**
- Settings **114**
- resetting **117**
- Shortcuts
- creating **124**
 - deleting **125**
 - editing **125**
 - using **124**
- SIM card **3, 12, 14**
- Contacts **37**

- inserting **14**
 - removing **16**
 - with non-i670 phones **43**
- SIM PIN **12, 117**
- changing **12**
 - default **12**
 - entering **12**
 - requirement **13**
 - unblocking **13**
- SMS messages **70, 73**
- also see MOSMS messages **73**
- Speakerphone **23**
- Speed Dial **22, 38, 40**
- State Tone **30**
- Status messages **127**
- Symbols mode **69**

T

- T9 Text Input, see text entry
- Talkgroups **56, 57, 115**

 - joining **57**

- Text display area **8**
- Text entry **67**

 - Alpha mode **67**

Index

- database **67, 68**
- icons **67**
- mode **67**
- Numeric mode **69**
- Symbols mode **69**
- Word mode **67**
- Trademark information **148**
- TTY calls **54**
 - baud rate **55**
 - making **54**
 - mode **54**
 - on **54**
- Turbo Dial **22**

V

- Voice mail **70, 72**
 - receiving **72**
 - sending calls to **20, 72**
 - setting up **45, 72**
- Voice name **22, 38**
 - creating **40**
- Voice records **110**
 - creating **110**
 - deleting **111**
 - labelling **110**

- locking **111**
- memory **111**
- playing **110**
- Volume, setting **112, 116**

W

- Waits
 - dialing **49**
 - storing **42**
- Word mode **67**

Driving Safety Tips

“Safety is your most important call!”

Your Motorola wireless telephone gives you the powerful ability to communicate by voice — almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies that benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

- Get to know your Motorola wireless phone and its features such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
- When available, use a hands-free device. If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original hands-free accessories available today.
- Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving. Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility — driving safely.
- Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.

Driving Safety Tips

- Your phone can perform many other functions besides allowing you to make and receive calls. Do not let these features distract you from driving. Use them only when it is safe to do so.
- Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.
- Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
- Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.