

# APX 7000/APX 7000L User Guide

Dual Display

6875945M01-M





**m**  
**ASTRO® APX™ 7000/APX 7000L**  
**Series**  
**Digital Portable Radios**  
**Quick Reference Card**

**RF Energy Exposure and Product Safety**  
**Guide for Portable Two-Way Radios**

**ATTENTION!**

This radio is restricted to Occupational use only. Before using the radio, read the RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations.

**Radio Controls**

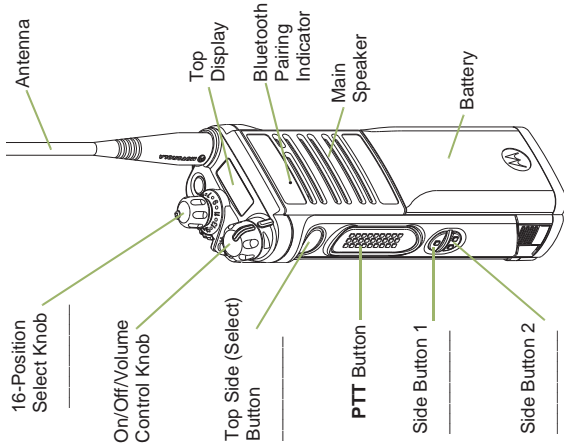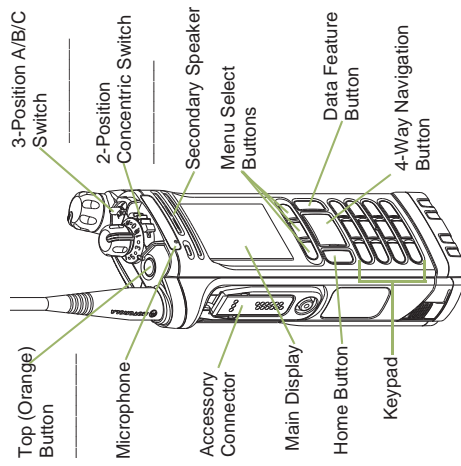

**Radio On/Off**

- **On** – On/Off/Volume knob clockwise.
- **Off** – On/Off/Volume knob counterclockwise.

**Zones and Channels**

- **Zone** – Zone switch to desired zone.
- **Channel** – Channel switch to desired channel.

**Receiving and Transmitting**

- 1 Select zone/channel.
- 2 Listen for a transmission.  
**OR**  
 Press and hold **Volume Set** button.  
**OR**  
 Press **Monitor** button and listen for activity.
- 3 Adjust volume, if necessary.
- 4 Press the **PTT** button to transmit; release to receive.

**Sending an Emergency Alarm**

- 1 Press and hold the **Emergency** button\*.
- 2 The display shows **Emergency** and the current zone/channel. Radio sounds a short, medium-pitched tone, and the LED blinks red momentarily.

- 3 When acknowledgment is received, you hear four beeps; alarm ends; and radio exits emergency.

\* **Default emergency button press timer is set to 1 second.** This timer is programmable, see page 68 in the user guide for details.

To exit emergency at any time, press and hold the **Emergency** button.



68007024034-G



English

■ **Sending an Emergency Call**

- 1 Press the **Emergency** button.
- 2 Press and hold the **PTT** button. Speak clearly into the microphone.
- 3 Release the **PTT** button to end call.
- 4 Press and hold **Emergency** button to exit emergency.

To exit emergency at any time, press and hold the **Emergency** button.

■ **Sending a Silent Emergency Call**

- 1 Press the **Emergency** button.
- 2 The display does not change; the LED does not light up, and there is no tone.
- 3 Silent emergency continues until you:  
Press and hold the **Emergency** button to exit emergency state.  
**OR**  
Press and release the **PTT** button to exit the Silent Emergency Alarm mode and enter regular dispatch or Emergency Call mode.

To exit emergency at any time, press and hold the **Emergency** button.

■ **Display Status Icons**


**U** Receiving a call or data.

**t** Transmitting a call or data.

<b>8</b>	Blinks when the battery is low.
<b>V</b>	The more stripes, the stronger the signal strength for the current site (trunking only).
<b>O</b>	Direct radio to radio communication or connected through a repeater. <b>On</b> = Direct <b>Off</b> = Repeater
<b>M</b>	This channel is being monitored.
<b>H</b> or <b>.</b>	<b>L</b> = Radio is set at Low power. <b>H</b> = Radio is set at High power.
<b>i</b>	Scanning a scan list.
<b>j</b>	<b>Blinking dot</b> = Detects activity on the Priority-One Channel during scan. <b>Steady dot</b> = Detects activity on the Priority-Two Channel during scan.
<b>K</b>	The vote scan feature is enabled.

<b>m</b>	<b>On</b> = Secure operation. <b>Off</b> = Clear operation. <b>Blinking</b> = Receiving an encrypted voice call.
<b>□</b>	<b>On steady</b> = View mode <b>Blinking</b> = Program mode <b>On</b> = AES Secure operation. <b>Off</b> = Clear operation. <b>Blinking</b> = Receiving an encrypted voice call.
<b>G</b>	<b>On</b> = feature enabled, and signal available. <b>Off</b> = feature disabled. <b>Blinking</b> = feature enabled, but signal unavailable.
<b>n</b>	<b>On</b> = User is currently associated with the radio. <b>Off</b> = User is currently not associated with the radio. <b>Blinking</b> = Device registration or user registration with the server failed due to an invalid username or pin.
<b>O</b>	Data activity is present.
<b>b</b>	Bluetooth is ready.
<b>a</b>	Bluetooth is connected to the device.

**Menu Navigation**

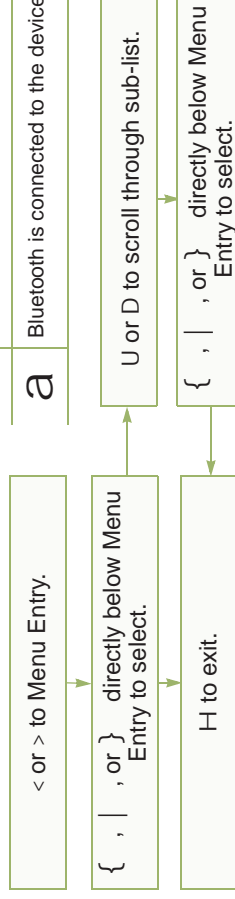

## Declaration of Conformity

This declaration is applicable to your radio *only* if your radio is labeled with the FCC logo shown below.

### DECLARATION OF CONFORMITY

Per FCC CFR 47 Part 2 Section 2.1077(a)



Responsible Party  
Name: Motorola Solutions, Inc.

Address: 1303, East Algonquin Road, Schaumburg, Illinois 60196, U.S.A.  
Phone Number: 1-800-927-2744

Hereby declares that the product:

Model Name: **APX 7000/APX 7000L**

conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a), 15.107(d) and section 15.109(a)

#### Class B Digital Device

As a personal computer peripheral, this device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Declaration of Conformity



English

### **Additional FCC Note to Users**

The following FCC information applies to Bluetooth radio options

**Model Name:** MNUK6000 & APX7000L

**Description:** APX 7000/APX 7000L Bluetooth Option Board

**FCC ID:** AZ489FT6000 & AZ489FT7059

**IC:** 109U-89FT6000 & 109U-89FT7059

**Conforms to the following regulations:** FCC Part 15, Section 15.19, 15.21, and 15.105

**Note:** Changes or modifications not expressly approved by Motorola may void the users authority, as authorized by the FCC, to operate this device and should not be made. See 47 CFR Part 15.21. Information to the user. The user manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Part. 15.19(3).

This device has been tested and found to comply with the limits of Part 15.15 of the FCC rules. Parties responsible for equipment compliance should note that the limits specified in this part will not prevent harmful interference under all circumstances.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. See Part 15.105b These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Industry Canada (IC) Statements:**  
This Class B digital apparatus complies with ICES-003 and Radio Standards Specification (RSS) 210. This product also complies with CAN ICES-3 (B) / NMB-3(B).

**Note:** If the APX 7000 customers are purchasing the Bluetooth Option Board for the first time and their radios are FM approved, please send the radios back to the service center in order to keep the certification.

If customers have already purchased the radio with the Bluetooth Option Board as part of the tanapa and they need to replace (repair) the option board, they can send the radio to any Motorola FM audited .



## Contents

This User Guide contains all the information you need to use the APX™ 7000/APX 7000L Series Digital Portable Radios.

### Declaration of Conformity . . . . .i

### Important Safety Information . . . . .xiii

RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios . . . . .xiii

### Software Version . . . . .xiv

Notice to Users (FCC and Industry Canada) . . . . .xiv

### Informations importantes sur la sécurité . . . . xv

Exposition aux radiofréquences et sécurité du produit pour radios bidirectionnelles portatives . . . . xv

### Version du logiciel . . . . .xvi

Avis aux utilisateurs (FCC et Industrie Canada) . . . .xvi

### Computer Software Copyrights . . . . . xvii

### Documentation Copyrights . . . . .xvii

### Disclaimer . . . . . xviii

### Getting Started . . . . .1

How to Use This Guide . . . . .1

Notations Used in This Manual . . . . .1

Additional Performance Enhancement . . . . . 2

ASTRO 25 Enhanced Data . . . . . 2

Dynamic System Resilience (DSR) . . . . . 2

CrossTalk Prevention . . . . . 2

Encrypted Integrated Data (EID) . . . . . 2

SecureNet . . . . . 2

What Your Dealer/System Administrator Can Tell You . . . . . 3

### Preparing Your Radio for Use . . . . .3

Charging the Battery . . . . . 4

Battery Charger . . . . . 4

Attaching the Battery . . . . . 4

Attaching the Antenna . . . . . 5

Attaching the Accessory Connector Cover . . . . . 6

Using the Carry Holder . . . . . 6

Turning On the Radio	7	Status Icons	25
Adjusting the Volume	8	TMS Menu Options	26
<b>Identifying Radio Controls</b>	<b>9</b>	Call Type Icons	26
Radio Parts and Controls	10	LED Indicator	27
Programmable Features	11	Intelligent Lighting Indicators	29
Assignable Radio Functions	11	Alert Tones	30
Assignable Settings or Utility Functions	13	Phone Call Display and Alert Prompts	34
Accessing the Preprogrammed Functions	14	<b>General Radio Operation</b>	<b>35</b>
Using the Menu Select Buttons	14	Selecting a Zone	35
Using the Navigation Buttons	14	Selecting a Radio Channel	36
Home Button	14	Using Channel Search Button	38
Data Feature Button	14	Using Mode Select Feature	39
4-Way Navigation Button	14	Saving a Zone and Channel to a Softkey	39
Using the Keypad	15	Saving a Zone and Channel to a Keypad Button	40
Keypad Characters – Uppercase Mode	15	Receiving and Responding to a Radio Call	40
Keypad Characters – Lowercase Mode	16	Receiving and Responding to a Talkgroup Call	41
Keypad Characters – Numeric Mode	17	Receiving and Responding to a Private Call (Trunking Only)	41
Keypad Characters – Hexadecimal Mode	18	Receiving and Responding to a Telephone Call (Trunking Only)	42
Push-To-Talk (PTT) Button	19	Making a Radio Call	43
<b>Identifying Status Indicators</b>	<b>19</b>	Making a Talkgroup Call	43
Status Icons	20		
Text Messaging Service (TMS) Icons	25		

Making a Private Call (Trunking Only) . . . . .	43
Making an Enhanced Private Call (Trunking Only) . . . . .	44
Making a Telephone Call (Trunking Only) . . . . .	45
Repeater or Direct Operation . . . . .	46
Monitoring Features . . . . .	46
Monitoring a Channel . . . . .	46
Conventional Mode Operation . . . . .	47
<b>Advanced Features . . . . .</b>	<b>48</b>
Advanced Call Features . . . . .	49
Receiving and Making a Selective Call (ASTRO Conventional Only) . . . . .	49
Receiving a Selective Call . . . . .	49
Making a Selective Call . . . . .	49
Using the Talkgroup Call Feature (Conventional Operation Only) . . . . .	50
Selecting a Talkgroup . . . . .	50
Sending a Status Call . . . . .	50
Using the Dynamic Regrouping Feature (Trunking Only) . . . . .	51
Requesting a Reprogram (Trunking Only) . . . . .	52
Classifying Regrouped Radios . . . . .	52
Using Dynamic Zone Programming (DZP) . . . . .	52
Entering the Dynamic Zone to Select a Dynamic Channel . . . . .	53
Saving a Channel in the Dynamic Zone from List	
Selection . . . . .	53
Saving a Channel in the Dynamic Zone from Channel Name . . . . .	53
Deleting a Channel in the Dynamic Zone . . . . .	54
Contacts . . . . .	55
Making a Private Call from Contacts . . . . .	55
Adding a New Contact Entry . . . . .	56
Deleting a Contact Entry . . . . .	58
Adding a Contact to a Call List . . . . .	58
Removing a Contact from a Call List . . . . .	59
Editing a Contact in a Call List . . . . .	59
Editing an Entry Alias . . . . .	59
Editing as Entry ID . . . . .	60
Editing a Call Type . . . . .	60
Viewing Details of a Contact . . . . .	61
Scan Lists . . . . .	61
Viewing a Scan List . . . . .	61
Editing the Scan List . . . . .	62
Changing the Scan List Status . . . . .	63
Viewing and Changing the Priority Status . . . . .	63
Scan . . . . .	64
Turning Scan On or Off . . . . .	64
Making a Dynamic Priority Change (Conventional Scan Only) . . . . .	64
Deleting a Nuisance Channel . . . . .	64
Restoring a Nuisance Channel . . . . .	65

Call Alert Paging .....	65	Re-Initiating Man Down .....	77
Receiving a Call Alert Page .....	65	Testing the Man Down Feature .....	77
Sending a Call Alert Page .....	66	Automatic Registration Service (ARS) .....	78
Emergency Operation .....	67	Selecting or Changing the ARS Mode .....	78
Sending an Emergency Alarm .....	68	Accessing the User Login Feature .....	79
Sending an Emergency Call (Trunking Only) .....	69	Logging In as a User .....	79
Sending an Emergency Alarm with Emergency Call .....	69	Logging Out .....	80
Sending a Silent Emergency Alarm .....	70	Text Messaging Service (TMS) .....	81
Changing Channels during Emergency .....	70	Accessing the Messaging Features .....	81
Using the Emergency Keep-Alive Feature .....	70	Composing and Sending a New Text Message .....	82
Fireground (Conventional Only) .....	71	Sending a Quick Text Message .....	83
Entering Fireground Zone Channel .....	71	Using the Priority Status and Request Reply Features .....	85
Responding to Evacuation Indicator .....	72	Appending a Priority Status to a Text Message .....	85
Tactical Public Safety (TPS) (Conventional Only) .....	73	Removing a Priority Status from a Text Message .....	85
Using TPS Normal Transmission .....	73	Appending a Request Reply to a Text Message .....	85
Man Down .....	74	Removing a Request Reply from a Text Message .....	86
Pre-Alert Timer .....	75	Appending a Priority Status and a Reply Request to a Text Message .....	86
Post-Alert Timer .....	75	Removing a Priority Status and a Reply Request from a Text Message .....	86
Alerting User When Man Down Feature is Triggered .....	76	Managing Text Messages .....	87
Triggering Emergency .....	76	Receiving a Text Message .....	87
Alerting User When Man Down Enhanced is Triggered .....	76	Viewing a Text Message from the Inbox .....	87
Exiting Man Down Feature .....	77	Replying to a Received Text Message .....	88
		Accessing the Drafts Folder .....	89
		Managing Sent Text Messages .....	89

# Contents

Viewing a Sent Text Message	89	Radio Lock	103
Sending a Sent Text Message	90	Unlocking Your Radio	103
Deleting a Text Message	91	Changing Your Password	103
Deleting All Text Messages	91	Changing Your Tactical Inhibit Password	104
ASTRO 25 Advanced Messaging Solution	92	Enabling or Disabling the Radio Lock Feature (Secure Radios Only)	105
System Setup for ASTRO Advanced Messaging Solution	92	Radio Stun and Kill	105
Two-Factor Authentication	93	Using Radio Stun	105
Logging into Two-Factor Authentication	93	Using Radio Stun	105
Logging out of Two-Factor Authentication	95	Using Radio Kill	106
Sending a Query	95	Using Remote Kill	106
Receiving a Query	97	Using Direct Kill	107
Secure Operations	97	The Global Positioning System (GPS)	107
Selecting Secure Transmissions	97	Understanding the GPS Feature	107
Selecting Clear Transmissions	98	Enhancing GPS Performance	108
Managing Encryption	98	The Outdoor Location Feature (Using GPS)	108
Loading an Encryption Key	98	Enabling MGRS Coordinates	109
Using the Multikey Feature	99	Accessing the Outdoor Location Feature	109
Selecting an Encryption Key	99	Saving a Waypoint	110
Selecting a Keypad	100	Viewing a Saved Waypoint	111
Erasing the Selected Encryption Keys	100	Editing the Alias of a Waypoint	112
Requesting an Over-the-Air Rekey (ASTRO Conventional Only)	101	Editing the Coordinates of a Waypoint	112
MDC Over-the-Air Rekeying (OTAR) Page	102	Deleting a Single Saved Waypoint	113
Infinite UKEK Retention	102	Deleting All Saved Waypoints	114
Hear Clear	102	Measuring the Distance and Bearing from a Saved Waypoint	114
Security	103	Using the Location Feature While in Emergency	

Mode .....	115	Comparing Authentication PIN by Manually Keying in the Same PIN .....	127
Trunking System Controls .....	115	Turning On the Bluetooth Audio (Routing the Audio from the Radio to the Headset) .....	128
Using the Failsoft System .....	115	Turning Off the Bluetooth Audio (Routing the Audio from the Headset to the Radio) .....	128
Going Out of Range .....	116	Adjusting the Volume of the Radio from Bluetooth Audio Device .....	129
Using the Site Trunking Feature .....	116	Viewing and Clearing the Bluetooth Device Information .....	129
Locking and Unlocking a Site .....	116	Editing the Bluetooth Friendly Name .....	131
Viewing and Changing a Site .....	117	Pairing with LEX 700 (APX 7000 Dual Display only) .....	131
Viewing the Current Site .....	117	Programming Over Project 25 (POP 25) (ASTRO 25 and ASTRO Conventional) .....	132
Changing the Current Site .....	117	Responding to the notification of Upgrade .....	133
Mission Critical Wireless (MCW) - Bluetooth® - .....	117	Voice Announcement .....	133
Turning the Bluetooth On .....	118	Using Site Selectable Alerts (ASTRO 25) .....	134
Turning the Bluetooth Off .....	118	Sending SSA Notification to Single Site .....	134
Re-Pair Timer .....	119	Sending SSA Notification to Single Site Via Manual Entry .....	135
Bluetooth Drop Timer .....	120	Sending SSA Notification to All Sites .....	136
Pairing with LF MPP Pairing Feature .....	120	Sending SSA Notification to All Available Sites .....	137
Indicating Bluetooth Connection is Lost .....	122	Stopping SSA Notification of a Single Site .....	137
Pairing with Standard Pairing Feature .....	122	Stopping SSA Notification of a Single Site Via Manual Entry .....	138
Searching and Pairing the Bluetooth Device .....	123	Stopping SSA Notification of All Sites .....	139
Turning Bluetooth Visibility On .....	124		
Receiving Pairing Request from other Devices .....	124		
Turning Bluetooth Visibility Off .....	125		
Pairing with PIN Authentication .....	125		
Comparing Authentication PIN When Receiving a Pairing Request .....	125		
Comparing Authentication PIN with Generated Numeric PIN .....	126		

# Contents

Stopping SSA Notification of All Available Sites . . . . .	139
Long Term Evolution (LTE) (APX 7000L Only) . . . . .	140
Data Profiles Available for LTE . . . . .	141
Turning On the LTE at the LTE Menu Screen . . . . .	142
Turning On the LTE with LTE Button . . . . .	142
Turning Off the LTE Connection . . . . .	143
Information at the LTE Screen . . . . .	143
Changing from LTE-enabled Channel to LTE-disabled Channel . . . . .	144
Changing from LTE-enabled Channel to Unprogrammed Channel . . . . .	144
Utilities . . . . .	145
Viewing the Recent Calls . . . . .	145
Using the Flip Display . . . . .	146
Selecting a Basic Zone Bank . . . . .	146
Selecting an Enhanced Zone Bank . . . . .	147
Selecting the Power Level . . . . .	147
Selecting a Radio Profile . . . . .	148
Enabling and Disabling the Radio Alias . . . . .	148
Selecting the Audio Speaker . . . . .	149
Controlling the Display Backlight . . . . .	149
Setting Up the Radio Display and Visual Indicators to Suite Night Vision Goggles . . . . .	150
Locking and Unlocking the Keypad and Controls . . . . .	151
Turning Keypad Tones On or Off . . . . .	152
Turning Voice Mute On or Off . . . . .	152
Using the Time-Out Timer . . . . .	153
Setting the Time and Date . . . . .	153
Editing the Time and Date . . . . .	153
Using the Conventional Squelch Operation Features . . . . .	154
Analog Options . . . . .	154
Digital Options . . . . .	154
Using the PL Defeat Feature . . . . .	155
Using the Digital PTT ID Feature . . . . .	155
Using the Smart PTT Feature (Conventional Only) . . . . .	155
IMPRES™ Battery Annunciator . . . . .	156
Accessing the Battery Info screen . . . . .	156
Accessing the General Radio Information . . . . .	157
Accessing the Radio Information . . . . .	157
Viewing the IP Information . . . . .	158
Viewing the Control Assignments . . . . .	159
Editing the Soft ID . . . . .	159
<b>Helpful Tips . . . . .</b>	<b>161</b>
Caring for Your Radio . . . . .	161
Cleaning Your Radio . . . . .	162
Handling Your Radio . . . . .	163
Servicing Your Radio . . . . .	163
Taking Care of the Battery . . . . .	164
Checking the Battery Charge Status . . . . .	164
LED and Sounds . . . . .	164
Fuel Gauge Icon . . . . .	164
Battery Recycling and Disposal . . . . .	165

<b>Accessories</b> .....	<b>166</b>
Highlights for the Accessories .....	166
<b>Appendix: Maritime Radio Use in the VHF Frequency Range</b> .....	<b>167</b>
Special Channel Assignments .....	167
Emergency Channel .....	167
Non-Commercial Call Channel .....	167
Operating Frequency Requirements .....	168
Declaration of Compliance for the User of Distress and Safety Frequencies .....	170
<b>Glossary</b> .....	<b>171</b>
<b>Commercial Warranty</b> .....	<b>176</b>

## Contents

xiii

English



---

## Important Safety Information

### RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios

#### ATTENTION!

**This radio is restricted to Occupational use only.**

Before using the radio, read the RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations.

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following website:

<http://www.motorolasolutions.com/APX>

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power

(e.i.r.p.) is not more than that necessary for successful communication.

This radio transmitter has been approved by Industry Canada to operate with the Motorola-approved antenna types with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

## Important Safety Information

xiii

English

## Software Version

All the features described in the following sections are supported by the radio's software version **R12.00.00** or later.

See **Accessing the Radio Information** on page 157 to determine your radio's software version.

Check with your dealer or system administrator for more details of all the features supported.

## Notice to Users (FCC and Industry Canada)

This device complies with Part 15 of the FCC rules and RSS 210 of the Industry Canada rules per the conditions listed below:

- 1 This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.
- 3 Changes or modifications made to this device, not expressly approved by Motorola, could void the user's authority to operate this equipment.

## Informations importantes sur la sécurité

### Exposition aux radiofréquences et sécurité du produit pour radios bidirectionnelles portatives

#### ATTENTION!

#### Cette radio ne doit être utilisée qu'à des fins

**professionnelles.** Avant d'utiliser la radio, lisez le guide Exposition aux radiofréquences et sécurité du produit pour radios bidirectionnelles portatives, qui contient d'importantes instructions de fonctionnement pour une utilisation sécuritaire et des informations sur l'exposition aux fréquences radioélectriques afin d'assurer la conformité aux normes et règlements applicables.

Pour obtenir une liste d'antennes et d'autres accessoires approuvés par Motorola, consultez le site Web :

<http://www.motorolasolutions.com/APX>

Selon la réglementation d'Industrie Canada, cet émetteur radio ne peut être utilisé qu'avec une antenne dont le type et le gain maximal (ou minimal) sont approuvés par Industrie Canada pour cet émetteur. Afin de limiter les interférences radio pour les

autres utilisateurs, le type et le gain de l'antenne doivent être choisis de façon à ce que la puissance isotrope rayonnée équivalente (P.I.R.E.) ne soit pas plus forte qu'il ne le faut pour établir la communication.

Le présent émetteur a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne agréés par Motorola et ayant un gain admissible maximal ainsi que l'impédance requise pour chaque type d'antenne indiqué. Les types d'antenne non inclus, dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

## Informations importantes sur la sécurité

XV

---

## Version du logiciel

Toutes les fonctionnalités décrites dans les sections suivantes sont prises en charge par la version du logiciel **R12.00.00** ou ultérieure de la radio.

Vérifiez auprès de votre détaillant ou de l'administrateur de système pour obtenir des renseignements sur les fonctionnalités prises en charge.

## Avis aux utilisateurs (FCC et Industrie Canada)

Cet appareil est conforme à la Partie 15 des règlements de la FCC et RSS 210 du règlement d'Industrie Canada selon les conditions énumérées ci-dessous:

- 1 Ce dispositif ne doit pas causer d'interférences nuisibles.
- 2 Cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent perturber le fonctionnement.
- 3 Les changements ou les modifications apportées à ce dispositif, non expressément approuvées par Motorola, peuvent annuler le droit de l'utilisateur à utiliser cet équipement.

Version du logiciel

XVI

Français Canadien

## Computer Software Copyrights

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

## Documentation Copyrights

No duplication or distribution of this document or any portion thereof shall take place without the express written permission of Motorola. No part of this manual may be reproduced, distributed, or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of Motorola.

# Computer Software Copyrights

---

## **Disclaimer**

The information in this document is carefully examined, and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Furthermore, Motorola reserves the right to make changes to any products herein to improve readability, function, or design. Motorola does not assume any liability arising out of the applications or use of any product or circuit described herein; nor does it cover any license under its patent rights, nor the rights of others.

Disclaimer

xviii

English

## Getting Started

Take a moment to review the following:

How to Use This Guide . . . . .	page 1
Notations Used in This Manual . . . . .	page 1
Additional Performance Enhancement . . . . .	page 2
What Your Dealer/System Administrator Can Tell You. . . . .	page 3

## How to Use This Guide

This User Guide covers the basic operation of the APX™ 7000/ APX 7000L Portables.

However, your dealer or system administrator may have customized your radio for your specific needs. Check with your dealer or system administrator for more information.

## Notations Used in This Manual

Throughout the text in this publication, you will notice the use of **WARNING**, **Caution**, and **Note**. These notations are used to emphasize that safety hazards exist, and the care that must be taken or observed.



An operational procedure, practice, or condition, etc., which may result in injury or death if not carefully observed.



An operational procedure, practice, or condition, etc., which may result in damage to the equipment if not carefully observed.

**Note:** An operational procedure, practice, or condition, etc., which is essential to emphasize.

The following special notations identify certain items:

Example	Description
Home button or H	Buttons and keys are shown in bold print or as an icon.
Phone	Menu entries are shown similar to the way they appear on the radio's display.
>	This means "Press the right side of the 4-way Navigation button".

## ■ Additional Performance Enhancement

The following are some of the latest creations designed to enhance the security, quality and efficiency of the radios.

### 📄 ASTRO 25 Enhanced Data

ASTRO 25 Enhanced Data is optimized to handle different message sizes and update rates from different applications. Install Enhanced Data to the Integrated Data system with a software installation to improve data channel efficiency and enable denser network traffic.

### 📄 Dynamic System Resilience (DSR)

DSR seamlessly switches the radio system to a backup master site during system failures. DSR also provides additional

indication e.g. failure detection, fault recovery, and redundancy within the system to address to the user in need. Mechanisms related to the Integrated Voice and Data (IV & D) or data centric are all supported by DSR.

### 📄 CrossTalk Prevention

This feature prevents crosstalk scenarios from happening, especially when a wideband antenna is used. This feature allows the adjustment of the Trident Transmitting SSI clock rate in the radio to be different from the Receiving Frequency. This subsequently reduces the possibilities of radio frequency interfering spurs and it also prevents crosstalk.

### 📄 Encrypted Integrated Data (EID)

EID provides security encryption and authentication of IV & D data bearer service communication between the radio and the Customer Enterprise Network.

### 📄 SecureNet

SecureNet allows user to perform secured communications on an Analog or Motorola Data Communication (MDC) channel. The MDC OTAR feature will allow users to perform OTAR activities on an MDC channel.



## ■ What Your Dealer/System Administrator Can Tell You

Check with your dealer or system administrator for the correct radio settings, if the radio is to be operated in extreme temperatures (less than -30 °C or more than +60 °C), to ensure proper top and front display operation.

You can also consult your dealer or system administrator about the following:

- Is your radio preprogrammed with any preset conventional channels?
- Which buttons have been preprogrammed to access other features?
- What optional accessories may suit your needs?

## ■ Preparing Your Radio for Use

Assemble your radio by following these steps:

Charging the Battery	page 4
Battery Charger	page 4
Attaching the Battery	page 4
Attaching the Antenna	page 5
Attaching the Accessory Connector Cover	page 6
Using the Carry Holder	page 6
Turning On the Radio	page 7
Adjusting the Volume	page 8

## Preparing Your Radio for Use

## ■ Charging the Battery



### To avoid a possible explosion:

- **DO NOT** replace the battery in any area labeled "hazardous atmosphere".
- **DO NOT** discard batteries in a fire.

### WARNING

The Motorola-approved battery shipped with your radio is uncharged. Prior to using a new battery, charge it for a minimum of 16 hours to ensure optimum capacity and performance.

For a list of Motorola-authorized batteries available for use with your radio, see **Accessories** on page 166.

**Note:** When charging a battery attached to a radio, turn the radio off to ensure a full charge.


### **Battery Charger**


To charge the battery, place the battery, with or without the radio, in a Motorola-approved charger. The charger's LED indicates the charging progress; see your charger's user guide.

For a list of chargers, see **Accessories** on page 166.

## ■ Attaching the Battery

With the radio turned off, slide the battery into the radio's frame until side latches click into place.

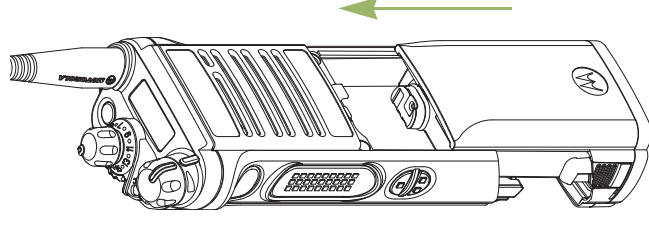

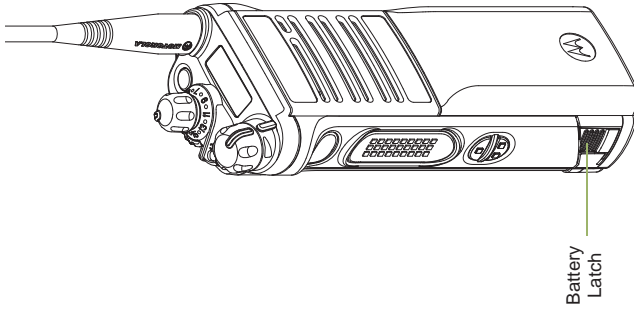


To remove the battery, turn the radio off. Squeeze the release latches at the bottom of the battery until the battery releases from the radio. Remove the battery from the radio.

**Note:** If your radio is preprogrammed with volatile-key retention, the encryption keys are retained for approximately 30 seconds after battery removal. Check with your dealer or system administrator for more information.

You can view the status of the IMPRES™ battery if the radio is using an IMPRES battery. See **IMPRES™ Battery Annunciator** on page 156 for more information.

## Attaching the Antenna

With the radio turned off, set the antenna in its receptacle and turn clockwise to attach it to the radio.

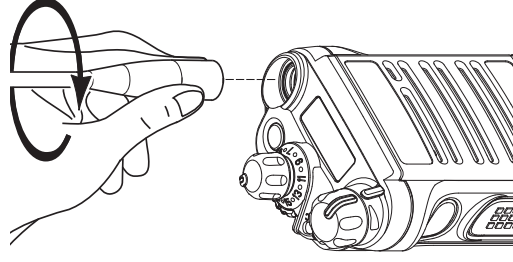


To remove the antenna, turn the antenna counterclockwise. Make sure you turn off the radio first.

### ■ Attaching the Accessory Connector Cover

The accessory connector is located on the antenna side of the radio. It is used to connect accessories to the radio.

**Note:** To prevent damage to the connector, shield it with the connector cover when not in use.

Insert the hooked end of the cover into the slot above the connector. Press downward on the cover's top to seat it in the slot. Once in place, tighten by rotating the thumbscrew clockwise by hand.

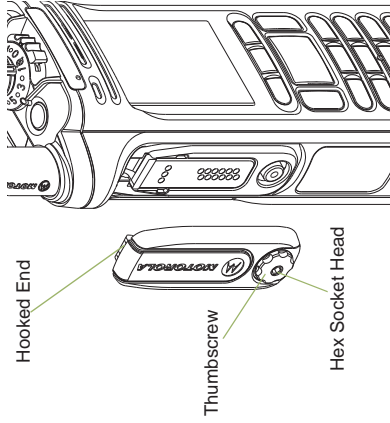


To remove the accessory connector cover, rotate the thumbscrew counterclockwise until it disengages from the radio. If the thumbscrew is too tight, use an Allen wrench to loosen it first.

Rotate and lift the connector cover to disengage it from the radio.


### ■ Using the Carry Holder

Position the radio within the carry holder with the main speaker facing outward. Slide the radio down into the carry holder until it clicks into place.

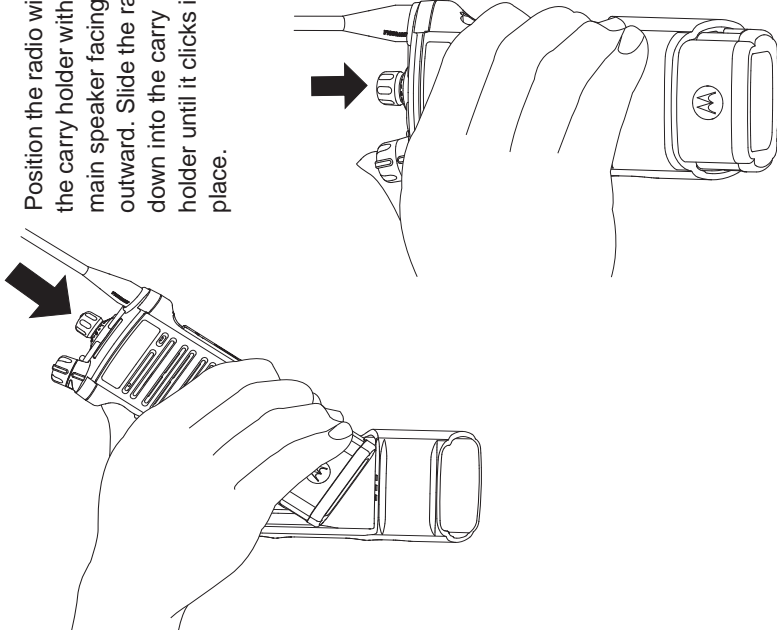


## ■ Turning On the Radio


Rotate the On/Off/Volume Control Knob clockwise until you hear a click.

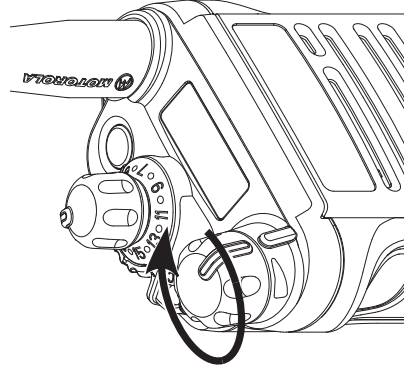

If the power-up test is successful, you see momentary **SELFTEST** on the radio's display, followed by the Home screen.

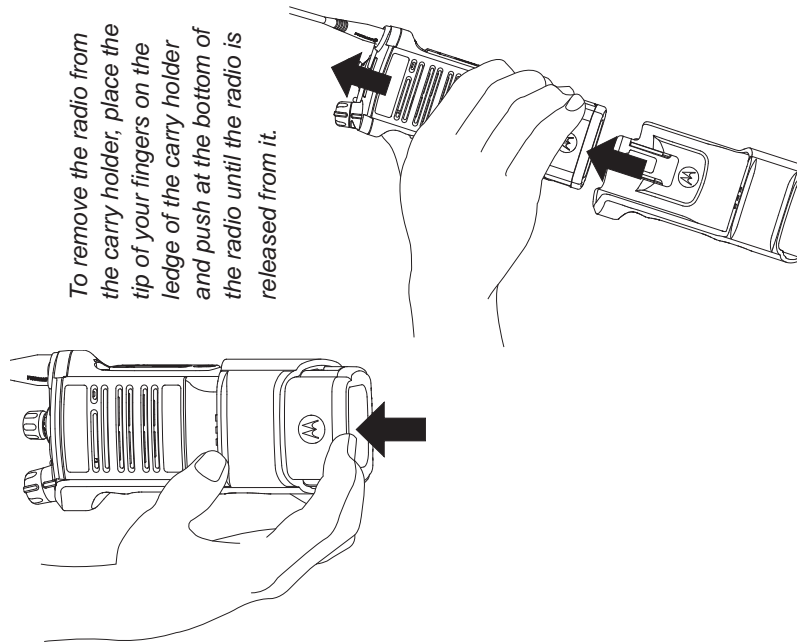

To remove the radio from the carry holder, place the tip of your fingers on the ledge of the carry holder and push at the bottom of the radio until the radio is released from it.

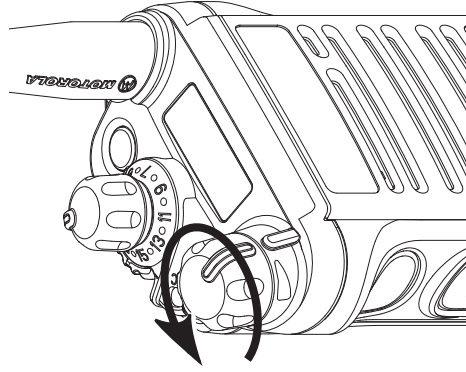


**Note:** If the power-up test is unsuccessful, you see **Error XX/YY** (XX/YY is an alphanumeric code).

Turn off the radio, check the battery, and turn the radio back on. If the radio fails the power-up test again, record the **Error XX/YY** code and contact your dealer.

To turn off the radio, rotate the **On/Off/Volume Control Knob** counterclockwise until you hear a click.

## Adjusting the Volume

To increase the volume, turn the **On/Off/Volume Control Knob** clockwise.

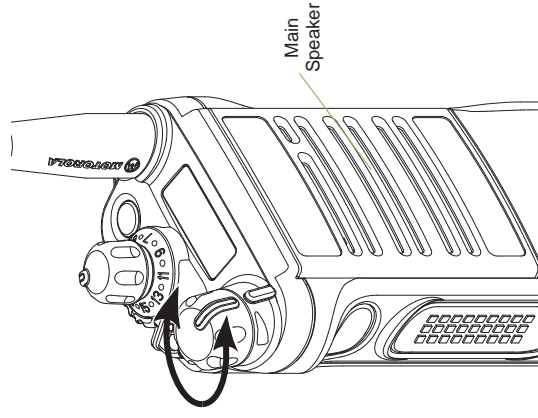

To decrease the volume, turn this knob counterclockwise.

**Note:** Ensure that the main speaker is pointed towards you for increased loudness and intelligibility, especially in areas with loud background noises.

---


## Identifying Radio Controls

Take a moment to review the following:

Radio Parts and Controls	page 10
Programmable Features	page 11
Assignable Radio Functions	page 11
Assignable Settings or Utility Functions	page 13
Accessing the Preprogrammed Functions	page 14
Using the Menu Select Buttons	page 14
Using the Navigation Buttons	page 14
Using the Keypad	page 15
Keypad Characters – Uppercase Mode	page 15
Keypad Characters – Lowercase Mode	page 16
Keypad Characters – Numeric Mode	page 17
Keypad Characters – Hexadecimal Mode	page 18
Push-To-Talk (PTT) Button	page 19

## Identifying Radio Controls

■ Radio Parts and Controls

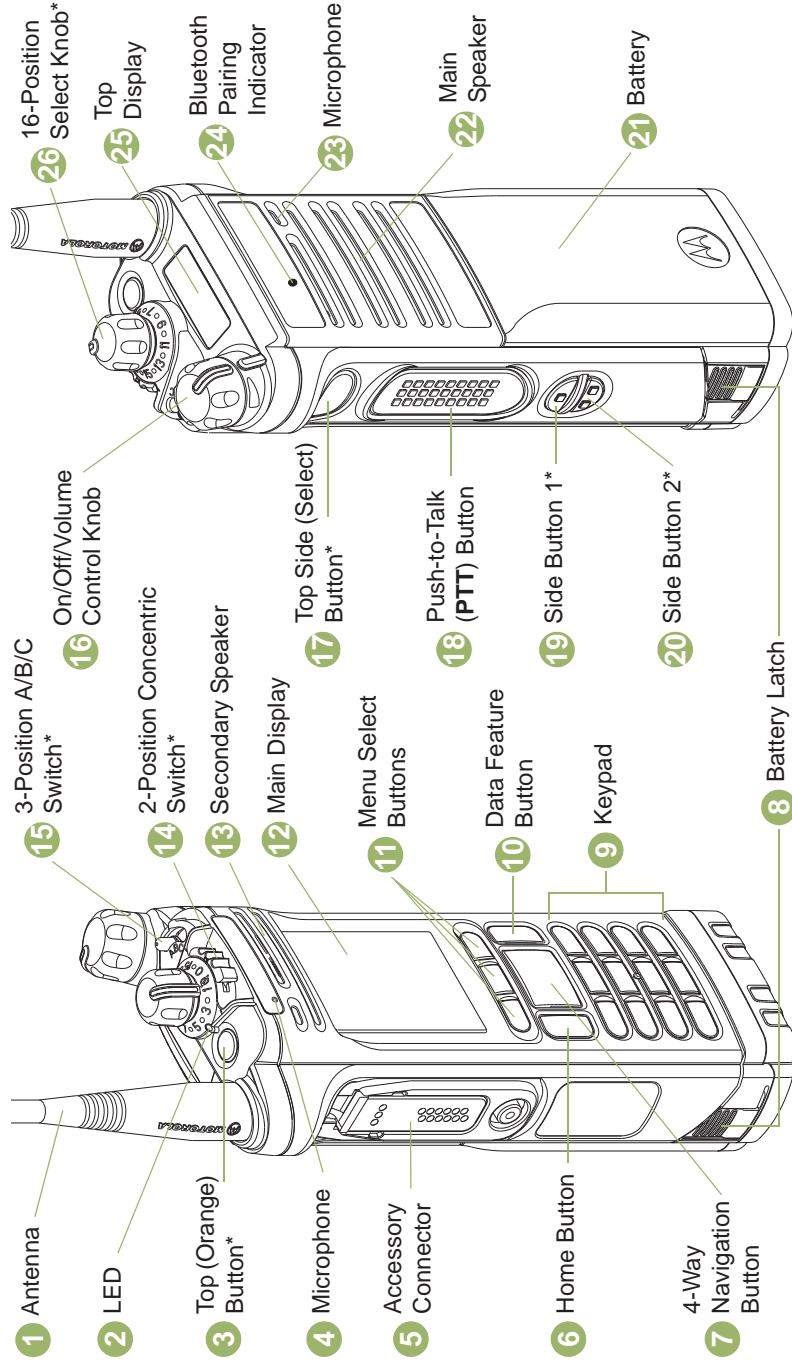

\* These radio controls/buttons are programmable



## ■ Programmable Features

Any reference in this manual to a control that is “preprogrammed” means that the control must be programmed by a dealer or qualified radio technician using the radio’s programming software, in order to assign a feature to that control.

The programmable buttons can be programmed as shortcuts to radio functions or preset channels/groups depending on the duration of a button press:

- Press – Pressing and releasing rapidly.
- Long press – Pressing and holding for the preprogrammed duration (between 0.25 seconds and 3.75 seconds).
- Hold down – Keeping the button pressed.

## 📄 Assignable Radio Functions

**Bluetooth On/Off** – Allows you to turn on/off the Bluetooth.

**Bluetooth Configuration** – Allows you to access to the Bluetooth menu.

**Bluetooth Audio Reroute** – Allows you to toggle the audio route between radio speaker or Remote Speaker Microphone and Bluetooth headset.

**Bluetooth Headset PTT** – Keys up the Bluetooth Headset’s microphone.

**Bluetooth Data Devices** – Keys up the Bluetooth data devices.

**Bluetooth Clear All Pairing** – Allows you to clear all pairing info for Bluetooth. This is accessed by a long press of the Bluetooth On/Off Button.

**Bluetooth Inquiry On/Off** – Enables Bluetooth Search feature.

**Bluetooth Discoverable On/Off** – Enables Bluetooth visibility. This is accessed by a long press of the Bluetooth Inquiry On/Off Button.

**Call Alert** – Allows the radio to function like a pager, or to verify if a radio is active on the system.

**Call Response** – Allows you to answer a private call.

**Channel** – Selects a channel.

**Contacts** – Selects the Contacts menu.

**Dynamic ID (Conventional Only)** – Allows you to edit the radio’s ASTRO Individual ID and/or MDC Primary ID.

**Dynamic Priority (Conventional Only)** – Allows any channel in a scan list (except for the Priority-One channel) to temporarily replace the Priority-Two channel.

**Emergency** – Depending on the programming, initiates or cancels an emergency alarm or call.

**Information** – Displays the information of the radio.

**Internet Protocol Address** – Displays the Internet Protocol (IP) address, device name and status of the radio.

# Identifying Radio Controls

**Location** – Determines the current location (latitude, longitude, time and date), and also the distance and bearing to another location. Or, turns the GPS functionality on or off for all location.

**LTE On/Off** – Press this button to enter LTE screen; long-press this button to toggle LTE module on or off.

**Man Down Clear** – Clears the alarm of Man Down mode which was triggered when your radio achieves or passes a tilt angle threshold or a combination of the angle threshold and a motion sensitivity level.

**Message** – Enters the current message list.

**Mode Select** – Long-press programs a button with the radio's current zone and channels; then once programmed, the short-press of that button jumps the radio to the programmed zone and channel.

**Monitor (Conventional Only)** – Monitors a selected channel for all radio traffic until function is disabled.

**Multiple Private Line (Conventional Only)** – Selects the Multiple Private Line lists.

**Nuisance Delete** – Temporarily removes an unwanted channel, except for priority channels or the designated transmit channel, from the scan list.

**One Touch 1 – 4** – Launches a specific feature with one single button-press. You can setup as many as four separately programmed buttons for four different features.

**Phone** – Allows you to make and receive calls similar to standard phone calls.

**Private Call (Trunking Only)** – Allows a call from an individual radio to another individual radio.

**Private Line Defeat (Conventional Only)** – Overrides any coded squelch (DPL or PL) that is preprogrammed to a channel.

**Query** – Launches a list of predefined short text messages only after successfully logged in the Two-Factor Authentication.

**Radio Profiles** – Allows for easy access to a set of preprogrammed visual and audio settings of the radio.

**Recent Calls** – Allows for easy access to the list of calls recently received or made.

**Rekey Request** – Notifies the dispatcher you want a new encryption keys.

**Repeater Access Button (RAB) (Conventional Only)** – Allows to manually send a repeater access codeword.

**Reprogram Request (Trunking Only)** – Notifies the dispatcher you want a new dynamic regrouping assignment.

**Request-To-Talk (Conventional Only)** – Notifies the dispatcher you want to send a voice call.

**Scan** – Toggles scan on or off.

**Secure Transmission Select (Conventional and Trunking)** – Toggles the Secure Transmission On or Off when the Secure/

Clear Strapping fields is set to "Select" for the radio's current channel, and when the radio is model/option capable.

**Selective Call (Conventional Only)** – Calls an assigned radio.

**Site Display/Search (Trunking Only)** – Displays the current site ID and RSSI value; performs site search for AMSS (Automatic Multiple Site Select) or SmartZone operation.

**Site Lock/Unlock (Trunking Only)** – Locks onto a specific site.

**Status** – Sends data calls to the dispatcher about a predefined status.

**Talkaround/Direct (Conventional Only)** – Toggles between using a repeater and communicating directly with another radio.

**Talkgroup (Conventional Only)** – Allows a call from an individual radio to a group of radios.

**Text Messaging Service (TMS)** – Selects the text messaging menu.

**TMS Quick Text** – Selects a predefined message.

**User** – Automatically registers with the server.

**Zone Select** – Allows selection from a list of zones.

**Basic Zone Bank** – Provides access from up to 6 zones by toggling between 2 banks of 3 zones, one group of 3 (A, B and C) to a second group of 3 zones (D, E and F).

**Enhanced Zone Bank** – Provides access from up to 75 zones by toggling between 25 banks (A, B ... X or Y) of 3 zones.

### **Assignable Settings or Utility Functions**

**Light/Flip** – Press the button to toggle the display backlight on or off; press and hold the button to reverse the content of the top display.

**Keypad and Controls Lock** – Locks or unlocks the keypad, programmable buttons, switches and rotary knobs.

**Voice Announcement** – Audibly indicates the current feature mode, Zone or Channel the user has just assigned.

**Voice Mute** – Toggles voice mute on or off.

**Volume Set Tone** – Sets the volume set tone.

## Identifying Radio Controls

## ■ Accessing the Preprogrammed Functions

You can access various radio functions through one of the following ways:

- A short or long press of the relevant programmable buttons.
- OR
- Use the **Menu Select Buttons** ( { , | , and } ).


### 📄 Using the Menu Select Buttons

The **Menu Select** buttons access the menu entries of features.

**Note:** Check with your dealer or system administrator for the list of features activated in your radio.

Your radio may be preprogrammed differently from the following example, but the steps for selecting a channel may appear as shown below:

- Press the **Menu Select** button ( | ) directly below **Chan**.

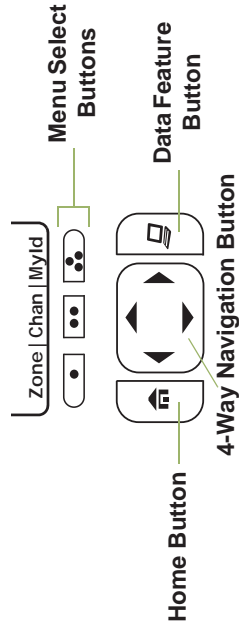

### 📄 Using the Navigation Buttons

#### 📄 Home Button

The **H** button returns you to the Home (default) screen. In most cases, this is the current mode.

For selected radio features, the **H** button is also used to save user-edited radio settings or information before returning you to the Home screen.

**Note:** Some features do not require you to press **H** to go to the Home screen. Refer to the individual feature sections in this manual for further details on saving user-edited radio settings or information.

#### 📄 Data Feature Button

Use this button to access data-related features, such as the Text Messaging Service (TMS) feature screen.

#### 📄 4-Way Navigation Button

Use this button to scroll up, down, left or right.

Press and release one of the button to scroll from one entry to the next one. Press and hold one of the button to have the radio toggles through the list automatically (release the button to stop).

## Using the Keypad

You can use the 3 x 4 alphanumeric keypad to access your radio's features. The keypad functions in a manner similar to a standard telephone keypad when entering numeric digits. When the keypad is used to edit a list, each key can generate different characters of the alphabet. The tables below show the number of times a key needs to be pressed to generate the required character.

### Keypad Characters – Uppercase Mode

Key	Number of Times Key is Pressed																				
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
1	.	,	?	!	;	@	-	-	*	#	&	\$	/	+	=	\	"	'	(	)	
2	A	B	C																		
3	D	E	F																		
4	G	H	I																		
5	J	K	L																		
6	M	N	O																		
7	P	Q	R	S																	
8	T	U	V																		
9	W	X	Y	Z																	
○	Toggle between mixed case mode, uppercase mode, and lowercase mode.																				
*	Space																				
#	Toggle between numeric and letter mode.																				

 Keypad Characters – Lowercase Mode

	Number of Times Key is Pressed																				
Key	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
1	.	,	?	!	;	@	_	-	*	#	&	\$	/	+	=	\	"	'	(	)	
2	a	b	c																		
3	d	e	f																		
4	g	h	i																		
5	j	k	l																		
6	m	n	o																		
7	p	q	r	s																	
8	t	u	v																		
9	w	x	y	z																	
O	Toggle between mixed case mode, uppercase mode, and lowercase mode.																				
*	Space																				
#	Toggle between numeric and letter mode.																				

 Keypad Characters – Numeric Mode

	Number of Times Key is Pressed																				
Key	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
1	.	,	?	!	;	@	_	-	*	#	&	\$	/	+	=	\	"	'	(	)	
2																					
3																					
4																					
5																					
6																					
7																					
8																					
9																					
0																					
*	Space																				
#	Toggle between numeric and letter mode.																				





## ■ Push-To-Talk (PTT) Button


The **PTT** button on the side of the radio serves two basic purposes:

- While a call is in progress, the **PTT** button allows the radio to transmit to other radios in the call.

Press and hold down **PTT** button to talk. Release the **PTT** button to listen.

The microphone is activated when the **PTT** button is pressed.

- While a call is not in progress, the **PTT** button is used to make a new call. See **Making a Radio Call** on page 43 for more information.

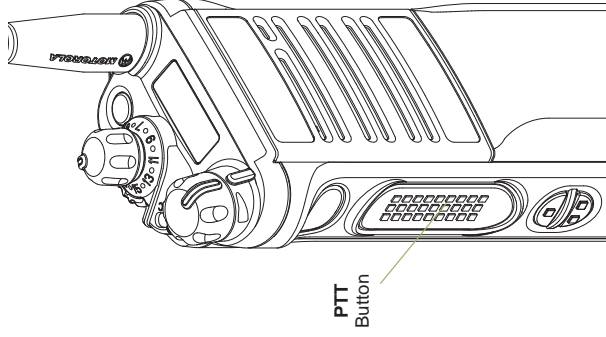

## ■ Identifying Status Indicators

Your radio indicates its operational status through the following:

Status Icons	page 20
Text Messaging Service (TMS) Icons	page 25
Status Icons	page 25
TMS Menu Options	page 26
Call Type Icons	page 26
LED Indicator	page 27
Intelligent Lighting Indicators	page 29
Alert Tones	page 30
Phone Call Display and Alert Prompts	page 34

## Identifying Status Indicators

### Status Icons

The 240 x 320 pixel front liquid crystal display (LCD) of your radio shows radio status, text entries, and menu entries. The top two display rows contain color icons that indicate radio operating conditions.

Selected icons are also shown on the first row of the 112 x 32 pixel top monochrome display screen of your radio.

The following icons are for the front display screen unless indicated otherwise.



#### Receiving

Radio is receiving a call or data.

Top Display



#### Transmitting

Radio is transmitting a call or data.

Top Display



#### Call Received

Radio has received an Individual Call.



#### Battery

For IMPRES battery operation only – the icon shown indicates the charge remaining in the battery.

Top Display



For all battery operation – the icon blinks when the battery is low.



Top Display



#### Received Signal Strength Indicator (RSSI)

The number of bars displayed represents the received signal strength for the current site, for trunking only. The more stripes in the icon, the stronger the signal.



#### Roaming

The radio has roamed to and is currently registered to a foreign system.

Top Display



## Identifying Status Indicators

**O**  
Top Display

**Direct**

- **On** = Radio is currently configured for direct radio-to-radio communication (during conventional operation only).
- **Off** = Radio is connected with other radios through a repeater.

**N**

**M**  
Top Display

**Monitor (Carrier Squelch)**

Selected channel is being monitored (during conventional operation only).

**M**

**K**

**In-Call User Alert**

- **On** = The feature is enabled. Voice muting of the affiliated trunking talkgroup or selected conventional channel is activated.
- **Off** = The feature is disabled. Voice muting of the affiliated trunking talkgroup or selected conventional channel is deactivated.

**H** or **.**

**Power Level**

- **L** = Radio is set at Low power.
- **H** = Radio is set at High power.

Top Display

**H** or **L**

**i**

**Scan**

Radio is scanning a scan list.

Top Display

**J**

**Z**  
Top Display

**Priority Channel Scan**

- **Blinking dot** = Radio detects activity on channel designated as Priority-One.

- **Steady dot** = Radio detects activity on channel designated as Priority-Two.

Top Display

**View/Program Mode**

Radio is in the view or program mode.

- **On steady** = View mode
- **Blinking** = Program mode



**Vote Scan Enabled**  
The vote scan feature is enabled.

**K**  
Top Display  
**I**

**Basic Zone Bank 1**

Top Display  
**A or B**  
or  
**C**

- **A** = Radio is in Zone 1.
- **B** = Radio is in Zone 2.
- **C** = Radio is in Zone 3.

**Basic Zone Bank 2**

Top Display  
**D or E**  
or  
**F**

- **D** = Radio is in Zone 4.
- **E** = Radio is in Zone 5.
- **F** = Radio is in Zone 6.

**Enhanced Zone Bank**

Top Display  
**A B**,  
**C**...  
**X or Y**

- **A** = Contains Zone 1, Zone 2 and Zone 3,
- **B** = Contains Zone 4, Zone 5 and Zone 6,
- **C** = Contains Zone 7, Zone 8 and Zone 9,
- **X** = Contains Zone 70, Zone 71 and Zone 72,
- **Y** = Contains Zone 73, Zone 74 and Zone 75.

**Secure Operation**

Top Display  
**m**

- **On** = Secure operation.
- **Off** = Clear operation.
- **Blinking** = Receiving an encrypted voice call.





Top Display  
**G**

**AES Secure Operation**

Top Display  
**I**


- **On** = AES Secure operation.
- **Off** = Clear operation.
- **Blinking** = Receiving an encrypted voice call.

## Identifying Status Indicators

	<p><b>Signal</b></p> <ul style="list-style-type: none"><li>• <b>On</b> = feature is enabled, and signal is available.</li><li>• <b>Off</b> = feature is disabled.</li><li>• <b>Blinking</b> = feature is enabled, but no signal is available.</li></ul>
	<p><b>User Login Indicator (IP Packet Data)</b></p> <ul style="list-style-type: none"><li>• <b>On</b> = User is currently associated with the radio.</li><li>• <b>Off</b> = User is currently not associated with the radio.</li><li>• <b>Blinking</b> = Device registration or user registration with the server failed due to an invalid username or pin.</li><li>• <b>Inverted</b> = User successfully login to the secured IP Packet Data.</li></ul>
	<p><b>Data Activity</b></p> <p>Data activity is present.</p>
	<p><b>Hexadecimal</b></p> <p>Indicates that the text entry is currently in hexadecimal mode.</p>

	<p><b>Numeric</b></p> <p>Indicates that the text entry is currently in numeric mode.</p>
	<p><b>Start Case</b></p> <p>Indicates that the first character of the text entry is capitalized.</p>
	<p><b>Mixed Case</b></p> <p>Indicates that the text entry is currently in normal text mode.</p>
	<p><b>Uppercase</b></p> <p>Indicates that the text entry is currently in uppercase mode.</p>
	<p><b>Lowercase</b></p> <p>Indicates that the text entry is currently in lowercase mode.</p>
	<p><b>Lowercase Predictive</b></p> <p>Indicates that the text entry is currently in lowercase and with predicted words shown at the bottom of the screen.</p>
	<p><b>Mixedcase Predictive</b></p> <p>Indicates that the text entry is currently in mixed case and with predicted words shown at the bottom of the screen.</p>

## Identifying Status Indicators

 <p><b>Uppercase Predictive</b> Indicates that the text entry is currently in uppercase and with predicted words shown at the bottom of the screen.</p>	<p><b>LTE Transmitting</b> The radio is transmitting LTE signal.</p>
<p><b>b</b></p> <p><b>Bluetooth On</b> Bluetooth is on and ready for bluetooth connection.</p> <p>Top Display <b>b</b></p>	<p><b>LTE Receiving and Transmitting</b> The radio is receiving and transmitting LTE signal.</p>
<p></p> <p><b>Bluetooth Connected</b> Bluetooth is currently connected to the external bluetooth device.</p> <p>Top Display <b>a</b></p>	<p><b>LTE with ARS User logged in</b> Indicating ARS user logged in successfully with LTE system.</p>
<p><b>LTE network is active</b> LTE system is available and connected.</p>	<p><b>LTE Receiving while ARS user logged in</b> The radio is receiving LTE signal with ARS user logged in.</p>
<p><b>LTE Receiving</b> The radio is receiving LTE signal.</p>	<p><b>LTE Transmitting while ARS user logged in</b> The radio is transmitting LTE signal with ARS user logged in.</p>
	<p><b>LTE Receiving and Transmitting while ARS user logged in</b> The radio is receiving and transmitting LTE signal with ARS user logged in.</p> <p><b>LTE icon is Blinking</b> ARS user login failed while in LTE system.</p> <p>Blinking</p>

## ■ Text Messaging Service (TMS) Icons

This feature allows you to send and receive text messages. See **Text Messaging Service (TMS)** on page 81 for more information.

### 📄 Status Icons

The following icons appear on the radio's display when you send and receive text messages.



**Inbox Full**  
The Inbox is full.



**Message Sent**  
The text message is sent successfully.



**Message Unsent**  
The text message cannot be sent.



**Unread Message**

- User receives a new message.
- The selected text message in the Inbox has not been read.



**Read Message**  
The selected text message in the Inbox has been read.



**Normal Message**  
User is composing a message with normal priority and without a request for a reply.



**Message Index**  
Indicates the index of the current message the user is viewing.  
Example: If the user is looking at the third message out of a total of 6 messages in the Inbox folder, the icon is displayed as the icon on the left column.



**Priority Status**

- The "Priority" feature is toggled on before the message is sent.



- Messages in the Inbox folder are flagged with "Priority".



**Request Reply**

- The "Request Reply" feature is toggled on before the message is sent.
- Messages in the Inbox folder are flagged with "Request Reply".

## Identifying Status Indicators







**Priority Status and Request Reply**



- User is composing a message with a priority status and a request for a reply.
- Messages in the Inbox folder are flagged with "Priority" and "Request Reply".

**Call Type Icons**

The following icons appear on the radio's main display, when you make or receive a call, or view selected call lists, to indicate the different call types associated with an alias or ID.

	Radio number.
	Radio number added to a Call List.
	Mobile number.
	Mobile number added to a Call List.
	Landline phone number.
	Landline phone number added to a Call List.

**TMS Menu Options**

Menu Option	Description/Function
Back	Brings you back to the previous screen.
Clr	Deletes all messages.
Del	Deletes a message or text.
Edit	Brings you to the edit screen.
Exit	Exits to the Home screen.
No	Returns to the previous screen.
Optn	Brings you to the Options main screen.
Rply	Replies to a message.
Sel	Selects the highlighted command.
Send	Sends the message.
Yes	Updates or saves a command.



## LED Indicator

The LED indicator shows the operational status of your radio.




Incoming call or data.



Outgoing call or data.



Incoming emergency call.

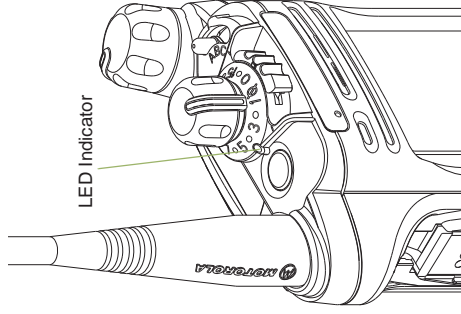

## Identifying Status Indicators

## Identifying Status Indicators

- Solid red** – Radio is transmitting.
- Blinking red** – Radio is transmitting at low battery condition.
- Rapidly blinking red** – Radio has failed the self test upon powering up or encountered a fatal error.
- Solid yellow (Conventional Only)** – Channel is busy.
- Blinking yellow** – Radio is receiving a secured transmission.
- Solid green** – Radio is powering up, or is on a non-priority channel while in the Scan List Programming mode.
- Blinking green** – Radio is receiving an individual or telephone call, or is on a Priority-Two channel while in the Scan List Programming mode.
- Rapidly blinking green** – Radio is on a Priority-One channel while in the Scan List Programming mode.
- Note:** No LED indication when the radio receives a clear (non-secured) transmission in trunking Mode.

## Intelligent Lighting Indicators

This feature temporarily changes the backlight of the top display screen, and adds a color bar to the main display screen to help signal that a radio event has occurred.

**Note:** This feature must be preprogrammed by a qualified radio technician.

Backlight and Bar Color	Notification	When
Orange	Emergency Alerts	The radio initiates an emergency alarm or call.
		The radio receives an emergency alarm or call.
		The radio initiates the Man Down Post-Alert timer.
Red	Critical Alerts	The radio initiates Fireground Evacuation alarm.
		The radio battery is low.
		The radio is out of range.
		The radio enters failsoft mode.
		The radio is unable to establish a full connection with the system.
Green	Call Alerts	The radio is unable to authenticate or register with the system.
		The radio receives a private call.
		The radio receives a phone call.
		The radio receives a call alert.
		The radio receives a selective call.

## Alert Tones

Your radio uses alert tones to inform you of your radio's condition. The following table lists these tones and when they occur.

You Hear	Tone Name	Heard
Short, Low-Pitched Tone	Radio Self Test Fail	When radio fails its power-up self test.
	Reject	When an unauthorized request is made.
	Time-Out Timer Warning	Four seconds before time out.
	No ACK Received	When radio fails to receive an acknowledgment.
	Individual Call Warning Tone	When radio is in an individual call for greater than 6 seconds without any activity.
	Man Down Entry	When radio initiates Man Down mode.
	Time-Out Timer Timed Out	After time out.
Long, Low-Pitched Tone	Talk Prohibit/PTT Inhibit	(When <b>PTT</b> button is pressed) transmissions are not allowed.
	Out of Range Invalid Mode	(When <b>PTT</b> button is pressed) the radio is out of range of the system. When radio is on an unprogrammed channel.
A Group of Low-Pitched Tones	Busy	When system is busy.

## Identifying Status Indicators

You Hear	Tone Name	Heard
<b>Short, Medium-Pitched Tone</b>	Valid Key-Press	When a correct key is pressed.
	Radio Self Test Pass	When radio passes its power-up self test.
	Clear Voice	At beginning of a non-coded communication.
	Priority Channel Received	When activity on a priority channel is received.
	Emergency Alarm /Call Entry	When entering the emergency state.
<b>Long, Medium-Pitched Tone</b>	Central Echo	When central controller has received a request from a radio.
	Volume Set	When volume is changed on a quiet channel.
	Emergency Exit	When exiting the emergency state.
	Failsoft	When the trunking system fails.
	Automatic Call Back	When voice channel is available from previous request.
<b>A Group of Medium-Pitched Tones</b>	Keyfail	When encryption key has been lost.
	Console Acknowledge	When status, emergency alarm, or reprogram request ACK is received.
	Received Individual Call	When Call Alert or Private Call is received.
	Call Alert Sent	When Call Alert is received by the target radio.
	Site Trunking	When a SmartZone trunking system fails.

You Hear	Tone Name	Heard
Short, High-Pitched Tone (Chirp)	Low-Battery Chirp	When battery is below preset threshold value.
	Fast Ringing	When system is searching for target of Private Call.
Ringing	Enhanced Call Sent	When waiting for target of Private Call to answer the call.
	Phone Call Received	When a land-to-mobile phone call is received.
Gurgle	Dynamic Regrouping	(When <b>PTT</b> button is pressed) a dynamic ID has been received.
	Talk Permit	(When <b>PTT</b> button is pressed) is verifying with the system for accepting its transmissions.
	New Message	When a new message is received.
Unique, Low-Pitched Chirp	Priority Status	When a priority message is received.
	Bluetooth Paired	When Bluetooth accessory is paired with the radio.
Incremental-Pitched Tone	Bluetooth Connected	When Bluetooth accessory is connected to the radio.
	Bluetooth Unpaired	When Bluetooth accessory is unpaired from the radio.
Decremental-Pitched Tone	Bluetooth Disconnected	When Bluetooth accessory is disconnected from the radio.

## Identifying Status Indicators

You Hear	Tone Name	Heard
A Group of Very High-Pitched Tones	Man Down Continuous Tone	When radio is in Man Down mode and prepares to transmit Emergency Alarm when the timer of this alarm ends.
	Critical Man Down Continuous Tone	When radio is in Man Down Enhanced mode and prepares to transmit Emergency Alarm when the timer of this alarm ends.
Doh-Sol	Enhanced Zone Bank Up	When <b>EZB Up</b> button is pressed to scroll the Enhance Zone Bank up.
Sol-Doh	Enhanced Zone Bank Down	When <b>EZB Down</b> button is pressed to scroll the Enhance Zone Bank down.

### Phone Call Display and Alert Prompts

The following appears on the radio's display when you make and receive Phone calls. The radio also uses alert tones to indicate the current status.

You Hear	You See	When	Notes
A Long Tone	No phone	You press the <b>PTT</b> button and the phone system is not available.	Press <b>H</b> to hang up. The radio returns to the Home screen.
	Phone busy	The phone system is busy.	Press <b>H</b> to exit the phone mode and try your call later.
A Busy Tone	Phone busy	When a channel is not available.	The radio automatically connects when a channel opens.
-	No acknowledge	The call is not acknowledged.	Press <b>H</b> to hang up. The radio returns to the Home screen.
A High-Pitched Tone	-	When you release the <b>PTT</b> button.	The radio indicates to the landline party that he or she may begin talking.

**Note:** You have the option of sending additional digits (overdial), such as an extension number, or credit card or PIN numbers, to the phone system. If the radio is preprogrammed for live overdial, every digit entered after the call is connected is sent to the phone system.

If the radio is preprogrammed for buffered overdial, the digits pressed are entered into memory and then sent when the **PTT** button is pressed. Press the **PTT** button to send either digits or voice, but not both at the same time.



## General Radio Operation


Once you understand how your radio is configured, you are ready to use your radio.

Use this navigation guide to familiarize yourself with the basic Call features:

Selecting a Zone . . . . .	page 35
Selecting a Radio Channel . . . . .	page 36
Using Channel Search Button . . . . .	page 38
Using Mode Select Feature . . . . .	page 39
Receiving and Responding to a Radio Call . . . . .	page 40
Making a Radio Call . . . . .	page 43
Repeater or Direct Operation . . . . .	page 46
Monitoring Features . . . . .	page 46

## Selecting a Zone

A zone is a group of channels.

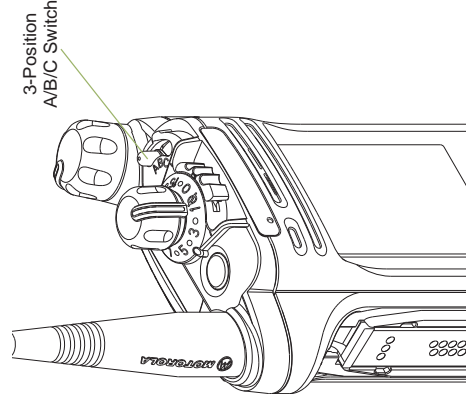

Use the following procedure to select a zone.

**Note:** Your radio must be programmed to allow you to use this feature.

### Procedure:

Move the preprogrammed **Zone (3-Position A/B/C)** switch to the position of the required zone and proceed to Step 3.

**OR**

Follow the procedure below.

- 1 < or > to **Zone**.
- 2 Press the **Menu Select** button directly below **Zone**.
- 3 U or D to the required zone.  
**OR**  
Use the keypad to enter the zone number.
- 4 If the zone number entered is unprogrammed, the display shows **Invalid entry**. Repeat Step 3.  
**OR**  
Press the **Menu Select** button directly below **Sel** to confirm the displayed zone.
- 5 Press the **PTT** button to transmit on the displayed zone channel.

**OR**


Follow the procedure below.

- 1 < or > to **ZnUp** or **ZnDn**.
- 2 Press and hold the **Menu Select** button directly below **ZnUp** or **ZnDn** until the required zone appears.

**Note:** Positions of **ZnUp** and **ZnDn** on the display may differ each time you release the **Menu Select** button. Read carefully before you press.

## ■ Selecting a Radio Channel

A channel is a group of radio characteristics, such as transmit/receive frequency pairs.

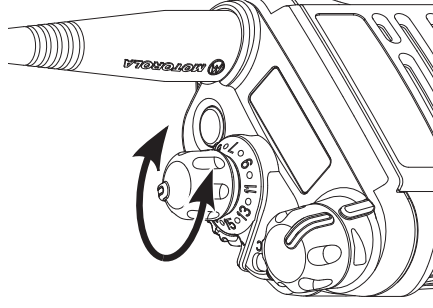

Use the following procedure to select a channel.

**Note:** Your radio must be preprogrammed to allow you to use this feature. If you select a channel that is not within the preprogrammed band, the radio indicates that it is on an unsupported frequency with both audio and visual warnings.

Consult a qualified radio technician for the right choice between the following methods.

**Procedure:**  
Turn the preprogrammed **16-Position Select Knob** to the desired channel.

**OR**

Follow the procedure below.

- 1 < or > to **Chan.**
- 2 Press the **Menu Select** button directly below **Chan.**
- 3 U or D to the required channel.

**OR**

Use the keypad to enter the channel number.

- 4 If the channel number entered is unprogrammed, the display shows **Invalid entry**. Repeat Step 3.

**OR**

Press the **Menu Select** button directly below **Sel** to confirm the selected channel.

- 5 Press the **PTT** button to transmit on the displayed zone channel.

**OR**

Follow the procedure below.

- 1 < or > to **ChUp** or **ChDn.**
- 2 Press the **Menu Select** button directly below **ChUp** or **ChDn.**
- 3 Press the **PTT** button to transmit on the displayed zone and channel.

**Note:** Positions of **ChUp** and **ChDn** on the display may differ each time you release the **Menu Select** button. Read carefully before you press.

## General Radio Operation

### ■ Using Channel Search Button

This feature allows you to do a quick search for a specific channel in your radio by keying in the alias of the channel. If the name matches, your radio prompts the first found matched channel name.

**Procedure:**

Press the preprogrammed **Channel Search** button.

**OR**

Follow the procedure below.

- 1 < or > to **CSrh**.
- 2 Press the **Menu Select** button directly below **CSrh** to key in the channel name.
- 3 A blinking cursor appears on the **Channel Search** screen. Use the keypad to type or edit your message.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.  
Press \* to add a space.  
Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.  
Press # to toggle between numeric and letter mode.

- 4 Press the **Menu Select** button directly below **CSrh** once the entry is done to initiate searching.  
**OR**  
Press the **Menu Select** button directly below **Cncl** to exit.
- 5 The display shows **Searching**.  
**OR**  
If the radio is triggered to search for an empty entry, the display shows **Invalid entry**. Repeat step 3.
- 6 Once found, the display shows the matched channel name and the radio changed its transmission to this channel.  
**OR**  
If the entry does not match, the display shows **Channel name not found**. Repeat from step 3 if want to search again; or press **H** or the **Menu Select** button directly below **Exit** to exit.

## ■ Using Mode Select Feature

Mode Select allows a long press to save your radio's current zone and channel to a programmable button, keypad button or a softkey; then once programmed, the short-press of that button or softkey jumps the transmission to the saved zone and channel.

There are two methods to save the selected zone and channel:

- Softkeys
- Programmable buttons and keypad buttons (digit 0 to 9)

**Note:** Your radio must be preprogrammed to allow you to use this feature.

## 📄 Saving a Zone and Channel to a Softkey

Five softkeys are available for you to save the frequent used zone and channel.

### Procedure:

- 1 Toggle your zone and channel to the required zone and channel.
- 2 < or > to **MS1**, **MS2** ... or **MS5**.
- 3 Press and hold the **Menu Select** button directly below the softkey.
- 4 You hear a short, medium-pitched tone when the zone and channel is saved.

**Note:** To change the programmed zone and channel, repeat this procedure.

*Short press of the programmed softkey changes your current transmission to the zone and channel programmed in this softkey.*

## General Radio Operation

### Saving a Zone and Channel to a Keypad Button

All the programmable buttons and keypad digit 0 to 9 buttons allow you to save the frequent used zone and channel.

**Procedure:**


- 1 Toggle your zone and channel to the required zone and channel.
- 2 Press and hold the digit button you desire to program.
- 3 You hear a short, medium-pitched tone when the zone and channel is saved.

**Note:** Repeat this procedure to change the zone and channel of the programmed button.

*Short press of the programmed button changes your current transmission to the zone and channel programmed in this button.*

### Receiving and Responding to a Radio Call

Once you have selected the required channel and/or zone, you can proceed to receive and respond to calls.

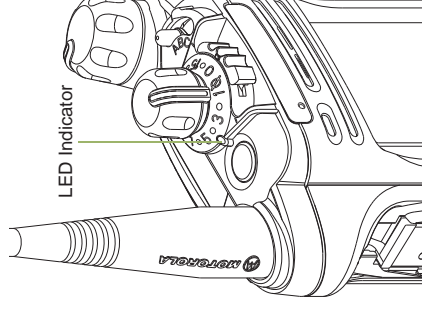

*The LED lights up solid red while the radio is transmitting. In conventional mode, the LED lights up solid yellow when the radio is receiving a transmission. In trunking mode, there is no LED indication when the radio receives a transmission.*

*If the radio is receiving a secure transmission, the LED blinks yellow.*

## Receiving and Responding to a Talkgroup Call

To receive a call from a group of users, your radio must be configured as part of that talkgroup.

### **Procedure:**

When you receive a talkgroup call (while on the Home screen), depending on how your radio is preprogrammed:

#### **1 ASTRO Conventional Only:**

The LED lights up solid yellow. The display shows the talkgroup alias or ID, and the caller alias or ID.

**OR**

#### **Trunking Only:**

The display shows the caller alias or ID.

**2** Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

**3** Press the **PTT** button to respond to the call. The LED lights up solid red.

**4** Release the **PTT** button to listen.

See **Making a Talkgroup Call** on page 43 for details on making a Talkgroup Call.

## Receiving and Responding to a Private Call (Trunking Only)

A Private Call is a call from an individual radio to another individual radio.

These one-to-one calls between two radios are not heard by others in the current talkgroup. The calling radio automatically verifies that the receiving radio is active on the system and can display the caller ID.

**Note:** The radio automatically exits the feature, if the feature inactivity timer is enabled, when the radio is left idle and the timer expires. You will hear the Menu Inactive Exit Tone upon feature exit.

### **Procedure:**

When you receive a Private Call:

**1** You hear two alert tones and the LED blinks green. The display shows **Call received** and the call received icon blinks.

**2** Press the **Menu Select** button directly below **Resp**.

**OR**

Press the **Call Response** button within 20 seconds after the call indicators begin.

**3** During the call, the display shows the caller alias (name), if it is in the call list.

**OR**

## General Radio Operation

During the call, the display shows the caller ID (number), if the caller's name is not in the call list.

- 4 Press and hold the **PTT** button to talk. Release the **PTT** button to listen.
- 5 Press **H** or the **Call Response** button to hang up and return to the Home screen.

See **Making a Private Call (Trunking Only)** on page 43 for details on making a *Private Call*.

## **Receiving and Responding to a Telephone Call (Trunking Only)**

This feature allows you to receive calls similar to standard phone calls from a landline phone.

**Note:** The radio automatically exits the feature, if the feature inactivity timer is enabled, when the radio is left idle and the timer expires. You will hear the Menu Inactive Exit Tone upon feature exit.

### **Procedure:**

Use the preprogrammed **Call Response** button to answer a Telephone Call:

- 1 You hear a telephone-type ringing and the LED blinks green. The backlight of the screen and the bar turns green. The display shows **Phone Call** and the call received icon blinks.
- 2 Press the **Call Response** button within 20 seconds after the call indicators begin.
- 3 Press and hold the **PTT** button to talk. Release the **PTT** button to listen.
- 4 Press **H** or the **Call Response** button to hang up and return to the Home screen.

See **Making a Telephone Call (Trunking Only)** on page 45 for details on making a *Telephone Call*.



## ■ Making a Radio Call

You can select a zone, channel, subscriber ID, or talkgroup by using:

- The preprogrammed Zone switch
- The 16-Position Select Channel Knob
- A preprogrammed **One Touch Call** button
- The Contacts list (see *Viewing Details of a Contact* on page 61)

**Note:** The radio automatically exits the feature, if the feature inactivity timer is enabled, when the radio is left idle and the timer expires. You will hear the Menu Inactive Exit Tone upon feature exit.

## 📄 Making a Talkgroup Call

To make a call to a group of users, your radio must be configured as part of that talkgroup.

### Procedure:

- 1 Turn the 16-Position Select Channel Knob to select the channel with the desired talkgroup.
- 2 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 3 Press the **PTT** button to make the call.

## 4 ASTRO Conventional Only:

The LED lights up solid red. The display shows the talkgroup alias or ID.

**OR**

### Trunking Only:

The LED lights up solid red.

- 5 Speak clearly into the microphone.

- 6 Release the **PTT** button to listen.

## 📄 Making a Private Call (Trunking Only)

### Procedure:

Press the preprogrammed **Quick Access (One-Touch) Private Call** button to dial the preprogrammed ID (number) and proceed to Step 5.

**OR**

Follow the procedure below.

- 1 < or > to Call.
- 2 Press the **Menu Select** button directly below Call. The display shows the last transmitted or received ID.
- 3 Press the **Menu Select** button directly below Cnts to scroll through and select the required ID.  
**OR**  
Press the **Menu Select** button directly below LNum to go to the last number dialed.  
**OR**

- U or D to the required ID.
- OR**
- Use the keypad to enter the required ID.
- 4 Press the **PTT** button to initiate the Private Call.
- 5 The display shows **Calling... <Number>**.
- 6 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 7 When you are connected, the display shows the ID of the target radio. Press and hold the **PTT** button to talk. Release the **PTT** button to listen.
- OR**
- If no acknowledgment is received, the display shows **No acknowledge**.
- 8 Press **H** to return to the Home screen.

#### **Making an Enhanced Private Call (Trunking Only)**

This feature allows you to send an individual Call Alert page if there is no answer from the target radio. See **Sending a Call Alert Page** on page 66 for more information.

**Note:** Your radio must be preprogrammed to allow you to use this feature.

- Procedure:**
- Press the preprogrammed **Quick Access (One-Touch) Enhanced Private Call** button to dial the preprogrammed ID and proceed to Step 5.
- OR**
- Follow the procedure below.
- 1 < or > to Call.
  - 2 Press the **Menu Select** button directly below Call. The display shows the last transmitted or received ID.
  - 3 Press the **Menu Select** button directly below **Cnts** to scroll through and select the required ID.
  - OR**
  - Press the **Menu Select** button directly below **LNum** to go to the last number dialed.
  - OR**
  - U or D to the required ID.
  - OR**
  - Use the keypad to enter the required ID.
  - 4 Press the **PTT** button to initiate the Private Call.
  - 5 The display shows **Calling... <Number>**.
  - 6 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
  - 7 When you are connected, the display shows the ID of the target radio. Press and hold the **PTT** button to talk. Release the **PTT** button to listen.

- OR**  
If no acknowledgment is received, the display shows **No acknowledged**.
- OR**  
If the target radio does not respond before the time out, the display shows **No answer**.
- 
- 8** Press **H** to return to the Home screen.

### **Making a Telephone Call (Trunking Only)**

This feature allows you to make calls similar to standard phone calls to a mobile or landline phone.

#### **Procedure:**

Press the preprogrammed **Quick Access (One-Touch) Phone Call** button to dial the preprogrammed phone number and proceed to Step 5.

#### **OR**

Follow the procedure below.

- 1** < or > to **Phon**.

---

  - 2** Press the **Menu Select** button directly below **Phon**. The display shows the last transmitted phone number.

---

  - 3** Press the **Menu Select** button directly below **Cnts** to scroll through and select the required ID.
- OR**  
Press the **Menu Select** button directly below **LNum** to go to the last number dialed.

- OR**  
U or D to the required phone number.
- OR**  
Use the keypad to enter the required phone number.
- 
- 4** Press and release the **PTT** button to dial the phone number.

---

  - 5** Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

---

  - 6** When your call is answered, press the **PTT** button to talk. Release the **PTT** button to listen.

---

  - 7** Press **H** to return to the Home screen.

See **Phone Call Display and Alert Prompts** on page 34 for more information if your call is **NOT answered**.

## General Radio Operation

### ■ Repeater or Direct Operation

The **REPEATER** operation increases the radio's range by connecting with other radios through a repeater. The transmit and receive frequencies are different.

The **DIRECT** or "talkaround operation" allows you to bypass the repeater and connect directly to another radio. The transmit and receive frequencies are the same.

**Procedure:**

Press the preprogrammed **Repeater/Direct** switch to toggle between talkaround and repeater modes.

**OR**

Follow the procedure below.

- 1 < or > to **Dir**.
- 2 Press the **Menu Select** button directly below **Dir**.
- 3 The display shows **Repeater mode** if the radio is currently in Repeater mode.  
**OR**  
 The display shows **Direct mode** and the Talkaround icon if the radio is currently in Direct mode (during conventional operation only).

### ■ Monitoring Features

Radio users who switch from analog to digital radios often assume that the lack of static on a digital channel is an indication that the radio is not working properly. This is not the case.

This digital technology quiets the transmission by removing the "noise" from the signal and allows only the clear voice or data information to be heard.

Use the Monitor feature to make sure a channel is clear before transmitting.

#### Monitoring a Channel

**Procedure:**

Use the preprogrammed **Volume Set** Button button.

- 1 Select the desired zone and channel.
- 2 Press and hold the **Volume Set** button to hear the volume set tone.
- 3 Adjust the **Volume Control Knob** if necessary.
- 4 Release the **Volume Set** button.
- 5 Press and hold the **PTT** button to transmit. The LED lights up solid red.
- 6 Release the **PTT** button to receive (listen).

**OR**


Press the preprogrammed **Monitor** button and proceed to Step 3.

**OR**

Follow the procedure below.

- 1 Select the desired zone and channel.
- 2 Listen for a transmission.
- 3 Adjust the **Volume Control Knob** if necessary.
- 4 Press and hold the **PTT** button to transmit. The LED lights up solid red.
- 5 Release the **PTT** button to receive (listen).

*The Carrier Squelch indicator appears on the display when you monitor a channel via the preprogrammed **Monitor** button.*

 **Conventional Mode Operation**

Your radio may be preprogrammed to receive Private-Line® (PL) calls.

**Procedure:**

- 1 Momentarily press the **Monitor** button to listen for activity. The Carrier Squelch indicator appears on the display.
- 2 Press and hold the **Monitor** button to set continuous monitor operation. The duration of the button press is programmable.
- 3 Press the **Monitor** button again, or the **PTT** button, to return to the original squelch setting.

*If you try to transmit on a receive-only channel, you hear an invalid tone until you release the **PTT** button.*

## General Radio Operation

.....  
**Advanced Features**

Use this navigation guide to learn more about advanced features available with your radio:

Advanced Call Features ..... page 49  
 Contacts ..... page 55  
 Scan Lists ..... page 61  
 Scan ..... page 64  
 Call Alert Paging ..... page 65  
 Emergency Operation ..... page 67  
 Fireground (Conventional Only) ..... page 71  
 Tactical Public Safety (TPS) (Conventional Only) ... page 73  
 Man Down ..... page 74  
 Automatic Registration Service (ARS) ..... page 78  
 Text Messaging Service (TMS) ..... page 81  
 ASTRO 25 Advanced Messaging Solution ..... page 92  
 Secure Operations ..... page 97  
 Security ..... page 103

Radio Stun and Kill ..... page 105  
 The Global Positioning System (GPS) ..... page 107  
 Trunking System Controls ..... page 115  
 Mission Critical Wireless (MCW) - Bluetooth® - ..... page 117  
 Programming Over Project 25 (POP 25) (ASTRO 25 and ASTRO Conventional) ..... page 132  
 Voice Announcement ..... page 133  
 Using Site Selectable Alerts (ASTRO 25) ..... page 134  
 Long Term Evolution (LTE) (APX 7000L Only) ..... page 140  
 Utilities ..... page 145

## Advanced Call Features

### Receiving and Making a Selective Call (ASTRO Conventional Only)

This feature allows you to receive a call from or to call a specific individual. It is intended to provide privacy and to eliminate the annoyance of having to listen to conversations that are of no interest to you.

### Receiving a Selective Call

#### Procedure:

- 1 When you receive a Selective Call, you hear two alert tones and the LED lights up solid yellow. The call received icons blinks and the display shows **Call received**. You hear two alert tones, the LED lights up solid yellow to indicate the transmitting radio is still sending signal.  
**OR**  
the LED blinks solid green once to indicate the transmitting radio is pending to receive signal.
- 2 The speaker unmutes.
- 3 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 4 Press and hold the **PTT** button to talk. Release the **PTT** button to listen.

### Making a Selective Call

#### Procedure:

Press the preprogrammed **Quick Access (One-Touch) Selective Call** button to dial the preprogrammed ID and proceed to Step 4.

**OR**

Follow the procedure below.

- 1 < or > to Call.
- 2 Press the **Menu Select** button directly below Call. The display shows the last transmitted or received ID.
- 3 Press the **Menu Select** button directly below **Cnts** to scroll through and select the required ID.  
**OR**  
Press the **Menu Select** button directly below **LNum** to go to the last number dialed.  
**OR**  
U or D to the required ID.  
**OR**  
Use the keypad to enter the required ID.
- 4 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 5 Press and hold the **PTT** button to initiate the Selective Call. The display shows the ID of the target radio.

- 6 Release the **PTT** button to listen.
- 7 Press **H** to return to the Home screen.

### **Using the Talkgroup Call Feature (Conventional Operation Only)**

This feature allows you to define a group of conventional system users so that they can share the use of a conventional channel.

**Note:** Encryption keys are associated to talkgroups. When talkgroups are associated, encryption keys are changed by changing the active talkgroup. See **Secure Operations** on page 97 for more information.

### **Selecting a Talkgroup**

**Procedure:**

- 1 **<** or **>** to **Tgrp**.
- 2 Press the **Menu Select** button directly below **Tgrp**. The display shows the last talkgroup that was selected and stored, **Sel** and **Exit**.
- 3 **U** or **D** to **Preset** for the preset preprogrammed talkgroup.  
**OR**  
**U** or **D** to the required talkgroup.  
**OR**

Use the keypad to enter the number of the corresponding talkgroup in the list.

- 4 Press the **Menu Select** button directly below **Sel** to save the currently selected talkgroup and return to the Home screen.
- 5 If the encryption key associated to the new talkgroup is erased, you hear a momentary key fail tone and the display shows **Key fail**.  
**OR**  
If the encryption key that is associated to the new talkgroup is not allowed, you hear a momentary key fail tone and the display shows **Illegal key**.
- 6 Press **H** to return to the Home screen.

### **Sending a Status Call**

This feature allows you to send data calls to the dispatcher about a predefined status.

Each status can have up to a 14-character name. A maximum of eight status conditions is possible.

**Note:** The radio automatically exits the feature, if the feature inactivity timer is enabled, when the radio is left idle and the timer expires. You will hear the **Menu Inactive Exit Tone** upon feature exit.

**Procedure:**

Press the preprogrammed **Status** button and proceed to Step 3.



**OR**

Follow the procedure below.

- 1 < or > to **Sts**.
- 2 Press the **Menu Select** button directly below **Sts**.
- 3 The display shows the last acknowledged status call, or the first status in the list.
- 4 U or D to the required status.
- OR**  
Use the keypad to enter a number corresponding to the in the status list.
- 5 Press the **PTT** button to send the status.
- 6 When the dispatcher acknowledges, you hear four tones and the display shows **Ack received**. The radio returns to normal dispatch operation.  
**OR**  
If no acknowledgment is received, you hear a low-pitched tone and the display shows **No acknowledgment**.
- 7 Press **H** to return to the Home screen.

*No traffic is heard on trunked channels while Status Call is selected. If the radio detects no Status Call activity for six seconds, you will hear an alert tone until you press **H** or the **PTT** button.*

 **Using the Dynamic Regrouping Feature (Trunking Only)**

This feature allows the dispatcher to temporarily reassign selected radios to a particular channel where they can communicate with each other. This feature is typically used during special operations and is enabled by a qualified radio technician.

You will not notice whether your radio has this feature enabled until a dynamic regrouping command is sent by the dispatcher.

**Note:** If you try to access a zone or channel that has been reserved by the dispatcher as a dynamically regrouped mode for other users, you hear an invalid tone.

**Procedure:**

- 1 When your radio is dynamically regrouped, it automatically switches to the dynamically regrouped channel. You hear a “gurgle” tone and the display shows the dynamically regrouped channel’s name.
- 2 Press the **PTT** button to talk. Release **PTT** button to listen.

*When the dispatcher cancels dynamic regrouping, the radio automatically returns to the zone and channel that you were using before the radio was dynamically regrouped.*

## Advanced Features

 **Requesting a Reprogram (Trunking Only)**

This feature allows you to notify the dispatcher when you want a new dynamic regrouping assignment.

**Procedure:**

Press the preprogrammed **Reprogram Request** button to send reprogram request to the dispatcher and proceed to Step 3.

**OR**

Follow the procedure below.

- 1 < or > to **Rpgm**.

---

- 2 Press the **Menu Select** button directly below **Rpgm** to send reprogram request to the dispatcher.

---

- 3 The display shows **Reprgrm rqst** and **Please wait**.

---

- 4 If you hear five beeps, the dispatcher has acknowledged the reprogram request. The display shows **Ack received** and the radio returns to the Home screen.  
**OR**  
 If the dispatcher does not acknowledge the reprogram request within six seconds, you hear a low-pitched alert tone and the display shows **No acknowledge**.  
 Try again or press **⏪** to cancel and return to the Home screen.

---

 **Classifying Regrouped Radios**

The dispatcher can classify regrouped radios into either of two categories: **Select Enabled** or **Select Disabled**.

- Select-enabled radios are free to change to any available channel, including the dynamic-regrouping channel, once the user has selected the dynamic-regrouping position.
- Select-disabled radios cannot change channels while dynamically regrouped. The dispatcher has forced the radio to remain on the dynamic-regrouping channel.

The Scan or Private Call feature cannot be selected while your radio is Select Disabled.

 **Using Dynamic Zone Programming (DZP)**

**Note:** Your radio must be preprogrammed to allow you to use this feature.  
 This feature works on the condition at least one zone in the radio must be a non-dynamic zone.

This feature provides one or more Dynamic Zones to store the frequent used channels be it conventional or trunking. These dynamic channels are saved from pre-existing (non-dynamic) channels in the radio. This saves the time and effort from the regular navigation around the working zones and channels. User can also delete or update the list in the Dynamic Zone.

## Advanced Features

### **Entering the Dynamic Zone to Select a Dynamic Channel**

#### **Procedure:**

- 1 < or > to **Zone**.
- 2 Press the **Menu Select** button directly below **Zone**. The display shows the **Zone** screen.
- 3 U or D to <**Dynamic Zone Channels**>.
- 4 Press the **Menu Select** button below **Sel**. The display returns to Home screen with the selected <**Dynamic Zone Channels**> shown on the screen.  
**OR**  
Press the **Menu Select** button below **Exit**. The display returns to Home screen without any changes.

### **Saving a Channel in the Dynamic Zone from List Selection**

With the radio in Dynamic Zone, follow the procedure below.

#### **Procedure:**

- 1 < or > to ZnPr. Press the **Menu Select** button directly below ZnPr to enter **Program Zone** screen.
- 2 Press the **Menu Select** button directly below **Edit**. The display shows **Search Options** screen.

- 3 U or D to **List Selector**. Press the **Menu Select** button directly below **Sel**. The display shows **Select Zone** screen.
- 4 U or D to the required zone. Press the **Menu Select** button directly below **Sel**. The display shows **Select Chan** screen.
- 5 U or D to the required channel. Press the **Menu Select** button directly below **Sel**. The display shows **Channel updated**.
- 6 Press the **Menu Select** button directly below **Exit** to return to Home screen.

### **Saving a Channel in the Dynamic Zone from Channel Name**

With the radio in Dynamic Zone, follow the procedure below.

#### **Procedure:**

- 1 < or > to ZnPr. Press the **Menu Select** button directly below ZnPr to enter **Program Zone** screen.
- 2 Press the **Menu Select** button directly below **Edit**. The display shows **Search Options** screen.
- 3 U or D to **Channel Name**. Press the **Menu Select** button directly below **Sel**. The display shows **Channel Name** screen.
- 4 A blinking cursor appears on the **Channel Name** screen. Use the keypad to type or edit the channel name.

- Press < to move one space to the left.  
 Press > to move one space to the right.  
 Press the **Menu Select** button directly below **Del** to delete any unwanted characters.  
 Press \* to add a space.  
 Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.  
 Press # to toggle between numeric and letter mode.
- 5** Press the **Menu Select** button directly below **Srch** once the entry is done to initiate searching.  
**OR**  
 Press the **Menu Select** button directly below **Cncl** to return to **Search Options** screen.
- 6** The display shows **Searching...**  
**OR**  
 If the radio is triggered to search for an empty entry, the display shows **Invalid entry**. Repeat step 4.
- 7** Once found, the display shows **Channel updated**.  
**OR**  
 If the entry does not match, the display shows **Channel name not found**. Repeat from step 4 or 5 if want to search again.
- 8** Press **H** to return to Home screen.

### **Deleting a Channel in the Dynamic Zone**

With the radio in Dynamic Zone, follow the procedure below.

#### **Procedure:**

- 1** < or > to **ZnPr**. Press the **Menu Select** button directly below **ZnPr** to enter **Program Zone** screen.
- 2** The display shows the dynamic channels list.
- 3** **U** or **D** to the saved dynamic channel. Press the **Menu Select** button directly below **Del**. The display shows **Channel deleted**.
- 4** Press the **Menu Select** button below **Exit** to return to **Home** screen.
- 5** The **Home** screen shows <**Dynamic Zone Channels**>.  
**OR**  
 The **Home** screen shows <**Zone Name**>+“**Blank**” if the channel deleted is the Home channel.

---

## ■ Contacts

This feature provides “address-book” capabilities on your radio. Each entry corresponds to an alias (name) or ID (number) that you use to initiate a call.

Contact entries are alphabetically sorted according to entry alias. Each alias can have up to five IDs of different call types associated with it.

Additionally, each entry, depending on context (conventional, trunking, or phone), associates with one or more of the four types of calls: Phone Call, Selective Call, Private Call, or Call Alert.

Each entry within Contacts displays the following information:

- Call Alias (Name)
- Call ID (Number)
- Call Type (Icon)
- WACN ID (Astro 25 Trunking IDs only)
- System ID

**Note:** Your radio must be preprogrammed to allow you to add, edit, or delete the contact entries.

Your radio also supports a maximum of 50 call lists. Each list can store up to 100 IDs (numbers).

**Note:** Your radio is preprogrammed with a number of contacts per Call Lists. Check with your dealer or system administrator for more information.

The radio automatically exits the feature, if the feature inactivity timer is enabled, when the radio is left idle and the timer expires. You will hear the Menu Inactive Exit Tone upon feature exit.

### Making a Private Call from Contacts

**Note:** Your radio must be preprogrammed to allow you to use this feature.

**Procedure:**

Use the Options Menu.

- 1 < or > to Cnts.
- 2 Press the **Menu Select** button directly below Cnts. The entries are alphabetically sorted.
- 3 U or D to the required subscriber alias.
- 4 Press the **Menu Select** button directly below Optn.
- 5 U or D to Call and press the **Menu Select** button directly below Sel.

## Advanced Features

- 6 U or D to select the call type.
- 7 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 8 Press the **PTT** button to initiate the call. During the call, the display shows the subscriber alias.
- 9 Press and hold the **PTT** button to talk. The LED lights up solid red.  
**OR**  
Release the **PTT** button to listen.
- 10 If there is no voice activity for a preprogrammed period of time, the call ends.  
**OR**  
The call ends when it reaches the maximum ring time.

**OR**

Use the **PTT** button.

- 1 < or > to **Cnts**.
- 2 Press the **Menu Select** button directly below **Cnts**. The entries are alphabetically sorted.
- 3 U or D to the required subscriber alias.
- 4 < or > to scroll through the available IDs for the selected subscriber alias.

- 5 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 6 Press the **PTT** button to initiate the call. During the call, the display shows the subscriber alias.
- 7 Press and hold the **PTT** button to talk. The LED lights up solid red.  
**OR**  
Release the **PTT** button to listen. The LED lights up solid yellow.
- 8 If there is no voice activity for a preprogrammed period of time, the call ends.  
**OR**  
The call ends when it reaches the maximum ring time.

 **Adding a New Contact Entry**

**Procedure:**

- 1 < or > to **Cnts**.
- 2 Press the **Menu Select** button directly below **Cnts**. The entries are alphabetically sorted.
- 3 U or D to (**New Contact**) and press the **Menu Select** button directly below **Sel**.
- 4 U or D to **Name** and press the **Menu Select** button directly below **Edit**.

- 5 The display shows **Edit name** and a blinking cursor appears.  
Use the keypad to enter the name.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.  
Press \* to add a space.  
Press O to toggle between mixed case mode, uppercase mode, and lowercase mode.  
Press # to toggle between numeric and letter mode.
- 6 Press the **Menu Select** button directly below **Ok** once you have entered the name.  
**OR**  
Press the **Menu Select** button directly below **Cncl** to return to the previous screen.
- 7 U or D to **{Add Number}** and press the **Menu Select** button directly below **Sel**.
- 8 U or D to **Number 1** and press the **Menu Select** button directly below **Edit**.
- 9 The display shows **Edit Number 1** and a blinking cursor appears.  
Use the keypad to enter the number.  
Press < to move one space to the left.  
Press > to move one space to the right.
- Press the **Menu Select** button directly below **Del** to delete any unwanted characters.
- 10 Press the **Menu Select** button directly below **Ok** once you have entered the number.  
**OR**  
Press the **Menu Select** button directly below **Cncl** to return to the previous screen.
- 11 U or D to **Type 1** and press the **Menu Select** button directly below **Edit**.  
U or D to the required mode and press the **Menu Select** button directly below **Ok**.  
**OR**  
Repeat Steps 8 through 10 to enter or edit the existing system IDs.  
**OR**  
U or D to **{Add Number}** and press the **Menu Select** button directly below **Sel** to add a new number. Repeat Steps 8 through 10.
- 12 Press the **Menu Select** button directly below **Done** once you have finished.
- 13 The display shows **<Entry> Stored**, confirming that the contact entry has been added.
- 14 The radio returns to the main **Contacts** screen.

## Advanced Features

### Deleting a Contact Entry

#### Procedure:

- 1 < or > to Cnts.
- 2 Press the **Menu Select** button directly below Cnts. The entries are alphabetically sorted.
- 3 U or D to the entry you want to delete and press the **Menu Select** button directly below Optn.
- 4 U or D to Delete and press the **Menu Select** button directly below Sel.
- 5 The display shows Delete <Entry> confirm?.
- 6 Select Yes to delete the entry. The display shows <Entry> deleted and the radio returns to the main screen for Contacts.  
OR  
Select No to return to the main screen for Contacts.

### Adding a Contact to a Call List

#### Procedure:

- 1 < or > to Cnts.
- 2 Press the **Menu Select** button directly below Cnts. The entries are alphabetically sorted.
- 3 U or D to the entry you want to add to a call list and press the **Menu Select** button directly below Optn.
- 4 U or D to Add to CallLst and press the **Menu Select** button directly below Sel.
- 5 U or D to the required Call List and press the **Menu Select** button directly below Add.  
OR  
U or D to Cncl to return to the main display for Contacts.
- 6 The display shows momentary Please wait before showing <Entry> added to Call List, confirming the addition of the contact to the list.
- 7 The radio returns to the main display for Contacts.



## Advanced Features

### Removing a Contact from a Call List

#### Procedure:

- 1 < or > to Cnts.
- 2 Press the **Menu Select** button directly below Cnts. The entries are alphabetically sorted.
- 3 U or D to the entry you want to remove from a call list and press the **Menu Select** button directly below **Optn**.
- 4 U or D to Rm frm CallLst and press the **Menu Select** button directly below **Sel**.
- 5 The display shows **Remove <Entry> frm Call List?**.
- 6 Press the **Menu Select** button directly below **Yes** to remove the entry from the Call List.  
**OR**  
Press the **Menu Select** button directly below **No** to return to the main display for Contacts.
- 7 The display shows momentary **Please wait** before showing **<Entry> removed from Call List**, confirming the removal of the contact from the list.
- 8 The radio returns to the main display for Contacts.

### Editing a Contact in a Call List

#### Editing an Entry Alias

#### Procedure:

- 1 < or > to Cnts.
- 2 Press the **Menu Select** button directly below Cnts. The entries are alphabetically sorted.
- 3 U or D to the entry you want to edit and press the **Menu Select** button directly below **Optn**.
- 4 U or D to **Edit** and press the **Menu Select** button directly below **Sel**.
- 5 U or D to the entry alias you wish to change and press the **Menu Select** button directly below **Edit**.
- 6 A blinking cursor appears.  
Use the keypad to edit the name.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.  
Press \* to add a space.  
Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.  
Press # to toggle between numeric and letter mode.

- 7 Press the **Menu Select** button directly below **Ok** once you have finished. The display returns to the Edit Contact screen.
- 8 Press the **Menu Select** button directly below **Done** to save your changes and return to the main screen for Contacts.

### **Editing as Entry ID**

#### **Procedure:**

- 1 < or > to Cnts.
- 2 Press the **Menu Select** button directly below Cnts. The entries are alphabetically sorted.
- 3 U or D to the entry you want to edit and press the **Menu Select** button directly below Optn.
- 4 U or D to Edit and press the **Menu Select** button directly below Sel.
- 5 U or D to the entry ID you wish to change and press the **Menu Select** button directly below Edit.
- 6 A blinking cursor appears.  
Use the keypad to edit the name.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below Del to delete any unwanted characters.  
Press \* to add a space.

Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.  
Press **#** to toggle between numeric and letter mode.

- 7 Press the **Menu Select** button directly below **Ok** once you have finished. The display returns to the Edit Contact screen.
- 8 Press the **Menu Select** button directly below **Done** to save your changes and return to the main screen for Contacts.

### **Editing a Call Type**

#### **Procedure:**

- 1 < or > to Cnts.
- 2 Press the **Menu Select** button directly below Cnts. The entries are alphabetically sorted.
- 3 U or D to the entry you want to edit and press the **Menu Select** button directly below Optn.
- 4 U or D to Edit and press the **Menu Select** button directly below Sel.
- 5 U or D to Type and press the **Menu Select** button directly below Edit.
- 6 U or D to choose from the list of call types given and press the **Menu Select** button directly below Ok to select.

7 The display returns to the Edit Contact screen.

8 Press the **Menu Select** button directly below **Done** to save your changes and return to the main screen for **Contacts**.

### Viewing Details of a Contact

#### Procedure:

- 1 < or > to **Cnts**.
- 2 Press the **Menu Select** button directly below **Cnts**. The entries are alphabetically sorted.
- 3 U or D to the entry you want to view and press the **Menu Select** button directly below **Optn**.
- 4 U or D to **View** and press the **Menu Select** button directly below **Sel**.
- 5 The display shows all the numbers associated with the entry.

## ■ Scan Lists

Scan lists are created and assigned to individual channels/groups. Your radio scans for voice activity by cycling through the channel/group sequence specified in the scan list for the current channel/group.

Your radio supports different types of Scan Lists:

- Trunking Priority Monitor Scan List
- Conventional Scan List
- Talkgroup Scan List

Please refer to a qualified radio technician for the maximum number of Scan Lists can be programmed in your radio. These lists must be preprogrammed by a qualified radio technician.

### Viewing a Scan List

#### Procedure:

- 1 < or > to **ScnL**.
- 2 Press the **Menu Select** button directly below **ScnL**.
- 3 U or D to view the members on the list.
- 4 Press **H** to exit the current display and return to the Home screen.

## Advanced Features

## Editing the Scan List

This feature lets you change scan list members and priorities.

### Procedure:

Long press the preprogrammed **Scan List Programming** button (side button) and proceed to Step 3.

### OR

Move the preprogrammed **Scan List Programming** switch to programming position and proceed to Step 3.

### OR

Follow the procedure below.

- 1 < or > to **ScnL**.
- 2 Press the **Menu Select** button directly below **ScnL**. The display shows the lists that can be changed.
- 3 U or D to the entry you want to edit.
- 4 Press the **Menu Select** button directly below **Sel** to add and/or change the priority of the currently displayed channel in the scan list.  
**OR**  
Press the **Menu Select** button directly below **Del** to delete the currently displayed channel from the scan list.  
**OR**  
Press the **Menu Select** button directly below **Rcl** to view the next member of the scan list.

- 5 U or D to select more channels to be added or deleted.

### OR

Use the keypad to go directly to additional channels to be added or deleted.

### OR

Use the **16-Position Select** knob to select additional channels to be added or deleted.

- 6 Move the **Scan List Programming** switch out of programming position.

### OR

Press **H** to exit scan list programming and return to the Home screen.

See **Viewing and Changing the Priority Status** on page 63 for more information on how to add and/or change the priority of the currently displayed channel in the scan list.

## Changing the Scan List Status

### Procedure:

- 1** Long press the preprogrammed **Scan List Programming** button (side button).  
**OR**  
Move the preprogrammed **Scan List Programming** switch to programming position.
- 2** The display shows the programming mode icon and the first list member.
- 3** U or D to the number you want to edit.
- 4** Press the **Select** button once to add the currently displayed channel to the scan list.  
**OR**  
Press the **Select** button one or more times to change the scan list status icon of the currently displayed channel.
- 5** U or D to select more list members whose scan status you want to change.  
**OR**  
Use the keypad to go directly to that scan list member.  
**OR**  
Use the **16-Position Select** knob to select another scan list member.
- 6** Move the **Scan List Programming** switch out of programming position.

## Viewing and Changing the Priority Status

### Procedure:

- 1** Below the **Sel**, **Del**, and **Rcl** screen, press the **Menu Select** button directly below **Sel** to view and/or change the priority status of the currently displayed channel.  
**OR**  
Below the **Sel**, **Del**, and **Rcl** screen, press the **Select** button one or more times to view and/or change the scan list status icon of the currently displayed channel.
- 2** A Scan icon indicates that the current channel is in the scan list as a non-priority channel. The LED lights up solid green.  
**OR**  
A Priority-Two Channel Scan icon indicates that the current channel is in the scan list as the Priority-Two channel. The LED blinks green.  
**OR**  
A Priority-One Channel Scan icon indicates that the current channel is in the scan list as the Priority-One channel. The LED rapidly blinks green. You hear all traffic on the Priority-One channel, regardless of traffic on non-priority channels.  
**OR**  
No icon indicates that the current channel is deleted from the scan list.

## Advanced Features

## ■ Scan

This feature allows you to monitor traffic on different channels by scanning a preprogrammed list of channels.

### 📄 Turning Scan On or Off

#### Procedure:

Press the preprogrammed **Scan** button, or turn the preprogrammed Scan switch to the **Scan on** or **Scan off** position, to initiate or stop scan.

#### OR

Follow the procedure below.

- 1 < or > to **Scan**.
- 2 Press the **Menu Select** button directly below **Scan**.
- 3 The display shows **Scan off** if scan is disabled. Press the **Menu Select** button directly below **Scan** to enable scan.  
**OR**  
The display shows **Scan on** and the scan status icon if scan is enabled. Press the **Menu Select** button directly below **Scan** to disable scan.
- 4 The radio returns to the Home screen.

### 📄 Making a Dynamic Priority Change (Conventional Scan Only)

While the radio is scanning, the dynamic priority change feature allows you to temporarily change any channel in a scan list (except for the Priority-One channel) to the Priority-Two channel.

This change remains in effect until scan is turned off. Scan then reverts to the preprogrammed (original) setting.

#### Procedure:

- 1 When the radio locks onto the channel designated as the new Priority-Two channel, press the preprogrammed **Dynamic Priority** button.
- 2 The radio continues scanning the remaining channels in the list.

### 📄 Deleting a Nuisance Channel

If a channel continually generates unwanted calls or noise (termed a “nuisance” channel), you can temporarily remove the unwanted channel from the scan list.

This capability does not apply to priority channels or the designated transmit channel.

### Procedure:

- 1 When the radio is locked onto the channel to be deleted, press the preprogrammed **Nuisance Delete** button.  
**OR**  
< or > to **Nuis**. Press the **Menu Select** button directly below **Nuis**.
- 2 The radio continues scanning the remaining channels in the list.

### Restoring a Nuisance Channel

#### Procedure:

To restore the deleted nuisance channel, do **one** of the following:

- Turn the radio off and then turning it on again.
- OR**
- Stop and restart a scan via the preprogrammed **Scan** button or menu.
- OR**
- Change the channel via the **16-Position Select** knob.

### Call Alert Paging

This feature allows your radio to work like a pager.

Even if other users are away from their radios, or if they are unable to hear their radios, you can send them an individual Call Alert page. You can also verify if a radio is active on the system.

Depending on how your radio is programmed, when you make an Enhanced Private Call, the radio either automatically sends a call alert page if there is no answer after the maximum ring time, **OR** when you press the **PTT** button.

**Note:** This feature must be preprogrammed by a qualified radio technician.

### Receiving a Call Alert Page

#### Procedure:

- 1 When you receive a Call Alert page, you hear four repeating alert tones and the LED blinks green.
- 2 The call received icons blinks and the display shows **Page** received.

*Press any button to clear the Call Alert page. See **Making a Talkgroup Call** on page 43 or **Making a Private Call (Trunking Only)** on page 43 for more information on returning the call.*

## Sending a Call Alert Page

**Note:** The radio automatically exits the feature, if the feature inactivity timer is enabled, when the radio is left idle and the timer expires. You will hear the Menu Inactive Exit Tone upon feature exit.

### **Procedure:**

Press the preprogrammed **Quick Access (One-Touch) Call Alert Paging** button to send a page to the preprogrammed ID and proceed to Step 5.

**OR**

Follow the procedure below.

- 1 < or > to **Page**.
- 2 Press the **Menu Select** button directly below **Page**.
- 3 Press **Cnts** to scroll through and select the required ID.  
**OR**  
U or D to the required ID.  
**OR**  
Use the keypad to enter the required ID.
- 4 Press the **PTT** button to send the page.
- 5 The display shows **Paging... <Number>**.
- 6 If the call alert page is sent successfully, you hear a tone and the display shows **Ack received**.  
**OR**

If the call alert page is not acknowledged, you hear a low tone and the display shows **No acknowledge**.

- 7 The radio returns to the Home screen.

**OR**

Press the **Menu Select** button directly below **Ok** to return to the main screen for **Contacts**.

**OR**

Follow the procedure below.

- 1 < or > to **Call**.
- 2 Press the **Menu Select** button directly below **Call**.
- 3 U or D to select the alias or ID, and press the **PTT** button to initiate the call.
- 4 If the target radio does not respond after a preprogrammed period of time, the display shows **Send page?**.
- 5 Press the **Menu Select** button directly below **Yes** to send the call alert page.  
**OR**  
Press the **Menu Select** button directly below **No** to exit the screen without sending the call alert page.
- 6 The display shows **Paging... <Alias>**.
- 7 If the call alert page is sent successfully, you hear a tone and the display shows **Ack received**.  
**OR**



If the call alert page is not acknowledged, you hear a low tone and the display shows **No acknowledgment**.

8

The radio returns to the Home screen.

**OR**

Press the **Menu Select** button directly below **Ok** to return to the main screen for Contacts.

---

## Emergency Operation

The Emergency feature is used to indicate a critical situation.

If the **Top (Orange)** button is preprogrammed to send an emergency signal, this signal overrides any other communication over the selected channel.

Your radio supports the following Emergency modes:

- Emergency Alarm
- Emergency Call (Trunking Only)
- Emergency Alarm with Emergency Call
- Silent Emergency Alarm

Check with your dealer or system administrator for more information on the programming of this feature.

Each channel can only assigned **one** of the Emergency modes above. The radio responds differently when pressing the preprogrammed **Emergency** button in each channel.

**Note:** To exit emergency at any time, press and hold the preprogrammed Emergency button for about a second.

## Advanced Features

**Note:** The radio operates in the normal dispatch manner while in Emergency Call, except if enabled, it returns to one of the following:

- **Tactical/Non-Revert** – The radio sends emergency alarm and/or make emergency call on the current selected channel.
- **Non-Tactical/Revert for Conventional system** – The radio reverts to the preprogrammed emergency channel to send alarm and/or make emergency call.
- **Non-Tactical/Revert for Trunking system** – The radio reverts to the preprogrammed emergency talkgroup to send alarm and/or make emergency call.

Man Down is an alternate way to activate the Emergency feature on the condition the Emergency must be set up for this feature to operate.

See **Man Down** on **page 74** for details.

## Sending an Emergency Alarm

This feature allows you to send a data transmission, which identifies the radio sending the emergency, to the dispatcher.

**Note:** Emergency button press timer by default is set to 1 second. This timer is programmable from 0 – 6 seconds by a qualified technician.

### **Procedure:**

- 1** Press the preprogrammed **Emergency** button.
- 2** The display shows **Emergency** on the current zone and channel. You hear a short medium-pitched tone and the LED blinks red momentarily.  
**OR**  
You hear the radio sounds a short low-pitched tone to indicate the selected channel does not support emergency and rejects to launch emergency mode.
- 3** When you receive the dispatcher's acknowledgment, the display shows **Ack received**. You hear four tones, the alarm ends, and the radio exits the Emergency Alarm mode.  
**OR**  
If no acknowledgment is received, the display shows **No acknowledgment**. The alarm ends when the timer expires and the radio exits the Emergency Alarm mode.

## Advanced Features

### Sending an Emergency Call (Trunking Only)

This feature gives your radio priority access to a talkgroup.

#### Procedure:

- 1 Press the preprogrammed **Emergency** button.
- 2 The display shows **Emergency** on the current zone and channel. You hear a short, medium-pitched tone and the LED blinks red momentarily.  
**OR**  
You hear the radio sounds a short low-pitched tone to indicate the selected channel does not support emergency and rejects to launch emergency mode.
- 3 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.
- 4 Press and hold the **PTT** button. Speak clearly into the microphone.
- 5 Release the **PTT** button to end the transmission and wait for a response from the dispatcher.
- 6 To exit Emergency Call, press and hold the preprogrammed **Emergency** button for about a second.

### Sending an Emergency Alarm with Emergency Call

This feature gives your radio priority access on a channel for conventional system, and to a talkgroup for trunking system.

#### Procedure:

- 1 Press the preprogrammed **Emergency** button.
- 2 The display shows **Emergency** on the current zone and channel. You hear a short, medium-pitched tone and the LED blinks red momentarily.  
**OR**  
You hear the radio sounds a short low-pitched tone to indicate the selected channel does not support emergency and rejects to launch emergency mode.
- 3 The radio exits Emergency Alarm and enters the Emergency Call state when:  
You receive the dispatcher's acknowledgment. The display shows **Ack received**.  
**OR**  
You receive no acknowledgment. The display shows **No acknowledgment**.  
**OR**  
You press the **PTT** button while in the Emergency Alarm mode.
- 4 Hold the radio vertically 1 to 2 inches (2.5 to 5.0 cm) from your mouth.

- 5 Press and hold the **PTT** button. Speak clearly into the microphone.
- 6 Release the **PTT** button to end the transmission and wait for a response from the dispatcher.
- 7 To exit Emergency Call, press and hold the preprogrammed **Emergency** button for about a second.

### **Sending a Silent Emergency Alarm**

This feature allows you to send an Emergency Alarm to the system without triggering any audio or visual indicators.

#### **Procedure:**

- 1 Press the preprogrammed **Emergency** button.
- 2 The display shows no changes, the LED does not light up, and you hear no tones.
- 3 The silent emergency state continues until you:  
Press and hold the preprogrammed **Emergency** button for about a second to exit the Silent Emergency Alarm mode.  
**OR**  
Press and release the **PTT** button to exit the Silent Emergency Alarm mode and enter regular dispatch or Emergency Call mode.

### **Changing Channels during Emergency**

For **ALL** Emergency transmissions, when changing channels:

- If the new channel is also preprogrammed for Emergency, you can change channels while in Emergency operation. The emergency alarm or call continues on the new channel.
- If the new channel is **NOT** preprogrammed for Emergency, the display shows **No emergency**, and you hear an invalid tone until you exit the Emergency state or change to a channel preprogrammed for Emergency.

### **Using the Emergency Keep-Alive Feature**

This feature, when enabled, prevents the radio from being turned off via the **On/Off Control Knob** when the radio is in the Emergency state.

**Note:** The radio only exits the Emergency state using one of the ways mentioned in the previous sections.

See **Sending an Emergency Alarm** on page 68, **Sending an Emergency Call (Trunking Only)** on page 69, **Sending an Emergency Alarm with Emergency Call** on page 69, or **Sending a Silent Emergency Alarm** on page 70.

## ■ Fireground (Conventional Only)

The portable Fireground Communications System is designed for deployment at an incident scene. It consists of five central components:

- Your portable radios
- Incident Management Software
- Command Terminal
- Radio Frequency (RF) Modem
- DVRS (Optional)

These components provide on-scene and inbuilding radio coverage, and enhanced personnel accountability and monitoring.

The radio helps to indicate your presence on the scene if it is in the range of the Incident Commander's command terminal.

Each Fireground Communication System radio automatically reports your radio's ID on the commander's mobile command terminal. Your name, riding position and sector can be configured to be seen at the Commander's command terminal.

If you have a critical situation, you can press the Emergency button which activates an alarm on the Incident Management Software at the command terminal.

The Fireground signals transmission is always exchanging data between your radio and the RF Modem and command terminal. The status of your radio includes

- Powering up or down the radio
- Automatic response to Polling
- Response to Evacuation commands
- Pressing the PTT button to make voice transmission
- Sending an Emergency Alarm and Call

### Entering Fireground Zone Channel

#### Procedure:

##### 1 Upon Powering Up

If the Fireground Zone Channel is set as default, you hear gurgle tones and the home screen appears. You are in Fireground zone channel.

#### OR

If the Fireground Zone Channel is set as default, but you hear a short, low-pitched tone, the display shows **Reg failed** to indicate that the command terminal does not respond to Fireground Zone Channel. Get qualified technician for assistance.

#### OR

Your home channel is not Fireground Zone Channel, toggle or change the radio zone channel to Fireground Zone Channel.

- 2 Listen for a transmission. Adjust the Volume Control Knob if necessary.
- 3 Press and hold the preprogrammed **Volume Set** button to hear the volume set tone. Adjust the Volume Control knob if necessary. Release the Volume Set button.  
**OR**  
At the desired Fireground zone and channel, press the preprogrammed **Monitor** button and listen for activity. Adjust the Volume Control knob if necessary.  
**OR**  
If your radio is working in Fireground Zone Channel, proceed to next step.
- 4 Press and hold the **PTT** button to transmit. The LED lights up solid RED while transmitting. Talk into the microphone clearly if needed.
- 5 Release the **PTT** button to receive. You hear a Transmit End Tone.

### Responding to Evacuation Indicator

When Incident Commander triggers Evacuation signal from his command terminal, the RF Modem updates everyone in the Fireground Communication System with the order to evacuate the incident site.

#### **Procedure:**

- 1 Your radio sounds the Evacuation Tone at the profile's maximum alert tone volume level. The display shows **EVACUATE**.
- 2 Moving the volume knob to adjust the volume of the Evacuation Tone from full volume.  
**OR**  
Perform any action on the radio other than volume adjustments to cancel the evacuation indications and update the command terminal.  
**OR**  
If preprogrammed with Manual Acknowledgement of Evacuation Command, press the **PTT** button shall cancel the indications and acknowledge the command terminal.

## Tactical Public Safety (TPS) (Conventional Only)

### Using TPS Normal Transmission

TPS enabled the users of a group to identify a transmission starts and ends clearly by displaying the caller's name or ID on the radio display.

#### Procedure:

- 1 At TPS Zone Channel  
Press **PTT** button to transmit. Talk clearly into the microphone. Release **PTT** button to listen.  
**OR**  
Receive and listen to call, the radio displays the caller's name or ID.

### Using TPS Emergency Transmission

**Emergency Beacon** – During Emergency if the TPS radio user pushes the Emergency button, the radio sounds a Beacon at the maximum volume of the radio at radio's internal speaker and it is not adjustable. This beacon goes to silent when user presses the PTT button for voice transmission.

**Emergency Call De-Key Sidetone** – The radio sounds an alert tone to remind radio user that the Emergency Mode is still active after user releases the PTT button for an Emergency call transmission. The volume of the tone depends on the maximum tone selected by your radio profile.

#### Procedure:

- 1 Press the **Emergency** button to enter Emergency Mode.  
You hear Emergency Beacon.
- 2 Press **PTT** button to make Emergency Call.
- 3 Release to listen. You hear Emergency Call De-Key Sidetone. After a short pause, you hear Emergency Beacon.
- 4 Long press Emergency button to exit Emergency mode and cancel Emergency Beacon.

## Advanced Features

## Man Down

Man Down condition is determined based upon the radio tilt angle or a combination of radio tilt angle and the lack of radio motion.

Man Down feature is an alternate way to activate the Emergency feature if Emergency has been programmed in your radio.

**Note:** This feature could be preprogrammed for all channels that support Emergency feature or could be preprogrammed specifically to a zone and channel which has Emergency feature. Consult your agent or qualified technician for more details.

Your radio automatically activates Emergency Alarm or Call when the radio achieves or passes a tilt angle threshold or a combination of the angle threshold and radio motion below the motion sensitivity level, depending upon how the radio is programmed. The radio must stay in this condition for a preprogrammed amount of time before the Emergency Alarm or Call is activated.

**Note:** It is recommended that an Emergency button is preprogrammed in order to allow the user to exit the emergency condition.

The Man Down feature provides a **Clear** function to the user. After a Man Down condition has been detected, the user can press a preprogrammed **Clear** button or preprogrammed Menu

Select button to cancel the Man Down condition. The radio remains in the Man Down state without triggering an emergency condition until the radio is moved out of the Man Down state, at which point Man Down functionality resumes.

The Man Down feature has three phases:

- i The radio senses the Man Down condition and **Pre-Alert Timer** is initiated.
- ii Man Down condition continues for the time duration defined in the **Pre-Alert Timer** field. At the end of this time, the radio alerts the user on the Man Down status with an audible alert tone and **Man Down** text on the screen. The Post-Alert Timer also initiates at this point.
- iii Man Down condition continues for the time duration defined in the **Post-Alert Timer** field. Once the timer expires, the Emergency alarm is transmitted. The Man Down Clear function is used in this phase to cancel the Man Down condition.

The following scenarios affect the timers:

- Pressing the PTT button suspends the Man Down timers; releasing the PTT button reinitiates the Pre-Alert Timer.
- Pressing other buttons on the radio does not impact these timers.
- Repositioning the radio exits the Man Down feature, which stops and resets the timers.



- Pressing a preprogrammed **Clear** button or pressing a Menu Select button preprogrammed for **Clear** stops and resets the timers. The timers do not restart until the radio is repositioned.

**Note:** Emergency must be set up for this feature to operate. For details on operating the Emergency alerts, please see **Emergency Operation** on page 67.

If the radio is preprogrammed to **horizontal** only, it must be worn in a **vertical** position otherwise the Man Down alert may be inadvertently triggered.

When the radio is programmed with Man Down feature, special care is required when charging the radio with a **wall mounted charger**. See **Handling Your Radio** on page 163 for details.

### **Pre-Alert Timer**

This timer sets the amount of time that a Man Down condition must be present before the radio-user is warned of the Man Down condition.

When the radio detects that it has returned to the vertical position or when the radio detects motion, the Pre-Alert timer stops and is reset.

The Pre-Alert timer reinitiates when the radio detects it is in the horizontal position or motionless again.

### **Post-Alert Timer**

This timer sets the amount of time the radio needs to remain in the Man Down condition before the Emergency alarm is transmitted. When the Post-Alert Timer is initiated, the radio alerts the user with an audible tone and displays the "Man-Down" text.

See **Exiting Man Down Feature** on page 77 to exit Man Down feature.

## Advanced Features

 **Alerting User When Man Down Feature is Triggered**

The Man Down alert tone volume is directly related to the radio's volume. Ensure that the radio's volume is loud enough so that the user does not miss the Post-Alert tone.

**Note:** If the radio is programmed with Silent Emergency, the radio inhibits the alert tone and visual alert associated with the emergency feature.

If the radio is programmed in Surveillance Mode, the radio inhibits all tones and lights on the radio including the Man Down tones.

 **Triggering Emergency**

When the user does not clear the Man Down condition and the Post-Alert Timer comes to an end, Emergency Alarm or call is triggered. The radio sends emergency message to units within the same Talkgroup. The radio also sends ID number and GPS coordinates to dispatcher if these features are enabled. User can exit Emergency following the Emergency procedure. See **Emergency Operation** on page 67 for details.

**Note:** At this point the Man Down features is complete. Use normal Emergency procedures to cancel Emergency transmissions.

 **Alerting User When Man Down Enhanced is Triggered**

**Note:** This feature is to be preprogrammed specifically to a zone and channel which supports Emergency feature.

The volume and repetition duration of Man Down Enhanced alert tone could be customized and preprogrammed to suite the required situation.

Consult your agent or qualified technician for more details.

When the radio initiates Man Down Enhanced, you hear the **Critical Man Down Continuous** alert tone from the radio speaker. The volume of this tone is preprogrammed to a minimum level or to the current radio speaker level. Whichever louder is applied. This can act as a beacon to find the radio.

**Note:** If the radio is programmed with Silent Emergency, the radio inhibits the alert tone and visual alert associated with the emergency feature.

If the radio is programmed in Surveillance Mode, the alert tone can be heard from the radio speaker.

Once the alert tone is active, changing to another channel with different setup triggers different response from the radio.

- **To a channel without Emergency feature** – The alert tone is inhibited.

- **To a channel with Emergency but no Man Down feature** – The alert tone is inhibited.
- **To a channel with Emergency and different Man Down configuration** – The current alert tone is inhibited and replaced with a different alert tone.
- **To a channel with Emergency and similar Man Down configuration** – The alert tone continues.

#### **Exiting Man Down Feature**

If you are not in a real Man Down situation, you should exit the Man Down feature and prevent emergency from going off with the following operation.

#### **Procedure:**

Repositioning the radio or shaking the radio (when motion sensitivity is enabled).

**OR**

Press the preprogrammed **Man Down Clear** button to exit.

**OR**

Press the **Menu Select Button** below **Cir** to exit.

#### **Re-Initiating Man Down**

After exiting the Emergency Operation when the radio is still in Man Down condition (tilted achieving threshold angle or motionless), user must first exit Man Down condition to then re-initiate the Man Down feature.

#### **Procedure:**

Return the radio to the vertical position

**OR**

Shake the radio (when motion sensitivity is enabled).

#### **Testing the Man Down Feature**

**Note:** Enable the Emergency feature with Silent Alarm disabled, but not in Surveillance Mode before running this test on the radio.

#### **Procedure:**

When Man Down is enabled on the radio:

**1** Turn the radio on and place in the vertical position, for at least 5 seconds.

**2** Lay the radio down in the horizontal position.

**3** Wait for alert tone.

**4** The radio alerts with audible tone and displays **Man-Down**.

**OR**

If no tone is heard, make sure that the Man Down feature is enabled on your radio. If Man Down feature was not enabled, please enable it and go through steps 1,2 and 3 again.

**OR**

If the Man Down feature is enabled and no tone is heard, send the radio to a qualified technician.

## ■ Automatic Registration Service (ARS)

This feature provides an automated data application registration for the radio. When you turn on the radio, the device automatically registers with the server.

Data applications within the fixed network can determine the presence of a device on the system and send data to the device. For example: Text Messaging Service (TMS).

The Automatic Registration Service for the radio consists of two (2) modes:

- ARS Server Mode (default mode)
- ARS Non-Server Mode

**Note:** The default ARS mode can be changed by a qualified radio technician using the radio's programming software.

## 📄 Selecting or Changing the ARS Mode

### Procedure:

Turn the preprogrammed **16-Position Select** knob, once the zone you want is displayed, to the desired mode.

**OR**

Follow the procedure below.

- 1 < or > to **Chan**.
- 2 Press the **Menu Select** button directly below **Chan**. The display shows the current channel name.
- 3 U or D to the required channel or mode.
- 4 In ARS Server Mode, the display shows the zone and ARS server channel.  
**OR**  
In ARS Non-Server Mode, the display shows the zone and ARS non-server channel.  
**OR**  
If the channel or mode selected is unprogrammed, the display shows **Unprogrammed**. Repeat Step 3.
- 5 Press **Sel** to confirm the displayed channel.

### **Accessing the User Login Feature**

This feature allows you as the user to be associated with the radio. With this association, every data application (Example: Text Messaging Service) takes on a friendly username.

You can still send text messages without logging in as a user. The user login feature only enables the recipient of your message to identify you as the sender by assigning a username to your message.

**Note:** A predefined username that's set more than the maximum allowed characters is an invalid name.

### **Logging In as a User**

#### **Procedure:**

Press the preprogrammed **User Login** button and proceed to Step 3.

**OR**

Follow the procedure below.

- 1** < or > to **User**.
- 2** Press the **Menu Select** button directly below **User**.
- 3** The display shows the User Login screen.
- 4** U or D to **{ID Entry}** and press the **Menu Select** button directly below **Edit** to enter ID.  
A blinking cursor appears on the screen.  
Use the keypad to type or edit a username.

Press < to move one space to the left.

Press > to move one space to the right.

Press the **Menu Select** button directly below **Del** to delete any unwanted characters.

Press \* to add a space.

Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.

Press # to toggle between numeric and letter mode.

Press the **Menu Select** button directly below **Ok** to submit.

**OR**

U or D to scroll through the list of predefined usernames.

Press the **Menu Select** button directly below **Sel** to select the predefined username.

**OR**

Press and hold U or D to scroll through the list of predefined usernames at a fast scroll rate.

Press the **Menu Select** button directly below **Sel** to select the predefined username.

**5** If the ID is invalid, the display shows momentary **Invalid ID**. Repeat Step 4.

**OR**

Enter your Personal Identification Number (PIN) number.

**6** Press the **Menu Select** button directly below **Logn**.

**7** In ARS Server Mode, the display shows the User Login Indicator icon, the ID, and **In progress**, with **Cncl**.

**OR**

In ARS Non-Server Mode, the display shows the User Login

## Advanced Features

Indicator icon, the ID, and **Logged in**, with **Logt** and **Exit**.

**OR**

In non-ARS enabled mode, the display shows **Offline**, with **Logt** and **Exit**.

**8**

If the username is invalid, login fails and the user login failure indicator (IP indicator) icon blinks. The display also shows momentary **Login failed**. Repeat Step 4.

**OR**

If the PIN is invalid, login fails and the user login failure indicator (IP indicator) icon blinks. The display also shows momentary **Login failed**. Repeat Step 4.

**OR**

Press the **Menu Select** button directly below **Cncl** to cancel the login in progress screen and return to the initial user login screen.

**OR**

Wait for the logged in confirmation screen. If the login process is successful, the display shows the successful user login indicator (IP indicator) icon and **Logged in**, with **Logt** and **Exit**.



### Logging Out

When you have logged in or you are using Offline mode, you can log out.

#### Procedure:

- 1** Press the **Menu Select** button directly below **Logt**.
- 2** The display shows **Clear private data?**. Go to step 3.  
**OR**  
If the Delete Messages On Session End feature is enabled, the radio clears the private data and returns to User Login screen.
- 3** Select **Yes** to clear all your private data. The display shows momentary **Private data cleared**.  
**OR**  
Select **No** to keep your private data.

**Note:** Private data refers to all messages in the text messaging inbox, Draft, and Sent folder. The next user is able to access the Inbox, Draft and Sent messages if private data is not deleted.

## Text Messaging Service (TMS)

This feature allows you to quickly send and receive messages and run database queries directly from your radios.

The types of text messages available:

- A new text message (free form message).
- A predefined message (quick text message).
- An edited quick text message.
- A query (ASTRO 25 Advanced Messaging Solution).

**Note:** Query is only supported withing ASTRO 25 Advanced Messaging Solution. See **Two-Factor Authentication** on page 93 and **ASTRO 25 Advanced Messaging Solution** on page 92 for details.

The main menu consists of the following options:

- Inbox
- Compose
- Drafts
- Sent

**Note:** See **Status Icons** on page 20 for more information on the TMS icons and **TMS Menu Options** on page 26 for more information on each menu option.

## Accessing the Messaging Features

**Note:** The radio automatically exits the feature, if the feature inactivity timer is enabled, when the radio is left idle and the timer expires. You will hear the Menu Inactive Exit Tone upon feature exit.

Press the **Menu Select** button directly below **Back** at any time to return to the previous screen.

### Procedure:

Press the preprogrammed **Data Feature** button or the **TMS Feature** button to access the TMS feature screen.

### OR

Press and hold the preprogrammed **Data Feature** button or the **TMS Feature** button to access the Inbox.

### OR

Follow the procedure below.

- 1 < or > to **TMS**.
- 2 Press the **Menu Select** button directly below **TMS** to access the TMS feature screen.
- 3 U or D to scroll through the main menu options.

## Advanced Features

## Composing and Sending a New Text Message

**Note:** During the uppercase and lowercase mode, multi-tapping the keys only scrolls through the letters. For example, **A->B->C, a->b->c**.

During the numeric mode, except for **1**, pressing the keypad only enters the numeric digits. Subsequent presses of the same key inserts the same digit to the text message (no multi-tap).

### Procedure:

- 1 < or > to **TMS**.
- 2 Press the **Menu Select** button directly below **TMS** to access the **TMS** feature screen.
- 3 U or D to **Compose** and press the **Menu Select** button directly below **Sel**.  
**OR**  
Press the **Menu Select** button directly below **Exit** to return to the Home screen.
- 4 U or D to **Text Message** and press the **Menu Select** button directly below **Sel** to compose a new message.
- 5 A blinking cursor appears on the **Compose** screen.  
Use the keypad to type or edit your message.  
Press < to move one space to the left.  
Press > to move one space to the right.

Press the **Menu Select** button directly below **Del** to delete any unwanted characters.

Press \* to add a space.

Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.

Press # to toggle between numeric and letter mode.

- 6 Press the **Menu Select** button directly below **Optn** once the message is composed.

- 7 U or D to **Send Message** and press the **Menu Select** button directly below **Sel**.

- 8 U or D to scroll through the address list and highlight the required address.

### **OR**

U or D to **{Other Recptn}** and press the **Menu Select** button below **Edit**.

A blinking cursor appears on the **Enter Address** screen.

Use the keypad to type the address entry.

Press < to move one space to the left.

Press > to move one space to the right.

Press the **Menu Select** button directly below **Del** to delete any unwanted characters.

Press \* to add a space.

Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.

Press # to toggle between numeric and letter mode.



**9** Press the **Menu Select** button below **Send** or the **PTT** button to send the message.

**10** The display shows the **Send Message** screen and **Sending msg.**

**11** If the message is sent, you hear a tone and the display shows **Msg sent.**

**OR**

If the message is not sent, you hear a low tone and the display shows **Send failed.**

*If the message fails to send, the radio returns you to the main TMS screen.*

**Note:** You can append a priority status and/or a request reply to your message. See **Using the Priority Status and Request Reply Features** on page 85 for more information.

You can also select the **Save to Drafts** option to save your message in the Drafts folder to send it at a later time. See **Accessing the Drafts Folder** on page 89 for more information.

## Sending a Quick Text Message

Quick Text messages are messages that are predefined and usually consist of messages that are used most frequently.

Each Quick Text message or Query has a **maximum** length of 50 characters. You can select the required text from the Quick Text or Query.

### **Procedure:**

Press the preprogrammed **Quick Text** button and proceed to Step 4.

**OR**

Follow the procedure below.

- 1** < or > to **TMS**.
- 2** Press the **Menu Select** button directly below **TMS** to access the TMS feature screen.
- 3** U or D to **Compose** and press the **Menu Select** button directly below **Sel**.  
**OR**  
Press the **Menu Select** button directly below **Exit** to return to the Home screen.
- 4** U or D to **Quick Text** and press the **Menu Select** button directly below **Sel** for a predefined message.
- 5** U or D to scroll through the list of messages and press the **Menu Select** button directly below **Sel** to select the required message.

## Advanced Features

- 6 The message appears on the **Compose** screen, with a blinking cursor at the end of it.  
Use the keypad to edit the message, if required.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.  
Press \* to add a space.  
Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.  
Press # to toggle between numeric and letter mode.
- 7 Press the **Menu Select** button directly below **Optn**.
- 8 **U** or **D** to **Send Message** and press the **Menu Select** button directly below **Sel**.
- 9 **U** or **D** to scroll through the address list and highlight the required address.  
**OR**  
**U** or **D** to **{Other Recpt}** and press the **Menu Select** button below **Edit**.  
A blinking cursor appears on the **Enter Address** screen.  
Use the keypad to type the address entry.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.

- Press \* to add a space.  
Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.  
Press # to toggle between numeric and letter mode.
  - 10 Press the **Menu Select** button below **Send** or the **PTT** button to send the message.
  - 11 The display shows the **Send Message** screen and **Sending msg**.
  - 12 If the message is sent, you hear a tone and the display shows **Msg sent**.  
**OR**  
If the message is not sent, you hear a low tone and the display shows **Send failed**.
- If the message fails to send, the radio returns you to the main TMS screen.*
- Note:** You can append a priority status and/or a request reply to your message. See **Using the Priority Status and Request Reply Features** on page 85 for more information.

## Using the Priority Status and Request Reply Features

Before sending your message, you can append a priority status and/or a request reply to your message.

### **Appending a Priority Status to a Text Message**

**Note:** The Priority Status icon on a message does not imply that the message gets higher priority over the other messages when it is being transmitted. It is just an indication that can be embedded into a message to let the receiver know that the message is important.

#### **Procedure:**

After the outgoing message is composed (see **Composing and Sending a New Text Message** on page 82 for more information):

- 1 Press the **Menu Select** button directly below **Opn.**
- 2 U or D to **Mark Important** and press the **Menu Select** button directly below **Sel** to indicate the message as important.
- 3 The priority status icon appears beside the normal message icon on the label bar.

## **Removing a Priority Status from a Text Message**

#### **Procedure:**

After the outgoing message is composed (see **Composing and Sending a New Text Message** on page 82 for more information):

- 1 Press the **Menu Select** button directly below **Opn.**
- 2 U or D to **Mark as Normal** and press the **Menu Select** button directly below **Sel** to remove the priority status from the message.
- 3 The display shows the normal message icon on the label bar.

## **Appending a Request Reply to a Text Message**

#### **Procedure:**

After the outgoing message is composed (see **Composing and Sending a New Text Message** on page 82 for more information):

- 1 Press the **Menu Select** button directly below **Opn.**
- 2 U or D to **Req Reply** and press the **Menu Select** button directly below **Sel** to request for a reply.
- 3 The request reply icon appears beside the normal message icon on the label bar.

## Advanced Features

### **Removing a Request Reply from a Text Message**

#### **Procedure:**

After the outgoing message is composed (see **Composing and Sending a New Text Message** on page 82 for more information):

- 1 Press the **Menu Select** button directly below **Optn.**
- 2 U or D to **No Req Reply** and press the **Menu Select** button directly below **Sel** to remove the priority status from the message.
- 3 The display shows the normal message icon on the label bar.

## Advanced Features

### **Appending a Priority Status and a Reply Request to a Text Message**

#### **Procedure:**

After the outgoing message is composed (see **Composing and Sending a New Text Message** on page 82 for more information):

- 1 Press the **Menu Select** button directly below **Optn.**
- 2 U or D to **Mark Important** and press the **Menu Select** button directly below **Sel** to indicate the message as important.  
**AND**

U or D to **Req Reply** and press the **Menu Select** button directly below **Sel** to request for a reply.

- 3 The priority status and request reply icons appear beside the normal message icon on the label bar.

### **Removing a Priority Status and a Reply Request from a Text Message**

#### **Procedure:**

After the outgoing message is composed (see **Composing and Sending a New Text Message** on page 82 for more information):

- 1 Press the **Menu Select** button directly below **Optn.**
- 2 U or D to **Mark as Normal** and press the **Menu Select** button directly below **Sel** to indicate the message as important.  
**AND**  
U or D to **No Req Reply** and press the **Menu Select** button directly below **Sel** to request for a reply.
- 3 The display shows the normal message icon on the label bar.

## Managing Text Messages

### Receiving a Text Message

**Note:** When you receive a message that is flagged with the “Request Reply” icon, you must manually respond to the sender that you have received the message. The system will not automatically send back a notification that the radio has received such message.

**Procedure:**

When you receive a message, press and hold the preprogrammed **Data Feature** button or the **TMS Feature** button to access the Inbox and go to Step 3.

**OR**

Follow the procedure below.

- 1** The new message icon appears and the display shows momentary **New msg.**
- 2** Press the **Menu Select** button directly below **TMS** to access the Inbox.
- 3** The display shows a list of aliases or IDs, with the sender of the latest received message on top.

### Viewing a Text Message from the Inbox

The Inbox can hold up to thirty (30) messages.

**Note:** U or D to read the message if fills more than one screen.

**Procedure:**

Press the preprogrammed **Data Feature** button or the **TMS Feature** button to access the TMS feature screen, and proceed to Step 3.

**OR**

Press and hold the preprogrammed **Data Feature** button or the **TMS Feature** button to access the Inbox and proceed to Step 4.

**OR**

Follow the procedure below.

- 1** < or > to **TMS**.
- 2** Press the **Menu Select** button directly below **TMS** to access the TMS feature screen.
- 3** U or D to **Inbox** and press the **Menu Select** button below **Sel.**
- 4** The display shows a list of aliases or IDs, with the sender of the latest received message on top.
- 5** U or D to the required aliases or ID and press the **Menu Select** button below **Sel** to view the message.

## Advanced Features

While on the view message screen, press the **Menu Select** button directly below **Optn**, **Del**, or **Back** to access the option.

- Select **Optn** to configure the message settings.
  - Select **Del** to delete the message.
  - Select **Back** to return to the previous screen.
- Note:** The icon at the top right corner of the screen indicates the status of the message. See **Text Messaging Service (TMS) Icons** on page 25 for more information.

#### **Replying to a Received Text Message**

**Note:** The original date and time stamp, address and message content is automatically appended to the reply message.

#### **Procedure:**

- 1 U or D to the required aliases or ID and press the **Menu Select** button below **Sel** to view the message.
- 2 Press the **Menu Select** button directly below **Rply** to reply to a message.
- 3 U or D to **Text Message** and press the **Menu Select** button directly below **Sel**.

**OR**

U or D to **Quick Text** and press the **Menu Select** button directly below **Sel** for a predefined message.

**OR**

U or D to scroll through the list of messages and press the **Menu Select** button directly below **Sel** to select the required message.

- 4 A blinking cursor appears on the **Compose** screen.

**OR**

The predefined message appears on the **Compose** screen, with a blinking cursor at the end of it.

- 5 Use the keypad to type or edit your message.

Press < to move one space to the left.

Press > to move one space to the right.

Press the **Menu Select** button directly below **Del** to delete any unwanted characters.

Press \* to add a space.

Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.

Press # to toggle between numeric and letter mode.

- 6 Press the **Menu Select** button directly below **Optn** once you have finished writing the message.

- 7 U or D to **Send Message** and press the **Menu Select** button directly below **Sel** to send the message.

- 8 The display shows the **Send Message** screen and **Sending msg.**

Press the **Menu Select** button directly below **Back** at any time to return to the previous screen.

**Note:** You can append a priority status and/or a request reply to your message. See **Using the Priority Status and Request Reply Features** on page 85 for more information.

### **Accessing the Drafts Folder**

This folder stores the messages that were saved previously. The Drafts folder can hold up to 10 messages. The oldest draft in the folder is deleted when the 11th message comes in.

#### **Procedure:**

- 1 < or > to **TMS**.
- 2 Press the **Menu Select** button directly below **TMS** to access the **TMS** feature screen.
- 3 U or D to **Drafts** and press the **Menu Select** button below **Sel**.
- 4 The display shows a list of drafts, with the latest text message drafted on top.
- 5 U or D to the required text message press the **Menu Select** button below **Sel** to view the message.

Press the **Menu Select** button directly below **Edit**, **Del**, or **Back** to access the option.

- Select **Edit** to edit the message before sending it.
- Select **Del** to delete the message.

- Select **Back** to return to the previous screen.

### **Managing Sent Text Messages**

Once a message is sent to another radio, it is saved in the Sent folder. The most recent sent text message is always added to the top of the Sent list.

The Sent folder is capable of storing a maximum of ten (10) last sent messages. When the folder is full, the oldest message in the folder is deleted when the 11th message comes in.

### **Viewing a Sent Text Message**

#### **Procedure:**

Press the preprogrammed **Data Feature** button or the **TMS Feature** button to access the **TMS** feature screen, and proceed to Step 3.  
**OR**  
Follow the procedure below.

- 1 < or > to **TMS**.
- 2 Press the **Menu Select** button directly below **TMS** to access the **TMS** feature screen.
- 3 U or D to **Sent** and press the **Menu Select** button below **Sel**.

## Advanced Features

- 4 The display shows a list of aliases or IDs, with the recipient of latest sent message on top.
- 5 U or D to the required aliases or ID and press the **Menu Select** button below **Sel** to view the message.

*While on the view message screen, press the **Menu Select** button directly below **Optn**, **Del**, or **Back** to access the option.*

- Select **Optn** to configure the message settings.
- Select **Del** to delete the message.
- Select **Back** to return to the previous screen.

**Note:** The icon at the top right corner of the screen indicates the status of the message. See **Text Messaging Service (TMS) Icons** on page 25 for more information.

### Sending a Sent Text Message

#### Procedure:

- 1 Press the **Menu Select** button directly below **Optn** while viewing the message.
- 2 U or D to **Send Message** and press the **Menu Select** button directly below **Sel**.
- 3 U or D to scroll through the address list and highlight the required address.  
**OR**  
U or D to **{Other Recpnt}** and press the **Menu Select** button below **Edit**.  
A blinking cursor appears on the **Enter Address** screen. Use the keypad to type the address entry.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.  
Press \* to add a space.  
Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.  
Press # to toggle between numeric and letter mode.
- 4 Press the **Menu Select** button below **Send** or the **PTT** button to send the message.



- 5** The display shows the **Send Message** screen and **Sending msg.**

Press the **Menu Select** button directly below **Back** at any time to return to the previous screen.

**Note:** You can append a priority status and/or a request reply to your message. See **Using the Priority Status and Request Reply Features** on page 85 for more information.

#### **Deleting a Text Message**

##### **Procedure:**

From the **Inbox**, **Draft**, or **Sent** screen:

- 1** U or D to scroll through the messages.
- 2** Press the **Menu Select** button directly below **Del** to delete the current message.

#### **Deleting All Text Messages**

##### **Procedure:**

Press the preprogrammed **Data Feature** button or the **TMS Feature** button to access the Messaging feature screen, and proceed to Step 3.

##### **OR**

Follow the procedure below.

- 1** < or > to **TMS**.
- 2** Press the **Menu Select** button directly below **TMS** to access the **TMS** feature screen.
- 3** U or D to **Inbox** or **Sent** then press the **Menu Select** button below **Clr** to select all messages in the selected folder.
- 4** The display shows **Del All?**.
- 5** Press the **Menu Select** button directly below **Yes** to delete all the messages in the selected folder.  
**OR**  
Press the **Menu Select** button directly below **No** to return to the main **TMS** screen.

## ■ ASTRO 25 Advanced Messaging Solution

The ASTRO 25 Advanced Messaging Solution allows you to quickly send and receive messages and run database queries directly from your data-enabled Motorola two-way radios.

Federal mandate requires Two-Factor Authentication when querying Federal and State databases. With this advance messaging solution you have the ability enable Two-Factor Authentication.

With Query and Two-Factor Authentication, you can use a secure system logon to initiate and receive key information on people, vehicles and properties when doing the regular security patrol. You can access to local or external databases such as the National Crime Information Center (NCIC), for "Hot Hits" on priors and warrants. Query and Two-Factor Authentication has Criminal Justice Information Services (CJIS) security compliance for queries.

With this Advanced Messaging Solution, ARS functionality splits between two protocols:

- ARS for Device Registration
- New User Authentication for User Login

TMS functionality splits between two protocols:

- TMS for messaging
- New Service Advertisement for service availabilities

The radio with Two-Factor capabilities are backward compatible with the existing device registration system and TMS servers.

### System Setup for ASTRO Advanced Messaging Solution

Your user name, unit ID and password all need to be provisioned in PremierOne™. Your user account in PremierOne needs to be linked to an RSA account specifying a token to be used with the Two-Factor passcode.

The radios caches the user name, unit ID and or Single Factor password in the codeplug, this allows the radio to automatically log in to use Single Factor authentication upon power up or mode change. The Two-Factor passcode is not stored in the codeplug. You can upgrade the Single Factor session to a Two-Factor session by entering the Two-Factor passcode only. After an interruption (for example mode change, DSR switch over, power loss) the radio is capable of restoring the active session in its current state as long as the session is active in the server.

**Note:** Power loss and power down are different activities, power down occurs when the user intentionally powers off the radio, power loss is when the battery dies or is removed from the unit.

## Two-Factor Authentication

Two-Factor Authentication is an extension of existing ARS and TMS operation. This feature allows you to authenticate yourself with a username, unit ID, password and passcode.

The purpose of this feature is to allow the sender of a text message to address a specific user of the radio, so the message is delivered to the user, not to the radio which may have any user using it at the time.

Secondly, this feature supports query authentication requirements so the query service knows which user originated a query.

You can still send text messages without logging in as a user. The user login feature only enables the recipient of your message to identify you as the sender by assigning a username to your message.

**Note:** A predefined username that's set more than the maximum allowed characters is an invalid name.

## Logging into Two-Factor Authentication

### Procedure:

Press the preprogrammed **User Login** button and proceed to Step 3.

**OR**

Follow the procedure below.

- 1 < or > to **User**.
- 2 Press the **Menu Select** button directly below **User**.
- 3 The display shows the User Login screen.
- 4 **U** or **D** to **{ID Entry}** and press the **Menu Select** button directly below **Edit**. A blinking cursor appears. Use the keypad to type or edit a username. Press < to move one space to the left. Press > to move one space to the right. Press the **Menu Select** button directly below **Del** to delete any unwanted characters. Press \* to add a space. Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode. Press # to toggle between numeric and letter mode. Press the **Menu Select** button directly below **Ok** to submit.  
**OR**  
**U** or **D** to scroll through the list of predefined usernames. Press the **Menu Select** button directly below **Set** to select the predefined username.  
**OR**

## Advanced Features

Press and hold **U** or **D** to scroll through the list of predefined usernames at a fast scroll rate.

Press the **Menu Select** button directly below **Sel** to select the predefined username.

**5** If the selected predefined username has more than the maximum allowed characters, or an invalid character in it, the display shows momentary **Invalid ID**. Repeat Step 4.

**OR**

For radio enabled with Unit ID, proceed to step 6 to enter your Unit ID.

**OR**

Use the keypad to enter your password and proceed to step 8.

**6** **U** or **D** to **{UnitID Entry}** and press the **Menu Select** button directly below **Edit**. A blinking cursor appears. Use the keypad to type or edit a Unit ID.

Press the **Menu Select** button directly below **Ok** to submit.

**OR**

**U** or **D** to scroll through the list of predefined Unit IDs.

Press the **Menu Select** button directly below **Sel** to select the predefined Unit ID.

**OR**

Press and hold **U** or **D** to scroll through the list of predefined Unit IDs at a fast scroll rate.

Press the **Menu Select** button directly below **Sel** to select the predefined Unit ID.

**7** If the selected predefined Unit ID has more than the maximum allowed characters, or an invalid character in it,

the display shows momentary **Invalid UnitID**. Repeat step 6.

**OR**

A blinking cursor appears. Enter your password.

**8** Press the **Menu Select** button directly below **Logn** or **Ok**.

**9** If only one-factor is enabled, the display shows **1F logged in** status. The login operation is complete.

**OR**

If login fails, the display shows momentary **Login failed**. The display returns to User Login screen. Repeat Step 4.

**OR**

For radio enabled with two-factor login, a blinking cursor appears. Enter your passcode.

**10** Press the **Menu Select** button directly below **Logn**. The display shows **In progress**.

**11** If the login fails, the display shows momentary **2F psccd failed**. The display shows User Login screen with **1F logged in** status. Press the **Menu Select** button directly below **Pscd** to repeat step 9.

**OR**

The display shows **User Login** screen with **2F logged in** status to indicate Two-Factor Authentication complete.

## Logging out of Two-Factor Authentication

### Procedure:

- 1 Press the **Menu Select** button directly below **Logt**.
- 2 The display shows **Clear private data?**.  
**OR**  
If the Delete Messages On Session End feature is enabled, the display shows momentary **Private data cleared**.
- 3 Select **Yes** to clear all your private data. The display shows momentary **Private data cleared**.  
**OR**  
Select **No** to keep your private data.

**Note:** Private data refers to all messages in the text messaging Inbox, Draft, and Sent folder. The next user is able to access the Inbox, Draft and Sent messages if private data is not deleted.

**Note:** Radio which is successfully logged into the secured system receives advertisement from the server that the access to the data for query is enabled.

## Sending a Query

This feature is available for radio users who have successfully logged in with the Two-Factor Authentication. Query is a special form of Quick Text marked with a flag that is replied or dispatched in normal TMS message. The query template needs to be configured in the quick text list of the CPS. You can choose from the quick text list, including queries if present.

You shall receive a service advertisement message to indicate the Query is available after you have successfully logged in the radio with a Two-Factor Authentication.

**Note:** The query server must be selected as the destination so that it can receive the query message and respond the query with text message. The query server must be an entry in the data user list in the CPS.

### Procedure:

Press the preprogrammed **TMS Query** button and proceed to Step 5.

### OR

Follow the procedure below.

- 1 < or > to **TMS**.
- 2 Press the **Menu Select** button directly below **TMS** to access the TMS feature screen.
- 3 U or D to **Compose** and press the **Menu Select** button directly below **Sel**.  
**OR**

## Advanced Features

Press the **Menu Select** button directly below **Exit** to return to the Home screen.

**4** U or D to **Query** and press the **Menu Select** button directly below **Sel** for a predefined message.

**5** U or D to scroll through the list of messages and press the **Menu Select** button directly below **Sel** to select the required message.

**6** The message appears on the **Compose** screen, with a blinking cursor at the end of it.  
Use the keypad to edit the message, if required.  
Press < to move one space to the left.

Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.

Press \* to add a space.

Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.

Press # to toggle between numeric and letter mode.

**7** Press the **Menu Select** button directly below **Optn**.

**8** U or D to **Send Message** and press the **Menu Select** button directly below **Sel**.

**9** U or D to scroll through the address list and highlight the required address.

**OR**

U or D to **(Other Recpnt)** and press the **Menu Select** button below **Edit**.

A blinking cursor appears on the **Enter Address** screen.  
Use the keypad to type the address entry.

Press < to move one space to the left.

Press > to move one space to the right.

Press the **Menu Select** button directly below **Del** to delete any unwanted characters.

Press \* to add a space.

Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.

Press # to toggle between numeric and letter mode.

**10** Press the **Menu Select** button below **Send** or the **PTT** button to send the message.

**11** The display shows the **Send Message** screen and **Sending msg**.

**12** If the message is sent, you hear a tone and the display shows **Msg sent**.

**OR**

If the message is not sent, you hear a low tone and the display shows **Send failed**.

*If the message fails to send, the radio returns you to the main TMS screen.*

**Note:** The server responds to your query with the required report in text messages.

You can append a priority status and/or a request reply to your message. See **Using the Priority Status and Request Reply Features** on page 85 for more information.

### Receiving a Query

You shall receive the information you have requested in TMS format.

#### **Procedure:**

- 1** You hear an unique, high-pitched chirp and the display shows the message icon flagged with "Priority". The display shows momentary **New msg**.
- 2** Press and hold the preprogrammed **Data Feature** button or the **TMS Feature** button to access the Inbox and go to Step 3.
- OR**
- Press the **Menu Select** button directly below **TMS** to access the Inbox.
- 3** The display shows a list of aliases or IDs, with the sender of the latest received message on top.

## Secure Operations

Secure radio operation provides the highest commercially available level of voice security on both trunked and conventional channels.

Unlike other forms of security, Motorola digital encryption provides signaling that makes it virtually impossible for others to decode any part of an encrypted message.

**Note:** On the APX 7000L, only AES encryption is supported for secure LTE data. In addition, for secure LTE data a Virtual Private Network (VPN) is required.

### Selecting Secure Transmissions

#### **Procedure:**

Turn the preprogrammed **Secure/Clear** switch to the secure position.

**Note:** If the selected channel is preprogrammed for clear-only operation – when you press the **PTT** button, you hear an invalid mode tone and the display shows **Clear TX only**.

The radio will not transmit until you set the **Secure/Clear** switch to the clear position.

## **Selecting Clear Transmissions**

### **Procedure:**

Turn the preprogrammed **Secure/Clear** switch to the clear position.

**Note:** If the selected channel is preprogrammed for secure-only operation – when you press the **PTT** button, you hear an invalid mode tone and the display shows **Secure TX only**.

The radio will not transmit until you set the **Secure/Clear** switch to the secure position.

The radio can be configured to ignore the clear voice or insecure transmission when the radio is in secured transmission. Check with your agent for details.

## **Managing Encryption**

### **Loading an Encryption Key**

**Note:** Refer to the key-variable loader (KVL) manual for equipment connections and setup.

### **Procedure:**

- 1 Attach the KVL to your radio.

2 The display shows **Keyloading**, and all other radio functions, except for power down, backlight, and volume, are locked out.

3 Select the required keys and press the **Menu Select** button directly below **LOAD** on the KVL. This loads the encryption keys into your radio.

4 When the key has been loaded successfully, you hear a short tone for single-key radios.

**OR**

When the key has been loaded successfully, you hear an alternating tone for multikey radios.



### Using the Multikey Feature

This feature allows the radio to be equipped with different encryption keys and supports the DES-OFB algorithm.

There are two types:

- **Conventional Multikey** – The encryption keys can be tied (strapped), on a one-per-channel basis, through Customer Programming Software. In addition, you can have operator-selectable keys, operator-selectable keysets, and operator-selectable key erasure. If talkgroups are enabled in conventional, then the encryption keys are strapped to the talkgroups.
- **Trunked Multikey** – If you use your radio for both conventional and trunked applications, you have to strap your encryption keys for trunking on a per-talkgroup or announcement-group basis. In addition, you may strap a different key to other features, such as dynamic regrouping, failsoft, or emergency talkgroup. You can have operator-selectable key erasure.

## Advanced Features

### Selecting an Encryption Key

#### Procedure:

- 1 < or > to **Key**.
- 2 Press the **Menu Select** button directly below **Key**. The display shows the last user-selected and stored encryption key, and the available menu selections.
- 3 U or D to scroll through the encryption keys.  
**OR**  
Use the keypad to enter the number of the desired key.
- 4 Press the **Menu Select** button directly below **Sel** to save the newly selected key and return to the Home screen.  
**OR**  
Press **H**, the **PTT** button, or the **Menu Select** button directly below **Exit** to exit.  
**OR**  
Turn the **16-Position Select** knob to exit.

**Note:** When the selected key is erased, you hear a momentary keyfail tone and the display shows **Key fail**.  
**OR**  
When the selected key is not allowed, you hear a momentary short, low-pitched tone and the display shows **Illegal key**.

### **Selecting a Keypad**

This feature allows you to select one or more groups of several encryption keys from among the available keys stored in the radio.

For example, you could have a group of three keys structured to one keypad, and another group of three different keys structured to another keypad; by changing keysets, you would automatically switch from one set of keys to the other.

Every channel to which one of the original keys was tied now has the equivalent new key instead.

**Note:** Press **H**, the **PTT** button, or the **Exit** menu selection, or turn the **16-Position Select** knob to exit this menu at any time without changing the keypad selection.

#### **Procedure:**

- 1 < or > to **KSet**.
- 2 Press the **Menu Select** button directly below **KSet**. The display shows the last user-selected and stored keypad, and the available keypad menu selections.
- 3 U or D to scroll through the keysets.  
**OR**  
Use the keypad to enter the number of the desired keypad.
- 4 Press the **Menu Select** button directly below **Sel** to save the newly selected keypad.

- 5 The radio exits keypad selection and returns to the Home screen.

### **Erasing the Selected Encryption Keys**

This feature allows you to erase all or selected encryption keys.

#### **Procedure:**

- 1 < or > to **Eras**.
- 2 Press the **Menu Select** button directly below **Eras**. The display shows the last user-selected and stored encryption key, and the available menu selections.
- 3 U or D to the desired encryption key.  
**OR**  
Use the keypad to enter the number of the desired key.
- 4 Press the **Menu Select** button directly below **Optn**. The display shows the available key erase options.
- 5 U or D to the required option and press the **Menu Select** button directly below **Sel**.
- 6 At **Erase all keys?**, press the **Menu Select** button directly below **Yes** to erase all the encryption keys in the radio **OR** **No** to return to the previous screen.  
**OR**

At **Erase single key?**, press the **Menu Select** button

directly below **Yes** to erase the displayed encryption key  
**OR No** to return to the previous screen.

- 7 Press **←**, the **PTT** button, or the **Menu Select** button directly below **Exit** to exit.  
**OR**  
Turn the **16-Position Select** knob to exit.

**OR**

Use the preprogrammed **Top Side (Select)** button and **Top (Orange)** button to erase the single key in radios with the single-key option, and to erase all keys in radios with the multikey option.

- 1 Press and hold the **Top Side (Select)** button.
- 2 While holding **Top Side (Select)** button down, press the **Top (Orange)** button.
- 3 The display shows **Please wait**.
- 4 When all the encryption keys have been erased, the display shows **All keys erased**.

**Note:** **DO NOT** press the **Top (Orange)** button before pressing the **Top Side (Select)** button, unless you are in an emergency situation as this sends an emergency alarm.

### **Requesting an Over-the-Air Rekey (ASTRO Conventional Only)**

This feature, also known as **OTAR**, allows the dispatcher to reprogram the encryption keys in the radio remotely. The dispatcher performs the rekey operation upon receiving a rekey request from the user.

**Procedure:**

- 1 < or > to **Reky**.
- 2 Press the **Menu Select** button directly below **Reky**.
- 3 Press the **PTT** button to send the rekey request.  
**OR**  
Press the **PTT** button again, or the **Home or Emergency** button, to exit the feature and transmit in normal mode.
- 4 If the rekey operation fails, you hear a short, low-pitched tone and the display shows **Rekey fail**.

**Note:** The rekey operation failure indicates that your radio does not contain the Unique Shadow Key (USK). This key must be loaded into the radio with the key-variable loader (KVL) before the rekey request can be sent.

Refer to your local key management supervisor for more information.

## Advanced Features

### MDC Over-the-Air Rekeying (OTAR) Page

This feature allows to view or define MDC Over-the-Air Rekeying (OTAR) features. It is applied only when operating in secure encrypted mode and only for conventional communications. In addition to Rekey Requests, OTAR transmissions include Delayed Acknowledgments, and Power-up Acknowledgments.

Some of the options selected may also need to be set up at the Key Management Controller (KMC) site to work properly.

**Note:** This feature must be preprogrammed by a qualified radio technician. Check with your dealer or system administrator for more information.

### Infinite UKEK Retention

This feature enables Unique Key Encryption Key (UKEK) to be permanently stored in the radio even when all of the encryption keys is erased. Without this UKEK key, the radio could not be over the air rekeyed.

**Note:** This feature must be preprogrammed by a qualified radio technician. Check with your dealer or system administrator for more information.

### Hear Clear

There are two components of Hear Clear.

#### 1 Companding:

Reduces the channel noise, e.g. OTA transmission, that is predominantly present in UHF2 and 900 MHz channel with the following features.

- **Compressor** – reduces the background noise flow and the speech signal at transmitting radio.
- **Expander** – expands the speech while the noise flow remains the same at receiving radio.

#### 2 Random FM Noise Canceller (Flutter Fighter):

Reduces the unwanted effects of random FM noise pulses caused by channel fading under high Signal-to-Noise (S/N) conditions such as in a moving in a transportation. The fading effects, heard as audio pops and clicks, are cancelled without affecting the desired audio signal.

The Random FM Noise Canceller operates only in receive mode.

**Note:** This feature must be preprogrammed by a qualified radio technician. Check with your dealer or system administrator for more information.

## ■ Security

### Radio Lock

This feature changes your radio to a more robust security system that protects the use of the secure encryption keys.

If this feature is enabled in your radio by a qualified radio technician, when you turn the radio on, the display shows **Radio locked**.

### Unlocking Your Radio

#### Procedure:

- 1 Enter your numeric password.  
Secure-equipped radios – 6 to 8 characters.  
Clear radios – 0 to 8 characters.
- 2 Press the **Menu Select** button directly below **Sel** to enter the code.  
**OR**  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.  
**OR**  
Press the **Menu Select** button directly below **Cncl** to exit the feature.
- 3 If the password is correct, the radio unlocks.  
**OR**

If the password is incorrect, the display show **Incorrect password** and the radio remains locked.

*If you enter three incorrect passwords in a row, the display shows **Deadline**. Turn the radio off and then on, and begin again at Step 1.*

#### **IMPORTANT:**

**For Secure Radios Only** – After a total of 17 consecutive incorrect passwords (turning the radio off and on does not reset this number), the radio erases all of its encryption keys and shows **Deadline**. See a qualified radio technician.

If you forget the password, enter **\*\*\*\*\*** to erase all keys and revert the password in the radio back to the default password of **01234567**.

### Changing Your Password

#### Procedure:

- 1 < or > to **Pswd**.
- 2 Press the **Menu Select** button directly below **Pswd**. The display shows **Change Password** screen.
- 3 **U** or **D** to **Unlock Pswd**.
- 4 Press the **Menu Select** button directly below **Sel**.
- 5 Enter the old password.

## Advanced Features

- 6 Press the **Menu Select** button directly below **Ok**.
- 7 Enter the new password.
- 8 Press the **Menu Select** button directly below **Sel**.
- 9 Re-enter the new password.
- 10 Press the **Menu Select** button directly below **Sel**. The password is updated.  
**OR**  
If the two passwords do not match, repeat Steps 5 through 8.

**Note:** If you enter three incorrect old passwords, the radio exits the password feature. You cannot access this feature again until you turn the radio off and on.

### Changing Your Tactical Inhibit Password

**Procedure:**

- 1 < or > to **Pswd**.
- 2 Press the **Menu Select** button directly below **Pswd**. The display shows **Change Password** screen.
- 3 **U** or **D** to **Tactical Inh Encode Pswd**.
- 4 Press the **Menu Select** button directly below **Sel**.
- 5 Enter the old password.
- 6 Press the **Menu Select** button directly below **Ok**.
- 7 Enter the new password.
- 8 Press the **Menu Select** button directly below **Sel**.
- 9 Re-enter the new password.
- 10 Press the **Menu Select** button directly below **Sel**. The password is updated.  
**OR**  
If the two passwords do not match, repeat Steps 5 through 8.

**Note:** If you enter three incorrect old passwords, the radio exits the password feature. You cannot access this feature again until you turn the radio off and on.

### **Enabling or Disabling the Radio Lock Feature (Secure Radios Only)**

This feature allows you to enable or disable the radio lock feature. It is programmable by a qualified radio technician.

#### **Procedure:**

- 1** < or > to Logf.
- 2** Press the **Menu Select** button directly below **Logf**.
- 3** Display shows **Pswd enabled**, indicating that the radio lock feature is enabled.  
**OR**  
Display shows **Pswd disabled**, indicating that the radio lock feature is disabled.

### **Radio Stun and Kill**

#### **Using Radio Stun**

This feature allows you to stun another radio by sending an over the air command using the menu on your radio. This feature prevents an unauthorized user from using the radio. Once the radio is stunned, a password is required to re-activate the stunned radio.

#### **Using Radio Stun**

- 1** < or > to **Stun**.
- 2** Press the **Menu Select** button directly below **Stun**. The display shows **Enter Password**.
- 3** Use the keypad to enter your **Tactical Inhibit Encode Password**.
- 4** Press the **Menu Select** button directly below **Ok**. The display shows radio Contact IDs.
- 5** U or D to the required ID.  
**OR**  
Press the **Menu Select** button directly below **LNum** to go to the last number dialed.  
**OR**  
Use the keypad to enter the required ID.  
**OR**

## Advanced Features

Press the **Menu Select** button directly below **Send** to initiate command.

- 6 If the receiving radio does not have encryption key to decrypt the received the command, your radio display shows **Ack received**.  
**OR**  
If the receiving radio does not encryption key to decrypt the received encrypted command, your radio display shows **Decrypt failed**.  
**OR**  
If the receiving radio is powered off, your radio display shows **No Acknowledgment**.

Once the receiving radio received the command, its screen locked and request for password. To un-stun a radio, follow the procedure in **Unlocking Your Radio** on [page 103](#).

#### Using Radio Kill

This feature allows you to render your radio or another radio inoperable if the radio is misplaced or lost. When a radio is killed, the display turns blank and all functions of the radio are not usable.

The killed radio can only be recovered from KILL with a special device. Consult an authorized and qualified technician for details.

#### Using Remote Kill

Remote Kill allows you to render another radio inoperable by sending an over the air command using the menu on your radio.

- 1 < or > to **Kill**.
- 2 Press the **Menu Select** button directly below **Kill**. The display shows **Enter Password**.
- 3 Use the keypad to enter your Tactical Inhibit Encode Password.
- 4 Press the **Menu Select** button directly below **Ok**. The display shows radio Contact IDs.
- 5 U or D to the required ID.  
**OR**  
Press the **Menu Select** button directly below **LNum** to go to the last number dialed.  
**OR**  
Use the keypad to enter the required ID.  
**OR**  
Press the **Menu Select** button directly below **Send** to initiate command.



- 6 If the receiving radio received the command, your radio display shows **Ack received**.  
**OR**  
If the receiving radio does not encryption key to decrypt the received encrypted command, your radio display shows **Decrypt failed**.  
**OR**  
If the receiving radio is powered off or already killed, your radio display shows **No Acknowledgment**.

Once the receiving radio received the command, its screen turns blank, the killed radio is inoperable.

#### **Using Direct Kill**

Direct Kill allows you to make your own radio inoperable.

#### **Procedure:**

- 1 Press and hold Top Side Button then press the Orange button until the display turns blank and becomes inoperable.

## **The Global Positioning System (GPS)**

This feature uses information from the Global Positioning System (GPS) satellites orbiting the Earth to determine the approximate geographical location of your radio, expressed as latitude and longitude or MGRS format per request from customer. The availability and accuracy of this location information (and the amount of time that it takes to calculate it) varies depending on the environment in which you are using the GPS feature.

For example, GPS location fixes are very difficult to obtain indoors, in covered locations, between high buildings, or in situations where you have not established a clear broad view of the sky.

#### **Understanding the GPS Feature**

The GPS technology uses radio signals from earth orbiting satellites, to establish the location coordinates, maximizing your view of clear unobstructed sky is essential for optimum performance.

Where adequate signals from multiple satellites are not available (usually because you cannot establish a view of a wide area of the sky), the GPS feature of your radio will not work. Such situations include but are not limited to:

- Underground locations

## Advanced Features

- Inside of buildings, trains, or other covered vehicles
- Under any other metal or concrete roof or structure
- Between tall buildings or under dense tree-cover
- In temperature extremes outside the operating limits of your radio

Even where location information can be calculated in such situations, it may take longer to do so, and your location estimate may not be as accurate. Therefore, in any emergency situation, always report your location to your dispatcher.

**Note:** Even where adequate signals from multiple satellites are available, your GPS feature only provides an approximate location, usually within 20 meters from your actual location, but sometimes further away.

Keep in mind that the accuracy of the location information and the time it takes to obtain it varies depending upon circumstances, particularly the ability to receive signals from an adequate number of satellites.

**Note:** The satellites used by the GPS feature are controlled by the U.S. government and are subject to changes implemented in accordance with the Department of Defense GPS user policy and the Federal Radio Navigation Plan. These changes may affect the performance of the GPS feature on your radio.

### **Enhancing GPS Performance**

Sometimes, the GPS feature may be unable to complete a location calculation successfully. You then see a message indicating that your radio cannot connect to enough visible satellites.

To maximize the ability of your radio to determine a fix, please note the following guidelines:

- For your initial fix, hold the radio in the face position.
- Stay in the open. The GPS feature works best where there is nothing between your radio and a large amount of open sky.

### **The Outdoor Location Feature (Using GPS)**

This feature allows you to determine your current location using a location menu, as well as your current distance and bearing in relation to another location. Radio location may be requested and reported over-the-air.

Your radio stores up to a maximum of sixty (60) programmable location coordinates, also known as waypoints. When the memory is full, the next waypoints automatically replaces the oldest waypoints in the radio.

The radio also stores four (4) preprogrammed waypoints. These coordinates **cannot** be deleted.

Programmable Waypoints	Preprogrammed Waypoints
User-configurable location coordinates.	Fixed location coordinates: <ul style="list-style-type: none"> <li>• Home</li> <li>• Emergency</li> <li>• Last Known Location</li> <li>• Destination</li> </ul>
Only the alias is editable, not the coordinates.	The Home and Destination coordinates are editable.
Coordinates can be deleted one at a time, or all at once.	Coordinates cannot be deleted.

**Note:** The radio automatically exits the feature, if the feature inactivity timer is enabled, when the radio is left idle and the timer expires. You will hear the Menu Inactive Exit Tone upon feature exit.

### Enabling MGRS Coordinates

This feature can only be enabled through GPS configuration. When the MGRS coordinate is enabled, all location coordinates are displayed in MGRS format, including the editable locations in GPS.

### Accessing the Outdoor Location Feature

**Note:** An **ON** menu key may be present on the location menu if it is preprogrammed by the dealer or system administrator.

#### Procedure:

Press the preprogrammed **GPS** button to toggle the Outdoor Location feature on or off.

#### OR

Follow the procedure below.

- 1 < or > to **Loc.**
- 2 Press the **Menu Select** button directly below **Loc.**
- 3 The display shows **Location off.**
- 4 Press the **Menu Select** button directly below **On** to obtain a location fix.  
**OR**  
Press the **Menu Select** button directly below **Opn.**  
**U** or **D** to **Turn On GPS** and press the **Menu Select** button directly below **Sel.**
- 5 The front display shows the **MGRS** or latitude/longitude location, time and date of the last successful location fix.
- 6 Press the **Menu Select** button directly below **Rfsh** to obtain a new location fix.
- 7 The top line temporarily displays **Please wait** while the new location is being determined.

- While the new location is being determined, the location signal can be a solid or blinking icon.
- 8 Once the location coordinates are fixed, the display shows the current location along with the UTC (Zulu) time and date that the location fix was obtained.  
The location coordinates are updated automatically every five seconds while the location signal is present.  
**OR**  
If the radio fails to get a location fix, the display shows **No service** and returns to the previous display.
  - 9 Press the **Menu Select** button directly below **Exit** to exit the feature and return to the main screen.  
**OR**  
Press **H**, the **PTT** button, or the preprogrammed **GPS** button to return to the Home screen.

*The radio also exits the menu if the emergency button is pressed.*

### Saving a Waypoint

#### **Procedure:**

While in the current location display:

- 1 Press the **Menu Select** button directly below **Optn**.
- 2 U or D to **Save as Waypt** and press the **Menu Select** button directly below **Sel**.  
**OR**  
U or D to **Save as Home** and press the **Menu Select** button directly below **Sel** and proceed to Step 5.  
**OR**  
U or D to **Save as Dest.** and press the **Menu Select** button directly below **Sel** and proceed to Step 5.
- 3 A blinking cursor appears in the **Save As Waypt** screen. Use the keypad to edit the auto-generated waypoint, if required.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.  
Press \* to add a space.  
Press O to toggle between mixed case mode, uppercase mode, and lowercase mode.  
Press # to toggle between numeric and letter mode.  
**OR**

Press the **Menu Select** button directly below **Cncl** to return to the Location main screen.

- 4 Press the **Menu Select** button directly below **Ok** once you are done.
- 5 The display shows **Current loc saved as <Waypoint name>**.  
**OR**  
The display shows **Current loc saved as {Home}**.  
**OR**  
The display shows **Current loc saved as {Destination}**.
- 6 Press the **Menu Select** button directly below **Exit** to exit the feature and return to the main screen.  
**OR**  
Press **H**, the **PTT** button, or the preprogrammed **GPS** button to return to the Home screen.

### Viewing a Saved Waypoint

#### **Procedure:**

While in the current location display:

- 1 Press the **Menu Select** button directly below **Optn**.
- 2 **U** or **D** to **Waypoints** and press the **Menu Select** button directly below **Sel**.
- 3 The display shows a list of waypoints.
- 4 **U** or **D** to scroll through the list.  
**OR**  
**U** or **D** to select a waypoint to view the location information in full.
- 5 Press the **Menu Select** button directly below **Optn**.
- 6 **U** or **D** to **View** and press the **Menu Select** button directly below **Sel** to view the **MGRS** or latitude/longitude location, time and date of the selected waypoint.
- 7 Press the **Menu Select** button directly below **Back** to return to the previous screen.  
**OR**  
Press **H**, the **PTT** button, or the preprogrammed **GPS** button to return to the Home screen.

## Advanced Features

### **Editing the Alias of a Waypoint**

#### **Procedure:**

While in the current location display:

- 1 Press the **Menu Select** button directly below **Optn.**
- 2 U or D to **Waypoints** and press the **Menu Select** button directly below **Sel.**
- 3 The display shows a list of waypoints.
- 4 U or D to the required saved waypoint, and press the **Menu Select** button directly below **Optn.**
- 5 U or D to **Edit name** and press the **Menu Select** button directly below **Sel.**
- 6 A blinking cursor appears in the **Edit Name** screen.  
Use the keypad to edit the alias.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.  
Press \* to add a space.  
Press O to toggle between mixed case mode, uppercase mode, and lowercase mode.  
Press # to toggle between numeric and letter mode.

- 7 Press the **Menu Select** button directly below **Ok** once you are done.

#### **OR**

Press the **Menu Select** button directly below **Cncl** to return to the **Waypoints** main screen.

- 8 The display shows <**Waypoint name**> **Updated** and the radio returns to the **Waypoints** main screen.

- 9 Press the **Menu Select** button directly below **Back** to return to the previous screen.

#### **OR**

Press H, the **PTT** button, or the preprogrammed **GPS** button to return to the Home screen.

### **Editing the Coordinates of a Waypoint**

**Note:** Only the preprogrammed coordinates of Home and Destination are editable.

#### **Procedure:**

While in the current location display:

- 1 Press the **Menu Select** button directly below **Optn.**
- 2 U or D to **Waypoints** and press the **Menu Select** button directly below **Sel.**
- 3 The display shows a list of waypoints.
- 4 U or D to {Home} and press the **Menu Select** button directly below **Optn.**

- OR**  
U or D to {Destination} and press the **Menu Select** button directly below **Optn.**
- 5** U or D to **Edit Location** and press the **Menu Select** button directly below **Sel.**
- 6** The first number blinks.  
Press < to move to the previous number/coordinates.  
Press > to move back to the next number/coordinates.  
Press the **Menu Select** button directly below **Edit** to change the number/coordinates.
- 7** A blinking cursor appears in the **Edit Location** screen.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.
- 8** Press the **Menu Select** button directly below **Ok** once you are done.  
**OR**  
Press the **Menu Select** button directly below **Cncl** to return to the previous screen.
- 9** Press the **Menu Select** button directly below **Ok** once you are done with the new coordinates.
- 10** The display shows **{Home} Updated** and the radio returns to the Waypoints main screen.  
**OR**

The display shows **{Destination} Updated** and the radio returns to the Waypoints main screen.

### **Deleting a Single Saved Waypoint**

#### **Procedure:**

While in the current location display:

- 1** Press the **Menu Select** button directly below **Optn.**
- 2** U or D to **Waypoints** and press the **Menu Select** button directly below **Sel.**
- 3** The display shows a list of waypoints.
- 4** U or D to the required saved waypoint, and press the **Menu Select** button directly below **Optn.**  
U or D to **Edit name** and press the **Menu Select** button directly below **Del.**  
**OR**  
Press the **Menu Select** button directly below **Del.**
- 5** The display shows **Delete <Waypoint name> Confirm?**.
- 6** Press the **Menu Select** button directly below **Yes** to delete the waypoint.  
**OR**  
Press the **Menu Select** button directly below **No** to return to the Waypoints main screen.
- 7** The display shows momentary **<Waypoint name> deleted** before the radio returns to the Waypoints main screen.

## Advanced Features

### Deleting All Saved Waypoints

#### Procedure:

While in the current location display:

- 1 Press the **Menu Select** button directly below **Optn.**
- 2 U or D to **Waypoints** and press the **Menu Select** button directly below **Sel.**
- 3 The display shows a list of waypoints.
- 4 U or D to a saved waypoint, and press the **Menu Select** button directly below **Optn.**
- 5 U or D to **Delete All** and press the **Menu Select** button directly below **Sel.**
- 6 The display shows **Delete All saved waypoints Confirm?**.
- 7 Press the **Menu Select** button directly below **Yes** to delete all waypoints.  
**OR**  
Press the **Menu Select** button directly below **No** to return to the Waypoints main screen.
- 8 The display shows momentary **All saved waypoints deleted** before the radio returns to the Waypoints main screen.

*You cannot delete any of the preprogrammed waypoints.*

### Measuring the Distance and Bearing from a Saved Waypoint

#### Procedure:

While in the current location display:

- 1 Press the **Menu Select** button directly below **Optn.**
- 2 U or D to **Dist frm here** and press the **Menu Select** button directly below **Sel.**
- 3 The display shows a list of waypoints.
- 4 U or D to the required waypoint, and press the **Menu Select** button directly below **Sel.**
- 5 The display shows the distance and bearing from the current to the selected coordinates.



### Using the Location Feature While in Emergency Mode

When the Emergency feature is activated by pressing the emergency button, the radio exits the Location menu and returns to the Home (default) screen so that you can see which channel the emergency signal is going out on.

However, you may re-enter the Location menu while still in emergency mode, provided that Silent Emergency has not been activated.

If you have turned Location off using the **ON/OFF** menu key, it automatically turns back on when Emergency is activated.

If there is a solid location signal during Emergency, the current location and the location information received is saved as Emergency and Last Known Location waypoints, respectively.

### Trunking System Controls

#### Using the Failsoft System

The failsoft system ensures continuous radio communications during a trunked system failure. If a trunking system fails completely, the radio goes into failsoft operation and automatically switches to its failsoft channel.

#### Procedure:

- 1 During failsoft operation, your radio transmits and receives in conventional operation on a predetermined frequency.
- 2 You hear a medium-pitched tone every 10 seconds and the display shows **Failsoft**.

*When the trunking system returns to normal operation, your radio automatically leaves failsoft operation and returns to trunked operation.*

## Advanced Features



### Going Out of Range

When your radio goes out of the range of the system, it can no longer lock onto a control channel.

**Procedure:**

- 1 You hear a low-pitched tone.  
**AND/OR**  
The display shows the currently selected zone/channel combination and **Out of range**.
- 2 Your radio remains in this out-of-range condition until:  
It locks onto a control channel.  
**OR**  
It locks onto a failsoft channel.  
**OR**  
It is turned off.



### Using the Site Trunking Feature

If the zone controller loses communication with any site, that site reverts to site trunking.

The display shows the currently selected zone/channel combination and **Site trunking**.

**Note:** When this occurs, you can communicate only with other radios within your trunking site.



### Locking and Unlocking a Site

This feature allows your radio to lock onto a specific site and not roam among wide-area talkgroup sites. This feature should be used with caution, since it inhibits roaming to another site in a wide-area system.

**Procedure:**

Use the preprogrammed **Site Lock/Unlock** button to toggle the lock state between locked and unlocked.

**OR**

Follow the procedure below.

- 1 < or > to **Site**.
- 2 Press the **Menu Select** button directly below **Site**.
- 3 Press the **Menu Select** button directly below **Lock** to lock the site. The display shows **Site locked**.  
**OR**  
Press the **Menu Select** button directly below **Unlk** to unlock the site. The display shows **Site unlocked**.
- 4 The radio saves the new site lock state and returns to the Home screen.

### Viewing and Changing a Site

This feature allows you to view the name of the current site or forces your radio to change to a new one.

#### Viewing the Current Site

**Procedure:**

- 1 Press the preprogrammed **Site Displ/Srchr** button.
- 2 The display shows momentary the name of the current site and its corresponding received signal strength indicator (RSSI).

#### Changing the Current Site

**Procedure:**

- 1 Press and hold down the preprogrammed **Site Displ/Srchr** button.
- 2 You hear a tone and the display shows momentary **Scanning site**.
- 3 When the radio finds a new site, it returns to the Home screen.

### Mission Critical Wireless (MCW) - Bluetooth® -

This feature allows your radio to extend its functionality by connecting to external proprietary Motorola accessories.

**Note:** It is recommended to use Motorola proprietary MCW devices with APX radios during Mission Critical operations as other Bluetooth devices may or may not meet the mission critical standard.

The default setting for Bluetooth-enabled radio is Bluetooth ON. See **Turning the Bluetooth Off** on page 118 to turn the Bluetooth OFF.

**Note:** Your radio must be preprogrammed to allow you to use this feature.

Currently your radio supports the following Bluetooth devices or profiles.

- Headset (HSP)
- Dial Up Networking (DUN)
- Personal Area Networking (PAN)
- Serial Port (SPP)

**Note:** APX 7000L radio does not support Bluetooth Commercial of the Shelf (COTS) devices or the Personal Area Network (PAN) data profile.

APX 7000L only works with Motorola MCW devices.

### Turning the Bluetooth On

#### Procedure:

- 1 < or > to **BT**. Press the **Menu Select** button directly below **BT** to access the Bluetooth feature screen.
- 2 U or D to **Status** and press the **Menu Select** button directly below **On**. The display shows **Status On**, and b appears.

#### OR

The display shows **Bluetooth on failed** to indicate Bluetooth fails to launch.

- 3 Press the **Menu Select** button directly below **Exit** to return to the Home screen.

#### OR

- 1 Press the preprogrammed button to turn on the Bluetooth.
- 2 You hear a short, medium-pitched tone. The display shows momentary **Bluetooth on**, and b appears.

#### OR

The display shows **Bluetooth on failed** to indicate Bluetooth has failed to launch.

### Turning the Bluetooth Off

#### Procedure:

- 1 < or > to **BT**. Press the **Menu Select** button directly below **BT** to access the Bluetooth feature screen.
- 2 U or D to **Status** and press the **Menu Select** button directly below **Off**. The display shows **Status Off**, and b disappears.
- 3 Press the **Menu Select** button directly below **Exit** to return to the Home screen.

#### OR

- 1 Press the preprogrammed button, to turn off the Bluetooth.
- 2 You hear a short, medium-pitched tone. The display shows momentary **Bluetooth off**, and b disappears.

## Re-Pair Timer

There are two options for configuring the radio's Bluetooth pairing type. The type defines the duration the radio and the accessory retain the pairing information.

- **Immediate** – (For MCW accessories only.) When the radio and/or device is turned off after pairing, the keys are lost. Due to this, when your radio and your device are turned back on, they are unable to re-connect. The user must re-pair the devices to re-establish a new set of pairing keys. See **Pairing with LF MPP Pairing Feature** on page 120 and **Pairing with Standard Pairing Feature** on page 122.
- **Infinite** – (For all Bluetooth devices.) When the radio and/or device are turned off after pairing, keys are NOT lost. When the radio and the device are turned back on, they can resume the Bluetooth connection without user intervention.

Re-Pair Timer Options	Re-Pair Timer Scenarios
<b>Immediate</b> <b>(For MCW Accessories only.)</b>	<ul style="list-style-type: none"><li>• When the radio is powered OFF, pairing key is lost immediately, and accessory attempts to pair again. If pairing is unsuccessful within the Drop Timer value, the accessory automatically powers OFF.</li><li>• When the accessory is powered OFF, all keys are lost immediately, and the user must re-pair the devices.</li><li>• When the device loses Bluetooth connection, the device will attempt to re-establish Bluetooth Connection within the Drop Timer value.</li></ul>
<b>Infinite</b> <b>(For all Bluetooth devices.)</b>	<ul style="list-style-type: none"><li>• When the radio is powered OFF, the accessory attempts to re-establish the Bluetooth Connection for a period of time depending upon the Drop Timer value. If the device fails to reconnect within the period, the accessory then powers OFF.</li></ul>

## Advanced Features

**Bluetooth Drop Timer**

The Bluetooth Drop Timer has two different settings and functions, depending upon the selection of the Re-Pair Timer.

Re-Pair Timer Options	Description
Immediate (For MCW Accessories only.)	0 – 15 minutes programmable buffer time to re-establish the Bluetooth Connection when the Bluetooth signal is out of range. If either device powers OFF, the pairing keys are immediately cleared from both devices and the devices must re-pair.
Infinite (For all Bluetooth devices.)	This Timer only applies to the accessory. The programmable timer choices are: 0 – 15 minutes, 2 hours, 4 hours or 8 hours. Do note there are exceptions for Operation Critical Wireless (OCW) headset and PTT which are preprogrammed to 8 hours. This is a "stay alive" time that the accessory will remain ON without the device re-connecting before powering off. The radio will remain ON until the user powers the radio OFF. The radio and accessory will remain paired indefinitely. Once the device re-connect, the timer is reset.


The radio could not control the Drop Timer of Personal Area Networking (PAN), Dial-Up Networking (DUN), Commercial Off-

The-Shelf (COTS) and data services. It is depends on the specifications of these external devices.

Check with your dealer or system administrator for more information about these timers.

See **Pairing with LF MPP Pairing Feature** on page 120 or **Pairing with Standard Pairing Feature** on page 122 to establish the Bluetooth Connection.

**Pairing with LF MPP Pairing Feature**

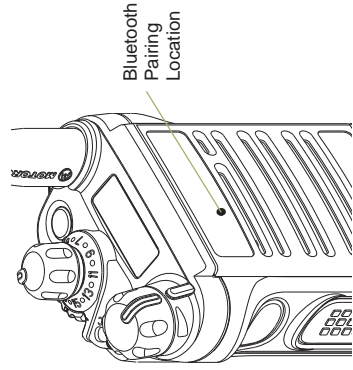

The range of Bluetooth operation is 10 meters line-of-sight communication. This is an **unobstructed** path between the location of the signal transmitter (your radio) and the location of the receiver (your device or accessory).

Obstacles that can cause an obstruction in the line-of-sight include trees, buildings, mountains, cars and etc.

It is **NOT** recommended that you leave your radio behind and expect your accessory to work with a high degree of reliability when they are separated.

At the fringe areas of reception, both voice and tone quality will start to sound "garbled" or "broken". To correct this problem, simply position the accessory and radio closer to each other (within the 10 meter defined range) to re-establish clear audio reception.

**Procedure:**

**Note:** Bluetooth tones, Bluetooth menu and preprogrammed buttons must be preprogrammed by a qualified radio technician. Check with your dealer or system administrator for more information.

Once a COTS headset is paired to your radio, it is always connected. Therefore the battery life of the accessory is aligned with the Talk Time power consumption, not the Standby Time consumption.

With your radio's Bluetooth feature ON, and the Bluetooth tones enabled:


- 1 Turn on the accessory, then place it close to your radio aligning the Bluetooth Pairing Location on the radio to the Bluetooth Pairing Location (a blue dot) on the accessory.
- 2 If the pairing process is successful, you hear an incremental-pitched tone to indicate paired.  
**OR**

If the pairing process fails, you hear a short, low-pitched tone. The display shows **Bluetooth pairing failed**. Repeat step 1 again.

 


- 3 The radio continues to connect to the device.  
If the connecting process is successful, you hear an incremental-pitched tone. The display shows **<Device Type> connected**, and the Bluetooth icon turns from b to a.  
**OR**  
If the device already have pairing records and the connecting process fails, you hear a short, low-pitched tone. The display shows **<Device Type> connect failed**. Repeat step 2 to reconnect the Bluetooth device.  
**OR**  
If the connecting process immediately follows the pairing process and the connecting process fails to complete within 6 seconds, you hear a decremental-pitched tone to indicate unpaired. The display shows **<Device Type> unpaired**. Repeat step 1 to re-initiate the pairing process.

## Advanced Features

### **Indicating Bluetooth Connection is Lost**

The radio shows  when the device has a Bluetooth connection. Below is the scenario and radio indications when the connection is interrupted.

#### **Procedure:**

- 1** The  starts blinking for up to 10 seconds. You hear a decremental-pitched tone and the display shows <Device Type> alternating with **disconnected**.
  - 2** If the Bluetooth device successfully re-connects before the Bluetooth 10 second Re-Connection Timer expires, the display shows momentary <Device Type> **connected**, and  stops blinking.
- OR**  
If the Bluetooth device fails to re-connect within 10 seconds, the blinking  is replaced by a persistent b.

### **Pairing with Standard Pairing Feature**

**Note:** Bluetooth tones, Bluetooth menu and preprogrammed buttons must be preprogrammed by a qualified radio technician. Check with your dealer or system administrator for more information.

Once a COTS headset is paired to your radio, it is always connected. Therefore the battery life of the

accessory is aligned with the Talk time power consumption, not the Standby time consumption.

The Bluetooth Standard Pairing feature enables your Bluetooth enabled radio to search for other Bluetooth enabled and discoverable device. Once the device is discovered, you can initiate your radio to send a pairing request to pair with the device.

This feature also enables your Bluetooth enabled radio to be visible to another Bluetooth enabled device and receive request to pair from other device.

The Standard Pairing feature supports pairing Authentication Personal Pairing Number or PIN which ensure your radio recognizes the correct device to pair. The PIN must be exchanged with the radio or the device before the pairing completes. Your radio prompts for the Authentication PIN when needed. Refer to your device's manual for details about the Bluetooth Authentication PIN of your device if needed.



### Searching and Pairing the Bluetooth Device

Bluetooth Search in Bluetooth Standard Pairing method is used to scan for other Bluetooth devices nearby. It is set to off by default.

**Note:** Ensure the Bluetooth on your device is turned to On and is set to **DISCOVERABLE** in order to enable your radio to detect your device in Bluetooth.

#### Procedure:

- 1 < or > to **BT**. Press the **Menu Select** button directly below **BT** to access the Bluetooth feature screen.
- 2 U or D to **Search Devices** and press the **Menu Select** button directly below **On**.
- 3 The display changes to **BT Searching** screen and it shows **Searching for BT devices**.  
**OR**  
You hear the radio sounds a short, low-pitched tone. The **Bluetooth** feature screen shows **BT Search failed**.
- 4 The **BT Searching** screen shows the name of Bluetooth devices found if there are any.  
**OR**  
To stop the searching press the **Menu Select** button below **Stop**.
- 5 When the search timer expires, **Available Dev** screen is shown. The display shows a list of Bluetooth devices found.

- 6 If the list shows the required device, U or D to the device name and press the **Menu Select** button directly below **Search** to connect to the device. The radio starts pairing to the device.  
**OR**  
Press the **Menu Select** button below **Back** to return to **Bluetooth** feature screen.  
**OR**  
Press H or the **Menu Select** button below **Exit** to return to **Home** screen.

#### OR

- 1 Press the preprogrammed button, to enable the **Bluetooth Search** feature.
- 2 The display changes to **BT Searching** screen and it shows **Searching for BT devices**.  
**OR**  
If the feature fails to initiate, you hear the radio sounds a short, low-pitched tone. The screen shows **BT Search failed**.
- 3 The **BT Searching** screen shows the name of Bluetooth devices found if there are any.  
**OR**  
Press the preprogrammed button to disable the **Bluetooth Search**.
- 4 When the search timer expires, **Available Dev** screen is shown. The display shows a list of Bluetooth devices found.

## Advanced Features

- 5 If the list shows the required device, U or D to the device name and press the **Menu Select** button directly below **Sel** to connect to the device. The radio starts pairing to the device.

**OR**

Press the **Menu Select** button below **Back** to return to **Bluetooth** feature screen.

**OR**

Press **H** or the **Menu Select** button below **Exit** to return to **Home** screen.

**Note:** This Search function stops when you initiate pairing to a device.

To continue with *Bluetooth pairing*, please see **Pairing with LF MPP Pairing Feature** on page 120.

#### **Turning Bluetooth Visibility On**

Turning Bluetooth visibility to on enables other Bluetooth devices to search for your radio. The visibility of the Bluetooth is set to off by default.

**Procedure:**

- 1 < or > to **BT**. Press the **Menu Select** button directly below **BT** to access the Bluetooth feature screen.
- 2 U or D to **Visibility** and press the **Menu Select** button directly below **On**. The status changes to **Visible to all**. Visibility mode is enabled.

**OR**

When the timer expires, the status changes to **Visibility failed**. Repeat step 1.

**OR**

- 1 Press the preprogrammed button to enable the Bluetooth visibility feature.

2

You hear a short, medium-pitched tone. The display shows momentary **Visible to all**. Visibility mode is enabled.

**OR**

When the timer expires, the display shows momentary **Visibility failed**. Repeat step 1.

Press the preprogrammed to toggle the Bluetooth visibility on or off.

#### **Receiving Pairing Request from other Devices**

**Procedure:**

- 1 When your radio receives a pairing request from other device, the display shows <Device Friendly Name> **pair** request.
- 2 Press the **Menu Select** button below **Ok** to accept or **Cncl** to refuse pairing request.

### Turning Bluetooth Visibility Off

#### Procedure:

With the Visibility turns On,

- 1 < or > to **BT**. Press the **Menu Select** button directly below **BT** to access the Bluetooth feature screen.
- 2 U or D to **Visibility** and press the **Menu Select** button directly below **Off**.
- 3 The display shows **Visibility Off**.  
**OR**  
When the timer expires, the status changes to **Visibility off failed**. Repeat step 2.
- 4 Press the **Menu Select** button directly below **Exit** to return to the Home screen.

#### **OR**

- 1 Press the preprogrammed button to disable the Bluetooth visibility.
- 2 You hear a short, medium-pitched tone. The display shows momentary **Visibility Off**. Visibility mode is disabled.  
**OR**  
When the timer expires, the status changes to **Visibility off failed**. Repeat step 1.

### Pairing with PIN Authentication

For the security of your radio, Bluetooth Pairing PIN feature is designed to enable your radio to verify the correct device to pair before initiating the pairing. Authentic PIN is used for the verification.

**Note:** The compare PIN authentication method only applicable for Bluetooth version 2.1 and above.

### Comparing Authentication PIN When Receiving a Pairing Request

**Note:** If the device or profile does not support this feature, the radio prompts **BT profiles not supported** as your radio only supports HSP, DUN, PAN and SPP.

#### Procedure:

- 1 The radio display shows <Device Friendly Name> pair request.
- 2 Press the **Menu Select** button below **Ok** to accept.  
**OR**  
Press the **Menu Select** button below **Cncl** to reject. The display shows **Cancel pairing in progress...** followed by <Device Friendly Name> pair canceled and return to Home screen.  
**OR**  
When the pairing timer expires, the display shows <Device

Friendly Name> pair canceled and return to Home screen.

- 3 Once accepted, the display shows **Compare PIN: XXXXXX**. Press the **Menu Select** button below **Ok** if the PIN is correct.  
**OR**  
Press the **Menu Select** button below **Cncl** to reject if the PIN number is incorrect. The display shows **Cancel pairing in progress...** followed by **<Device Friendly Name> pair canceled** and return to Home screen.  
**OR**  
When the PIN authentication timer expires, the display shows **<Device Friendly Name> pair canceled** and return to Home screen.
- 4 The display shows **Pairing in progress....**  
**OR**  
If the PIN is correct, the display shows **BT profiles not supported**. The display returns to Home screen.
- 5 The display shows **<Device Friendly Name> paired** followed by **<Device Friendly Name> connected**.  
**OR**  
When the pairing timer expires, the display shows **<Device Friendly Name> pair failed**.  
**OR**  
When the connecting timer expires, the display shows **<Device Friendly Name> connect failed**.
- 6 The display returns to Home screen.

### **Comparing Authentication PIN with Generated Numeric PIN**

**Note:** If the device or profile does not support this feature, the radio prompts **BT profiles not supported** as your radio only supports HSP, DUN, PAN and SPP.

#### **Procedure:**

Follow procedure **Searching and Pairing the Bluetooth Device** on page 123 to search for Bluetooth devices available, then start pairing with Authentication PIN with the following.

- 1 U or D to the required device. Press the **Menu Select** button directly below **Sel** to initiate pairing. The display shows **Pairing in progress...** followed by random generated numeric PIN, **Compare PIN: XXXXXX**.  
**2** Press **Ok** to proceed.  
**OR**  
Press the **Menu Select** button below **Cncl** to reject. The display shows **Cancel pairing in progress...** followed by **<Device Friendly Name> pair canceled** and return to Home screen.  
**OR**  
The display shows **BT profiles not supported**. The display returns to **Available Dev** screen.
- 3 The radio and device continue pairing. The display shows **Pairing in progress**.  
**OR**

The display shows **<Device Friendly Name> pair failed**. Repeat step 3.

- 4** If the PIN number is authentic, the display shows **<Device Friendly Name> paired**.  
**OR**  
If the PIN number is different, the display shows **<Device Friendly Name> pair failed**. The display returns to **Available Dev** screen. Repeat step 3.

- 5** The display shows **Connecting in progress...** followed by **<Device Friendly Name> connected**. The display returns to Bluetooth feature screen.  
**OR**  
The display shows **<Device Friendly Name> connect failed**. The display returns to **Available Dev** screen.

#### **Comparing Authentication PIN by Manually Keying in the Same PIN**

##### **Procedure:**

Follow procedure **Searching and Pairing the Bluetooth Device** on page 123 to search for Bluetooth devices available, then start pairing with Authentication PIN with the following.

- 1** U or D to the required device. Press the **Menu Select** button directly below **Set** to initiate pairing.

- 2** The display shows **Pairing in progress...** followed by requesting user to enter PIN number . A blinking cursor appears below the **Enter PIN:**.

- 3** Use the keypad to enter the PIN.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete.  
Press **Ok** to proceed. Enter the same PIN number on the device.

**OR**  
Press the **Menu Select** button below **Cncl** to reject. The display shows **Cancel pairing in progress...** followed by **<Device Friendly Name> pair canceled** and return to Home screen.

**OR**  
The display shows **BT profiles not supported**. The display returns to **Available Dev** screen.

- 4** The radio and device continue pairing. The display shows **Pairing in progress**.

**OR**  
The display shows **<Device Friendly Name> pair failed**. Repeat step 3.

- 5** If the PIN number is authentic, the display shows **<Device Friendly Name> paired**.

**OR**  
If the PIN number is different, the display shows **<Device**

## Advanced Features

- 6 The display shows **Friendly Name** > **PIN auth fail**. The display returns to **Available Dev** screen. Repeat step 3.
- The display shows **Connecting in progress...** followed by **<Device Friendly Name> connected**. The display returns to Bluetooth feature screen.

**OR**

The display shows **<Device Friendly Name> connect failed**. The display returns to **Available Dev** screen.

### **Turning On the Bluetooth Audio (Routing the Audio from the Radio to the Headset)**

**Procedure:**

- 1 < or > to **BT**. Press the **Menu Select** button directly below **BT** to access the Bluetooth feature screen.
- 2 **U** or **D** to **Bluetooth spkr** and press the **Menu Select** button directly below **On**. The display shows **On**.
- 3 Press the **Menu Select** button directly below **Exit** to return to the Home screen.

**OR**

- 1 Short press the preprogrammed button to route the audio routing from the radio to the headset.
- 2 You hear a short, medium-pitched tone. The display shows **Headset on**.

### **Turning Off the Bluetooth Audio (Routing the Audio from the Headset to the Radio)**

**Procedure:**

- 1 < or > to **BT**. Press the **Menu Select** button directly below **BT** to access the Bluetooth feature screen.
- 2 **U** or **D** to **Bluetooth spkr** and press the **Menu Select** button directly below **Off**. The display shows **Off**.
- 3 Press the **Menu Select** button directly below **Exit** to return to the Home screen.

**OR**

- 1 Press the preprogrammed button to route the audio routing from the headset to the radio.
- 2 You hear a short, medium-pitched tone. The display shows **Speaker on**.

### **Adjusting the Volume of the Radio from Bluetooth Audio Device**

Your radio can only control the volume of MCW and OCW Bluetooth enabled audio device. If the radio is paired with other Bluetooth enabled audio device, its volume is independent from the radio. In this case, the volume is only adjustable on the device.

#### **Procedure:**

With the Bluetooth audio device connected to the radio:

- 1 Adjust volume up/down on the Bluetooth audio device.
- 2 The radio display shows **Volume XX**, and you hear a short, medium-pitched tone.

### **Viewing and Clearing the Bluetooth Device Information**

#### **Procedure:**

- 1 < or > to **BT**. Press the **Menu Select** button directly below **BT** to access the Bluetooth feature screen.

## Advanced Features

- 2 U or D to **Devices**, once you toggle the highlight to **Devices** the display shows **XX connected** alternates with **XX paired**. Press the **Menu Select** button directly below **Set** to see the details.

---
- 3 The display shows **No devices** if there are no active Bluetooth devices being paired or connected.  
**OR**  
If there are devices being paired or connected, U or D along the <**Device Friendly Name**> to see the status of each device.  
**OR**  
Press the **Menu Select** button directly below **Back** to return to the previous screen.

---
- 4 U or D to the required device, press the **Menu Select** button directly below **Clr**.

---
- 5 The display shows <**Device Friendly Name**> **clear?**.

---
- 6 Press the **Menu Select** button directly below **Yes** to proceed.  
**OR**  
Press the **Menu Select** button directly below **No** to return to previous screen.

---
- 7 The display shows <**Device Friendly Name**> **cleared** to indicate clearing is successful.  
**OR**  
You hear the radio sounds a short, low-pitched tone. The

display shows <Device Friendly Name> clear failed. The display returns to previous screen.

- 8 Press the **Menu Select** button directly below **Back** to return to the previous screen.

**Note:** If Re-Pair Timer is set to infinite and you clear keys on the radio, you must clear keys on all previously paired devices as well. (Please see your accessories manual for further details.)

#### **Clearing All Bluetooth Devices Information**

**Procedure:**

Long press the preprogrammed Bluetooth On/Off button. You hear a short, medium-pitched tone. Proceed to step 3.

**OR**

In the Bluetooth feature screen,

- 1 U or D to **Devices** and press the **Menu Select** button directly below **Clr** to clear all active Bluetooth devices. You hear a short, medium-pitched tone.
- 2 The display shows **Clear all BT devices?.** Press the **Menu Select** button directly below **Yes** to proceed.

- 3 The display shows **Please wait** to indicate clearing is in progress.

- 4 The display shows **All BT devices cleared** to indicate clearing is successful.

**OR**

You hear the radio sounds a short, low-pitched tone. The display shows **Clear all BT devices failed.**  
The display returns to Bluetooth feature screen.

**Note:** If Re-Pair Timer is set to infinite and you clear keys on the radio, you must clear keys on all previously paired devices as well. (Please see your accessories manual for further details.)



## Editing the Bluetooth Friendly Name

**Note:** Your radio must be preprogrammed to allow you to use this feature.

### Procedure:

- 1 < or > to **BT**. Press the **Menu Select** button directly below **BT** to access the Bluetooth feature screen.
- 2 **U** or **D** to **Friendly name** and press the **Menu Select** button directly below **Edit**.
- 3 A blinking cursor appears in the **Friendly Name** screen. Use the keypad to edit the text.  
Press < to move one space to the left.  
Press > to move one space to the right.  
Press the **Menu Select** button directly below **Del** to delete any unwanted characters.  
Press \* to add a space.  
Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.  
Press # to toggle between numeric and letter mode.

- 4 Press the **Menu Select** button directly below **Ok** to save the new **Friendly Name** and return to the Bluetooth feature screen.  
**OR**  
Press the **Menu Select** button directly below **Cncl** to return to the **Bluetooth** feature screen.

## Pairing with LEX 700 (APX 7000 Dual Display only)

### Procedure:

With the radio Bluetooth feature **ON**, and the Bluetooth tones enabled:

- 1 Turn on the LEX 700 and activate the Bluetooth feature.
- 2 Place it close to the radio aligning the Bluetooth Pairing Location on LEX 700 with the Bluetooth Pairing Location on the radio.
- 3 If the pairing process is successful, you hear an incremental-pitched tone from the radio.  
**OR**  
If the pairing process fails, you hear a short, low-pitched tone. The display shows **Bluetooth pairing failed**. Repeat step 1 again.
- 4 The radio continues to connect to LEX 700.  
If the connecting process is successful, you hear an incremental-pitched tone. The display shows **LEX 700 connected**, and the Bluetooth icon turns from **b** to **a**.  
**OR**  
If the device already have pairing records and the connecting process fails, you hear a short, low-pitched tone. The display shows **LEX 700 connect failed**. Repeat step 2 to reconnect the Bluetooth device.  
**OR**

## Advanced Features

If the connecting process immediately follows the pairing process and the connecting process fails to complete within 6 seconds, you hear a decremental-pitched tone to indicate unpaired. The display shows **LEX 700 unpaired**. Repeat step 1 to re-initiate the pairing process.

To unpair the LEX 700, follow the steps in **Viewing and Clearing the Bluetooth Device Information** on page 129.

## ■ Programming Over Project 25 (POP 25) (ASTRO 25 and ASTRO Conventional)

This feature enables configuration data to be upgraded to your radio over-the-air. This feature retains full use of the radio during the configuration data transfer without interrupting communication. The upgrade pauses to give priorities to voice call, and continues after the voice call ended.

Once a configuration upgrade is downloaded to your radio, you can install new changes immediately or delay changes to be installed on the radio when it is being powered up. Your radio can also be configured to allow you to accept or reject an upgrade.

**Note:** This feature must be preprogrammed by a qualified radio technician. Check with your dealer or system administrator for more information.

## Responding to the notification of Upgrade

### Procedure:

- 1 The display shows **Upgrade?**.
- 2 Press the **Menu Select** button below **Acpt** to accept the request to upgrade immediately. The display shows **Upgr Rx In Prog** to indicate the upgrade received is in progress.  
**OR**  
Press the **Menu Select** button below **Dlaly** to delay the request to upgrade. The radio prompts to upgrade in the next power up of your radio.  
**OR**  
Press the **Menu Select** button below **Rej** to reject the request to upgrade. The display shows **Upgr Aborted**. The radio continues to function with the current configuration until it gets reprogrammed.
- 3 If the upgrade is successful, the display shows **Program done**.  
**OR**  
If the upgrade failed, the display shows **Program failed**. The radio remains in current configuration.

*If your radio has problem of upgrade over-the-air, consult the qualified technician for details.*

## Voice Announcement

This feature enables the radio to audibly indicate the current feature mode, zone or channel the user has just assigned. This audio indicator can be customized per customer requirements. This is typically useful when the user is in a difficult condition to read the content shown on the display.

Each voice announcement is within a limit of three seconds maximum. The sum duration of all different voice announcements in a radio shall be no more than 1000 seconds.

**Note:** This feature must be preprogrammed by a qualified radio technician.

Check with your agent if Voice Announcement is available for the feature you need.

The two options of priority for the Voice Announcement available are:

- **High** – enables the voice of the feature to announce even when the radio is receiving calls.
- **Low** – disables the voice of the feature from announcing when the radio is receiving calls.

## Advanced Features

**Procedure:**

You hear a voice announcement when the features below are preprogrammed in the radio.

- The radio powers up. The radio announces the current zone and channel it is transmitting.
- Press the preprogrammed voice announcement button (which specifically programmed to playback the current zone and channel). The radio announces the current zone and channel it is transmitting.

**Note:** Pressing this preprogrammed playback button will always enable the voice feature to announce in High priority.

All the three programmable buttons at the side of the radio support this feature.

- Change to a new zone. The radio announces the current zone and channel it is transmitting.
- Change to a new channel remaining within the current zone. The radio announces the current channel.
- Press either the **Menu Select** button or preprogrammed button or switch of the radio to launch or terminate Scan, PL Disabled, Talkaround/Direct or Transmit Inhibit. The radio announces the corresponding feature activation or deactivation.

**Using Site Selectable Alerts (ASTRO 25)**

A Site Selectable Alert (SSA) is an Intelligent Lighting indicator with audio alert sent to radios at a site or a few sites to notify the users when there is a special situation that they need to be aware of. Only authorized radios are enabled to send SSA.

Upon the activation of a SSA, the receiving radios display the alert alias and generate the periodic alert tone.

**Note:** Alert alias, alert tone, and alert period can be preprogrammed. Alert period is the duration for the radio to repeat the alert tone. An interval of 5 seconds might impact the battery life of the radio. Check with your dealer or system administrator for more details.

When mixing SSA with received voice audio, the SSA alert is reduced in volume to ensure that the voice message is still heard clearly. Therefore, it is important that the SSA audio files are created with clear loud audio to ensure they can still be heard clearly when played at reduced levels.

**Sending SSA Notification to Single Site**

**Procedure:**

- 1 > or < to SSA.

- 2 Press the **Menu Select** button directly below **SSA**. The display shows the **Site Alert** screen.
- 3 **D** or **U** to **Start Alert** and press the **Menu Select** button directly below **Sel**. The display shows the **Select Site** screen.
- 4 **D** or **U** to the desired Site Alias. Press the **Menu Select** button directly below **Sel**. The display shows the **Select Alert** screen.
- 5 **D** or **U** to select the desired Alert Alias and press the **Menu Select** button directly below **Send**. The display shows **Sending req.**  
**OR**  
 If radio is out of range, roaming to a foreign system or in a failsoft situation, the display shows **Req failed**.
- 6 If the request is successful, the display shows **Req successful**.  
**OR**  
 If the site is not available, the display shows **<Site Alias> not available**.  
**OR**  
 If the site does not exist, the display shows **<Site Alias> does not exist**.
- 7 Press the **Menu Select** button directly below **Exit** to return to the Home screen.

*If you are at the site designated to receive this alert, you can hear an alert tone repeated periodically. The display shows the <Alert Alias> with the intelligent lighting at **Home** screen.*

### Sending SSA Notification to Single Site Via Manual Entry

#### Procedure:

- 1 > or < to **SSA**.
- 2 Press the **Menu Select** button directly below **SSA**. The display shows the **Site Alert** screen.
- 3 **D** or **U** to **Start Alert** and press the **Menu Select** button directly below **Sel**. The display shows the **Select Site** screen.
- 4 **D** or **U** to **{SiteID Entry}** to send alert via manual entry. Press the **Menu Select** button directly below **Edit**. The display shows the **Enter SiteID** screen.
- 5 Key in the desired Site ID and press the **Menu Select** button directly below **Ok**.
- 6 If a correct Site ID is entered, the display shows the **Select Alert** screen.  
**OR**  
 If a wrong Site ID is entered, the display shows **Invalid ID** and prompts to enter the Site ID again.

- 7 D or U to select the desired Alert Alias and press the **Menu Select** button directly below **Send**. The display shows **Sending req.**  
OR  
If radio is out of range, roaming to a foreign system or in a failsoft situation, the display shows **Req failed**.
- 8 If the request is successful, the display shows **Req successful**.  
OR  
If the single site is not available, the display shows **<Site ID> not available**.  
OR  
If the single site does not exist, the display shows **<Site ID> does not exist**.
- 9 Press the **Menu Select** button directly below **Exit** to return to the Home screen.

*If you are at the site designated to receive this alert, you can hear an alert tone repeated periodically. The display shows the <Alert Alias> with the intelligent lighting at **Home** screen.*

## Sending SSA Notification to All Sites

### Procedure:

- 1 > or < to SSA.
- 2 Press the **Menu Select** button directly below **SSA**. The display shows the **Site Alert** screen.
- 3 D or U to **Start Alert** and press the **Menu Select** button directly below **Sel**. The display shows the **Select Site** screen.
- 4 D or U to **{All Sites}** and press the **Menu Select** button directly below **Sel**. The display shows the **Select Alert** screen.
- 5 D or U to select the desired Alert Alias and press the **Menu Select** button directly below **Send**. The display shows **Sending req.**  
OR  
If radio is out of range, roaming to a foreign system or in a failsoft situation, the display shows **Req failed**.
- 6 If the request is successful, the display shows **Req successful**.  
OR  
If one or more sites are not available, the display shows **Not all sites available**. Repeat Step 3.

- 7** Press the **Menu Select** button directly below **Exit** to return to the Home screen.

*If you are at the site designated to receive this alert, you can hear an alert tone repeated periodically. The display shows the <Alert Alias> with the intelligent lighting at Home screen.*

#### **Sending SSA Notification to All Available Sites**

##### **Procedure:**

- 1** > or < to **SSA**.
- 2** Press the **Menu Select** button directly below **SSA**. The display shows the **Site Alert** screen.
- 3** **D** or **U** to **Start Alert** and press the **Menu Select** button directly below **Sel**. The display shows the **Select Site** screen.
- 4** **D** or **U** to **{All Avail}** and press the **Menu Select** button directly below **Sel**. The display shows the **Select Alert** screen.
- 5** **D** or **U** to select the desired Alert Alias and press the **Menu Select** button directly below **Send**. The display shows **Sending req.**

**OR**  
If radio is out of range, roaming to a foreign system or in a failsoft situation, the display shows **Req failed**.

- 6** If the request is successful, the display shows **Req successful**.

- 7** Press the **Menu Select** button directly below **Exit** to return to the Home screen.

*If you are at the site designated to receive this alert, you can hear an alert tone repeated periodically. The display shows the <Alert Alias> with the intelligent lighting at Home screen.*

#### **Stopping SSA Notification of a Single Site**

##### **Procedure:**

- 1** > or < to **SSA**.
- 2** Press the **Menu Select** button directly below **SSA**. The display shows the **Site Alert** screen.
- 3** **D** or **U** to **Stop Alert** and press the **Menu Select** button directly below **Sel**. The display shows the **Select Site** screen.
- 4** **D** or **U** to select the desired Site Alias and press the **Menu Select** button directly below **Send**. The display shows **Sending req.**

**OR**  
If radio is out of range, roaming to a foreign system or in a failsoft situation, the display shows **Req failed**.

## Advanced Features

- 5 If the request is successful, the display shows **Req successful**.  
OR  
If the site is not available, the display shows **<Site Alias> not available**.  
OR  
If the site does not exist, the display shows **<Site Alias> does not exist**.
- 6 Press the **Menu Select** button directly below **Exit** to return to the Home screen.
- 7 The SSA Alert for the designated site stops.

#### **Stopping SSA Notification of a Single Site Via Manual Entry**

##### **Procedure:**

- 1 > or < to SSA.
- 2 Press the **Menu Select** button directly below **SSA**. The display shows the **Site Alert** screen.
- 3 **D** or **U** to **Stop Alert** and press the **Menu Select** button directly below **Sel**. The display shows the **Select Site** screen.
- 4 **D** or **U** to **{SiteID Entry}** and press the **Menu Select** button directly below **Edit**.

- 5 The display shows the **Enter SiteID** screen. Key in the required Site ID and press the **Menu Select** button directly below **Send**.
- 6 If a wrong Site ID is entered, the display shows **Invalid ID** and prompts to enter the Site ID again.  
OR  
If a correct Site ID is entered, the display shows **Sending req.**
- 7 If the request is successful, the display shows **Req successful**.  
OR  
If the single site is not available, the display shows **<Site ID> not available**.  
OR  
If the single site does not exist, the display shows **<Site ID> does not exist**.
- 8 Press the **Menu Select** button directly below **Exit** to return to the Home screen.
- 9 The SSA Alert for the designated site stops.



### Stopping SSA Notification of All Sites

#### Procedure:

- 1 > or < to SSA.
- 2 Press the **Menu Select** button directly below SSA. The display shows the **Site Alert** screen.
- 3 **D** or **U** to **Stop Alert** and press the **Menu Select** button directly below **Sel**. The display shows the **Select Site** screen.
- 4 **D** or **U** to **{All Sites}** and press the **Menu Select** button directly below **Send**. The display shows **Sending req.**  
**OR**  
If radio is out of range, roaming to a foreign system or in a failsoft situation, the display shows **Req failed**.
- 5 If the request is successful, the display shows **Req successful**.  
**OR**  
If one or more sites are not available, the display shows **Not all sites available**. Repeat Step 3.
- 6 Press the **Menu Select** button directly below **Exit** to return to the Home screen.
- 7 The SSA Alert for all sites stop.

### Stopping SSA Notification of All Available Sites

#### Procedure:

- 1 > or < to SSA.
- 2 Press the **Menu Select** button directly below SSA. The display shows the **Site Alert** screen.
- 3 **D** or **U** to **Stop Alert** and press the **Menu Select** button directly below **Sel**. The display shows the **Select Site** screen.
- 4 **D** or **U** to **{All Avail}** and press the **Menu Select** button directly below **Send**. The display shows **Sending req.**  
**OR**  
If radio is out of range, roaming to a foreign system or in a failsoft situation, the display shows **Req failed**.
- 5 If the request is successful, the display shows **Req successful**.
- 6 Press the **Menu Select** button directly below **Exit** to return to the Home screen.
- 7 The SSA Alert for all available sites stop.

## ■ Long Term Evolution (LTE) (APX 7000L Only)

The APX7000L enhances the current radio operation by providing the radio with faster information delivery over an LTE broadband network. Utilizing the LTE network additionally allows the radio to perform simultaneously LMR voice operation while sending and receiving data via the LTE network. LTE eliminates the need for radios to be physically present at a service facility when reconfiguration is required.


Networks supported include the public safety broadband network (band 14) and Verizon's commercial network (band 13).

This module allows the voice communication of P25 and data communication via LTE to take place simultaneously.

### **ATTENTION!**

If the radio transmission personalities contain one 700MHz channel, the entire personality will not be able to use LTE.

The APX 7000L radio exterior has the speaker grill bumped out. Besides this, the remainder of the exterior is identical to APX 7000.

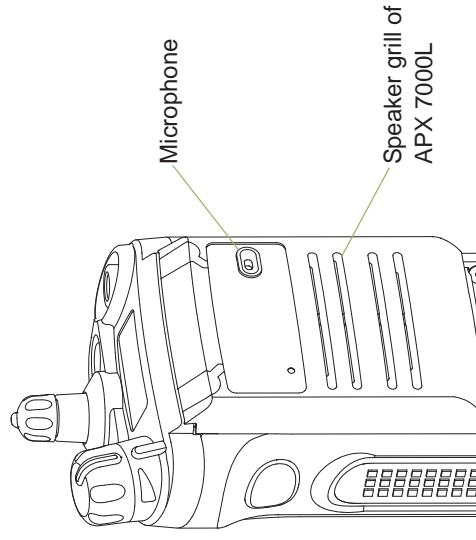

The table below describes the condition when the radio works in different operating systems with LTE.

System	Operation Scenarios
IV&D	Currently LTE and IV&D are mutually exclusive. Both systems <b>cannot</b> operate at the same time.
LMR	<p>The radio is preprogrammed to stop LTE operation when radio switched to a LMR 700MHz frequency.</p> <p>When the radio is switched to operate in 700MHz LMR, LTE operation is turned off. The radio still can operate on 700MHz LMR where the LMR voice and data are available to the user.</p> <p>LTE is operational again when the frequencies are switched back to either a VHF or a 800 MHz LMR frequency.</p>

The LTE feature can be preprogrammed to a programmable button for quick access to LTE screen or to activate LTE feature. The **LTE** button must be preprogrammed by a qualified technician before user can use it.

### Data Profiles Available for LTE

There are three different profiles available for LTE data operation.

Profiles	Operation Scenarios
<b>Broadband Only</b>	Use only LTE data transmission network. In the absence of LTE coverage, the radio has no data functionality.
<b>Trunking and Broadband</b>	Use LTE data transmission network when available. When LTE is not available or turned off, the radio falls back to using IV&D LMR data, if available. Once LTE coverage becomes available again, the radio reverts back to using LTE data transmission network.
<b>Conventional and Broadband</b>	Use LTE data transmission network when available. When LTE is not available or turned off, the radio falls back to using Conventional LMR data, if available. Once LTE coverage becomes available again, the radio reverts back to using LTE data transmission network.

## Advanced Features

### Turning On the LTE at the LTE Menu Screen

#### Procedure:

- 1 Press the **LTE** button to enter the **LTE** screen.  
**OR**  
< or > to **LTE**. Press the **Menu Select** button directly below **LTE** to enter the **LTE** screen.
- 2 If LTE modem is not ready or busy setting up, the screen prompts **Please wait**. Once LTE modem is ready, the display shows the **LTE** screen.
- 3 Press and hold the **LTE** button. The screen prompts **LTE on** to indicate radio is initiating the LTE connection.  
**OR**  
Press the **Menu Select** button directly below **On** to enable LTE connection.
- 4 The **Status** shows **Connecting...** to indicate the radio is initiating connection to LTE system.
- 5 The display shows **LTE connected** once the radio is connected. The **Status** shows **Connected**. The LTE icon appears at the top of the front display to indicate LTE modem is connected.  
**OR**  
The display shows **LTE service error** if there is an encryption error. The **Status** shows **Service error**.  
**OR**  
The display shows **No LTE service** if there are no LTE

networks available. The **Status** shows **No service** until successfully connected to LTE or encounter service error.

- 6 Press the **Menu Select** button below **Exit** to return to Home screen.

*It is advisable to turn off the LTE if the radio prompts **SLTE service error** or **No LTE service**. For the error **no LTE service available**, turn on the LTE after you moved to another site to check the availability.*

### Turning On the LTE with LTE Button

#### Procedure:

- 1 Press and hold the preprogrammed **LTE** button. The screen shows **LTE on** to indicate radio is initiating the LTE connection.
- 2 The display shows **LTE connected** once the radio is connected. The **Status** shows **Connected**. The LTE icon appears at the top of the front display to indicate LTE modem is connected.  
**OR**  
The display shows **LTE service error** if there is an encryption error.  
**OR**  
The display shows **No LTE service** if there are no LTE networks available.

*It is advisable to turn off the LTE if the radio shows Service error or no LTE service. For error no LTE service available, turn on the LTE after you moved to another site to check the availability.*

### Turning Off the LTE Connection

If the radio is out of LTE coverage and you know you will be out of LTE coverage for a long period of time, would be good to disable LTE feature to extend the radio battery life.

#### **Procedure:**

- 1** Press and hold the preprogrammed **LTE** button and proceed to Step 3.  
**OR**  
< or > to LTE.
- 2** Press the **Menu Select** button directly below **LTE** to access the LTE screen.
- 3** Press and hold the LTE button. The screen shows **LTE Off** to indicate the LTE connection is off.  
**OR**  
Press the **Menu Select** button directly below **Off** to disable LTE connection.
- 4** The **Status** shows **Off** and the LTE icon disappears to indicate the LTE is off.
- 5** Press the **Menu Select** button below **Exit** to return to Home screen.

### Information at the LTE Screen

Here is the description of different items which are shown on the LTE screen.

Item	Status and Description
<b>Status</b>	<p><b>Connecting</b> – The radio is trying to connect to an LTE modem</p> <p><b>Connected</b> – LTE communication is currently on.</p> <p><b>Disconnected</b> – LTE communication is currently disconnected.</p> <p><b>Disabled</b> – LTE communication is currently disabled on the selected channel.</p> <p><b>Off</b> – LTE communication of the radio is currently off.</p> <p><b>No Service</b> – No LTE service detected at the current site.</p> <p><b>Service Error*</b> – There is an LTE service error.</p> <p><b>LTE HW error*</b> – There is an LTE hardware error.</p> <p><b>VPN auth error *</b> – Incorrect key installed for VPN.</p> <p><b>Service fatal error**</b> – LTE function has come to a stall.</p>

## Advanced Features

Item	Status and Description
<p><b>Network</b></p>	<p><b>&lt;Network name&gt;</b> - The currently connected LTE network name.  <b>Unavailable</b> - No LTE network connected currently.</p>
<p><b>Signal Strength</b></p>	<p><b>Please wait</b> - The radio is trying to connect to an LTE modem.  <b>Unavailable</b> - The radio does not have an LTE connection currently.                      Rating of the signal strength - You will see one of the following rating when LTE is connected:  <b>Excellent &gt; Good &gt; Fair &gt; Poor</b></p>

\* Bring the radio to the qualified technician to check the issue if the error persists.

\*\* You can try to power on your radio again to reinstate the LTE function. If this error persists, bring your radio to the qualified technician to verify the issue.

 **Changing from LTE-enabled Channel to LTE-disabled Channel**

When entering a non-LTE capable channel the status field in the LTE screen shows **Disabled**. Press or press and hold of the LTE button prompts short, low-pitched tone.

If the display is showing LTE screen when entering the LTE-disabled channel, the display returns to **Home** screen immediately.

 **Changing from LTE-enabled Channel to Unprogrammed Channel**

When entering a unprogrammed channel the display prompts **Unprogrammed** and the LTE menu disappears. Pressing the LTE button prompts short, low-pitched tone.

If the display is showing LTE screen when entering the unprogrammed channel, the display returns to **Home** screen immediately and you are unable to see nor access the LTE screen.

### **Entering or Exiting Out-of-Range Site**

When the radio moves beyond the LTE network coverage, which means out-of-range, the radio prompts **No LTE service**. The LTE screen is accessible. Refer to **Information at the LTE Screen** on page 143 for the status shown at the LTE screen.

With the LTE of the radio turned on, when the radio moves back to LTE connected site, the radio prompts **LTE connected**.

### **Utilities**

#### **Viewing the Recent Calls**

This feature allows you to view the recent incoming and outgoing call information of the following call types:

- Call Alert
- Selective Call
- Private Call
- Phone Call (Outgoing Only)
- Emergency Call (Incoming Only)

**Note:** The radio can also be preprogrammed to log only the radio IDs associated with incoming Dispatch Calls. Check with your dealer or system administrator for more information.

#### **Procedure:**

Press the preprogrammed **Recent Calls** button and proceed to Step 3.

**OR**

Follow the procedure below.

**1** < or > to **Rcnt**.

## Advanced Features

2 Press the **Menu Select** button directly below **Rcnt** to access the **Recent Calls** feature screen.

3 U or D to scroll through the list.

4 Press the **Menu Select** button directly below **Exit** to return to the Home screen.

**OR**

Press **H** or the **PTT** button to return to the Home screen.

*The radio automatically exits the feature, if the feature inactivity timer is enabled, when the radio is left idle and the timer expires. You will hear the Menu Inactive Exit Tone upon feature exit.*

#### **Using the Flip Display**

This feature allows you to flip the content of the top display upside down. It is particularly useful when you would like to read the top display while the radio is still in the carry holder attached to your belt.

**Procedure:**

Press and hold the preprogrammed **Light/Flip** button to flip the display.

#### **Selecting a Basic Zone Bank**

This feature allows twice as many zones to be accessed from a switch, doubling the amount of switch positions.

**Note:** The Basic Zone Select feature must to be preprogrammed to the 3-position A-B-C switch, while the Basic Zone Bank feature must be preprogrammed to any side button or **Top (Orange)** button before you can use this feature.

**Procedure:**

1 Use the preprogrammed **Basic Zone Bank** button to toggle the position between Bank 1 and Bank 2.

2 The top display shows the status icons (**A, B, C, D, E or F**) or the zone name based on the bank and switch position selected.

See **Basic Zone Bank 1** and **Basic Zone Bank 2** on page 22 for more information on the status icons.



## Selecting an Enhanced Zone Bank

This feature is created in order to allow users to communicate in more zones. An **Enhanced Zone Bank (EZB)** consists of three zones. This also means each icon **A, B, C, ...** or **Y** consist of three zones. You can use the preprogrammed 3-position A-B-C switch to select the first, second or third zone in an EZB.

This feature allows user to navigate from up to 75 zones in 25 EZBs.

**Note:** The Zone Select feature must to be preprogrammed to the 3-position A-B-C switch, while the Enhanced Zone Bank feature must be preprogrammed to any side button or **Top (Orange)** button before you can use this feature.

### **Procedure:**

- 1 Press the preprogrammed **EZB Up** or **EZB Down** button to scroll the EZB up or down.  
**OR**  
Press and hold the preprogrammed **EZB Up** or **EZB Down** button to fast scroll the EZB up or down.
- 2 Turn the 3-Position A/B/C Switch to select the first, second or third zone in the selected EZB.

## Selecting the Power Level

This feature enables you to reduce the transmit power level for specific case that require a lower power level. You can select the power level at which your radio transmits. The radio always turns on to the default setting.

**Note:** Please refer to your agent or qualified radio technician to enable this feature.

These reduced transmit power level settings do not affect your radio's receiving performance, nor diminish the overall quality of the radio's audio and data functionality given the following conditions.

### **Settings:**

- Select **Low** for a shorter transmitting distance and to conserve power.
- Select **High** for a longer transmitting distance.

### **Procedure:**

Use the preprogrammed **Transmit Power Level Switch** to toggle the power level between low and high power.

### **OR**

Follow the procedure below.

- 1 < or > to **Pwr**.
- 2 Press the **Menu Select** button directly below **Pwr**.

## Advanced Features

- 3 The display shows **Low power** and the low power icon.  
**OR**  
The display shows **High power** and the high power icon.

#### **Selecting a Radio Profile**

This feature allows you to manually switch the visual and audio settings of the radio. The display, backlight, alert tones, and audio settings are defined according to the preprogrammed radio settings of each radio profile.

Please refer to a qualified technician for more information.

**Note:** The radio automatically exits the feature, if the feature inactivity timer is enabled, when the radio is left idle and the timer expires. You will hear the Menu Inactive Exit Tone upon feature exit.

#### **Procedure:**

Use the preprogrammed **Profile** button and proceed to Step 3.

**OR**

Follow the procedure below.

- 1 < or > to **Prfl**.
- 2 Press the **Menu Select** button directly below **Prfl** to access the **Profiles** feature screen.
- 3 U or D to scroll through the menu selections.
- 4 Press the **Menu Select** button directly below **Sel** to select the required radio profile.

- OR**  
Press the **Menu Select** button directly below **Exit** to exit the screen without making any changes.

- 5 The radio returns to the Home screen. The profile name on the Home screen indicates the current selected radio profile.

#### **Enabling and Disabling the Radio Alias**

This feature allows you to display or hide the radio alias (name).

#### **Procedure:**

- 1 Press the **Menu Select** button directly below **MyID**.
- 2 The display shows momentary **Radio ID off**, and the radio alias disappears from the Home screen.  
**OR**  
The display shows momentary **Radio ID on**, and the radio alias appears on the Home screen.

### **Selecting the Audio Speaker**

This feature allows you to select the speaker route for the radio's audio from either the main or the secondary speaker using the radio profile settings.

**Note:** Your radio must be preprogrammed to allow you to use this feature.

While both speakers function together with the secondary speaker enhancing intelligibility of the received audio during typical radio operation, each speaker has an independently-tuned frequency response and volume level operation.

The secondary speaker also has a "whisper" mode with a modified volume taper for quieter modes of operation.

**Note:** If an external speaker or microphone accessory is attached to the radio, neither internal speaker is operational as audio is routed to the accessory.

#### **Procedure:**

Use the preprogrammed **Profile** button and proceed to Step 3.

**OR**

Follow the procedure below.

**1** < or > to **Prfl.**

**2** Press the **Menu Select** button directly below **Prfl** to access the **Profiles** feature screen.

**3** U or D to scroll through the menu selections.

**4** Press the **Menu Select** button directly below **Sel** to select the radio profile with the required speaker routing.

**OR**

Press the **Menu Select** button directly below **Exit** to exit the screen without making any changes.

**5** The radio returns to the Home screen. The profile name on the Home screen indicates the current selected radio profile.

### **Controlling the Display Backlight**

You can enable or disable the radio's display backlight as needed, if poor light conditions make the display or keypad difficult to read.

Depending on how your radio is preprogrammed, you can also maintain a minimum backlight level on the radio's front display.

**Note:** The backlight setting also affects the Menu Select buttons, the Menu Navigation buttons and the keypad backlighting accordingly.

#### **Procedure:**

Press the preprogrammed **Light/Flip** button to toggle the backlight on or off.

**OR**

Press any key of the keypad, the Menu Select or Menu Navigation buttons, or any programmable radio controls or buttons to turn the backlight on.

## Advanced Features

**Note:** The backlight remains on for a preprogrammed time before it automatically turns off completely or returns to the minimum backlight level.

The preprogrammed Light/Flip button of the accessories connected to the radio such as Display Remote Speaker Microphone (DRSM) is disabled when the radio is in Night Vision Goggles (NVG) display mode.

### Setting Up the Radio Display and Visual Indicators to Suite Night Vision Goggles

During tactical nighttime operations of military entities worldwide, the Night Vision Goggles (NVG) is used to see in the dark. Your radio is 3rd generation NVG compatible. When the radio is in NVG display mode, the radio's front display and top display emit a very low illumination backlight to allow the user to operate the radio with the goggles on.

**REMOVE** your **NVG** if you operate the radio in non-NVG compatible display mode.



**Caution** Wearing the NVG to operate in non-NVG compatible display mode might injure your EYES.

Accessory connected to the radio that is in NVG display mode such as Display Remote Speaker Microphone (DRSM) has its backlight always in OFF state.

Intelligent lighting indicators, TX LED and RX LED are all disabled on both the radio and the connected accessory when the radio is in NVG display mode.

**Get familiar with your radio NVG feature and operation before you use it with your Night Vision Goggles.**

**Procedure:**

Use the preprogrammed Profile button and proceed to Step 3.

**OR**

Follow the procedure below.

- 1** < or > to **Prfl.**
- 2** Press the **Menu Select** button directly below **Prfl** to access the **Profiles** screen.
- 3** U or D to the designated NVG profile.
- 4** Press the **Menu Select** button directly below **Sel** to select the required radio profile.

**OR**

Press the **Menu Select** button directly below **Exit** to exit the screen without making any changes.

- 5** The radio returns to the **Home** screen with NVG display mode. The profile name on the **Home** screen indicates the current selected radio profile.



**Locking and Unlocking the Keypad and Controls**

You can lock your radio's keypad, programmable buttons, rotary knobs and switches to avoid inadvertent entry. Check with your dealer or qualified technician for best selection to suite your usage.

**Procedure:**

- 1** Toggle the preprogrammed **Keypad Lock** button or switch to on.
- 2** The display shows **Kypd/Ctrl Lock**.
- 3** Toggle again to unlock the keypad.

### Turning Keypad Tones On or Off

You can enable and disable keypad tones, if needed.

**Procedure:**

Press the preprogrammed **Keypad Mute** button to turn the tones off or on.

**OR**

Follow the procedure below.

- 1 < or > to **Mute**.
- 2 Press the **Menu Select** button directly below **Mute**.
- 3 The display shows momentary **Tones off**, indicating that the keypad tones are disabled.  
**OR**  
The display shows momentary **Tones on**, and you hear a short tone indicating that the keypad tones are enabled.

### Turning Voice Mute On or Off

You can enable and disable voice transmission, if needed.

**Procedure:**

Press the preprogrammed **Voice Mute** button to turn the feature off or on.

**OR**

Follow the procedure below.

- 1 < or > to **VMut**.
- 2 Press the **Menu Select** button directly below **VMut**.
- 3 The display shows momentary **Voice mute off**, and you hear a short tone, indicating that the feature is disabled.  
**OR**  
The display shows momentary **Voice mute on**, and you hear a short tone, indicating that the feature is enabled.

## Advanced Features

### Using the Time-Out Timer

This feature turns off your radio's transmitter. You cannot transmit longer than the preset timer setting.

If you attempt to do so, the radio automatically stops your transmission, and you hear a talk-prohibit tone.

The timer is defaulted at 60 seconds, but it can be preprogrammed from 3 to 120 seconds, in 15-second intervals, or it can be disabled entirely for each radio mode, by a qualified radio technician.

**Note:** You will hear a brief, low-pitched, warning tone four seconds before the transmission times out.

#### **Procedure:**

- 1 Hold down the **PTT** button longer than the preprogrammed time. You hear a short, low-pitched warning tone, the transmission is cut-off, and the LED goes out until you release the **PTT** button.
- 2 Release the **PTT** button. The timer resets.
- 3 Press the **PTT** button to re-transmit. The time-out timer restarts and the LED lights up solid red.

### Setting the Time and Date

You can set the time and date for your radio.

#### **Settings:**

- The default time setting is a 12-hour clock. The display shows 12:00AM.
- The AM/PM selection is not available for the 24-hour clock setting.
- The default setting for the domestic date shows **MDY**.

**Note:** Check with your dealer or system administrator for additional programmable settings for this feature.

### Editing the Time and Date

#### **Procedure:**

- 1 < or > to Click.
- 2 Press the **Menu Select** button directly below **Click**. The display shows the current setting of the radio.
- 3 Press the **Menu Select** button directly below **Edit**. The first item blinks.
- 4 U or D to change the selected item.  
**OR**  
< or > one or more times to move to an item you wish to change.  
U or D to change the selected item.

**OR** Press the **Menu Select** button directly below **Exit** to exit the screen without making any changes and return to the Home screen.

**5** Press the **Menu Select** button directly below **Ok** once you have finished to save your changes and return to the Home screen.

**OR** Press the **Menu Select** button directly below **Cncl** to discard all changes and return to the Home screen.

Press **H** at any time to return to the Home screen without saving your changes.

**Note:** If a call arrives while the radio is in the clock-setting menu, the radio exits clock setting and displays the call information. Any changes made before the call is **NOT** saved.

**Using the Conventional Squelch Operation Features**

This feature filters out unwanted calls with low signal strength or channels that have a higher than normal background noise.

**Analog Options**

Tone Private Line (PL), Digital Private-Line (DPL), and carrier squelch can be available (preprogrammed) per channel.

Mode	Result
Carrier squelch (C)	You hear all traffic on a channel.
PL or DPL	The radio responds only to your messages.

**Digital Options**

One or more of the following options may be preprogrammed in your radio. Check with your dealer or system administrator for more information.

Option	Result
Digital Carrier-Operated Squelch (COS)	You hear any digital traffic.
Normal Squelch	You hear any digital traffic having the correct network access code.



Option	Result
Selective Switch	You hear any digital traffic having the correct network access code and correct talkgroup.

### Using the PL Defeat Feature

This feature allows you to override any coded squelch (DPL or PL) that might be preprogrammed to a channel. The radio will also unmute to any digital activity on a digital channel.

#### **Procedure:**

Place the preprogrammed **PL Defeat** switch in the PL Defeat position. You hear any activity on the channel.

#### **OR**

The radio is muted if no activity is present.

**Note:** When this feature is active, the Carrier Squelch status indicator is displayed.

### Using the Digital PTT ID Feature

This feature allows you to see the radio ID (number) of the radio from whom you are currently receiving a transmission. This ID, consisting up to a maximum of eight characters, can be viewed by both the receiving radio and the dispatcher.

Your radio's ID number is also automatically sent every time the PTT button is pressed. This is a per-channel feature. For digital voice transmissions, your radio's ID is sent continuously during the voice message.

### Using the Smart PTT Feature (Conventional Only)

Smart **PTT** is a per-personality, programmable feature used in conventional radio systems to keep radio users from talking over other radio conversations.

When smart **PTT** is enabled in your radio, you cannot transmit on an active channel.

If you try to transmit on an active smart-**PTT** channel, you hear an alert tone, and the transmission is inhibited. The LED lights up solid yellow to indicate that the channel is busy.

## Advanced Features

Three variations of smart **PTT** are available:

Mode	Description
Transmit Inhibit on Busy Channel with Carrier	You cannot transmit if any traffic is detected on the channel.
Transmit Inhibit on Busy Channel with Wrong Squelch Code	You cannot transmit on an active channel with a squelch code or (if secure-equipped) encryption key other than your own. If the PL code is the same as yours, the transmission is not prevented.
Quick-Key Override	This feature can work in conjunction with either of the two above variations. You can override the transmit-inhibit state by quick-keying the radio. In other words, two <b>PTT</b> button presses within the preprogrammed time limit.

### **IMPRES™ Battery Annunciator**

This feature displays the current capacity and charges cycles of your battery when an IMPRES Battery is powering your radio. This feature must be enabled in your radio to see the information.

The information shown are:

- **Rated Capacity** – Percentage of current battery capacity.
- **Remaining Capacity** – Remaining power of the battery in mAh.
- **Estimated Charges** – Number of charges cycles the battery has gone through.

### **Accessing the Battery Info screen**

#### **Procedure:**

Use the Options Menu.

- 1** < or > to **Batt.**
- 2** Press the **Menu Select** button directly below **Batt.** The display shows the details of the battery.
- 3** Press the **Menu Select** button directly below **Exit** to return to the Home screen.

### Accessing the General Radio Information

Your radio contains information on the following:

- Radio Information
- IP Display
- Control Assignments
- Soft ID (If Enabled)

**Note:** The radio automatically exits the feature, if the feature inactivity timer is enabled, when the radio is left idle and the timer expires. You will hear the Menu Inactive Exit Tone upon feature exit.

### Accessing the Radio Information

This feature displays the following information of your radio:

- Host Version
- Secure Version
- Model Number
- ESN
- Flash Code
- Tuning Version
- Option Board Type (optional)
- Option Board Bluetooth Address (optional)
- Expansion Board Type (optional)
- IMEI (APX 7000L only)
- ICCID (APX 7000L only)
- DSP Version
- KG (Secure Algorithm)
- Serial Number
- Flash Size & Type
- RF Band
- Processor Version
- Option Board Serial Number (optional)
- Option Board Software Version (optional)
- Language Pack ID and Version (only when the language of the display is set to non-English)
- IMSI (APX 7000L only)

**Note:** Press **H** at any time to return to the Home screen.

## Advanced Features

**Procedure:**  
Press the preprogrammed **Info** button and proceed to Step 3.

**OR**

Follow the procedure below.

- 1 < or > to **Info**.

---

  - 2 Press the **Menu Select** button directly below **Info**.

---

  - 3 U or D to **Radio Info** and press the **Menu Select** button directly below **Sel**.

---

  - 4 The display shows the Information screen.

---

  - 5 U or D to scroll through the various information.
- OR**
- Press the **Menu Select** button directly below **Back** to return to the previous screen.
- OR**
- Press H to return to the Home screen.

 **Viewing the IP Information**

This feature displays the device name, IP address, and status of your radio.

APX 7000L radio has different list of information as shown in the following.

- iosu
- iosc
- LOOPBACK
- lte1

- vpn1
- device name

**Note:** The device name of your radio is preprogrammed. Check with your dealer or system administrator for more information.

**Procedure:**

Press the preprogrammed **Info** button and proceed to Step 3.

**OR**

Follow the procedure below.

- 1 < or > to **Info**.

---

  - 2 Press the **Menu Select** button directly below **Info**.

---

  - 3 U or D to **IP Info** and press the **Menu Select** button directly below **Sel**.

---

  - 4 The display shows the IP Info screen.

---

  - 5 U or D to scroll through the various information.
- OR**
- Press the **Menu Select** button directly below **Back** to return to the previous screen.
- OR**
- Press H to return to the Home screen.

### Viewing the Control Assignments

This feature displays the programmable radio functions assigned to the controls of your radio for the currently selected channel.

See **Programmable Features** on page 11 for more information on the various programmable features of your radio.

#### **Procedure:**

Press the preprogrammed **Info** button and proceed to Step 3.

#### **OR**

Follow the procedure below.

- 1 < or > to **Info**.
- 2 Press the **Menu Select** button directly below **Info**.
- 3 U or D to **Control map** and press the **Menu Select** button directly below **Sel**.
- 4 The display shows the Control Map screen.
- 5 U or D to scroll through the various information.  
**OR**  
Press the **Menu Select** button directly below **Back** to return to the previous screen.  
**OR**  
Press **H** to return to the Home screen.

### Editing the Soft ID

This feature allows you to change your username.

**Note:** Your radio must be preprogrammed to allow you to use this feature.

#### **Procedure:**

Press the preprogrammed **Info** button and proceed to Step 3.

#### **OR**

Follow the procedure below.

- 1 < or > to **Info**.
- 2 Press the **Menu Select** button directly below **Info**.
- 3 U or D to **Soft ID** and press the **Menu Select** button directly below **Sel**.
- 4 The display shows the current Soft ID.
- 5 Press the **Menu Select** button directly below **Edit** to edit the current Soft ID.  
**OR**  
Press the **Menu Select** button directly below **Back** to return to the previous screen.
- 6 A blinking cursor appears in the **Edit Soft ID** screen.  
Use the keypad to edit the text.  
Press < to move one space to the left.  
Press > to move one space to the right.

## Advanced Features

Press the **Menu Select** button directly below **Del** to delete any unwanted characters.

Press **\*** to add a space.

Press **O** to toggle between mixed case mode, uppercase mode, and lowercase mode.

Press **#** to toggle between numeric and letter mode.

---

**7** Press the **Menu Select** button directly below **Ok** to save the new Soft ID and return to the previous screen.

**OR**

Press the **Menu Select** button directly below **Cncl** to return to the previous screen.


---

## Helpful Tips

Take a moment to review the following:

Caring for Your Radio	page 161
Cleaning Your Radio	page 162
Handling Your Radio	page 163
Servicing Your Radio	page 163
Taking Care of the Battery	page 164
Checking the Battery Charge Status	page 164
Battery Recycling and Disposal	page 165

## Caring for Your Radio

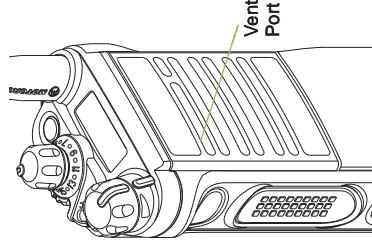

- Your radio casing has a vent port that allows for pressure equalization in the radio. Never poke this vent with any objects, such as needles, tweezers, or screwdrivers. This could create leak paths into the radio and the radio's submergibility will be lost.



### Caution

- (For APX 7000/APX7000L R Radios Only)** Your radio is designed to be submerged to a maximum depth of 6 feet, with a maximum submersion time of 2 hours. Exceeding either maximum limit may result in damage to the radio.



### Caution

- **(For APX 7000/APX 7000L R Radios Only)**  
Elastomer technology materials used for seals in rugged portable radios can age with time and environmental exposure. Therefore, Motorola recommends that rugged radios be checked annually as a preventive measure in order to assure the watertight integrity of the radio. Motorola details the disassembly, test, and reassembly procedures along with necessary test equipment needed to inspect, maintain and troubleshoot radio seals in the radio's service manual.
- If the radio battery contact area has been submerged in water, dry and clean the radio battery contacts before attaching a battery to the radio. Otherwise, the water could short-circuit the radio.
- If the radio has been submerged in water, shake the radio well so that any water that may be trapped inside the speaker grille and microphone port can be removed. Otherwise, the water will decrease the audio quality of the radio.
- Do not disassemble the radio. This could damage radio seals and result in leak paths into the radio. Any radio maintenance should be performed only by a qualified radio technician.

## Cleaning Your Radio

### Procedure:

To clean the external surfaces of your radio:

- 1 Combine one teaspoon of mild dishwashing detergent to one gallon of water (0.5% solution).
- 2 Apply the solution sparingly with a stiff, non-metallic, short-bristled brush, making sure excess detergent does not get entrapped near the connectors, controls or crevices. Dry the radio thoroughly with a soft, lint-free cloth.
- 3 Clean battery contacts with a lint-free cloth to remove dirt or grease.



### Caution

- Do not use solvents to clean your radio as most chemicals may permanently damage the radio housing and textures.
- Do not submerge the radio in the detergent solution.



### Handling Your Radio

- Do not pound, drop, or throw the radio unnecessarily. Never carry the radio by the antenna.
- Avoid subjecting the radio to an excess of liquids. Do not submerge the radio unless it is a ruggedized, APX 7000/APX 7000L R model.
- Avoid subjecting the radio to corrosives, solvents or chemicals.
- Do not disassemble the radio.
- Keep the accessory-connector cover in place until ready to use the connector. Replace the cover immediately once the accessory has been disconnected.
- When charging the radio using a wall mounted charger, the radio must be turned off. Otherwise, the **Man Down Alert and Emergency** may be accidentally triggered.

### Servicing Your Radio

Proper repair and maintenance procedures will assure efficient operation and long life for this product. A Motorola maintenance agreement will provide expert service to keep this and all other communication equipment in perfect operating condition. A nationwide service organization is provided by Motorola to support maintenance services. Through its maintenance and installation program, Motorola makes available the finest service to those desiring reliable, continuous communications on a contract basis. For a contract service agreement, please contact your nearest Motorola service or sales representative, or an authorized Motorola dealer.

Express Service Plus (ESP) is an optional extended service coverage plan, which provides for the repair of this product for an additional period of either one or two years beyond the normal expiration date of the standard warranty. For more information about ESP, contact the Motorola Radio Support Center at 3761 South Central Avenue, Rockford, IL 61102 (800) 227-6772 / (847) 725-4200.

## Helpful Tips

## ■ Taking Care of the Battery

### 📄 Checking the Battery Charge Status

Your radio can indicate the battery's charge status through:

- the LED and sounds.
- the fuel gauge icon on the display.


You can also check the battery charge status via the menu entry. See **IMPRES™ Battery Annunciator** on page 156 for more information.




### 📄 LED and Sounds



When your battery is low:

- the LED blinks red when the **PTT** button is pressed.
- you hear a low-battery “chirp” (short, high-pitched tone).

### 📄 Fuel Gauge Icon

A blinking fuel gauge icon (  ) is displayed only when the battery voltage drops to low level. In this case, replace the battery with a fully charged one.

Gauge	Battery Charge
 Top Display	76% to 100% full*
 Top Display	51% to 75%*
 Top Display	26% to 50%*

Gauge	Battery Charge (Continued)
 Top Display	11% to 25%*
 Top Display	10% or less (at 10%, the gauge begins blinking)

\*These are for IMPRES battery operation only.

### Battery Recycling and Disposal

In the U.S. and Canada, Motorola participates in the nationwide Rechargeable Battery Recycling Corporation (RBRC) program for battery collection and recycling. Many retailers and dealers participate in this program.

For the of the drop-off facility closest to you, access RBRC's Internet web site at [www.rbrc.com](http://www.rbrc.com) or call 1-800-8-BATTERY. This internet site and telephone number also provide other useful information concerning recycling options for consumers, businesses, and governmental agencies.

## Helpful Tips

## Accessories

The accessory link below is for APX radios. Not all accessories are FCC certified to operate with all APX models and/or bandsplits. Please refer to the specific APX radio price pages for a list of FCC certified accessories or contact your sales representative for accessory compatibility.

<http://www.motorolasolutions.com/APX>

## Highlights for the Accessories

- 1 **GPS only antenna** is only used in either a single band UHF or 700/800 application where the Public Safety Microphone (PSM) is used with the corresponding PSM antenna. This antenna is only for GPS reception and cannot be used for receive/transmit operation at UHF, VHF or 700/800. This antenna is never to be used on the PSM.

## Appendix: Maritime Radio Use in the VHF Frequency Range

Take a moment to review the following:

Special Channel Assignments . . . . .	page 167
Operating Frequency Requirements . . . . .	page 168
Declaration of Compliance for the User of Distress and Safety Frequencies . . . . .	page 170

### Special Channel Assignments

#### Emergency Channel

If you are in imminent and grave danger at sea and require emergency assistance, use **VHF Channel 16** to send a distress call to nearby vessels and the United States Coast Guard. Transmit the following information, in this order:

- 1 "MAYDAY, MAYDAY, MAYDAY."
- 2 "THIS IS \_\_\_\_\_, CALL SIGN \_\_\_\_\_."

State the name of the vessel in distress **3 times**, followed by the call sign or other identification of the vessel, stated **3 times**.

- 3 Repeat "MAYDAY" and the name of the vessel.
- 4 "WE ARE LOCATED AT \_\_\_\_\_."

State the position of the vessel in distress, using any information that will help responders to locate you, e.g.:

- latitude and longitude
  - bearing (state whether you are using true or magnetic north)
  - distance to a well-known landmark
  - vessel course, speed or destination
- 5 State the nature of the distress.
  - 6 Specify what kind of assistance you need.
  - 7 State the number of persons on board and the number needing medical attention, if any.
  - 8 Mention any other information that would be helpful to responders, such as type of vessel, vessel length and/or tonnage, hull color, etc.
  - 9 "OVER."
  - 10 Wait for a response.
  - 11 If you do not receive an immediate response, remain by the radio and repeat the transmission at intervals until you receive a response. Be prepared to follow any instructions given to you.

#### Non-Commercial Call Channel

For non-commercial transmissions, such as fishing reports, rendezvous arrangements, repair scheduling, or berthing information, use VHF Channel 9.

### ■ Operating Frequency Requirements

A radio designated for shipboard use must comply with Federal Communications Commission Rule Part 80 as follows:

- on ships subject to Part II of Title III of the Communications Act, the radio must be capable of operating on the 156.800 MHz frequency
- on ships subject to the Safety Convention, the radio must be capable of operating:
  - in the simplex mode on the ship station transmitting frequencies specified in the 156.025 – 157.425 MHz frequency band, and
  - in the semiduplex mode on the two frequency channels specified in the table below.

**Note:** Simplex channels 3, 21, 23, 61, 64, 81, 82, and 83 cannot be lawfully used by the general public in US waters.

Additional information about operating requirements in the Maritime Services can be obtained from the full text of FCC Rule Part 80 and from the US Coast Guard.

**Table A-1: VHF Marine Channel List**

Channel Number	Frequency (MHz)	
	Transmit	Receive
1	156.050	160.650
2	156.100	160.700

**Table A-1: VHF Marine Channel List (Continued)**

Channel Number	Frequency (MHz)	
	Transmit	Receive
*	156.150	160.750
4	156.200	160.800
5	156.250	160.850
6	156.300	–
7	156.350	160.950
8	156.400	–
9	156.450	156.450
10	156.500	156.500
11	156.550	156.550
12	156.600	156.600
13**	156.650	156.650
14	156.700	156.700
15**	156.750	156.750
16	156.800	156.800
17**	156.850	156.850
18	156.900	161.500
19	156.950	161.550
20	157.000	161.600
*	157.050	161.650
22	157.100	161.700

Table A-1: VHF Marine Channel List (Continued)

Channel Number	Frequency (MHz)	
	Transmit	Receive
*	157.150	161.750
24	157.200	161.800
25	157.250	161.850
26	157.300	161.900
27	157.350	161.950
28	157.400	162.000
60	156.025	160.625
*	156.075	160.675
62	156.125	160.725
63	156.175	160.775
*	156.225	160.825
65	156.275	160.875
66	156.325	160.925
67**	156.375	156.375
68	156.425	156.425
69	156.475	156.475
71	156.575	156.575
72	156.625	—
73	156.675	156.675
74	156.725	156.725

Table A-1: VHF Marine Channel List (Continued)

Channel Number	Frequency (MHz)	
	Transmit	Receive
75	***	***
76	***	***
77**	156.875	—
78	156.925	161.525
79	156.975	161.575
80	157.025	161.625
*	157.075	161.675
*	157.125	161.725
*	157.175	161.775
84	157.225	161.825
85	157.275	161.875
86	157.325	161.925
87	157.375	161.975
88	157.425	162.025

\* Simplex channels 3, 21, 23, 61, 64, 81, 82, and 83 **cannot be lawfully used** by the general public in US waters.

\*\* Low power (1 W) only

\*\*\* Guard band

**Note:** A — in the Receive column indicates that the channel is transmit only.

**Declaration of Compliance for the User of Distress and Safety Frequencies**

The radio equipment does not employ a modulation other than the internationally adopted modulation for maritime use when it operates on the distress and safety frequencies specified in RSS-182 Section 6.1.

**Table A-2: Technical Parameters for Interfacing External Data sources**

	<b>RS232</b>	<b>USB</b>	<b>SB9600</b>
<b>Input Voltage (Volts Peak-to-peak)</b>	18 V	3.6 V	5 V
<b>Max Data Rate</b>	28 kb/s	12 Mb/s	9.6 kb/s
<b>Impedance</b>	5k Ohm	90 Ohm	120 Ohm



## Glossary

This glossary is a list of specialized terms used in this manual.

Term	Definition
<b>ACK</b>	Acknowledgment of communication.
<b>Active Channel</b>	A channel that has traffic on it.
<b>Analog Signal</b>	An RF signal that has a continuous nature rather than a pulsed or discrete nature.
<b>ARS</b>	Automatic Registration Service
<b>ASTRO 25</b>	Motorola standard for wireless digital trunked communications.
<b>ASTRO Conventional</b>	Motorola standard for wireless digital conventional communications.
<b>Autoscan</b>	A feature that allows the radio to automatically scan the members of a scan list.
<b>Bluetooth</b>	Bluetooth is an open wireless technology standard for exchanging data over short distances from fixed and mobile devices with high levels of security.

## Glossary

Term	Definition
<b>Bluetooth Pairing</b>	Bluetooth pairing occurs when two bluetooth devices exchanged a passkey to form a paired Bluetooth wireless connector.
<b>Call Alert</b>	Privately page an individual by sending an audible tone.
<b>Carrier Squelch</b>	Feature that responds to the presence of an RF carrier by opening or unmuting (turning on) a receiver's audio circuit. A squelch circuit silences the radio when no signal is being received so that the user does not have to listen to "noise".
<b>Central Controller</b>	A software-controlled, computer-driven device that receives and generates data for the trunked radios assigned to it. It monitors and directs the operations of the trunked repeaters.
<b>Channel</b>	A group of characteristics such as transmit/receive frequency pairs, radio parameters, and encryption encoding.
<b>Control Channel</b>	In a trunking system, one of the channels that is used to provide a continuous, two-way/data communications path between the central controller and all radios on the system.

Term	Definition
<b>Conventional</b>	Typically refers to radio-to-radio communications, sometimes through a repeater (see Trunking).
<b>Conventional Scan List</b>	A scan list that includes only conventional channels.
<b>COTS</b>	Commercial Off-The-Shelf
<b>CP</b>	Codeplug
<b>Cursor</b>	A visual tracking marker (a blinking line) that indicates a on the display.
<b>Deadlock</b>	Displayed by the radio after three failed attempts to unlock the radio. The radio must be powered off and on prior to another attempt.
<b>Digital Private Line (DPL)</b>	A type of coded squelch using data bursts. Similar to PL except a digital code is used instead of a tone.
<b>Digital Signal</b>	An RF signal that has a pulsed, or discrete, nature, rather than a continuous nature.
<b>Dispatcher</b>	An individual who has radio system management duties.
<b>DSP</b>	Digital Signal Processing

Term	Definition
<b>Dynamic Regrouping</b>	A feature that allows the dispatcher to temporarily reassign selected radios to a single special channel so they can communicate with each other.
<b>DSR</b>	Dynamic System Resilience
<b>EID</b>	Encrypted Integrated Data
<b>ESN</b>	Electrical Serial Number
<b>Failsoft</b>	A feature that allows communications to take place even though the central controller has failed. Each trunked repeater in the system transmits a data word informing every radio that the system has gone into failsoft.
<b>FCC</b>	Federal Communications Commission.
<b>FM</b>	Frequency Modulation
<b>Hang Up</b>	Disconnect.
<b>Home screen</b>	The first display information after the radio completes its self test.
<b>ICCID</b>	Integrate Circuit Card Identity
<b>IMEI</b>	International Mobile Equipment Identifier
<b>IMSI</b>	International Mobile Subscriber Identity
<b>losu</b>	Inter-OS User for user IP traffic

## Glossary

Term	Definition	Term	Definition
<b>iosc</b>	Inter-OS Control for control IP traffic	<b>MDC</b>	Motorola Data Communication
<b>Ite1</b>	Adapter name used by the radio for LTE traffic	<b>Menu Entry</b>	A software-activated feature shown at the bottom of the display – selection of these features is controlled by the { ,   , and } buttons.
<b>IV &amp; D</b>	Integrated Voice and Data	<b>Monitor</b>	Check channel activity by pressing the Monitor button. If the channel is clear, you hear static. If the channel is in use, you hear conversation. It also serves as a way to check the volume level of the radio, since the radio “opens the squelch” when the monitor button is pressed.
<b>KVL</b>	Key-variable loader: A device for loading encryption keys into the radio.	<b>Multi-System Talkgroup Scan List</b>	A scan list that can include both talkgroups (trunked) and channels (conventional).
<b>LCD</b>	Liquid crystal display.	<b>Network Access Code</b>	Network Access Code (NAC) operates on digital channels to reduce voice channel interference between adjacent systems and sites.
<b>LED</b>	Light-emitting diode.	<b>NiMH</b>	Nickel-metal-hydride.
<b>Li-Ion</b>	Lithium ion.	<b>Non-Tactical/Revert</b>	The user talks on a preprogrammed emergency channel. The emergency alarm is sent out on this same channel.
<b>LTE</b>	Long Term Evolution (telecommunication). LTE is a standard for wireless communication of high-speed data for mobile phones and data terminals.	<b>OCW</b>	Operation Critical Wireless
<b>Man Down</b>	A life-saving feature that senses the radio user may be in trouble by monitoring the whether the radio is in a vertical or horizontal position or whether the radio is motionless. When this feature is triggered, the radio alerts the user with audio and visual alerts. It can also trigger Emergency Alarm the Post-Alert Timer is not cancelled.		
<b>MCW</b>	Mission Critical Wireless		

Term	Definition
<b>OTAR</b>	Over-the-air rekeying.
<b>Page</b>	A one-way alert, with audio and/or display messages.
<b>Personality</b>	A set of unique features specific to a radio.
<b>PIN</b>	Personal Identification Number
<b>PremierOne</b>	A software application which streamlines critical real time operations and simplifies system administration to deliver accurate, consistent and integrated information remotely to the requestors.
<b>Preprogrammed</b>	Refers to a software feature that has been activated by a qualified radio technician.
<b>Private (Conversation) Call</b>	A feature that lets you have a private conversation with another radio user in the talkgroup.
<b>Private Line (PL)</b>	A sub-audible tone that is transmitted such that only receivers decoding the tone receives it.
<b>Programmable</b>	Refers to a radio control that can have a radio feature assigned to it.
<b>PTT</b>	Push-To-Talk – the <b>PTT button</b> engages the transmitter and puts the radio in transmit (send) operation when pressed.

Term	Definition
<b>Radio Frequency (RF)</b>	The part of the general frequency spectrum between the audio and infrared light regions (about 10 kHz to 10,000,000 MHz).
<b>Repeater</b>	A conventional radio feature, where you talk through a receiver/transmit facility that re-transmits received signals, in order to improve communications range and coverage.
<b>Selective Call</b>	A feature that allows you to call a select individual, intended to provide privacy and to eliminate the annoyance of having to listen to conversations of no interest to you.
<b>Selective Switch</b>	Any digital P25 traffic having the correct Network Access Code and the correct talkgroup.
<b>Squelch</b>	Special electronic circuitry, added to the receiver of a radio, that reduces, or cuts off, unwanted signals before they are heard in the speaker.
<b>SSI</b>	Synchronous Serial Interface
<b>Standby</b>	An operating condition whereby the radio's speaker is muted but still continues to receive data.

## Glossary

Term	Definition
<b>Status Calls</b>	Pre-defined text messages that allow the user to send a conditional message without talking.
<b>Tactical/ Non-Revert</b>	The user talks on the channel that was selected before the radio entered the emergency state.
<b>Talkaround</b>	Bypass a repeater and talk directly to another unit for easy local unit-to-unit communications.
<b>Talkgroup</b>	An organization or group of radio users who communicate with each other using the same communication path.
<b>TMS</b>	Text Messaging Service
<b>Trunking</b>	The automatic sharing of communications paths between a large number of users (see Conventional).
<b>Trunking Priority Monitor Scan List</b>	A scan list that includes talkgroups that are all from the same trunking system.
<b>USK</b>	Unique Shadow Key.
<b>UTC</b>	Coordinated Universal Time. The international time standard (formerly Greenwich Mean Time, or GMT). Zero hours UTC is midnight in Greenwich, England, which is located at 0 degrees longitude. Everything east of Greenwich (up to 180 degrees) is later in time; everything west is earlier. There are 42 time authorities around the world that are constantly synchronizing with each other. Abbreviated as UTC (English backronym = Universal Time, Coordinated), it is also known as Zulu (Z) Time.
<b>vpn1</b>	Adapter name used by the radio for encrypted LTE traffic
<b>Zone</b>	A grouping of channels.

## Commercial Warranty

### Limited Warranty

#### MOTOROLA COMMUNICATION PRODUCTS

##### I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA SOLUTIONS INC. ("MOTOROLA") warrants the MOTOROLA manufactured Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

ASTRO APX 7000/APX 7000L Portable Units	One (1) Year
Product Accessories	One (1) Year

MOTOROLA, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or

transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA.

Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

##### II. GENERAL PROVISIONS:

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at MOTOROLA'S option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES OF INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR

CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

### III. STATE LAW RIGHTS:

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

### IV. HOW TO GET WARRANTY SERVICE:

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service . Warranty service will be provided by MOTOROLA through one of its authorized warranty service s. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service. You can also call MOTOROLA at 1-800-927-2744 US/Canada.

### V. WHAT THIS WARRANTY DOES NOT COVER:

- A) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- B) Defects or damage from misuse, accident, water, or neglect.

- C) Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- D) Breakage or damage to antennas unless caused directly by defects in material workmanship.

E) A Product subjected to unauthorized Product modifications, disassembles or repairs (including, without limitation, the addition to the Product of non-MOTOROLA supplied equipment) which adversely affect performance of the Product or interfere with MOTOROLA's normal warranty inspection and testing of the Product to verify any warranty claim.

F) Product which has had the serial number removed or made illegible.

G) Rechargeable batteries if:

- (1) any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
- (2) the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.

H) Freight costs to the repair depot.

I) A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA's published specifications or the FCC certification labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.

J) Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.

K) Normal and customary wear and tear.

## VI. PATENT AND SOFTWARE PROVISIONS:

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- A) that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- B) that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- C) should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product. The foregoing states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

## VII. GOVERNING LAW:

This Warranty is governed by the laws of the State of Illinois, U.S.A.



## Commercial Warranty

### VIII. FOR AUSTRALIA ONLY:

This warranty is given by Motorola Solutions Australia Pty Limited (ABN 16 004 742 312) of Tally Ho Business Park, 10 Wesley Court, Burwood East, Victoria.

Our goods come with guarantees that cannot be excluded under the Australia Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Motorola Solutions Australia's limited warranty below is in addition to any rights and remedies you may have under the Australian Consumer Law. If you have any queries, please call Motorola Solutions Australia at 1800 457 439. You may also visit our website: [http://www.motorolasolutions.com/XA-EN/Pages/Contact\\_Us](http://www.motorolasolutions.com/XA-EN/Pages/Contact_Us) for the most updated warranty terms.

Commercial Warranty

180

English

Notes



Motorola Solutions, Inc.  
1303 East Algonquin Road  
Schaumburg, Illinois 60196, U.S.A.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and  
the Stylized M logo are trademarks or registered trademarks  
of Motorola Trademark Holdings, LLC and are used under license.  
All other trademarks are the property of their respective owners.

© 2009 – 2014 Motorola Solutions, Inc.  
All rights reserved.  
June 2014  
G3-4-100



6875945M01-M