



**MOTOROLA**

**US EN**

## DECT 6.0 Cordless / Corded Phones with Answering System

L702C / L703C / L704C /  
L705C / L706C

L702CM / L703CM /  
L704CM / L705CM /  
L706CM

# Quick Start Guide

- 1** Getting started
- 2** Using the phone
- 3** Help
- 4** General Information

This Quick Start Guide provides all the information you need to get started. If you need more detailed instructions, please go to [www.motorola.com](http://www.motorola.com) to download a PDF of this product's User's Guide.

Please consider the environment before printing.

## Box Contents



**Corded base and handset**



**Cordless handset**



**Cordless charger**



**Wall-mount bracket**



**NiMH rechargeable battery pack**



**Power adapter for the corded base**



**Power adapter for the cordless charger**



**Telephone line cords**



**User's Guide**



**Quick Start Guide**

***In multihandset packs, you will find one or more additional cordless handsets, cordless chargers with power adapter units, additional rechargeable battery packs, and battery doors.***


### ***IMPORTANT***

Only use the telephone line cord supplied.

Please note that only the Corded phone operates during power outage (with limited functions).

# 1 Getting started

## Step 1. Connecting the corded base

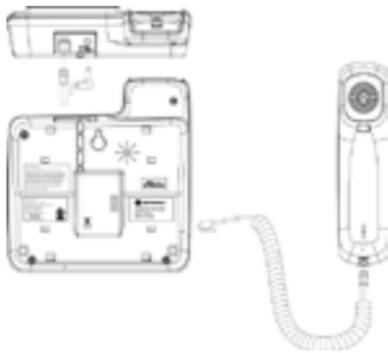

- Connect the corded handset to the corded base with the provided coiled cord.
- Plug the power adapter with the smaller pin plug & telephone line cord into the corded base.
- Plug the other end of the power adapter & telephone line cord into the wall jack.


### TIPS

Do not place your phone in the bathroom or other humid areas. Please refer to the User's Guide for more cautions regarding the location of your phone.

### IMPORTANT

Only use the power adapter and telephone line cord supplied with this product.

## Step 2. Installing and charging the cordless handset battery pack

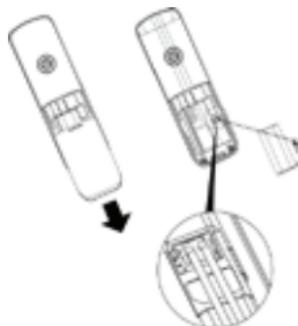

- Slide off the battery compartment cover to remove it. Place the supplied rechargeable battery pack in the battery compartment, with the battery connector plugged in, as shown.
- Slide the battery compartment cover back on.
- Put the cordless handset on the charger to charge for at least 24 hours. Once charged, the  will indicate that the handset is fully charged.

### IMPORTANT

Use only the rechargeable battery pack provided.

### **Step 3. Setting the display language**

For the corded base:

- Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **SETTINGS**.
- Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select **LANGUAGE**.
- Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to select the language you want.
- Press **MENU (Base)** to save.

For the cordless handset:

- Press **MENU** and then **VOL+ (Base)** or **REDIAL/VOL-** to select **SETUP HS**.
- Press **MENU** and then **VOL+ (Base)** or **REDIAL/VOL-** to select **LANGUAGE**.
- Press **MENU** and then **VOL+ (Base)** or **REDIAL/VOL-** to select the language you want.
- Press **MENU** to save.

### **Step 4. Setting date and time**

For the corded base:

- Press **MENU (Base)** to select **DATE & TIME**.
- Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to change the year setting.
- Press **MENU (Base)** and then **VOL+ (Base)** or **VOL-** to change the date setting. Repeat to set the time continuously.
- Press **MENU (Base)** to save the settings.

For the cordless handset:


- Press **MENU** to select **DATE & TIME**.
- Press **MENU** and then edit the year and date.
- Press **VOL+ (Base)** or **REDIAL/VOL-** to move between the input fields **YEAR** and **DATE**.
- Press **MENU** and then edit the time in 12hr format. Press **VOL+ (Base)** or **REDIAL/VOL-** to toggle **AM/PM** settings.
- Press **MENU** to save the settings.

#### **NOTE**

If you're a subscriber to your network's Caller ID service, date and time is automatically set when a call is received.

**Your phone is now ready for use.**

## Corded Base LCD Display

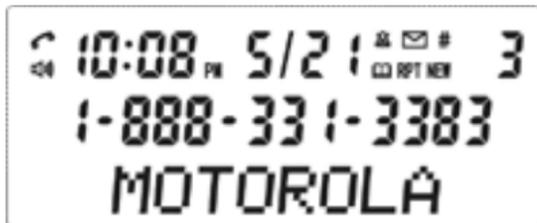

## Display Icons



On when the line is in use.



On when speakerphone is turned on.



In idle mode, the current time is displayed



In idle mode the current date is displayed



On when the ringer volume is turned off



On when there is new voice mail not yet listened to.  
Off when new voice mail has been listened to.



Indicates together with the sequential number of the calls list or redial list entry.



On when you are in the phonebook menu.



On when there are repeat calls from the same number.



Indicates when a new call has been received.  
Off when all new calls have been viewed.

## Cordless Handset LCD Display



## Display Icons



On when speakerphone is turned on.



On when answering machine is turned on.  
Flashes when new answering machine message is received.



Indicates when new call is received.  
Off when new call has been viewed.



On when ringer volume is turned off.



On when there is received new voice mail not yet listened to.  
Off when new voice mail has been listened to.

## MUTE

On when a call is muted.



Full battery power level.



2/3 battery power level.



1/3 battery power level.



Flashes when low battery level is detected, needs charging.



Animation in cycle. Battery is charging.



In idle mode, the current time is displayed.

In Caller ID mode, the time of call is displayed.



On when the line is in use.

Off when the line is idle.



In idle mode the current date is displayed.

In Caller ID mode, the date of the call is displayed.

# 2 Using the phone

US EN

## ***Making a call***

For the corded base:

Enter the phone number and pick up the corded handset or press to dial the number.

For the cordless handset:

Enter the phone number and press /FLASH or /SPEAKER to dial the phone number.

## ***Answering a call***

For the corded base:

Pick up the corded handset or press to answer the incoming home call.

For the cordless handset:

Press /FLASH or press /SPEAKER to answer the incoming home call.

### **Adjusting the volume**

During a call, press **VOL+** or **VOL-**. The same way for both corded base and cordless handset.

### **Ending a call**

For the corded base:

During either a home or cellular call, put the corded handset on the corded base cradle.

For the cordless handset:

During either a home or cellular call, press /BACK or put the handset on the charger.

### **Using your answering machine through the corded base:**

Please refer to the User's Guide for details.

### **through the cordless handset:**

1. Press /MUTE from idle mode. New messages will be played followed by any older messages.
2. During the message playback, press the keys below to perform the following functions:

 /1	Repeats the current message. Press twice to playback the previous message.
 /ABC/2	Stop the message playback.
 /DEF/3	Skip to play the next message.
<b>VOL+</b>	Increase the volume
<b>REDIAL/VOL-</b>	Decrease the volume.
 /MUTE	Delete the current message and the next message will be played.
 /SPEAKER	Toggle the message playback via earpiece/speakerphone.
 /BACK	Exit to idle.

### **NOTE**

For multiple handset models when you are on a call, the answering system will not answer the second incoming call.

# 3 Help

## **The icon is not scrolling when the cordless handset is placed on the charger**

- Incomplete battery contact - adjust the cordless handset on the charger.
- Dirty contact - clean the battery contact by wiping with an alcohol moistened cloth.
- Battery is full - charging is not necessary at this time.

## **No dial tone**

- If there is no base power, check the connections.
- Reset the phone by unplugging then plugging it back into an electrical outlet.
- If the cordless handset batteries are empty, recharge the battery pack for at least 24 hours.
- Move the cordless handset closer to the corded base.
- Be sure to use only the provided telephone cords.

## **Poor audio quality**

- If the corded base is too close to electrical appliances, reinforced concrete walls, or metal door frames, move the corded base from these areas.

## **No ring tone**

- The ring tone may be deactivated.
- The volume may need to be increased.

## **Caller ID does not work**

- Check your subscription with your network operator.
- If you subscribe to high-speed internet service (Digital Subscriber Line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

## **A phonebook entry cannot be stored**

- The phonebook is full. Delete an entry to free some memory.

## **No display**

- Try recharging or replacing the rechargeable battery pack.
- Reset the corded base. Unplug the unit from the electrical outlet, then plug it back in.
- If the LED is not lit up, then try to unplug the unit's electrical power, and then plug it back in.

### ***When the cordless handset disconnects from the corded base during a phone call***

- Check that the power cord is connected properly into the corded base.
- Check that the power adapter is connected properly into the electrical outlet.
- Move the cordless handset closer to the corded base. It may be out of range.
- Reset the corded base by unplugging the unit's electrical power. Wait for around 15 seconds and re-plug the power again. Allow up to one minute for the cordless handset to synchronize with the registered corded base again.

### ***Noise interference on your radio or television***

- Your corded base or cordless charger may be too close. Move it as far away as possible.

## **Need more help?**

For a full explanation of all features and instructions, please refer to the User's Guide.

# 4 General information

## If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Visit our website: [www.motorola.com](http://www.motorola.com)
3. Contact Customer Service in the US and Canada at 1-888-331-3383.

To order a replacement battery contact customer service or visit our website.



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2011 Motorola Mobility, Inc. All rights reserved.

Printed in China

Version 2.0