

WELCOME

Your MOTO GO! Flip makes life easier—with style.

- **Organization.** Stay ahead of your work and personal life with calendar and contacts.
- **Music.** Enjoy your favorite FM radio stations.
- **Photos.** Use your phone's camera to take photos and send them to your friends.

We've crammed all the main features of your phone into this handy guide, and in a matter of minutes we'll show you just how easy your phone is to use. You may be surprised at what you discover.

Note: Your phone may not appear exactly as the images in this guide.

Caution: Before assembling, charging, or using your phone for the first time, please read the important safety, regulatory and legal information provided with your product.

YOUR PHONE


- MicroUSB Connector**
Charge & connect to computer.
- Microphone**
- 3.5mm Headset Jack**
Listen to music or call handsfree. (Note that for some headsets with hang up buttons, the buttons will not work.)
- Camera Key**
Take photos & videos.
- Send Key**
Enter a number & press to call.
- Navigation Key**
Scroll up, down, left, or right.
- Soft Keys**
Perform function shown above the key.
- Back Key**
- Power/End Key**
Turn on/off & end calls.
- Center Key**
Press to select.

MESSAGES
Send an SMS or MMS

- 1 Press **Menu** > **Messages** > **Create Message**.
 - 2 Enter your message using the keypad.
- Tip:** Press **Options** > **Input Method** to switch text entry modes. Press * to enter a space.
- 3 To add pictures, sounds, or videos, press **Options**.
 - 4 Press **Options** > **Send to** to enter one or more recipients or to select a contact from your phonebook.

Read messages

When you receive a message, your phone plays an alert and displays at the top of the screen. Press **View** > to open the message.

Tip: You can read all messages in your inbox by pressing **Menu** > **Messages** > **Inbox**.

CALLS
Make calls

- 1 Enter a number and press **SEND**.

Answer calls

- 1 When your phone rings or vibrates, press **SEND**.

End a call

- 1 Press **POWER/END**.

Redial number

- 1 From the home screen, press **SEND** to see a list of **All Calls**.
- 2 Scroll to the entry you want and press **SEND**.

EMERGENCY CALLS & MORE
Emergency calls

- 1 To call an emergency number, enter the emergency number and press **SEND**.

Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Cool down

In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see "Cool Down" messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in "Cool Down" mode, only emergency calls can be made.

TIPS & TRICKS
Ring style

To quickly switch your ring style, press and hold from the home screen.

Voicemail

Press and hold **1**. If your voicemail number is preset, you will connect.

Lock your phone

Press **Menu** > **Settings** > **Security Settings** > **Phone Lock**, then enter a password to lock your phone. The code is originally set to **1122**.

To change your password, in the Security Settings menu, select **Change Password** > **Phone Password**.

Reset

To reset default factory settings on your phone, press **Main Menu** > **Settings** > **Reset Factory Settings**, then enter **1122**.

Caution: This option erases all your data and information.

MUSIC

Press **Menu** > **Tools** > **Music Player**

Controls

| function | |
|--------------------|-----------------------|
| play/pause | Press . |
| next/previous song | Press right or left. |
| volume | Press up or down. |

Tip: You can use other phone features when playing music, but games or radio turns the audio player off. If you receive a call while playing music, the player pauses automatically. Playing music resumes after you end the call.

MENU MAP

- Prepaid**
- My Folder**
- Settings**
 - User Profiles
 - Phone Settings
 - Call Settings
 - Network Settings
 - Security Settings
 - Reset Factory Settings
- Recent Calls**
 - Missed Calls
 - Dialed Calls
 - Received Calls
 - Delete
 - Call Duration
- Messages**
 - Create Message
 - Inbox
 - Drafts
 - Outbox
 - Sent
 - Delete
 - Email
 - Templates
 - Message Settings
- Tools**
 - Camera
 - Video Recorder
 - Music Player
 - Sound Recorder
 - FM Radio
 - Calendar
 - Tasks
 - Alarm
 - Calculator
 - Smart Chip Application
- Contacts**
- Games & Apps**
- Browser**

This is a standard menu layout. Your menu may be a little different.

LET'S GO

- 1 Cover off.
- 2 SIM in.
- 3 microSD in.
- 4 Battery in.
- 5 Cover on.
- 6 Charge up.

Caution: Please read "Battery Use & Safety" on the back of this guide.

BASICS
Turn it on & off

- 1 Press and hold **POWER/END** for a few seconds to turn the phone on/off.

Menu navigation

- 1 Press the left soft key to open the main menu.

- 2 Press the navigation key up, down, right or left to highlight a menu option.

- 3 Press to select the highlighted option.

PERSONALIZE
Set your wallpaper

Change the wallpaper to one that makes you smile. Press **Menu** > **Settings** > **Phone Settings** > **Display** > **Wallpaper**

Set ringtone & volume

Play it loud or keep it quiet, you choose.

Press **Menu** > **Settings** > **User Profiles**

Choose a profile. Press **Options** > **Customize** to edit a profile.

Set auto power

Choose when to receive calls and messages—really useful stuff.

Press **Menu** > **Settings** > **Phone Settings** > **Schedule Power On/Off**

CONTACTS
Save contacts

- 1 Enter the number on the home screen and press **Options** > **Save to Contacts**.
 - 2 Enter the contact details and press **Yes** to save.
- Tip:** Press **Menu** > **Contacts** > **Options** > **Phonebook Settings** > **Storage Location** to choose where to save your contacts (**SIM** and/or **Phone memory**).

Call contacts

- 1 Press **Menu** > **Contacts**
- 2 Press to scroll through the list to highlight the contact's number.
- 3 Press **SEND**.

PHOTOS & VIDEOS
Take photos & videos

- 1 To use the camera or video recorder, press **Menu** > **Tools** > **Camera** or **Video Recorder**.
- 2 Press to take your photo or to start/stop the video. Then to:
 - To **share** photos, press **Options** > **Send** > **Via Bluetooth** or **As Multimedia Message**.
 - To **save** the video, press .
 - To **delete** the photo, press **Options** > **Delete**
 - To **return to the viewfinder**, press **Back**.

To **transfer** photos or videos to/from your memory card, plug your USB cable into your phone & computer, then drag & drop files.

RADIO
Listen to the radio

- 1 Plug a wired headset into your phone.
- 2 Press **Menu** > **Tools** > **FM Radio**.

To tune to a station, press or press **Options** > **Auto Search**.

To adjust volume, press .

To turn off the radio, press **Options** > **Radio On(Off)**.

Store favorite stations

When listening to a station, press **Options** > **Channel List** to automatically search for and store local stations.

Press **Options** > **Channel List** to see your stored stations. Press keys **1** through **9** to select a stored station.

BLUETOOTH
Connect new devices

- 1 Make sure the device you are pairing with is in discoverable mode.
- 2 Press **Menu** > **Settings** > **Connectivity** > **Bluetooth** > **My Device** > **Search for All Devices**.
- 3 When your phone lists the devices it finds within range, select the device name > **Pair** to connect with it.
- 4 If necessary, press **Yes** and, if prompted, enter the device passkey (such as **0000**) to connect to the device.

To automatically reconnect/disconnect your phone with a paired device, just turn the device on/off.

To send a media file or contact, open the item that you want to transfer, then press **Options** > **Send** > **Via Bluetooth**.


WEB
Surf the web

Note: If you can't connect, contact your service provider. Use your phone's browser to surf your favorite websites. Press **Browser**.

- To go to your home page, select **Home**.
- To see your saved favorite sites, select **Bookmarks**.
- To view your history, select **Recent Pages**.
- To go to a webpage, select **Open URL**.
- To bookmark a page, select **Options** > **Add to Bookmarks**.

DISPLAY

The home screen appears when you turn on the phone. Status indicators appear across the top of the screen:

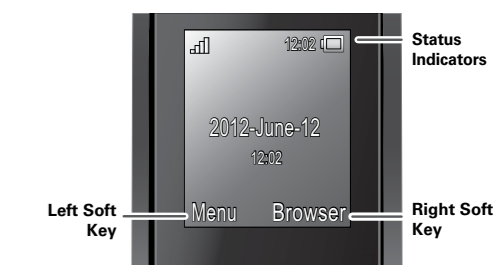

Note: Your home screen may look a little different.

This product meets the applicable limit for exposure to radio waves (known as SAR) of 1.6 W/kg (FCC & IC). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the regulatory information packaged with your product.

Note: When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

