

# MOXA AirWorks AWK-1200-AC

---

## User's Manual

[www.moxa.com/product](http://www.moxa.com/product)

First Edition, July 2007



Moxa Networking Co., Ltd.

Tel: +886-2-8919-1230

Fax: +886-2-8919-1231

Web: [www.moxa.com](http://www.moxa.com)

**MOXA Technical Support**

Worldwide: [support@moxa.com](mailto:support@moxa.com)

The Americas: [support@usa.moxa.com](mailto:support@usa.moxa.com)

# **MOXA AirWorks AWK-1200-AC User's Manual**

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

## **Copyright Notice**

Copyright © 2007 Moxa Networking Co., Ltd.  
All rights reserved.  
Reproduction without permission is prohibited.

## **Trademarks**

MOXA is a registered trademark of the Moxa Group.  
All other trademarks or registered marks in this manual belong to their respective manufacturers.

## **Disclaimer**

Information in this document is subject to change without notice and does not represent a commitment on the part of MOXA.

MOXA provides this document “as is,” without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. MOXA reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, MOXA assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

# Table of Contents

<b>Chapter 1</b>	<b>Introduction.....</b>	<b>1-1</b>
	Overview.....	1-2
	Package Checklist.....	1-2
	Product Features.....	1-2
	System Requirements.....	1-2
	Inline Power Injector (PoE) .....	1-3
<b>Chapter 2</b>	<b>Getting Started.....</b>	<b>2-1</b>
	First Time Installation and Configuration.....	2-2
	Locating the Data Input and PoE Ports .....	2-2
	What to Check before You Install the AWK-1200-AC .....	2-4
	Basic Configuration.....	2-5
	Basic Configuration Steps.....	2-5
	Logging into the Web Interface.....	2-5
	Configuring Operating Mode, IP Address, Subnet Mask, Default Route IP, DNS Server IP .....	2-7
	Configuring the Wireless SSID .....	2-8
	Configuring Wireless Encryption.....	2-8
	Changing the Supervisor Account & Password.....	2-9
	Upgrading the Firmware .....	2-9
<b>Chapter 3</b>	<b>Web Console Configuration.....</b>	<b>3-1</b>
	BASIC.....	3-2
	LAN.....	3-2
	WIRELESS .....	3-2
	ADVANCED .....	3-4
	TOOLS .....	3-5
	Admin .....	3-5
	Time .....	3-6
	System.....	3-7
	Firmware .....	3-7
	STATUS.....	3-8
	Device Info .....	3-8
	WIRELESS .....	3-9
	Logs.....	3-10
	Statistics .....	3-11
<b>Appendix A</b>	<b>Specifications.....</b>	<b>A-1</b>
<b>Appendix B</b>	<b>Default Settings .....</b>	<b>B-1</b>
	BASIC.....	B-1
	LAN.....	B-1
	WIRELESS .....	B-1
	ADVANCED .....	B-1
	TOOLS .....	B-2
	ADMIN .....	B-2
	TIME.....	B-2
<b>Appendix C</b>	<b>Regulatory Compliance Information .....</b>	<b>C-1</b>



The following topics are covered in this chapter:

- ☐ **Overview**
- ☐ **Package Checklist**
- ☐ **Product Features**
- ☐ **System Requirements**
- ☐ **Inline Power Injector (PoE)**

## Overview

The AWK-1200 Access Point/Bridge and AP Client is ideal for applications that are hard to wire, too expensive to wire, or use mobile equipment that connects to a TCP/IP network. The AWK-1200 series is rated to operate at temperatures ranging from -20 to 70°C, and its weatherproof design allows you to set up a WLAN, or extend existing wired networks to outdoor locations. In addition, you do not need to worry about setting up a power supply for outdoor applications, since the AWK-1200's PoE (Power over Ethernet) design makes it easy to deploy.

## Package Checklist

The product package contains the following items.

- AWK-1200-AC
- 100 to 240 VAC, 50 to 60 Hz AC to 48V/0.375A DC switching adaptor
- 48 VDC, 0.375A Inline Power Injector (PoE)
- 30 m RJ45 CAT-5 Ethernet cable
- 1.8 m RJ45 CAT-5 cross-over Ethernet cable
- 1.8 m grounding wire
- Document and Software CD
- Wall/mast mounting kit
- Band clamp
- Embedded 9 dBi patch directional antenna

## Product Features

- IP67 rated for outdoor use
- RF transmit power: 802.11b mode @ 11 Mbps data rate
- RF transmit power: 802.11g mode @ 54 Mbps data rate
- Embedded 9 dBi patch directional antenna
- Supports 48 VDC 0.375A Power-over-Ethernet (PoE)
- MIB-I support
- MAC address based access control

## System Requirements

Installing the AWK-1200-AC requires the following:

- Windows-based PC/AT compatible computer (PC system requirements: better than PIII 800 or other 100% compatible equipment; OS: Windows 2000/XP), or Ethernet data device that has an RJ45 Ethernet port to run the configuration program, or a TCP/IP connection to the Ethernet network.
- 10/100 Base-T RJ45 Ethernet cable for connecting to an Ethernet network.
- AC power outlet (100 to 240V, 50 to 60 Hz) to supply power.

## Inline Power Injector (PoE)

The AWK-1200-AC is equipped with an Inline Power Injector module. The Inline Power Injector (PoE) delivers both data and power to the AWK-1200-AC through a single Ethernet cable, and provides the following benefits to improve the performance vs. installation cost ratio.

- Great for areas that do not have a ready power supply, such as the roof of a house.
- Allows placing the AWK-1200-AC unit closer to the antenna, to make installation easier, and reduce signal loss over antenna cabling.
- Ethernet signal travels well over CAT 5 cable but 2.4 GHz signal doesn't do as well over antenna cabling.
- Ethernet cabling is much cheaper than antenna cabling.





# 2

## Getting Started

---

This chapter describes the procedures for installing the AWK-1200-AC.










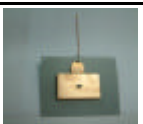
The following topics are covered:

- ❑ **First Time Installation and Configuration**
- ❑ **Locating the Data Input and PoE Ports**
- ❑ **What to Check before You Install the AWK-1200-AC**
- ❑ **Basic Configuration**
  - Basic Configuration Steps
  - Logging into the Web Interface
  - Configuring Operating Mode, IP Address, Subnet Mask, Default Route IP, DNS Server IP
  - Configuring the Wireless SSID
  - Configuring Wireless Encryption
  - Changing the Supervisor Account & Password
  - Upgrading the Firmware

## First Time Installation and Configuration

After unpacking the system, make sure the following items are present and in good condition. Refer to pictures below to see what each item looks like.

1. AWK-1200-AC
2. 100 to 240VAC, 50 to 60 Hz AC to 48V/0.375A DC switching adaptor
3. Inline Power Injector (PoE); 48 VDC, 0.375A
4. RJ45 CAT-5 Ethernet cable; 30 m (optional)
5. RJ45 CAT-5 cross-over Ethernet cable; 1.8 m (optional)
6. Grounding wire 1.8 m
7. Document & Software CD
8. Wall/mast mounting kit, including one band clamp
9. Screws
10. Embedded 9 dBi patch directional antenna

1. AWK-1200-AC	2. Adaptor	3. PoE	4. 30 m cable
			
5. 1.8 m cable (optional)	6. Grounding wire	7. CD	8. Wall mount
			
9. Screws	10. Antenna		
			

## Locating the Data Input and PoE Ports

After unpacking the system, locate the following ports on the AWK-1200-AC unit. The numbers next to each item refer to the pictures in Figure 2-1.


### Interface on the AWK-1200-AC Unit

- **Ethernet Port 1**: for connecting the 30 m RJ45 CAT-5 Ethernet cable.


### Interface on the Inline Power Injector

- **Data Input Port 2**: for connecting the cross-over Ethernet Cable to a PC or straight-through Ethernet cable to a Hub, Switch, or Router.
- **DC Input Port 3**: power adaptor; 48V, 0.375A DC input.
- **Power & Data Output Port 4**: for connecting the 30 m RJ45 CAT-5 Ethernet cable.
- **Grounding Port 5**: for connecting grounding wire.

## Device Figures

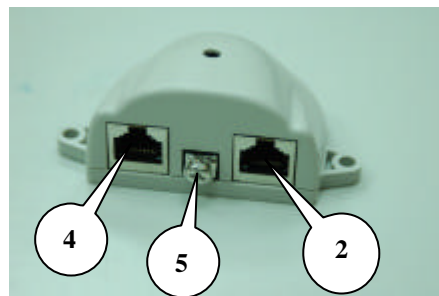

POE picture1

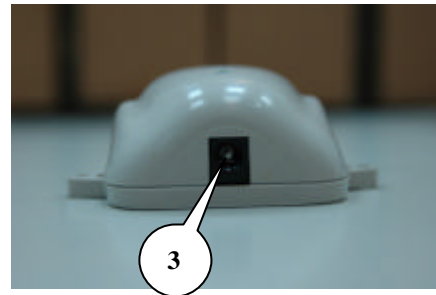

POE picture2



Figure 2-1

*Power and Data Interface location on the PoE denoted by numbers 1-5.*

## Mounting the AWK-1200-AC on a Wall or Mast

- The AWK-1200-AC can be mounted on the wall, and you can use the Wall Mount kit to mount the AWK-1200-AC as shown in **Figure 2-2**.

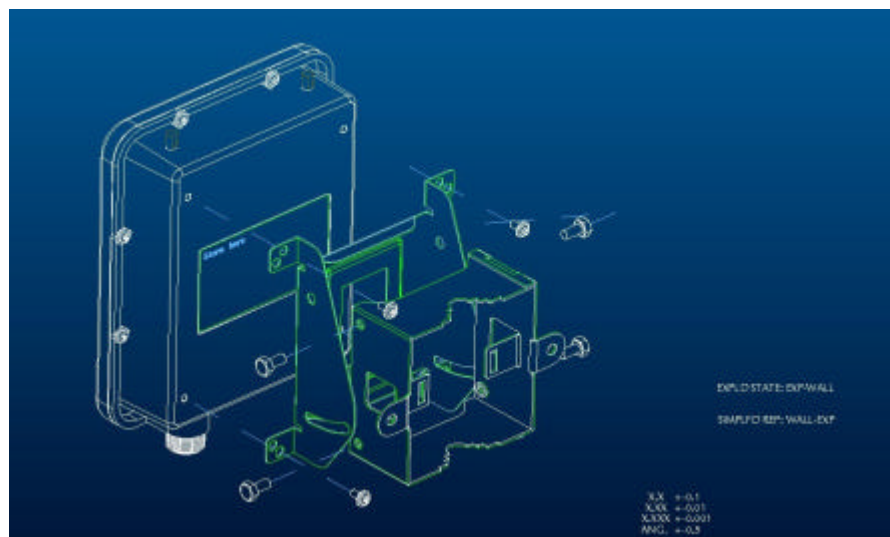
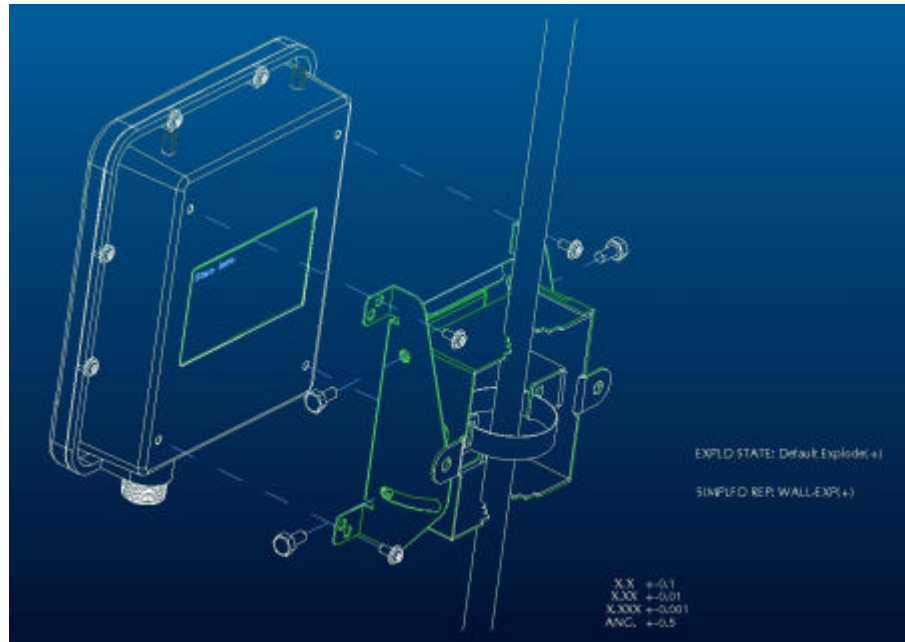


Figure 2-2

- You can also mount the AWK-1200-AC to the mast as shown in **Figure 2-3**.



**Figure 2-3**

## What to Check before You Install the AWK-1200-AC

Before installing the AWK-1200-AC for outdoor applications or hard-to-reach locations, we recommend configuring and testing all devices first.

For configuring the AWK-1200-AC, please follow the steps below to power up the AWK-1200-AC (refer to Figure 2-4).

### Step 1:

Connect the DC plug of the AC/DC power adapter into the **DC Input Port** of the Inline Power Injector and the wall-mount plug into a power outlet or power strip (refer to page 2-2). The Power LED on the Inline Power Injector will light up.

### Step 2:

Run the cross-over Ethernet cable from the **Data Input Port** (refer to page 2-2) to the Ethernet port on a PC.

### Step 3:

Connect the 30 m CAT 5 Ethernet cable to the AWK-1200-AC. Hand tighten the connector.

### Step 4:

Connect the other end of the 30 m CAT 5 cable to the PoE labeled AP/CB. This is the power side of the PoE that will power up the AWK-1200-AC.

When the AWK-1200-AC receives power over the Ethernet cable, the AWK-1200-AC will start its boot up sequence, and the Active LED on the Inline Power Injector will light up.

You can use a web browser, such as Microsoft Internet Explorer or Netscape Navigator, to configure the AWK-1200-AC from a remote host or PC.

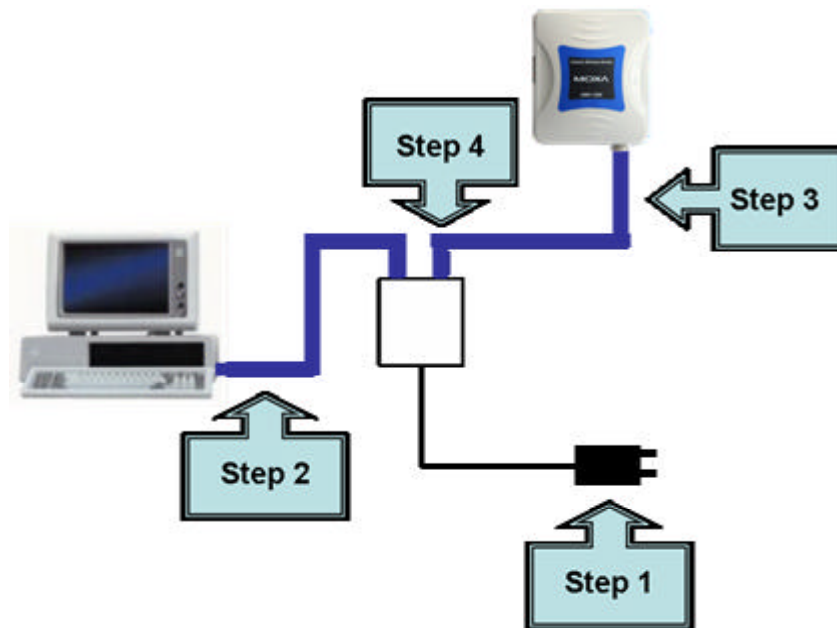


Figure 2-4

## Basic Configuration

### Basic Configuration Steps

This section describes a basic 2-step configuration procedure to set up the AWK-1200-AC.

#### Step 1:

Modify the factory-default parameters on the web page “/BASIC/LAN/”, click **Save Settings** to save the changes, and then click **Continue**.

#### Step 2:

Modify the factory-default parameters on the web page “/BASIC/Wireless/”, click **Save Settings** to save the changes, and then click **Reboot the Device** to activate the configuration changes.

### Logging into the Web Interface

Users can access and configure the AWK-1200-AC through a web browser interface.

### Web Configuration

Before configuring the AWK-1200-AC, you need to know the IP Address assigned to the unit. The factory default IP Address is **192.168.127.254**. To establish a connection, type **http://192.168.127.254** in the browser's address field.

### Web Access Procedures

Once you identify the IP Address assigned to the AWK-1200-AC, use the web browser to configure the AWK-1200-AC through the browser interface. The following procedure explains how to configure each item.

**Step 1:** Open your browser and enter the IP address.


**Step 2:** Press <ENTER>. The AWK-1200-AC **Login** screen should appear as shown in **Figure 2-5**.



The image shows the login interface for the MOXA AirWorks 1200 Series AP Client. At the top, the MOXA logo is followed by the text "AirWorks 1200 Series AP Client". Below this is a "LOGIN" section with a grey header. Inside the section, it says "Log in to the bridge:". There are two input fields: "User Name" with a dropdown menu showing "admin" and a small downward arrow, and "Password" with an empty text box. To the right of the password field is a blue "Log In" button. At the bottom center of the page, it says "Copyright © 2007-2009".

Figure 2-5

**Step 3:** Enter “root” in the **Password** fields, and then click **Log In** to enter the web configuration user interface screen as shown below.

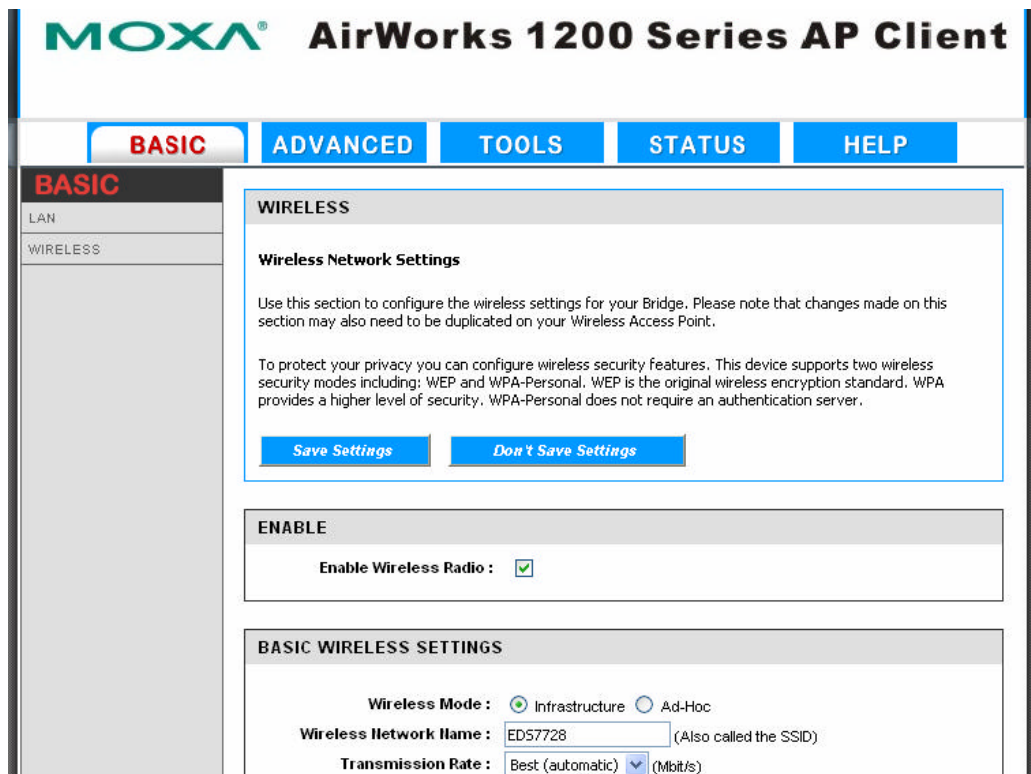

The image shows the web configuration user interface for the MOXA AirWorks 1200 Series AP Client. At the top, the MOXA logo is followed by the text "AirWorks 1200 Series AP Client". Below this is a navigation bar with five tabs: "BASIC" (highlighted in red), "ADVANCED", "TOOLS", "STATUS", and "HELP". On the left side, there is a sidebar with two options: "LAN" and "WIRELESS" (highlighted in grey). The main content area is titled "WIRELESS" and contains the following sections:

- Wireless Network Settings**: A section with a grey header. It contains a paragraph: "Use this section to configure the wireless settings for your Bridge. Please note that changes made on this section may also need to be duplicated on your Wireless Access Point." Below this is another paragraph: "To protect your privacy you can configure wireless security features. This device supports two wireless security modes including: WEP and WPA-Personal. WEP is the original wireless encryption standard. WPA provides a higher level of security. WPA-Personal does not require an authentication server." At the bottom of this section are two buttons: "Save Settings" and "Don't Save Settings".
- ENABLE**: A section with a grey header. It contains a label "Enable Wireless Radio:" followed by a checked checkbox.
- BASIC WIRELESS SETTINGS**: A section with a grey header. It contains three settings:
  - Wireless Mode**: Two radio buttons, "Infrastructure" (selected) and "Ad-Hoc".
  - Wireless Network Name**: A text box containing "EDS7728" with a note "(Also called the SSID)".
  - Transmission Rate**: A dropdown menu showing "Best (automatic)" with a note "(Mbit/s)".

Figure 2-6

## Web Configuration Structure

The web configuration user interface shown above in **Figure 2-6** is grouped into a tree structure, and contains the following settings or information.

- **TOOLS**
  - ADMIN
  - TIME
  - SYSTEM
  - FIRMWARE
- **STATUS**
  - DEVICE INFO
  - WIRELESS
  - LOGS
  - STATISTICS
- **HELP**
  - MENU
  - BASIC
  - ADVANCED
  - TOOLS
  - STATUS
  - GLOSSARY

Move through the tree by clicking on an icon to expand or collapse the tree. The nodes on the tree represent web pages that allow viewing and modifying the parameters.

## Configuring Operating Mode, IP Address, Subnet Mask, Default Route IP, DNS Server IP

### LAN Settings

The LAN (Local Area Network) settings for the Access Point are **IP Address Mode**, **IP Address**, **Subnet Mask**, and **Default Gateway**. The Access Point's local network (LAN) settings are configured based on the IP Address and Subnet Mask assigned in this section. The IP address is also used to access this Web-based management interface. This option is available in the “/BASIC/LAN/” page as shown in **Figure 2-7**.

LAN SETTINGS	
IP Address Mode :	<input checked="" type="radio"/> Static <input type="radio"/> DHCP
IP Address :	<input type="text" value="192.168.127.254"/>
Subnet Mask :	<input type="text" value="255.255.255.0"/>
Default Gateway :	<input type="text" value="192.168.127.253"/>

**Figure 2-7**

#### *IP Address Mode*

Select **DHCP** to get the IP settings from a DHCP server on your network. Select **Static** to use the IP settings specified on this page.

**IP Address**

The IP address of the AC on the local area network. Your local area network settings are based on the address assigned here. For example, 192.168.1.1.

**Subnet Mask**

The subnet mask of your AWK-1200-AC on the local area network.


**Default Gateway**

This is the IP address of the gateway that connects you to the Internet.

## Configuring the Wireless SSID

### Wireless Network Name (also called the SSID)

When you are browsing for available wireless networks, this is the name that will appear in the list (unless Visibility Status is set to Invisible; see below). This name is also referred to as the SSID. For security purposes, we highly recommend that you change the pre-configured network name. This option is available on the “/BASIC/WIRELESS/” page as shown in **Figure 2-8**.

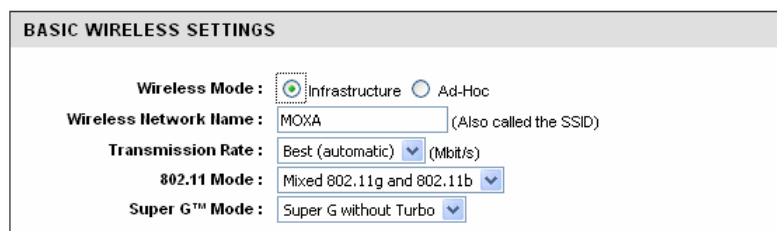

The screenshot shows the 'BASIC WIRELESS SETTINGS' configuration page. It includes the following fields and options:

- Wireless Mode:** Two radio buttons, 'Infrastructure' (selected) and 'Ad-Hoc'.
- Wireless Network Name:** A text box containing 'MOXA' with a note '(Also called the SSID)'.
- Transmission Rate:** A dropdown menu set to 'Best (automatic)' with '(Mbit/s)' in parentheses.
- 802.11 Mode:** A dropdown menu set to 'Mixed 802.11g and 802.11b'.
- Super G™ Mode:** A dropdown menu set to 'Super G without Turbo'.

**Figure 2-8**

## Configuring Wireless Encryption

The AWK-1200-AC supports 64-bit and 128-bit WEP encryption.

For **64-bit** WEP encryption, the encryption key consists 10 hexadecimal characters (0-9 and A-F) or 5 ASCII characters.

For **128-bit** WEP encryption, the encryption key consists of 26 hexadecimal characters (0-9 and A-F) or 13 ASCII characters.

Modify the WEP encryption parameters on the web page “/BASIC/WIRELESS/WIRELESS SECURITY MODE”. If you choose “WEP” enter 1 to 15 characters in the **WEP Key** field, and then click **Save Setting, Reboot the Device**.



WIRELESS SECURITY MODE	
Security Mode :	<input type="radio"/> None <input checked="" type="radio"/> WEP <input type="radio"/> WPA-Personal

WEP	
<p>WEP is the wireless encryption standard. To use it you must enter the same key(s) into the bridge and the wireless access point. For 64 bit keys you must enter 10 hex digits into each key box. For 128 bit keys you must enter 26 hex digits into each key box. A hex digit is either a number from 0 to 9 or a letter from A to F. For the most secure use of WEP set the authentication type to "Shared Key" when WEP is enabled.</p> <p>You may also enter any text string into a WEP key box, in which case it will be converted into a hexadecimal key using the ASCII values of the characters. A maximum of 5 text characters can be entered for 64 bit keys, and a maximum of 13 characters for 128 bit keys.</p>	
WEP Key Length :	64 bit (10 hex digits) <input type="button" value="v"/> (length applies to all keys)
WEP Key 1 :	<input type="text" value="••••••••••"/>
WEP Key 2 :	<input type="text" value="••••••••••"/>
WEP Key 3 :	<input type="text" value="••••~"/>
WEP Key 4 :	<input type="text" value="••••~"/>
Default WEP Key :	WEP Key 1 <input type="button" value="v"/>
Authentication :	Open <input type="button" value="v"/>

## Changing the Supervisor Account & Password

Enter the **TOOLS** → **ADMIN** page, shown below in **Figure 2-9**.

ADMIN PASSWORD	
Please enter the same password into both boxes, for confirmation.	
Password :	<input type="text" value="••••"/>
Verify Password :	<input type="text" value="••••"/>

Figure 2-9

## ADMIN PASSWORD

Change the ADMIN PASSWORD's user name and password in the **ADMIN PASSWORD Account** field, click **Save Setting**, and then **Reboot the Device** to activate the configuration changes.

## Upgrading the Firmware

### Updating the Firmware

Enter the **TOOLS** → **FIRMWARE** page as shown in **Figure 2-10** to upgrade the AWK-1200-AC's firmware. You must select which file (**Program image**) you want to upgrade, and then click the **Upload** button to start the upgrade process.

**NOTE** It takes about 1 minute to complete the restart process.

FIRMWARE INFORMATION
Current Firmware Version : Moxa_FW_ver 1.0.1 Current Firmware Date : 2007/07/03

FIRMWARE UPGRADE
<p><b>Note:</b> Some firmware upgrades reset the configuration options to the factory defaults. Before performing an upgrade, be sure to save the current configuration from the Tools -&gt; Admin screen.</p> <p>To upgrade the firmware, your PC must have a wired connection to the bridge. Enter the name of the firmware upgrade file, and click on the Upload button.</p> <p>Upload : <input type="text"/> <input type="button" value="Browse..."/></p> <p><input type="button" value="Upload"/></p>

Figure 2-10

**ATTENTION**

The Part 15 radio device operates on a non-interference basis with other devices operating at this frequency when using integrated antennas. Any changes or modification to the product not expressly approved by the Original Manufacture could void the user's authority to operate this device.

**ATTENTION**

To meet regulatory restrictions and to ensure a safe installation, we strongly recommend that this product is **professionally installed**

## Web Console Configuration

---

In this chapter, we will explain each web management page of the Web-based Network Manager.

The following topics are covered in this chapter:

- ❑ **BASIC**
  - LAN
  - WIRELESS
  - ADVANCED
- ❑ **TOOLS**
  - Admin
  - Time
  - System
  - Firmware
- ❑ **STATUS**
  - Device Info
  - WIRELESS
  - Logs
  - Statistics

## BASIC

### LAN

These are the IP address settings of the LAN (Local Area Network) for the AWK-1200-AC. The AWK-1200-AC's Local Area Network (LAN) settings are configured based on the IP Address and Subnet Mask assigned in this section. The IP address is also used to access this web-based management interface. We recommend using the default settings if you do not have an existing network.

LAN SETTINGS	
IP Address Mode :	<input checked="" type="radio"/> Static <input type="radio"/> DHCP
IP Address :	<input type="text" value="192.168.127.254"/>
Subnet Mask :	<input type="text" value="255.255.255.0"/>
Default Gateway :	<input type="text" value="192.168.127.253"/>

#### *IP Address Mode*

Select **DHCP** to get the IP settings from a DHCP server on your network. Select **Static** to use the IP settings specified on this page.

#### *IP Address*

This is the IP address of the AC on the local area network. Your local area network settings are based on the address assigned here. For example, 192.168.1.1.

#### *Subnet Mask*

This is the subnet mask of your AWK-1200-AC on the local area network.

#### *Default Gateway*

This is the IP address of the gateway that connects you to the Internet.

### WIRELESS

The section is where you configure the wireless settings for your Access Point. Please note that changes made in this section may also need to be duplicated on your Wireless Client.

To protect your privacy, use the wireless security mode to configure the wireless security features. This device supports the wireless security modes WEP and WPA Personal. WEP is the original wireless encryption standard. WPA provides a higher level of security.

BASIC WIRELESS SETTINGS	
Wireless Mode :	<input checked="" type="radio"/> Infrastructure <input type="radio"/> Ad-Hoc
Wireless Network Name :	<input type="text" value="MOXA"/> (Also called the SSID)
Transmission Rate :	<input type="text" value="Best (automatic)"/> (Mbit/s)
802.11 Mode :	<input type="text" value="Mixed 802.11g and 802.11b"/>
Super G™ Mode :	<input type="text" value="Super G without Turbo"/>

#### *Enable Wireless Radio*

This option turns off and on the wireless connection feature of the AWK-1200-AC. When you select this option, the following parameters are displayed.

**Wireless Mode**

Select **Infrastructure** to connect to a wireless (AP) Access Point. Select **Ad-hoc** to connect to another AC or wireless station.

**Wireless Network Name**

This is the name of the wireless access point with which this station will be associated. Leave this field blank to associate with any access point.

**Channel (Ad-hoc mode only)**

A wireless network uses specific channels in the 2.4 GHz wireless spectrum to handle communication between clients. Some channels in your area may have interference from other electronic devices. Your AWK-1200-AC will use the channel that is used by the access point with which it is associated. However, you can select your channel preference to help optimize the performance and coverage of your wireless network.

**Transmission Rate**

By default the fastest possible transmission rate will be selected. If necessary, you have the option of selecting a different rate.

**802.11 Mode**

If all of your devices can connect in 802.11g Mode, you can change the mode to 802.11g only. If you have some devices that are 802.11b, leave the setting at Mixed.

**Super G? Mode**

Super G without Turbo: Performance enhancing features such as Packet Bursting, FastFrames, and Compression.

**Security Mode**

- **WEP**

WEP is a method of encrypting data for wireless communication, and is intended to provide the same level of privacy as a wired network. However, WEP is not as secure as WPA encryption. To gain access to a WEP network, you must know the key. The key is a string of characters that you create. When using WEP, you must determine the level of encryption. The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange - alphanumeric characters) format. ASCII format is provided so that you can enter a string that is easier to remember. The ASCII string is converted to HEX for use over the network. Four keys can be defined so that you can change keys easily. A default key is selected for use on the network.

**Example:**

64-bit hexadecimal keys are exactly 10 characters in length. (12345678FA is a valid string of 10 characters for 64-bit encryption.)

128-bit hexadecimal keys are exactly 26 characters in length.

(456FBCDF12340012225271730 is a valid string of 26 characters for 128-bit encryption.)

64-bit ASCII keys are up to 5 characters in length (DMODE is a valid string of 5 characters for 64-bit encryption.)

128-bit ASCII keys are up to 13 characters in length (2002HALOSWIN1 is a valid string of 13 characters for 128-bit encryption.)

- **WPA-Personal**

This option selects Wi-Fi Protected Access (WPA), which uses security standards published by the Wi-Fi Alliance. This option uses Wi-Fi Protected Access with a Pre-Shared Key (PSK). The WPA Mode further refines the variant that the AWK-1200-AC should employ.

**WPA Mode**

WPA is the older standard. Select this option if the Access Point that will be used with the AWK-1200-AC only supports the older standard. WPA2 is the newer implementation of the stronger IEEE 802.11i security standard. With the “WPA2” option, the AWK-1200-AC associates only with access points that also support WPA2 security.

**Cipher Type**

The encryption algorithm used to secure the data communication.

**TKIP**

Use TKIP only. TKIP (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP.

**AES**

Use AES only. AES (Advanced Encryption Standard) is a very secure block based on encryption. Note that if the AWK-1200-AC uses the AES option, the AWK-1200-AC can associate with the access point only if the access point is also set to use only AES.

**Pre-Shared Key**

The key is entered as a pass-phrase of up to 63 alphanumeric characters in ASCII (American Standard Code for Information Interchange) format at both ends of the wireless connection. It cannot be shorter than eight characters, although for proper security it needs to be of ample length and should not be a commonly known phrase. This phrase is used to generate session keys that are unique for each wireless client.

**Example:**

Wireless Networking technology enables ubiquitous communication.

## ADVANCED

**MAC Cloning Mode**

This feature controls the MAC Address of the AWK-1200-AC as seen by other devices (wired or wireless).

If set to **Ethernet Client**, the MAC Address from the first Ethernet client that transmits data through the AWK-1200-AC will be used. This setting is useful when connected to an Xbox or if there is only one Ethernet device connected to the AWK-1200-AC. When multiple Ethernet devices are connected to the AWK-1200-AC, it may not be obvious which MAC Address is being used.

If set to **WLAN Card**, the MAC Address of the WLAN Card (typically written on the back of the card) will be used. When multiple Ethernet devices are connected to the AWK-1200-AC, the MAC Address of the AWK-1200-AC will not change.

<b>WIRELESS MAC CLONING</b>	
Cloning Mode : <input checked="" type="radio"/> WLAN Card <input type="radio"/> Ethernet Client	

<b>ADVANCED WIRELESS SETTINGS</b>	
Fragmentation Threshold :	<input type="text" value="2346"/> (256..2346)
RTS Threshold :	<input type="text" value="2346"/> (1..2346)
802.11d Enable :	<input type="checkbox"/>
Transmit Power :	High <input type="button" value="v"/>

### ***Fragmentation Threshold***

This setting should remain at its default value of 2346. Setting the Fragmentation value too low may result in poor performance.

### ***RTS Threshold***

This setting should remain at its default value of 2346. If you encounter inconsistent data flow, only minor modifications to the value are recommended.

### ***802.11d Enable***

Enables 802.11d operation. 802.11d is a wireless specification for operation in multiple regulatory domains. This supplement to the 802.11 specifications defines the physical layer requirements (channelization, hopping patterns, new values for current MIB attributes, and other requirements to extend the operation of 802.11 WLANs in multiple regulatory domains, or countries). The current 802.11 standard defines operation in only a fixed regulatory domain (country). This supplement adds the requirements and definitions necessary to allow 802.11 WLAN equipment to operate in multiple markets. Enable this option if you are traveling and operating in several regulatory domains.

### ***Transmit Power***

Normally, the wireless transmitter operates at 100% power. In some circumstances, however, there might be a need to isolate specific frequencies to a smaller area. By reducing the power of the radio, you can prevent transmissions from reaching beyond your corporate/home office or designated wireless area.

## **TOOLS**

### **Admin**

The Admin option is used to set a password for access to the web-based management system. By default, the password is not configured. We highly recommend that you create a password to keep your new AWK-1200-AC secure.

**USER PASSWORD**

Please enter the same password into both boxes, for confirmation.

Password:

Verify Password:

**ADMINISTRATION**

Bridge Name:

Web Idle Timeout:  (minutes)

**SAVE AND RESTORE CONFIGURATION**

浏览...

Restore Configuration from File

Save Configuration Cancel

### ***Admin Password***

Enter a password for the user **admin**. This user will have full access to the Web-based management interface.

### ***User Password***

Enter a password for the user **user**. This user will have read-only access to the Web-based management interface.

### ***Bridge Name***

The name of the AWK-1200-AC can be changed here.

### ***Web Idle Timeout***

The amount of time before the administration session is closed when there is no activity.

### ***Save Configuration***

This option allows you to save the AWK-1200-AC's configuration to a file on your computer. Be sure to save the configuration before performing a firmware upgrade.

### ***Restore Configuration from File***

Use this option to load previously saved AWK-1200-AC configuration settings.

## Time

The Time Configuration option allows you to configure, update, and maintain the correct time on the Access Point's internal system clock.





**SET THE DATE AND TIME MANUALLY**

Current Bridge Time : 2004年2月2日 下午 12:40:51

Year: 2004 ▼ Month: Feb ▼ Day: 2 ▼

Hour: 12 ▼ Minute: 40 ▼ Second: 49 ▼ PM ▼

[Copy Your Computer's Time Settings](#)

## Set the Date and Time Manually


You can either set the time for your bridge manually here, or you can click the **Copy Your Computer's Time Settings** button to copy the time from the computer you are using. (Make sure that computer's time is set correctly.)

You can either set the time for your AWK-1200-AC manually here, or you can click the **Copy Your Computer's Time Settings** button to copy the time from the computer you are using. (Make sure that computer's time is set correctly.)

<b>NOTE</b>	If the bridge loses power for any reason, it cannot keep its clock running, and will not have the correct time when it is restarted. To maintain the correct time for schedules and logs, you must enter the correct time after you restart the bridge.
-------------	---

## System

This section allows you to reboot the AWK-1200-AC, and restore it to the factory default settings. Restoring the unit to the factory default settings will erase all settings, including any rules that you've created.

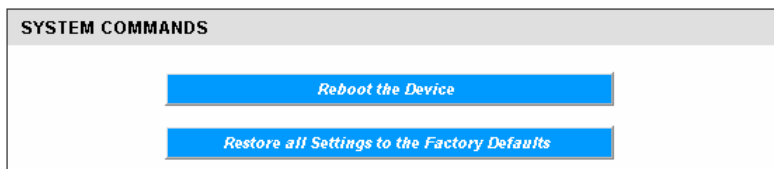

**SYSTEM COMMANDS**

[Reboot the Device](#)

[Restore all Settings to the Factory Defaults](#)

### *Reboot the Device*

This option is useful for restarting the device when you are not near it.

### *Restore all Settings to the Factory Defaults*

This option restores all configuration settings back to the settings that were in effect at the time the Access Point was shipped from the factory. Any settings that have not been saved will be lost. If you want to save your Access Point configuration settings, you can do so from the **Tools → Admin** page.

 
## Firmware


The Firmware Upgrade section can be used to update to the latest firmware code to improve functionality and performance.

**FIRMWARE UPGRADE**

**Note:** Some firmware upgrades reset the configuration options to the factory defaults. Before performing an upgrade, be sure to save the current configuration from the **Tools → Admin** screen.

To upgrade the firmware, your PC must have a wired connection to the bridge. Enter the name of the firmware upgrade file, and click on the Upload button.

Upload :  



To upgrade the firmware, follow these steps:

1. Click the **Browse** button to locate the upgrade file on your computer.
2. Once you have found the file to be used, click the **Upload** button below to start the firmware upgrade process. This could take a minute or more.
3. Wait for the Access Point to reboot. This can take another minute or more.
4. Confirm the updated firmware revision on the status page.

#### *Firmware Information*

The version numbers of the firmware currently installed in your Access Point and the most recent upgrade that is available are displayed here.

#### *Firmware Upgrade*

<b>NOTE</b>	Firmware upgrade cannot be performed from a wireless device. To perform an upgrade, ensure that you are using a PC that is connected to the Access Point by wire.
-------------	---

<b>NOTE</b>	Some firmware upgrades reset the configuration options to the factory defaults. Before performing an upgrade, be sure to save the current configuration from the <b>Tools → Admin</b> screen.
-------------	---

#### *Upload*

Once you have a firmware update on your computer, use this option to browse to the file, and then upload the information to the Access Point.

## STATUS

### Device Info

All of your Internet and network connection details are displayed on the Device Info page. The firmware version is also displayed here.

<b>NOTE</b>	Some browsers have limitations that make it impossible to update the WAN status display when the status changes. Some browsers require that you refresh the display to obtain updated status. Some browsers report an error condition when trying to obtain WAN status.
-------------	---

GENERAL	
Current Bridge Time :	2004年2月2日 下午 12:46:16
Firmware Version :	Moxa_FW_ver 1.0.1 , 2007/07/03

LAN	
MAC Address :	00:40:C7:FD:00:9A
IP Address :	192.168.127.254
Subnet Mask :	255.255.255.0
Default Gateway :	192.168.127.253

WIRELESS LAN	
Status :	Not associated with any AP
Wireless Radio :	On
MAC Address :	00:40:C7:FD:00:9A
Network Name (SSID) :	default
Channel :	9
Turbo Mode :	Disabled
Security Type :	None
Region ID :	60

## WIRELESS

The wireless page allows you to view all of the access points that can be heard by your AWK-1200-AC.

NUMBER OF ACCESS POINTS : 24						
MAC Address	SSID	Channel	Mode	Privacy	Type	Signal(%)
00:A0:C5:F3:73:F8	BI_AP	6	11g	None	AP	13
00:90:CC:CC:E0:40	MOXADVN	6	11b	WEP	AP	53
00:90:4B:D4:46:B7	MIS-WAP-1	6	11g	WEP	AP	47
00:09:92:02:49:3B	MIS-WAP-1	6	11g	WEP	AP	100
00:09:92:02:49:60	MIS-WAP-1	6	11g	WEP	AP	93
00:0D:61:7A:35:74	DAC-LoLogik	6	11g	None	AP	33
00:09:92:02:48:FB	MIS-WAP-1	6	11g	WEP	AP	70

### MAC Address

The Ethernet ID (MAC address) of the access point.

### SSID

The network name that is used by this access point.

### Channel

The wireless channel on which this access point is operating.

### Mode

The transmission standard being used by the access point. Values are 11b, and 11g for 802.11b, and 802.11g, respectively.

### Privacy

The kind of wireless security employed by the access point (**none**, **WPA**, **WEP**).

**Type**

A value of **AP** indicates the detected device is an access point in infrastructure mode; a value of **AdHoc** indicates that the detected device is operating in **ad hoc** mode.

**Signal**

This is a relative measure of signal quality. The value is expressed as a percentage of theoretical best quality. Signal quality can be reduced by distance, by interference from other radio-frequency sources (such as cordless telephones or neighboring wireless networks), and by obstacles between the AWK-1200-AC and the access point.

## Logs

The AWK-1200-AC automatically logs (records) events of possible interest in its internal memory. If enough internal memory is not available for all events, logs of older events are deleted, but logs of the latest events are retained. The Logs option allows you to view the AWK-1200-AC logs. You can define what types of events you want to view and the level of events to view.

LOG OPTIONS

**What to View :** ☒ System ☒ Status

**View Levels :** ☒ Critical ☒ Warning ☒ Informational

[Apply Log Settings Now](#)

LOG DETAILS

[Refresh](#) [Clear](#) [Save Log](#)

[INFO] Mon Feb 02 12:48:46 2004 Log viewed by IP address 192.168.127.119

[INFO] Mon Feb 02 12:20:46 2004 Allowed configuration authentication by IP address 192.168.127.119

[INFO] Mon Feb 02 12:19:56 2004 LAN Ethernet Carrier Detected

[INFO] Mon Feb 02 12:19:54 2004 Bridge initialized

[INFO] Mon Feb 02 12:19:54 2004 Stored configuration to non-volatile memory

[INFO] Thu Jan 01 00:00:00 1970 Loaded configuration from non-volatile memory

**What to View**

Select the kinds of events that you want to view.

- > System
- > AWK-1200-AC Status

**View Levels**

Select the level of events that you want to view.

- > Critical
- > Warning
- > Informational

**Apply Log Settings Now**

Click this button after changing Log Options to make them effective and permanent.

**Refresh**

Clicking this button refreshes the display of log entries. There may be new events since the last time you accessed the log.

**Clear**

Clicking this button erases all log entries.

### *Save Log*

Select this option to save the AWK-1200-AC log to a file on your computer.

## Statistics

The Statistics page displays packet transmit and receive statistics for both the LAN and Wireless connections.

LAN STATISTICS			
Sent : 1524		Received : 1345	
TX Packets Dropped : 0		RX Packets Dropped : 0	
Collisions : 0		Errors : 0	

WIRELESS STATISTICS			
Sent : 16725		Received : 2191	
TX Packets Dropped : 0		Errors : 0	

### *Sent*

The number of packets sent from the Access Point.

### *Received*

The number of packets received by the Access Point.

### *TX Packets Dropped*

The number of packets that were dropped while being sent due to errors, collisions, or Access Point resource limitations.

### *RX Packets Dropped*

The number of packets that were dropped while being received due to errors, collisions, or Access Point resource limitations.

### *Collisions*

The number of packets that were dropped due to Ethernet collisions (two or more devices attempting to use an Ethernet circuit at the same time).

### *Errors*

The number of transmission failures that cause loss of a packet. A noisy radio-frequency environment can cause a high error rate on the wireless LAN.





# Specifications

---

## WLAN

Standards	IEEE802.11g/b for wireless LAN, IEEE802.3u 10/100BaseTX for Ethernet LAN, IEEE802.3af for Power over Ethernet
Frequency Range	2.4-2.4835 GHz, Direct Sequence Spread Spectrum (DSSS)
Data Rate & Modulation	OFDM@54 Mbps, CCK@11/5.5 Mbps, DQPSK@2Mbps and DBSK@1 Mbps
Operating Channels	USA: 1-11 (US) Europe: 1-13 (EU)
Security	WEP, WPA, WPA2, MAC address filtering, Hide SSID, Layer 2 Isolation. For AP Client: 64-bit and 128-bit WEP encryption, WPA
Data Rates	1, 2, 5.5, 6, 9, 11, 12, 18, 24, 36, 48, 54 Mbps
Transmit Power	Type. 17dBm@1, 2, 5.5 and 11 Mbps, 17dBm@6 Mbps, 14dBm@54 Mbps
RX Sensitivity	Typ. -72dBm@54 Mbps

## Software Features

Protocols	HTTP, DHCP, TCP/IP, RADIUS, DNS, NetBIOS, AppleTalk, and IPX/SPX
Configuration	Web-based management
Client OS Support	Windows 95/98/2000/ME/NT/XP, Unix and Macintosh

## Interface

Antenna	5dBi External/SMA connector (AP/Bridge), 9dBi Internal (AP Client)
RJ45 port	10/100BaseT(X) auto negotiation speed

## Power

Input Voltage	Active Ethernet (IEEE802.3af), 48 VDC
Input Current	0.35A

**Mechanical**

Casing	IP68 (AP/Bridge), IP67 (AP Client)
Dimensions (W × L × D)	AWK-1200-AP: 284.4 × 254.3 × 77.5 mm 11.20 × 10.01 × 3.05 in AWK-1200-AC: 165.8 × 195.8 × 60.3 mm 6.53 × 7.71 × 2.37 in
Installation	Wall or Mast Mounting (optional kit)

**Environmental**

Operating Temperature	-20 to 70°C (-4 to 158°F)
Storage Temperature	-40 to 80°C (-40 to 176°F)
Ambient Relative Humidity	5 to 95% (non-condensing)

**Regulatory Approvals**

Emissions	FCC, CE
<b>WARRANTY</b>	5 years



## Default Settings

---

### BASIC

#### LAN

Setting Name	Default Value
Get LAN IP from	Static IP (Manual)
IP Address	192.168.127.254
Subnet Mask	255.255.255.0
Gateway	0.0.0.0
Local Domain Name	NULL

#### WIRELESS

Setting Name	Default Value
<b>ENABLE</b>	
Enable Wireless	Select
<b>BASIC WIRELESS SETTING</b>	
Wireless Mode	Infrastructure
Wireless Network Name (SSID)	MOXA
REGION ID	30
Channel	2.437 GHz – CH6
Transmission Rate	BEST (Automatic)
802.11 Mode	MIX 802.11g and 802.11b
Super G™ Mode	Super G without Turbo
<b>WIRELESS SECURITY MODE</b>	
Security Mode	None

### ADVANCED

Setting Name	Default Value
Fragmentation Threshold	2346
Password	2346
802.11d	No Select
Transmit Power	High

## TOOLS

### ADMIN

Setting Name	Default Value
<b>ADMIN PASSWORD</b>	
Password	admin
Verify Password	root
<b>USER PASSWORD</b>	
Password	admin
Verify Password	
<b>Administration</b>	
Bridge Name	AWK-1200
Web Idle Timeout	15

### TIME

Setting Name	Default Value
<b>TIME CONFIGURATION</b>	
Time Zone	GTM-08:00, Tijuana
<b>SYSTEM</b>	
Reboot the Device	
Restore all Setting to the Factory Defaults	
<b>FIRMWARE</b>	
Upload File	Upgrade bin

## Regulatory Compliance Information

---

### 15.21

**CAUTION:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Prohibition of co-location

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

### 15.105 Federal Communications Commission (FCC) Requirements, Part 15

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Caution Statement of the FCC Radio Frequency Exposure

This Wireless LAN radio device has been evaluated under FCC Bulletin OET 65C and found compliant to the requirements as set forth in CFR 47 Sections 2.1091, 2.1093, and 15.247(b)(4) addressing RF Exposure from radio frequency devices. The radiation output power of this Wireless LAN device is far below the FCC radio frequency exposure limits. Nevertheless, this device shall be used in such a manner that the potential for human contact during normal operation—as a mobile or portable device but use in a body-worn way is strictly prohibit. When using this device, a certain separation distance between antenna and nearby persons has to be kept to ensure RF exposure compliance.

## Regulatory information / Disclaimers

Installation and use of this Wireless LAN device must be in strict accordance with the instructions included in the user documentation provided with the product. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or television interference caused by unauthorized modification of this device, or the substitution of the connecting cables and equipment other than manufacturer specified. It is the responsibility of the user to correct any interference caused by such unauthorized modification, substitution or attachment. Manufacturer and its authorized resellers or distributors will assume no liability for any damage or violation of government regulations arising from failing to comply with these guidelines.

## MPE Statement (Safety Information)

Your device contains a low power transmitter. When device is transmitted it sends out Radio Frequency (RF) signal.

## Safety Information

**CAUTION:** To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. Use on the supplied antenna. Unauthorized antenna, modification, or attachments could damage the transmitter and may violate FCC regulations.

**Declaration of Conformity for R&TTE directive 1999/5/EC**

Protection requirements for health and safety - Article 3.1a

The protection of the health and the safety of the user and any other person, including the objectives with respect to safety requirements contained in Directive 73/23/EEC, but with no voltage limit applying.

Protection requirements for electromagnetic compatibility (EMC) - Article 3.1b

The protection requirements with respect to electromagnetic compatibility contained in Directive 89/336/EEC.

Effective use of the radio spectrum - Article 3.2

Radio equipment shall be so constructed that it effectively uses the spectrum allocated to terrestrial/space radio communication and orbital resources so as to avoid harmful interference.

**CE Mark Warning**

This is a Class B product, in a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Hereby the [Moxa Networking Co., Ltd.], declares that this [Outdoor Wireless AP Client / AWK-1200-AC] is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

**For indoor use only, IP X0.**