

WIRELESS SPHERE

THIS PRODUCT IS NOT A TOY! Please read this entire instruction booklet before using.

INSTRUCTION MANUAL

A. DESCRIPTION

Thank you for purchasing the **WIRELESS SPHERE**. This product is not a toy and is not intended for use by children. For decorative and indoor / outdoor use.

B. OPERATION

1. Gently lift the **WIRELESS SPHERE** from the packaging and remove it from the polybag.
2. Put the sphere on a flat surface.
3. Plug the adaptor into a nearby working outlet. **The adaptor is intended to be correctly oriented in a vertical or floor mount position.**
4. Push the button on the bottom of the sphere to switch on the lights.
5. Switch on the **PAIRING** function on your device such as a smart phone or tablet and pair with the connection "Sphere".
6. Your device will connect after a few seconds.
7. Play your selected music.
8. Only one device can be connected to one sphere. One device cannot connect to multiple spheres.
9. For lights only, disconnect the **PAIRING** function from your device.
10. Push the button on the bottom of the sphere to switch off the lights.

C. TROUBLESHOOTING

PROBLEM	LIKELY CAUSE	SOLUTION
No Light	No power	Make sure the adapter is plugged into a working outlet.
	Switch is at "OFF" position	Push the switch to "ON" position.
No Music	Wireless is not connected	<ol style="list-style-type: none">1. Switch on the PAIRING function on your device and play your selected music.2. Only one device can be connected at one time. To use with a different device, disconnect the first device and connect with another device.3. One device cannot connect to multiple spheres. Connect other devices with other spheres.4. Unpair as many unnecessary connections as possible before connecting with the sphere. Turn PAIRING off and then on and connect with "Sphere".

D. CARE INSTRUCTIONS

1. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
2. When storing the product, carefully remove from the current location to avoid any undue strain or stress on the conductors, connections and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
4. If necessary, clean product by wiping with a soft, dry cloth. Do not use any corrosive cleanser or chemical solution on this item.

E. SAFETY INSTRUCTIONS AND WARNINGS

WARNING:

THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS, WHICH COULD CAUSE CHOKING IF SWALLOWED.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL.

PLEASE ADHERE TO THE FOLLOWING:

1. **Read Instructions** - All safety and operating instructions should be read before the item is operated. Please adhere to the instructions and warnings for your safety.
2. **Heat** - The item should be situated away from heat sources such as radiators, hairdryers, heat registers, stoves or other appliances that produce heat.
3. **Damage Requiring Service** - Have a qualified service personnel service this item when:
 - a) All troubleshooting techniques have been tried and the item will not work or has stopped working.
 - b) The item has been dropped or the enclosure damaged.

FEDERAL COMMUNICATIONS COMMISSION, PART 15

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- (a) reorient or relocate the receiving antenna;
- (b) increase the separation between the equipment and the receiver;
- (c) connect the equipment to an outlet on a circuit different from that to which the receiver is connected;
- (d) consult the dealer or an experienced radio/TV technician for help.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Mobile device: This device complies with FCC's radiation exposure limits set forth for an uncontrolled environment. The device should be installed and operated with a minimum distance of 20cm between the radiator and your body. This device must not be collocated or operating in conjunction with any other antenna or transmitter.

Made expressly for the Valerie Parr Hill Collection
