



BISTRO LIGHTS

For the delight and amusement for all people age 14 and over.

Please read these entire instructions before using and retain for future reference. For indoor and outdoor use.

A. OPERATION

1. Open the remote control battery compartment cover and insert 2 x AAA batteries (not included) into the battery compartment. Align "+" and "-" as marked inside the battery compartment.
2. Close the battery compartment cover.
3. Plug the adapter into a nearby working outlet to light up the mechanism. **The adapter is intended to be correctly oriented in a vertical or floor mount position.**
4. Use the remote (See Fig. 2) to select the desired color sequence (See Fig. 3).
5. Use the remote to turn the unit on or off.

B. TO CONNECT UP TO FOUR SETS OF BISTRO LIGHTS USING THE END CONNECTORS

1. Remove the cap from the end connector at the back of unit #1.
2. Remove the adapter and controller from the front of unit #2.
3. Insert the light strand plug from unit #2 into the end connector at the back of unit #1.
4. Repeat for additional sets up to a total of four sets.
5. Plug the adapter connected to the first unit into a power source.
6. Use the remote from the first set (the one with the adapter that is plugged into a power source), to control the lights of all connected sets.
7. Press the ON/ OFF button on the remote to turn on.

IMPORTANT:

Do not connect more than four sets. Only connect Bistro Lights, other lighting will not work. Always use the remote from the first set to control the lights of all connected sets.

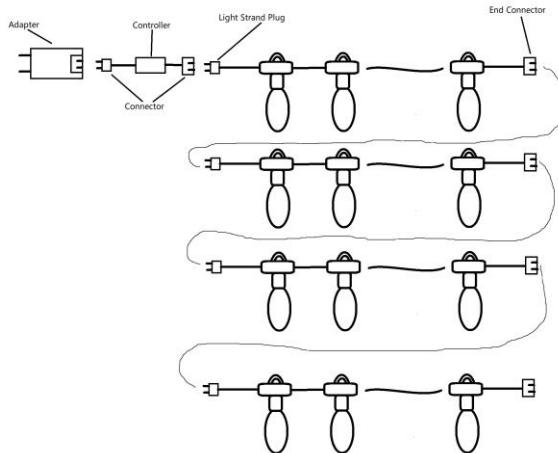


Fig. 1

C. UP TO EIGHT UNITS CAN BE CONNECTED REMOTELY WITHOUT PHYSICAL CONNECTION

1. One remote can activate all units.
2. Determine which remote from the multiple units will do the activating. The unit from which the remote came from does not need further set up.
3. Remove the next unit from the packaging.
 - * Plug into a power outlet.
 - * Using the remote from the first unit, press the ON / OFF button for about 5 seconds.
 - * Unplug the unit from the power source.
 - * Plug the unit into the power source.
 - * The remote should activate the first and second units.
 - * Repeat this process if it does not.
4. Repeat step 3 for additional units always using the remote from the first unit.
5. Always set up one by one. Set up for all units cannot be done at the same time.

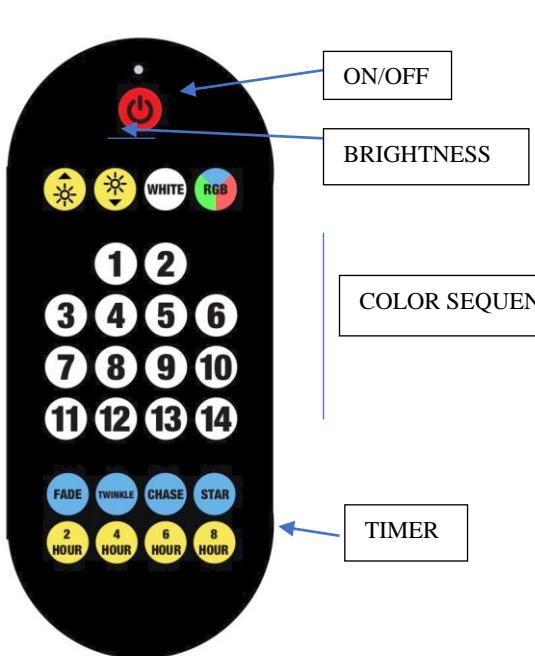


Fig. 2

COLOR SEQUENCES

1	Everyday - Warm White
2	Valentines - Red
3	Mardi Gras - Purple, Gold, Green
4	St. Patrick's Day - Green
5	Easter - Blue, Green, Yellow, Pink, Purple
6	Mother's Day - Pink
7	Patriotic - Red, White and Blue
8	Halloween - Orange
9	Halloween - Purple
10	Thanksgiving - Orange, Amber
11	Christmas - Blue
12	Christmas - Red and White
13	Christmas - Red and Green
14	Christmas - Blue, Red, White, Green, Purple, Yellow

Fig. 3

IMPORTANT:

Synchronize each additional unit with the original remote one by one. Do not synchronize all at the same time. Maximum activation distance from the remote is 6 feet or 20 meters.

D. TROUBLESHOOTING

PROBLEM	LIKELY CAUSE	SOLUTION
No light	No power	Make sure the adaptor is plugged into a working outlet Plug the adaptor into a nearby working outlet to light up the mechanism
	More than four sets are connected	Disconnect additional sets
	Improper connection	Check connection
Remote does not work	Batteries not inserted correctly	Make sure to align the "+" and "-" as marked inside the battery compartment
	Batteries exhausted	Change to new batteries
Connected units do not work	Units not connected properly	Please follow the instructions in sections B and C

E. CARE INSTRUCTIONS

1. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
2. When storing the product, carefully remove from the current location to avoid any undue strain or stress on the conductors, connections and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
4. If necessary, clean product by wiping with a soft, dry cloth. Do not use any corrosive cleanser or chemical solution on this item.

The following is only applicable to customers in the USA:

For more information about this product, please call 1-800-467-9627, or visit our website www.mrchristmas.com. We will be happy to help you!

FEDERAL COMMUNICATIONS COMMISSION, PART 15:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NINETY-DAY LIMITED WARRANTY

Mr. Christmas warrants the original customer / purchaser of the **BISTRO LIGHTS** that they will be free from defects in material and workmanship for a period of ninety (90) days from date-of-purchase. Any liability under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer / purchaser. This warranty does not cover defects caused by damages in transit, abuse, accident, negligence or repairs made by others. This warranty gives the original consumer / purchaser specific legal rights. The original consumer / purchaser may also have other rights which vary from state to state.

Made by Mr. Christmas Inc.
41 Madison Avenue, 21/F., New York, NY 10010
Phone : 1-800-467-9627