

THIS PRODUCT IS NOT A TOY HARMONIQUE GRAMOPHONE



SENSOR

I. DESCRIPTION

Thank you for purchasing the **HARMONIQUE GRAMOPHONE**. Using the newest Radio Frequency Identification technology, the unit can play 12 Christmas songs. Place a record on the gramophone and play your selected song. This product is not a toy and is not intended for use by children.

II. TO INSTALL THE BATTERIES

1. Remove the battery compartment cover located at the back of the **HARMONIQUE GRAMOPHONE**.
2. Insert the 4 x "AA" batteries (not included) into the battery compartment making sure to align "+" and "-" as marked inside the compartment.

III. OPERATION

1. The item is presence activated. Approach the sensor at the front of the unit to activate.
2. Turn the power/ volume knob towards the max position.
3. Place a record on turntable. The unit will start to play music.
4. After the song is over, you will have the opportunity to place new record on the turntable. If you do not place a new record on the turntable, the unit will play sequentially.
5. Turn the power/ volume knob to adjust the loudness of the music.
NOTE: WHEN THE VOLUME KNOB IS AT ITS MINIMUM SETTING, NO MUSIC CAN BE HEARD.
6. Turn the volume knob to "OFF" when the unit is not in use.
7. The arm on the side is for decoration purposes only and has no function.

IV. TROUBLE SHOOTING

Your **HARMONIQUE GRAMOPHONE** has been designed to give many seasons of trouble-free operation. In the event that a problem does occur, please refer to the following chart for suggest solutions.

<i>Problem</i>	<i>Likely Causes</i>	<i>Solution</i>
No Music	1. No power	Make sure the batteries are installed properly and aligned with the "+" and "-" polarity as marked inside the battery compartment. Push each battery so that the "+" polarity of the battery contacts the end of the battery compartment.
	2. Exhausted batteries	Replace with new batteries.
	3. The power knob is "OFF"	Turn the power / volume knob to the "ON" position.
	4. Unit is in "SLEEP MODE"	Approach the front of the unit to activate the sensor.
Music is too loud or too soft, or not clear	1. Volume knob is incorrectly adjusted	Turn the Volume knob to your preferred loudness.

V. SAFETY WARNINGS AND INSTRUCTIONS

WARNING: THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL. PLEASE ADHERE TO THE FOLLOWING:

1. Read Instructions - All safety and operating instructions should be read before the appliance is operated. Please adhere to the instructions and warnings for your safety.
2. Water and Moisture - Do NOT put appliance near water of any kind: a bathtub, washbowl, kitchen sink, or a wet floor or near a swimming pool.
3. Heat - The appliance should be situated away from heat sources such as radiators, hairdryers, heat registers, stoves or other appliances that produce heat.
4. Power Sources - The appliance should be connected to a power supply only like the one which comes with the appliance.
5. Damage Requiring Service - Have a qualified service personnel service this appliance when:
 - A. The power-supply cord or plug has been damaged.
 - B. Objects have fallen or liquid has spilled into the appliance.
 - C. The appliance has been exposed to rain or moisture.
 - D. All troubleshooting techniques have been tried and the appliance will not work or has stopped working.
 - E. The appliance has been dropped or the enclosure damaged.

Federal Communications Commission Code, Part 15:

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures: (a) reorient or relocate the receiving antenna; (b) increase the separation between the equipment and the receiver; (c) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; or (d) consult the dealer or an experienced radio/TV technician for help.

Modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.
the equipment.