

Another Original™
Mr. Christmas®

<http://www.mrchristmas.com>

Magical Maestro Mouse

INSTRUCTION MANUAL
GEBRAUCHSANWEISUNG
MANUEL D'INSTRUCTION
MANUAL DE INSTRUCCIONES

THIS PRECISION SET IS NOT A TOY!

I. Description

Thank you for purchasing Mr.Christmas' **MAGICAL MAESTRO MOUSE** . This product features an animated mouse that can play up to 24 favorite holiday tunes on his piano. Place one of the music sheet on his piano and the mouse will talk with you and then play a song or songs.

The **MAGICAL MAESTRO MOUSE** can be displayed on a table, mantel, or on any flat surface.

We are very proud of the **MAGICAL MAESTRO MOUSE**, the latest addition to our line of innovative holiday decorations. We hope that you will get many years of enjoyment from this fine product.

II.Unpacking the unit

Your **MAGICAL MAESTRO MOUSE** has been carefully packed to assure that it will reach you in perfect condition. To unpack, follow these steps:

1. Carefully open the box.
2. Take the **MAGICAL MAESTRO MOUSE** out and remove the blister attached to the two sides of the piano.
NOTE: DO NOT LIFT THE MAGICAL MAESTRO MOUSE BY HOLDING THE MOUSE.
3. Switch off the unit (See FIG.I) and pull out the activating strip (See FIG.II).
4. Remove the string from the two songs located at the front of the blister. Store the songs in the side compartments on each side of the piano (See FIG.II and IV).
5. Open battery door.
6. Install new batteries according to +/- polarity. If batteries are not installed properly, the device will not function. (See FIG.III)
7. Replace battery door.
8. The unit is now free of the packaging. Be sure to save the packing for storage of your **MAGICAL MAESTRO MOUSE** from season to season.

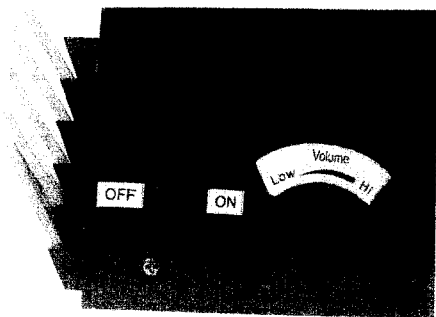 


FIG. I



Activating Strip

FIG. II

 
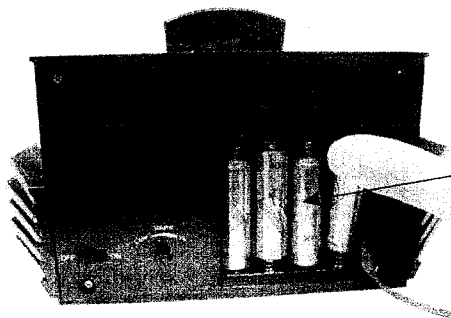 


FIG. III

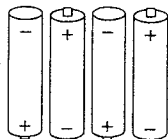

Music Stand

Side Compartment

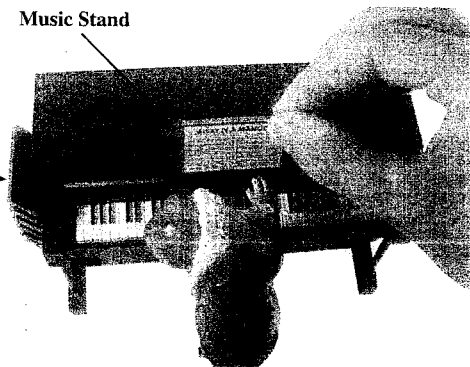 


FIG. IV

III. Setting up the unit

Follow these instructions to get maximum enjoyment from your **MAGICAL MAESTRO MOUSE**.

1. Switch on the unit.
2. The item is presence activated. Approach the front and the mouse will move and ask you for a song selection.
3. Place a song on the music stand. See FIG.IV.
4. After the song is over, you will have the opportunity to place a new song on the stand. If you do not place a new song on the music stand, the unit will play up to 6 songs randomly.
5. To hear more music, place a new song on the stand.
6. Turn the volume control to adjust the volume of the music.

NOTE: WHEN THE VOLUME CONTROL IS AT ITS MINIMUM SETTING, NO MUSIC CAN BE HEARD.

IV. Trouble shooting

Your **MAGICAL MAESTRO MOUSE** has been designed to give many seasons of trouble-free operation. In the event that a problem does occur, please refer to the following chart for suggested solutions.

<u>Problem</u>	<u>Likely Cause</u>	<u>Solution</u>
No music, or motion.	No power	Make sure there are batteries in the unit and they correctly installed.
Music is playing but the mouse does not turn.	Power is interrupted	Turn the power off and then back on.
Music too loud or too soft, or no music.	Volume control incorrectly adjusted	Adjust volume control.
No Music.	Unit is in sleep mode	Place new song on the On the music stand.

FOR MORE INFORMATION ABOUT THIS PRODUCT, PLEASE
CALL 1-800-4MR-XMAS, OR VISIT OUR WEBSITE!

<http://www.mrchristmas.com>

THIS IS NOT A TOY!

THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD
CAUSE CHOKING IF SWALLOWED.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD. DO NOT
EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT
REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

THE FOLLOWING IS APPLICABLE TO USA ONLY

SAFETY INSTRUCTION

1. Read instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. Head Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow instructions - All operating and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water- for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
6. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

7. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
8. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
9. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
10. Servicing - The user not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

90- DAY LIMITED WARRANTY

Mr. Christmas warrants to the original consumer/purchaser of **MAGICAL MAESTRO MOUSE** that it will be free from defects in material and workmanship for a period of 90 days from date-of-purchase. Any liability of Regular Line under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of purchase, name and mailing address of the original consumers purchasers. This warranty does not cover defects caused by damages in transit, abuse, accident, negligence or repairs made by others. This warranty gives the consumer purchaser specific legal rights. This consumer/purchaser may also have other rights, which vary, from state to state.

©2004 MR. CHRISTMAS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID : SHVMAESTROMOUSE

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and**
- (2) this device must accept any interference received, including interference that may cause undesired operation.**