

EkoTek Pager



## **USER GUIDE**

**For**

**EkoTek Pager**

**9261-8275 (Issue 2.0)**

## CONTENTS

<b>Introduction</b>	<b>4</b>
<b>Compliance</b>	<b>5</b>
<b>General User Information</b>	<b>6</b>
<b>EkoTek System Schematic</b>	<b>7</b>
<b>Switching On Your EkoTek Pager</b>	<b>7</b>
<b>Switching On Your EkoTek Pager</b>	<b>8</b>
<b>Status and Warning Messages</b>	<b>9</b>
<b>Switching Off Your EkoTek Pager</b>	<b>10</b>
<b>Using the Emergency / Assist Button</b>	<b>11</b>
<b>Dead Man &amp; Man Down Alert</b>	<b>12</b>
<b>Receiving a Message</b>	<b>14</b>
<b>Reading a Message</b>	<b>16</b>
<b>Viewing a Message Again</b>	<b>17</b>
<b>Accepting, Rejecting &amp; Deleting Two-Way Messages</b>	<b>18</b>
<b>Deleting a Message</b>	<b>19</b>
<b>Delete All Messages</b>	<b>21</b>
<b>Archiving a Message</b>	<b>22</b>
<b>Reviewing Archived Messages</b>	<b>23</b>
<b>Deleting Archived Messages</b>	<b>24</b>

 
EkoTek Pager

<b>Delete All Archived Messages</b>	<b>25</b>
<b>Set 12/24 Hour Mode</b>	<b>26</b>
<b>Power Save</b>	<b>27</b>
<b>Setting the Alert Options</b>	<b>28</b>
<b>Setting the Message Display Options</b>	<b>30</b>
<b>Setting Auto Delete</b>	<b>32</b>
<b>Changing the Battery</b>	<b>33</b>

## Introduction

Your EkoTek Pager is an alphanumeric two-way messaging device, incorporating an emergency calling/assist facility. The EkoTek Pager is able to receive text messages, allows basic responses and provides the ability to store messages for later viewing. The high contrast screen is capable of displaying up to 150 characters and all menus are displayed in plain language text. Operation of all functions is performed via intuitive menus using 3 tactile buttons and the red button is used for assist or emergency applications. To gain full benefit from this product please read this guide carefully.

## Function / Control Buttons

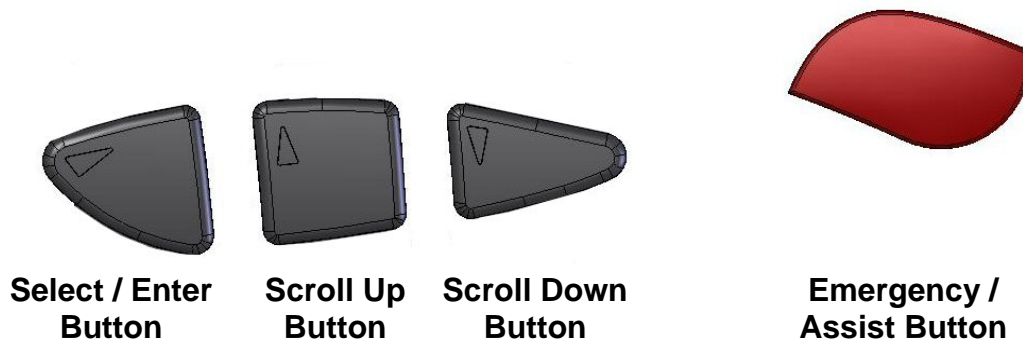

### Select & Enter Button

Denoted by the ► symbol, this button is used to move to and confirm selected options within the Menu Screens and to return to the Standby Screen when pressed for more than 1 second.

### Scroll Up/Down Buttons

Denoted by the ▲ (Up) and ▼ (Down) Symbols. These buttons are used to scroll up and down the Menu Screens.

### Emergency & Assist Button

Denoted by the Red button, this can be either Single or Double press. Operation is dependent upon product configuration.

## Compliance

This product complies with the requirements of the EU Radio & Telecommunications Terminal Equipment Directive 99/5/EC.

### FCC & Industry Canada Statement Of Compliance

 
This device complies with Part 15 of the FCC Rules and Industry Canada Standard RSS 210.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference that may cause undesired operation.

Unauthorised modification to this equipment will void the user's authority to continue to operate the device within the scope of the Industry Canada and FCC Part 15 Rules.

A full technical specification for this product may be obtained from your Multitone representative.

### WEEE Directive & Product Disposal

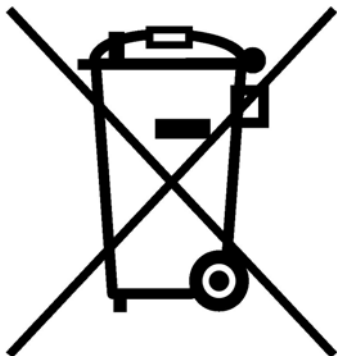

At the end of its serviceable life, this product should not be treated as household, or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

## **General User Information**

### **Radio Reception**

Your EkoTek Pager has been designed to give optimum performance within the coverage area of the transmitting system. As with any radio system there may be areas of poor coverage, where reception may be sporadic, or non-existent. If necessary, consult your system administrator in order to familiarise yourself with these areas.

### **Hazardous Areas**

This pager should not be taken into areas where explosive gas, or dust products, may be present.

 
### **Pager Care**

Protect your pager from liquids, extreme temperatures and strong magnetic fields. Do not leave your pager exposed to strong sunlight.

### **Servicing**

Should your EkoTeK Pager need repair, return it to the designated service agent. Do not attempt to open or repair the product, as it contains delicate components and requires specialised test equipment.

## EkoTek System Schematic

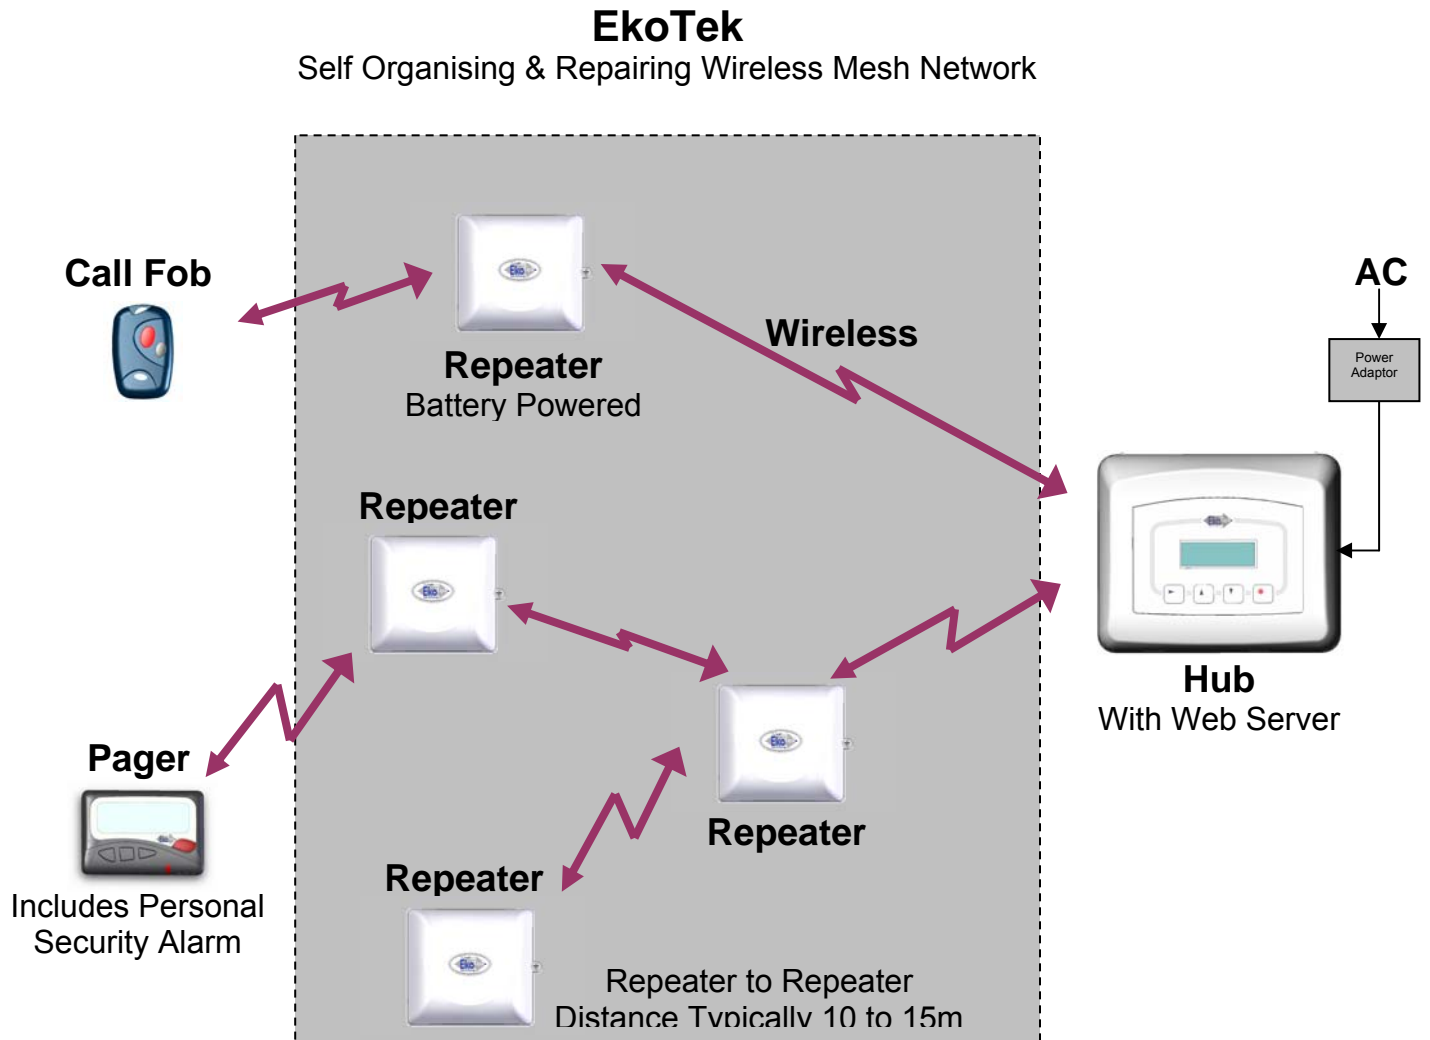

## Switching On Your EkoTek Pager

To switch on, press and hold the ► button for more than half a second. A message will then be displayed for three seconds, whilst self-checks are being performed. Finally, the Standby Screen will be displayed:



11!34 AM 12.03.07

An exclamation mark (!) will flash between the Hours and the Minutes (11!34 AM). This indicates that the EkoTek Pager is in the process of detecting the EkoTek wireless network. Once the network is detected this will change to a flashing 'colon' or 'period' symbol.

If your EkoTek Pager does not switch on, check that a fresh battery is correctly installed, see section: **Changing the Battery**.

The 4<sup>th</sup> line of the screen will display either 'EkoTek' or a location name once the pager has received its configuration from the network.



## Status and Warning Messages

When your EkoTek Pager is switched on the Standby Screen is displayed. This consists of the time and date plus additional status and warning messages. A typical screen is shown below:

11:34 AM 12.03.07	Day
Paul Smith	
Silent	
EkoTeK	

The first line is the clock displaying the current time and date, the time may be in either a 12 or 24-hour format. In the top right hand corner the pager will display **Day** or **Night** this is used to indicate the shift mode.

The second line displays **The Pager Name** or '**n**' **Unread Message**, showing how many messages have been received but not viewed.

 
The third line shows the status of the alert, **Silent** to warn that the audible alert has been turned off, or **No Vibrate** to show that the vibrate alert has been turned off. When both audible and vibrate alerts are turned off, **Silent** and **No Vibrate** alternate at 2-second intervals. If nothing is displayed, then both audible and vibrate alert are turned on.

The fourth line normally displays the **EkoTek** logo or location information, however, once the battery reaches a state where it requires replacement, **Replace Battery** will be displayed.


If the EkoTek Pager is out of range from the wireless network the **Out of Range** message will also be displayed. In situations where the 'battery requires replacement' and the pager is 'out of range' only the highest priority will be displayed.

## Switching Off Your EkoTek Pager

From the Standby Screen press and release the ► button. The options screen will now be displayed:

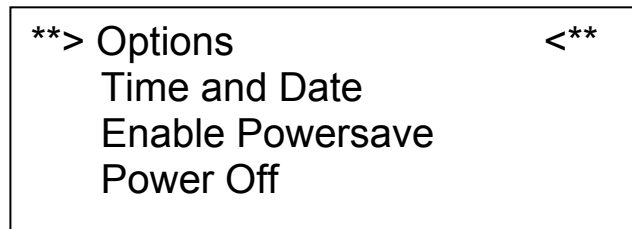

 The two pointers show the item that will be selected if the ► button is pressed. Use the ▲ or ▼ buttons to move the pointers to **Power Off** and select this item by pressing the ► button. The pointers will change to question marks showing that confirmation is required to switch the unit off:

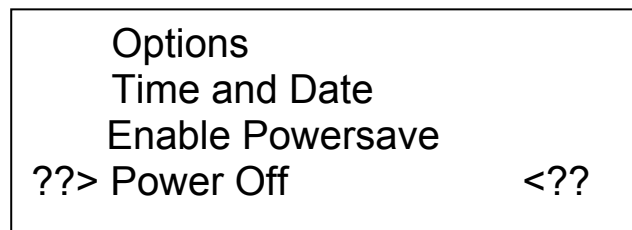

Press the ► button again and your EkoTek Pager will switch off.

## Using the Emergency / Assist Button

**Note:** *This feature has to be enabled by the System Supervisor*

### Raising an Alarm

In the event of an Emergency or where immediate Assistance is required press the **RED** button. Depending on how the EkoTek system is configured this may require a single or a double press. Please confirm this with your EkoTek system supervisor.

On pressing the **RED** button the EkoTek Pager will either beep and/or vibrate in sequence with a flashing alert lamp. Please note that the precise nature of this acknowledgement is subject to configuration. The screen will display the following information indicating that the alarm has been raised and delivered:

11:34 AM 12.03.07	Day
Paul Smith	
Raising Alarm	

11:34 AM 12.03.07	Day
No Unread Message	
Alarm Delivered	

### Cancelling an Alarm

At any stage during the initiation of an emergency / assist alarm it can be cancelled. To cancel the alarm press and hold the ► button, the display will confirm this action with the following message:

11:34 AM 12.03.07	Day
Paul Smith	
Clearing Alarm	

## Dead Man & Man Down Alert

Your EkoTek Pager is equipped with a Dead Man Alert and a Man Down Alarm facility. These features have to be enabled by the System Supervisor.

### Dead Man Alert

The Dead Man Alert operates by initiating an alert to the EkoTek Pager at pre-set time intervals, this alert must be acknowledged by single press on **ANY** of the pager buttons within a pre-set time period. Please note that the System Supervisor configures both the frequency of the Dead Man Alert and the required response time.

11:34 AM 12.03.07	Day
Paul Smith	
Press any key to cancel	

If the alert is not acknowledged within the pre-set time period the EkoTek Pager will automatically initiate the following alarm escalation sequence:

11:34 AM 12.03.07	Day
Paul Smith	
Raising Alarm	

11:34 AM 12.03.07	Day
Paul Smith	
Alarm Delivered	

Please note that at any stage during the Dead Man Alert process it is possible to cancel the alarm by pressing the ► button.

## EkoTek Pager

### Man Down Alert

The Dead Man Alert operates by automatically initiating an alert sequence if the EkoTek Pager is tipped over:



If the EkoTek Pager is tipped-over after a pre-set time interval the pager will beep and will display following warning:

11:34 AM 12.03.07	Day
Paul Smith	
Return unit to upright	

This allows the unit to be returned to an upright position, terminating the alarm sequence. If the EkoTek Pager cannot be righted the following alarm escalation sequence will be initiated:

11:34 AM 12.03.07	Day
Paul Smith	
Raising Alarm	

11:34 AM 12.03.07	Day
Paul Smith	
Alarm Delivered	

Please note that at any stage during the Man Down Alert process it is possible to cancel the alarm by pressing the ► button.

## Receiving a Message

When your EkoTek Pager receives a message, the lamp, vibrate and the audible alert will activate, unless silent mode has been selected or the vibrate facility has been turned off. The message will be displayed during the alert period.

Your car will be ready for  
collection next Monday  
afternoon■

The end of the message is always shown by the character ■. If the message is very long and cannot be fully displayed the last character will be designated using the following symbol ▶. This indicates that the message continues onto the next screen:

Contact Mr Moore of ABC  
Electronics Tel: 01763-246391.  
The new contract is ready for  
signature can you sign this▶

To see the rest of the message, simply press the ▶ button:

before Wednesday. JILL■

If the message is not acknowledged the EkoTek Pager will return to the Standby Screen indicating that a message has been received:

3:54 PM 12.03.07  
1 Unread Message

## EkoTek Pager

As each new message is received it is stored. The maximum number of messages that can be stored is 6. To make room for new messages your EkoTek Pager will start to delete the oldest read messages. If there are no read messages it will delete the oldest unread message.

## Reading a Message

To read a message, press the ▼ button whilst your EkoTek Pager is in the Standby Screen. The most recently received unread message will be displayed:

4:38 PM 12.09.06	Unread
Your car will be ready for collection next Monday afternoon■	

The top line shows the time and the date the message was received and to the right message status will be displayed, this will either be **Unread** or **Read**.

Press the ▼ button to display the next previously received unread message, or select the ▲ button to display the previously viewed message.

9:05 AM 12.09.06	Unread
Contact Mr Moore of ABC Electronics Tel: 01763 - 246391. The new contract is ready▶	

Using the ▲ and ▼ buttons allow navigation of the stored messages. Unread messages are sorted in time order and are displayed first, followed by the read messages, also in time order.

2:17 PM 12.09.06	Read
You are booked on Flight BA153. Departs at 18:05 ticket confirmed. Helen■	



## Viewing a Message Again

While a message is being displayed, press the ► button and the message option screen will be displayed. The display response will depend upon the message type received. If it is a single-way message the following options will be displayed:

**> View Again	<**
Delete	
Delete All	
Archive	

If it is a two-way message, the options change to allow initiation of a response (see section on accepting, rejecting and deleting two-way messages):

**> View Again	<**
Accept	
Reject	
Delete	

Both options allow you to view the message. Press the ► button again to select **View Again** the EkoTek Pager will display the last message again, which will then remain in the memory for you to view in future, until deleted.

 
9:05 AM 12.09.06	Read
Contact Mr Moore of ABC Electronics Tel: 01763 - 246391. The new contract is ready ►	

If the message is in an unread state when **View Again** is selected, the status will change to **Read**. Should the **View Again** option be used on a message before it has been retrieved from the memory, the date and time will be displayed with the message when it is displayed again, with the status set to **Read**.


## Accepting, Rejecting & Deleting Two-Way Messages

On receipt of a message press the ► button directly. Or


From the Standby Screen press the ▼ button to read the message, press the ► button to acknowledge the message. For two-way messages the following options screen will be displayed:

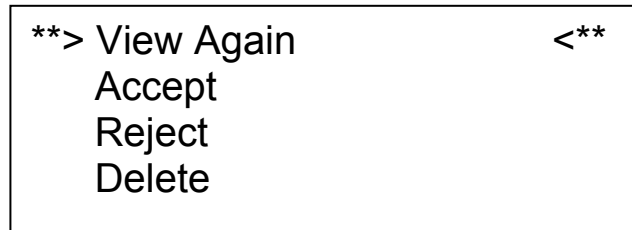

 To respond to the message press the ▼ button and move the pointers to: **Accept**, **Reject** or **Delete**. Select the option by pressing the ► button:

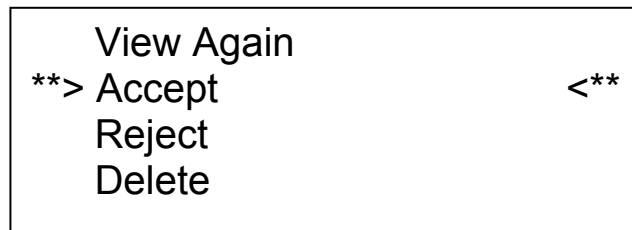

 The pointers will change to question marks requesting confirmation of the action:

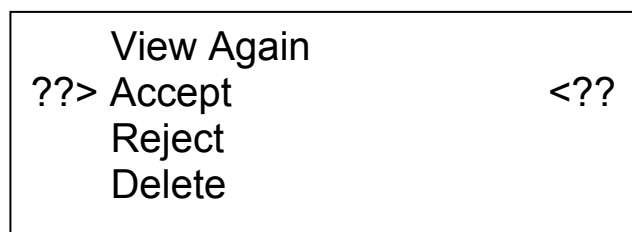

To confirm the action press the ► button, the EkoTek Pager will briefly display the following depending on the action selected:

- For **Accept** the response is: **Sending Accept Response**
- For **Reject** the response is: **Sending Reject Response**
- For **Delete** the response is: **Deleting**

## Deleting a Message

To delete a message, press the ► button when the ■ appears at the end of the message. The message option screens will be displayed depending on the message type received:

For 1-way Messages:

**> View Again	<**
Delete	
Delete All	
Archive	

For 2-way Messages:

**> View Again	<**
Accept	
Reject	
Delete	

Press the ▼ button to move the pointers to the **Delete** item and select by pressing the ► button:

For 1-way Messages:

**> View Again	<**
Delete	
Delete All	
Archive	

For 2-way Messages:

View Again	
Accept	
Reject	
**> Delete	<**

The pointers will change to question marks to show that confirmation of the delete action is required. If you do not want to delete, press the ▲ or ▼ buttons. To confirm that you wish to delete the message, press the ► button again and the screen will briefly display **Deleting**.

## EkoTek Pager

 
When the current message has been deleted, the previously received message will be displayed. If you wish to delete this message repeat the procedure above. To return to the Standby Screen press and hold the ► button for one second, if there are no more messages, the following screen will be displayed:




## Delete All Messages

**Note:** The delete all feature is available to all 1-way messages. However, for 2-way messages the delete all feature can only be accessed once the message has been viewed and appropriate action taken.


To delete all the messages, press the ► button when the ■ appears at the end of the message. The message option screen will be displayed:

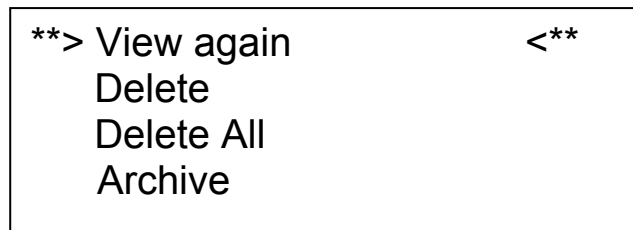

 Press the ▼ button to move the pointers to the **Delete All** item and select by pressing the ► button:

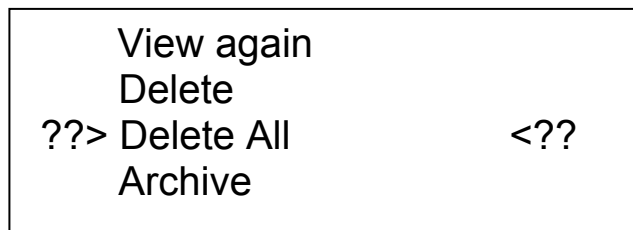

 
The pointers will change to question marks, to show that confirmation of the delete action is required. If you do not want to delete, press the ▲ or ▼ buttons. To confirm that you wish to delete the message, press the ► button again and the screen will briefly display **Deleting**. Having deleted all the messages the following screen will be displayed:

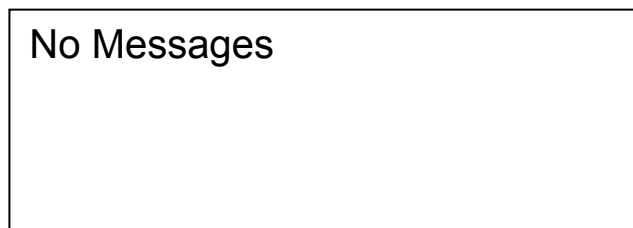

## Archiving a Message


**Note:** *The archive feature is available to all 1-way messages. However, for 2-way messages the archive feature can only be accessed once the message has been viewed and appropriate action taken.*

 Messages may be stored for reference, by using the archive facility. The EkoTek Pager cannot automatically delete archived messages when the message memory is full, only the user can delete messages. At the end of the message you wish to archive, press the ► button to see the message option screen. Move the pointers to the **Archive** item with the ▲ or ▼ button:

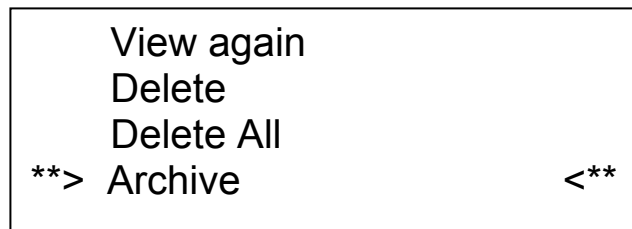

Select Archive with the ► button and the pointers will change to question marks.

 Confirm your selection by pressing the ► button again. The screen will briefly display **Archiving**. When the current message has been archived, the screen will show the previously received message. If you wish to archive this message, repeat the procedure. If there are no other messages, you may return to the Standby Screen by pressing and holding the ► button for one second. The following screen will be displayed:

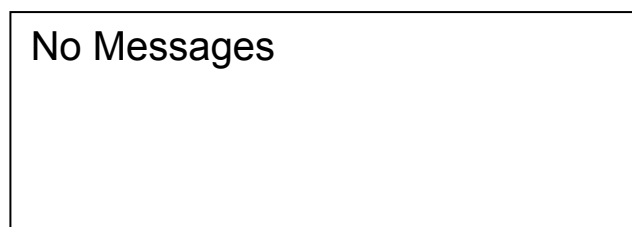

## Reviewing Archived Messages

To review your archived messages, press the ▲ button whilst your EkoTek Pager is displaying the Standby Screen:

 
10.50 AM 12.09.06	Archive
Bring 2 new demo models to the meeting at 11.30 next Tuesday.	
Ruth■	

The first screen of the most recent archived message will be displayed. You may select the archived message that you want to review, by pressing the: ▲ or ▼ buttons until the first screen of the message is displayed. If the archived message is several screens long, you can view subsequent screens by pressing the ► button. The last screen of the message will contain the ■ symbol.


The top line shows the time and date that the message was received and to the right the message status *Archive* is displayed.

## Deleting Archived Messages

To delete an archived message, press the ► button when the ■ symbol appears at the end of the message. The message option screen will be displayed:

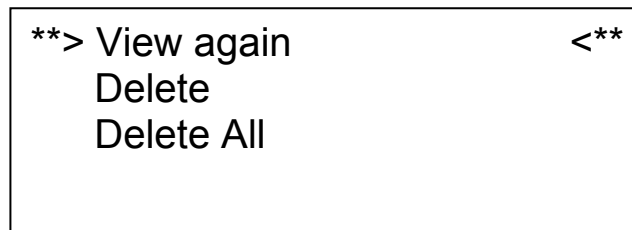


 Press the ▼ button to move the pointers to the **Delete** item and select by pressing the ► button. The pointers will change to question marks.

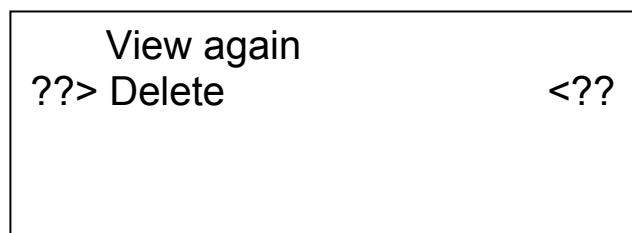

If you do not want to delete, press the ▲ or ▼ buttons. To confirm that you wish to delete the message press the ► button again and the screen will briefly display **Deleting**.

 When the current message has been deleted, the previously archived message will be displayed. If you wish to delete this message, repeat the procedure. If there are no more archived messages, the following screen will be displayed:

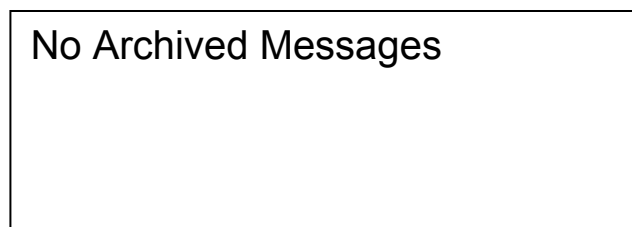


To return to the Standby Screen, press and hold the ► button for one second.




## Delete All Archived Messages

 
To delete all of the archived messages, press the ► button when the ■ symbol appears at the end of a message. The message option screen will be displayed:

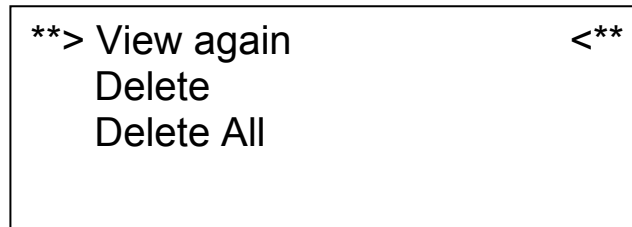

 Move the pointers to the **Delete All** item by pressing the ▼ button. Select by pressing the ► button and the pointers will change to question marks:

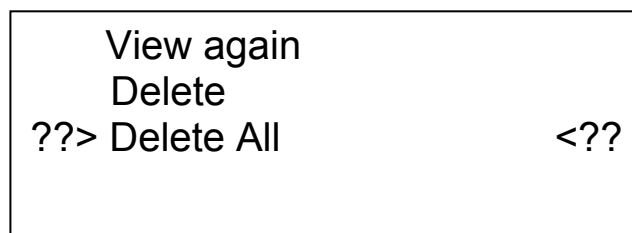

 If you do not want to delete all the messages press the: ▲ or ▼ buttons. To confirm that you wish to **Delete All** the messages, press the ► button again and the screen will briefly display **Deleting**:

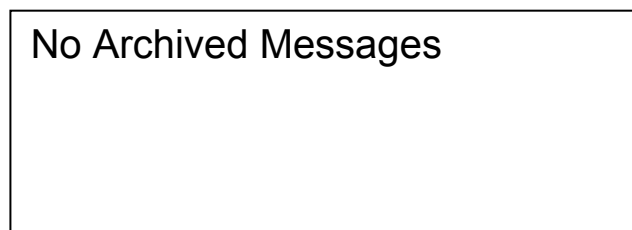


To return to the Standby Screen press and hold the ► button for one second.



## Set 12/24 Hour Mode

 The Set 12/24 Hour Mode function allows you to set 12 hour to 24-hour mode only.

From the Standby Screen press the ► button. From the Options Screen move the pointers to **Set 12/24 Hour Mode** by pressing the ▼ button:

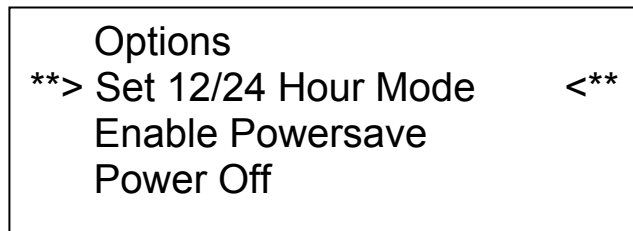

  Select this item by pressing the ► button and the pointers will change to question marks. Depending on whether the pager is in 12-hour or 24-hour mode the following screen will be displayed:

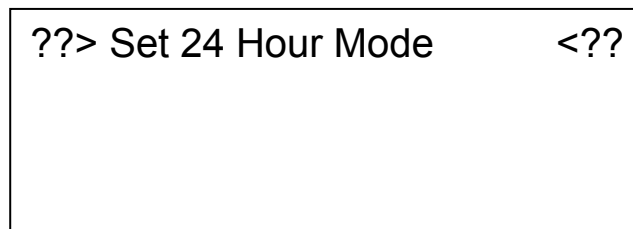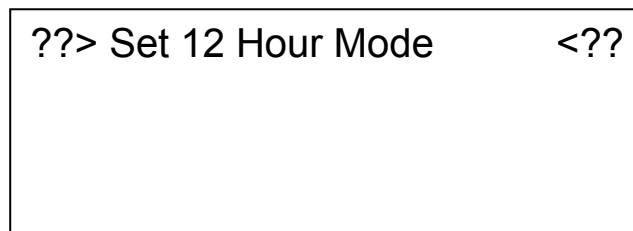


Press the ► button again to confirm the selection.

## Power Save

 The Power Save function allows the display to blank after a period to extend the battery life.


From the Standby Screen press the ► button. From the Options Screen move the pointers to **Enable Powersave** by pressing the ▼ button:

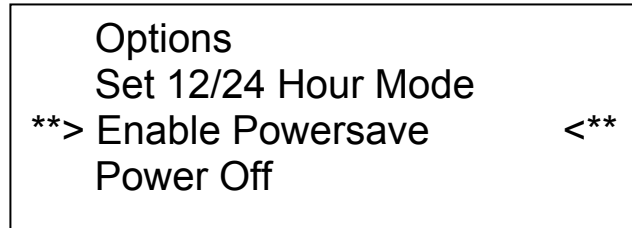


Select by pressing the ► button and the pointers will change to question marks. Press the ► button again to confirm the selection.

## Setting the Alert Options

 
The EkoTek Pager allows full control of how the pager alerts when messages are received, the audible alert and vibrate alert can be set to 'off' or 'on'. From the Standby Screen press the ► button to select the Options Screen:

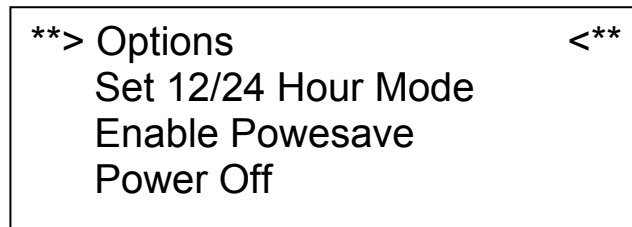

 Select **Options** and press the ► button again. The following screen will be displayed:

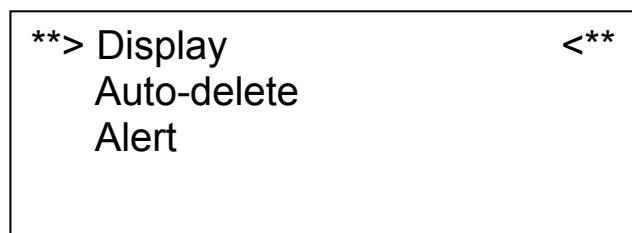

 Select **Alert** by pressing the ► button and the following screen will be displayed:

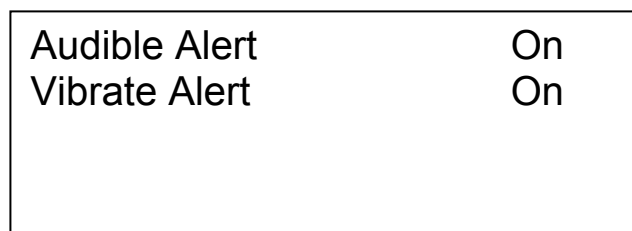

You are now able to modify the alert options. The currently selected item will flash and each press of the ► button will advance the selection to the next menu item.

## EkoTek Pager

When the item you wish to change is flashing, press the ▲ and ▼ button to change its value:

 
The ***Audible Alert*** can be either enabled, or disabled.

The ***Vibrate Alert*** can be either enabled, or disabled.


Once your desired alert options have been selected, press and hold the ► button for one second and the EkoTek Pager will return to the Standby Screen.

## Setting the Message Display Options


Your EkoTek Pager is equipped with display options and these may be set according to your personal requirements. To change the message display options, press the ► button from the Standby Screen. The Options Screen will now be displayed and select **Options** by pressing the ► button:

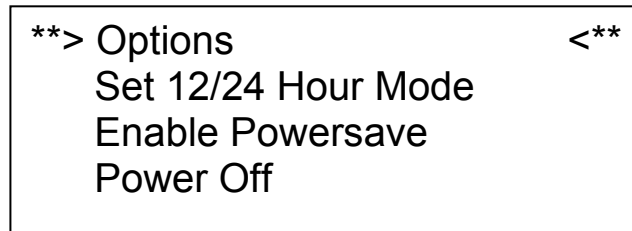

 Move the pointers to **Display** by pressing the ▼ button and select this item by pressing the ► button:

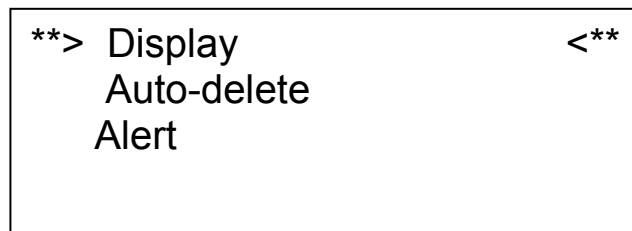

The following screen will be displayed:

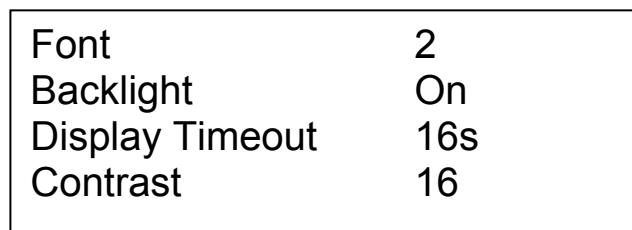 

The selected item will flash. To select the next item, press the ► button. Each press of the ► button will advance the selection to the next menu item. When the item you wish to change is flashing, press the ▲ or ▼ buttons to change its value.

## EkoTek Pager

The **Font** option can be set to 1, 2 or 3:

- Font option 1 - Corresponds to a text size allowing up to 6 lines per screen (this text size option may be disabled via the programming software).
- Font option 2 - Corresponds to a text size allowing up to 4 lines of larger text per screen.
- Font option 3 - Corresponds to a text size allowing up to 4 lines per screen of larger text, in a bold font (the date stamp can be suppressed via the programming software, when this text size is selected).

The **Backlight** can be either enabled, or disabled. When disabled, it will help to prolong battery life.

The **Display Timeout** can be set to 8, 16 or 32 seconds. This option determines the length of time that selected screen remains on display before reverting back to the Standby screen, if no buttons are selected.

 
The **Display Contrast** can be increased, or decreased.

When you have finished setting your display options, return to the Standby Screen by pressing and holding the ► button for 1 second.


## Setting Auto Delete

The **Auto Delete** function allows you to set the maximum number of stored messages, excluding those in the **Archive** memory. If the number of messages in the memory exceeds the selected number, then the oldest Read message is deleted. Should there be no Read messages, then the oldest un-read message is deleted instead.


If the **Auto Delete** value is changed and the number of messages in the memory exceeds the new setting, then one message will be deleted per minute, until the memory equals the new setting. The available options are 1 through to 6 messages. To access the **Auto Delete** function, press ► the button to display the Options Screen.

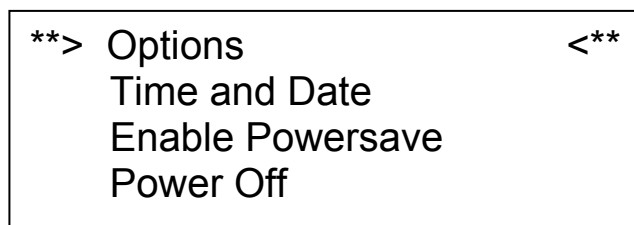

 Press the ► button to select **Options**. Move the pointers to **Auto-delete** by pressing the ▼ button and select using the ► button:

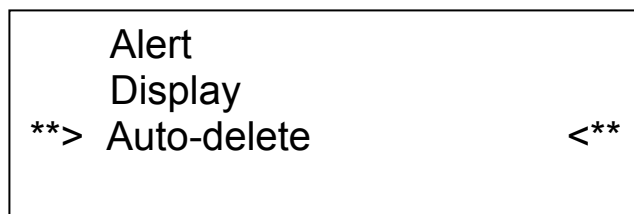

 The following screen will then be displayed:

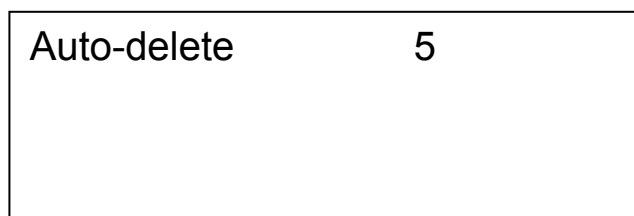


To set up **Auto-delete**, press the ▲ or ▼ button to change the setting and then return to the Standby Screen by pressing and holding the ► button for one second.




## Changing the Battery

 When the battery is near the end of its operating life, the EkoTek Pager is programmed to provide a visual, audio and vibrate alert warning. The normal audible beep alert will change to a different tone and the **Replace Battery** warning will be displayed on the Standby Screen:

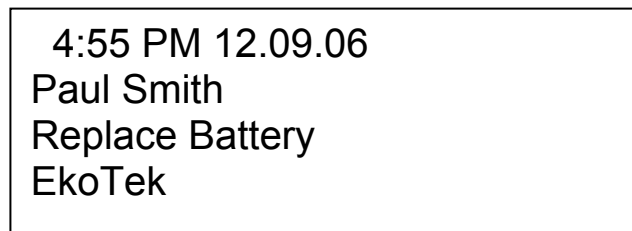

The EkoTek Pager will continue to operate normally for several days. To ensure that calls are not missed, the old battery should be replaced with a fresh AAA sized cell as soon as possible.

 To remove the battery door, press and hold the battery door lock "pip" on the back of your EkoTek Pager. At the same time slide the battery door off in the direction of the arrow.

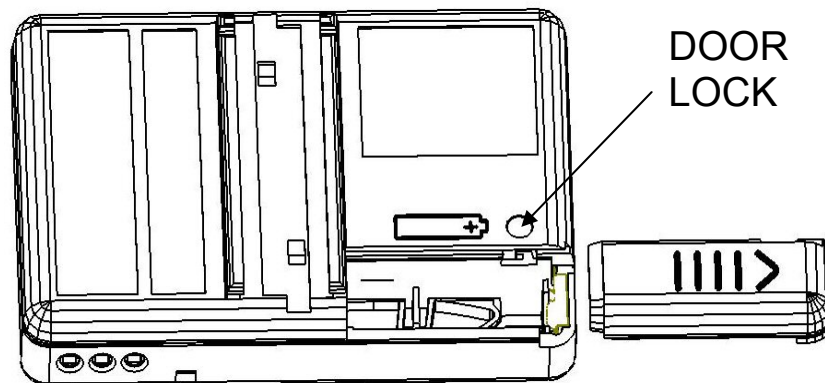

Insert the new battery in the direction as shown on the case back, by sliding in the negative (-) end first. Slide the battery door back into position so that it locks automatically with a click.

Dispose of the old battery carefully with consideration for the environment and do not recharge or incinerate alkaline batteries.

EkoTek Pager

**Notes:**

 


EkoTek Pager

**Multitone Electronics plc  
Multitone House,  
Shortwood Copse Lane,  
Basingstoke,  
Hampshire,  
England RG23 7DH**

**Part No. 9261-8275**


## Button Functions

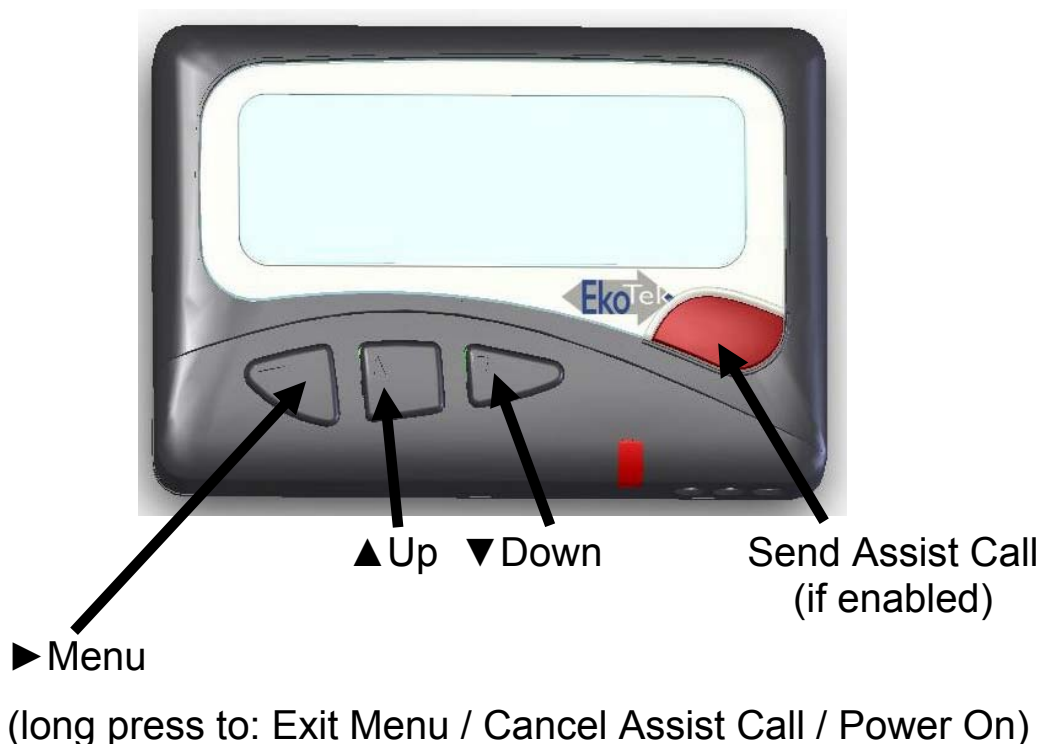

## Display

: or = on network

 ! = off network (press Menu button to search for network)

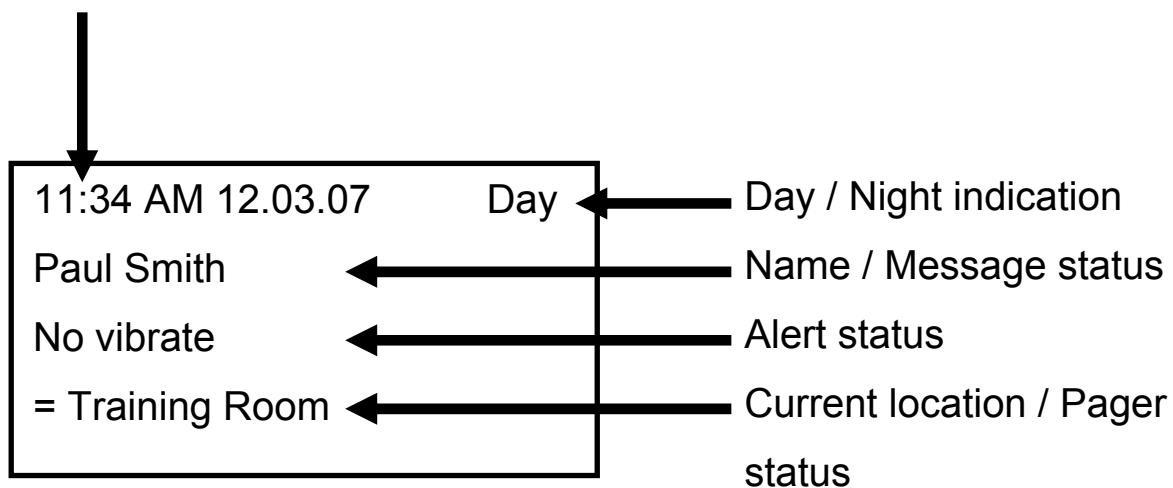

## **EkoTek Pager – Quick Instructions**

### **Navigating Menu from Main Screen**

#### **▶ Options ▶ Display**

- Font - set display font size
- Backlight - backlight ON or OFF (battery saving)
- Display Timeout - time before display returns to main screen
- Contrast - display contrast

#### **▶ Options ▶ Display ▼ Auto-delete ▶**

Sets maximum number of messages to keep in memory

#### **▶ Options ▶ Display ▼ ▼ Alert ▶**

Sets audible & vibrate alert for received messages  
(alert for red Assist button is set by Supervisor at Hub)

#### **▶ Options ▼ Time & Date ▶**

Sets 12/24 hour time display

#### **▶ Options ▼ ▼ Enable/Disable Powersave**

Powersave blanks display to extend battery life

#### **▶ Options ▼ ▼ ▼ Power Off ▶ ▶**

Switches Pager off  
(Long press on Menu button to switch on)

▲ Displays Archived messages

▼ Displays Received messages

### **Accepting an Assist Message**

▼ (to display message if not already displayed)

▶ View Again ▼ Accept ▶ ▶

### **Rejecting an Assist Message**

▼ (to display message if not already displayed)

 
▶ View Again ▼ ▼ Reject ▶ ▶

### **Connecting to a Network**

If the Pager has been taken off-network, press any black button when in range of a network to make the Pager quickly re-join the network (e.g. when arriving at work in the morning).

# EkoTek Pager – Quick Instructions

## Changing the Battery

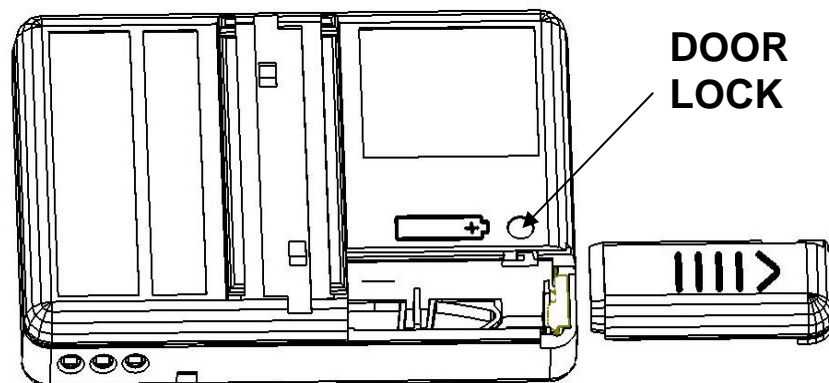

## Compliance

This product complies with the requirements of the EU Radio & Telecommunications Terminal Equipment Directive 99/5/EC.

### **FCC & Industry Canada Statement of Compliance**

This device complies with Part 15 of the FCC Rules and Industry Canada Standard RSS 210.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference that may cause undesired operation.

Unauthorised modification to this equipment will void the user's authority to continue to operate the device within the scope of the Industry Canada and FCC Part 15 Rules.

### **WEEE Directive & Product Disposal**



At the end of its serviceable life, this product should not be treated as household, or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

 
## EkoTek Pager – Quick Instructions

### Man-Down Operation (if enabled by Supervisor)



To prevent the automatic man-down alarm being sent, keep the Pager in an inverted position (normally worn in the Pager holster on a belt)

### Dead-Man Operation (if enabled by Supervisor)

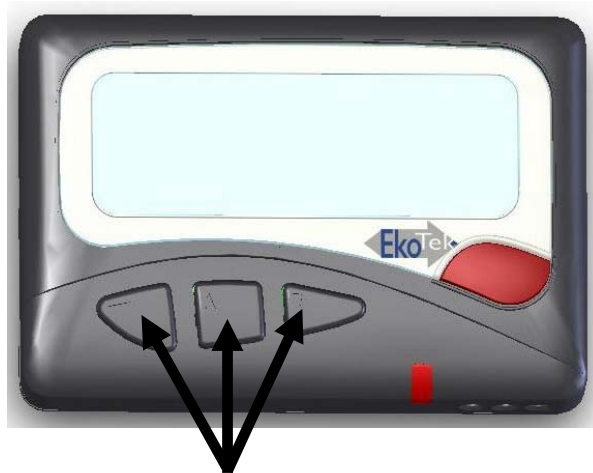

Press any of the three buttons to respond to periodic dead-man check (audible beep) and prevent automatic alarm generation



## Fonction des boutons



 
- ▶ Menu
- ▲ Haut ▼ Bas Envoyer un appel d'assistance (si active)

(un appui long permet de: Quitter le menú / Annuler l'appel d'assistance / Allumer l'appareil)

## Afficher

: ou = présence de réseau

! = pas de réseau (appuyer sur touche Menu pour rechercher un réseau)

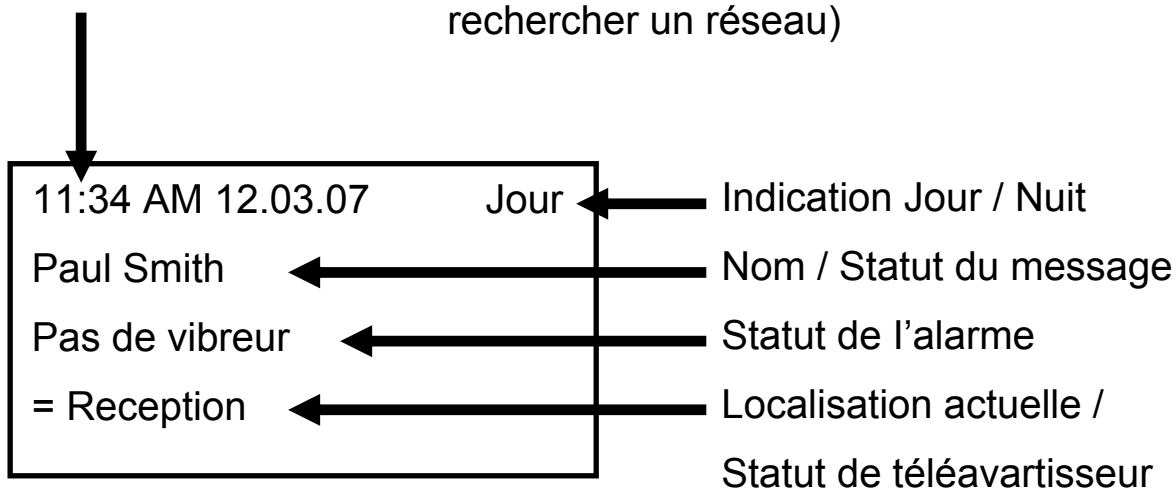

## **EkoTek Pager – Quick Instructions**

### **Menu de navigation à partir de l'Écran Principal**

#### ► Options ► Afficher

- Police - définit la taille de police de l'affichage
- Éclairage - éclairage ON ou OFF (économie de batterie)
- Durée d'affichage - temps restant avant l'affichage de l'écran principal
- Contraste - contraste de l'affichage

#### ► Options ► Afficher ▼ Effacement Auto ►

Définit le nombre maximum de messages à conserver dans la mémoire

#### ► Options ► Afficher ▼ ▼ Alerte ►

Définit l'alarme sonore et vibrante pour les messages entrants (l'alarme du bouton d'assistance rouge est configurée par le superviseur dans la station centrale)

#### ► Options ▼ Heure & Date ►

Définit l'affichage de l'heure en mode 12h/24h

#### ► Options ▼ ▼ Activer mode veille

Affichage d'un écran blanc économie d'énergie pour augmenter la durée de vie de la batterie

#### ► Options ▼▼▼ Éteindre ►►

Éteint le téléavertisseur (appui long sur la touche du Menu permettant de l'allumer)

▲ Montrer les messages archivés

▼ Montrer les messages reçus

### **Accepter un message d'assistance**

▼ (pour afficher le message si ce dernier ne l'est pas encore)

► Lire de nouveau ▼ Accepter ►►

### **Rejeter un message d'assistance**

▼ (pour afficher le message si ce dernier ne l'est pas encore)

 
► Lire de nouveau ▼▼ Rejeter ►►

### **Se connecter à un réseau**

Si le téléavertisseur a été mis hors réseau, appuyer sur n'importe quelle touche noire lorsque l'appareil entre dans une zone couverte par un réseau, pour le réactiver rapidement (par exemple, en arrivant au travail le matin).

# EkoTek Pager – Quick Instructions

## Changer la batterie

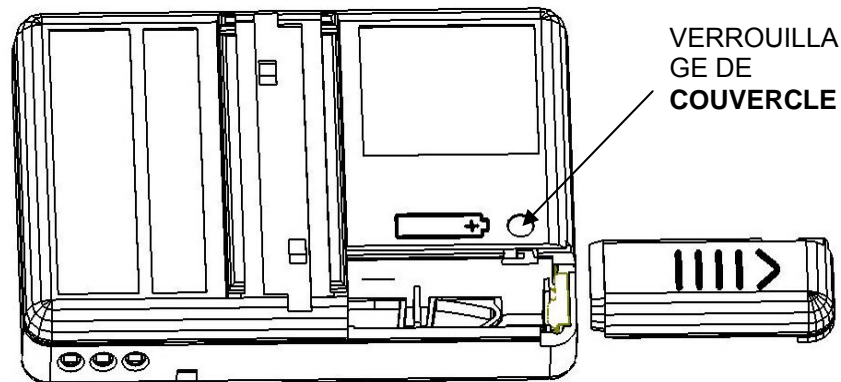

## Conformité

 
Ce produit est conforme aux exigences énoncées dans la Directive européenne 99/5/EC relative aux équipements terminaux de Radio et de Télécommunications.

### **Déclaration de Conformité de FCC et d'Industrie Canada**

Ce dispositif est conforme à la Section 15 du règlement FCC et à la norme RSS 210 de Industrie Canada.

Le fonctionnement est subordonné aux deux conditions suivantes : (1) cet appareil peut ne pas causer d'interférences nuisibles et (2) cet appareil doit accepter toute interférence pouvant être à l'origine d'un fonctionnement non désiré.

Toute modification non autorisée effectuée sur cet équipement annulera le droit de l'utilisateur à l'utiliser dans le cadre de la réglementation prévue par la FCC et par la Section 15 de Industrie Canada.

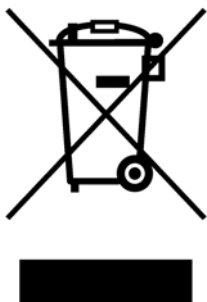

### **Directive WEEE et collecte du produit**

A la fin de sa durée de vie, ce produit ne doit pas être traité comme un déchet d'ordre ménager ou général. Il doit être déposé au point de collecte correspondant au recyclage de l'équipement électrique et électronique, ou retourné au fournisseur, en vue de son élimination.

 
## EkoTek Pager – Quick Instructions

### Fonctionnement Homme mort (si autorisé par le superviseur)



Pour éviter le déclenchement de l'alarme homme mort automatique, maintenir le téléavertisseur en position inversée (normalement porté dans un étui, accroché à une ceinture)

### Fonctionnement Homme à terre (si autorisé par le superviseur)

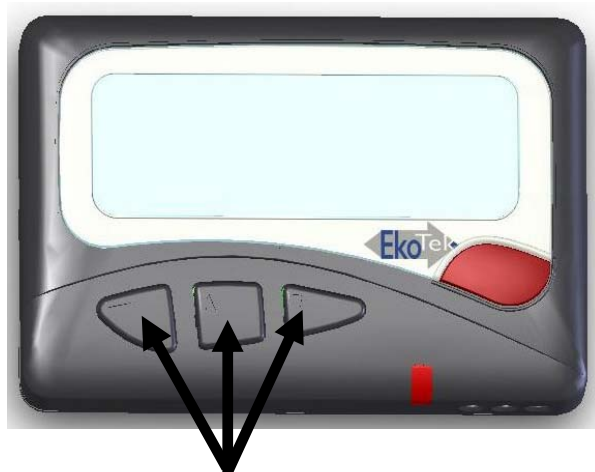

Appuyer sur l'une des trois touches pour effectuer le contrôle périodique homme mort (bip sonore) et éviter le déclenchement automatique de l'alarme

## Funciones de las Teclas

 


- ▶ Menú  
(pulsación larga para: Salir menú / Cancelar llamada de Asistencia / Encender)
- ▲ Arriba ▼ Abajo Enviar llamada de Asistencia (is está activada)

## Pantalla

: or = conectado a la red

! = desconectado (presionar la tecla Menú para buscar la red)

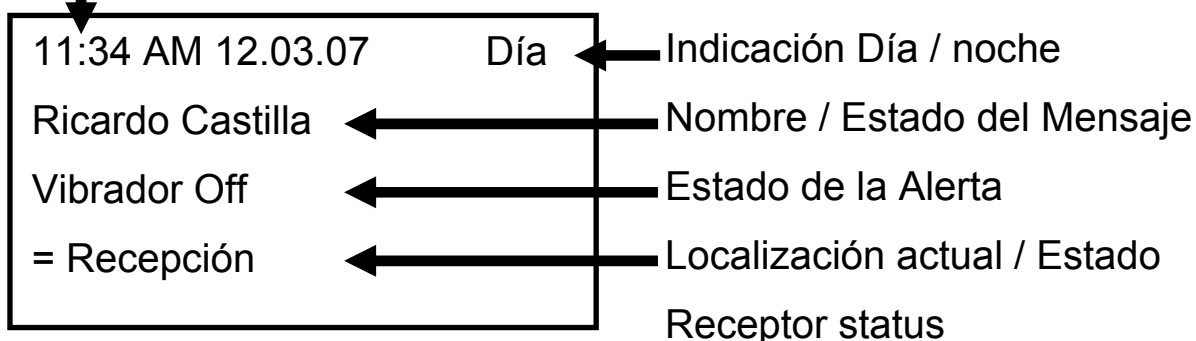

## **EkoTek Pager – Quick Instructions**

### **Navegar por el Menú desde la Pantalla Principal**

#### ▶ Opciones ▶ Pantalla

- Fuente - tamaño de la letra de la pantalla
- Luz - luz ON u OFF (ahorro de batería)
- Tiempo Pantalla - tiempo antes de que el visor vuelva a la pantalla principal
- Contraste - contraste de pantalla

#### ▶ Opciones ▶ Pantalla ▼ Auto Borrado ▶

Establece la cantidad máxima de mensajes que se guardarán en la memoria

#### ▶ Opciones ▶ Pantalla ▼ ▼ Alerta ▶

Establece la alerta audible y por vibración para mensajes rx (la alerta de la tecla roja de Asistencia está configurada por el Supervisor en el Concentrador Central)

#### ▶ Opciones ▼ Día y Hora ▶

Determina la visualización de la hora en formato de 12/24 horas

#### ▶ Opciones ▼ ▼ Ahorro Energía

Pantalla en blanco de ahorro de energía para aumentar la vida útil de la batería

#### ▶ Opciones ▼ ▼ ▼ Apagar ▶ ▶

Apaga el Receptor (Mantener presionada la tecla Menú para encender el Receptor)

▲ Muestra mensajes Archivados

▼ Muestra mensajes Recibidos

### **Aceptar un Mensaje de Asistencia**

▼ (para mostrar el mensaje si aún no ha sido visualizado)

▶ Volver a Ver ▼ Aceptar ▶ ▶

### **Rechazar un Mensaje de Asistencia**

▼ (para mostrar el mensaje si aún no ha sido visualizado)

 
▶ Volver a Ver ▼ ▼ Rechazar ▶ ▶

### **Conexión a una Red**

Si el Receptor ha sido removido de la red, pulse cualquiera de las teclas negras cuando se encuentre dentro del área de alcance de manera que el Receptor se vuelva a conectar rápidamente a la red (por ejemplo al llegar a la oficina por las mañanas)

# EkoTek Pager – Quick Instructions

## Cambio de Batería

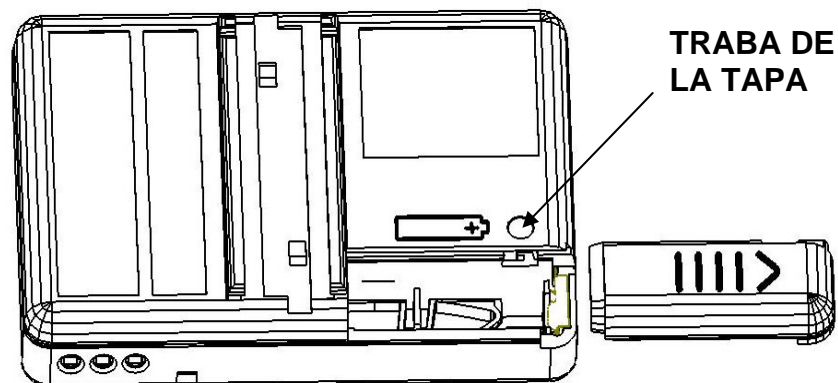

## Cumplimiento

Este producto cumple con los requisitos de la Directiva 99/5/EC de la UE sobre Equipos Terminales de Radio y Telecomunicaciones.

### **Declaración de Cumplimiento de la Comisión Federal de Comunicaciones (FCC) y la Industry Canada**

El equipo cumple con la Parte 15 de las Normas de la FCC y la norma RSS 210 de la Industry Canada.

Su funcionamiento está sujeto a las siguientes dos condiciones: (1) este equipo no debe causar interferencias perjudiciales y (2) este equipo debe aceptar todas las interferencias recibidas, incluso aquellas que puedan causar un funcionamiento no deseado.

Las modificaciones realizadas a este equipo que no hayan sido aprobadas por el fabricante invalidarán la autorización del usuario para continuar operando este equipo dentro del alcance de las Normas de la Industry Canada y la Parte 15 de la FCC.



### **Directiva WEEE y Desecho del Producto**

Al finalizar la vida útil del producto, el mismo no debe ser desechado como residuo doméstico o general. Debe ser entregado al punto de recolección designado para el reciclaje de equipos eléctricos y electrónicos, o bien devuelto al proveedor que le suministró el producto.

 
## EkoTek Pager – Quick Instructions

### Función Hombre-Caído (si está activada por el Supervisor)



Para evitar que se envíe la señal de alarma automática hombre-caído, mantenga el Receptor en posición vertical (normalmente se lo lleva en el estuche enganchado al cinturón)

### Función Hombre-Muerto (si está activada por el Supervisor)

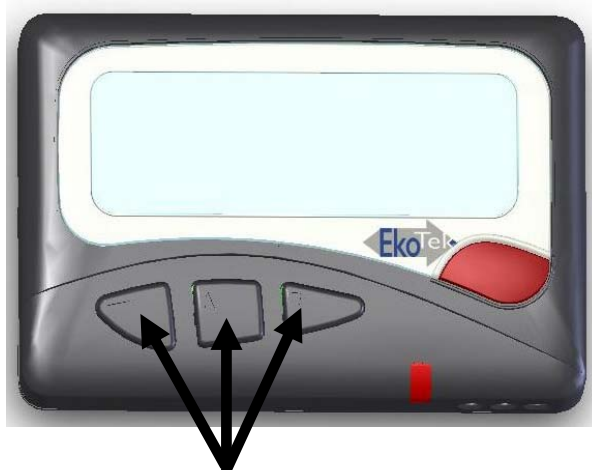

Pulsar cualquiera de las tres teclas para responder al control periódico de hombre muerto (beep audible) y evitar la emisión de la alarma automática