



Excellence in Compliance Testing

Certification Exhibit

**FCC ID: HSW-DNT900
IC: 4492A-DNT900**

**FCC Rule Part: 15.247
IC Radio Standards Specification: RSS-210**

ACS Report Number: 08-0361 - 15C


Manufacturer: Cirronet Inc.
Model: DNT900C, DNT900P

Manual



DNT900 Series

900 MHz Spread Spectrum Wireless Industrial Transceivers

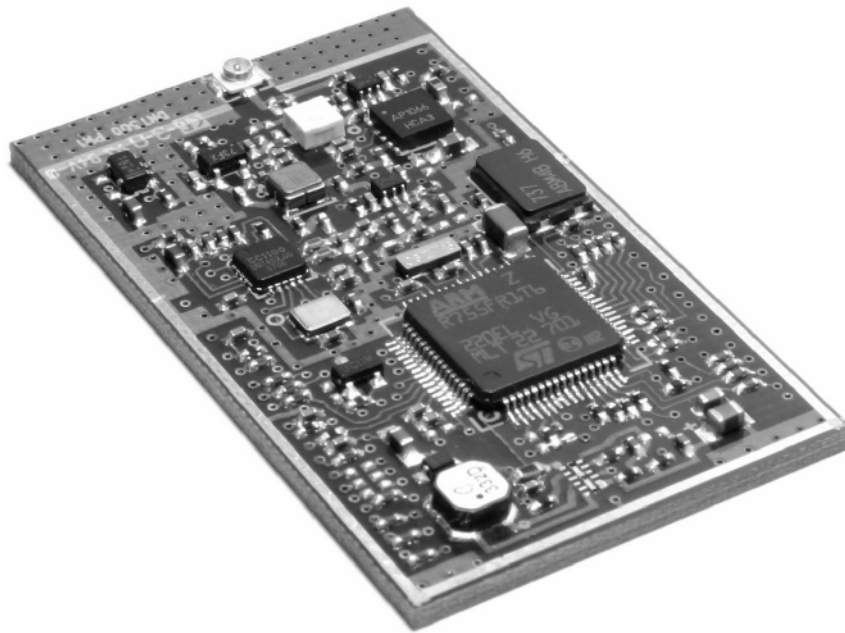

Integration Guide

Important Regulatory Information

FCC ID: HSW-DNT900

IC: 4492A-DNT900

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS. (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC User Information

“NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect equipment to an outlet on a circuit different in which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.”

Warning: Changes or modifications to this device not expressly approved by RFM Inc. could void the user's authority to operate the equipment.

RF Exposure

In accordance with FCC requirements of human exposure to radiofrequency fields, the radiating element shall be installed such that a minimum separation distance of 23cm shall be maintained from the user and/or general population.

Industry Canada

This Class B digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareillage numérique de la classe B répond à toutes les exigences de l'interférence canadienne causant des règlements d'équipement. L'opération est sujette aux deux conditions suivantes: (1) ce dispositif peut ne pas causer l'interférence nocive, et (2) ce dispositif doit accepter n'importe quelle interférence reçue, y compris l'interférence qui peut causer l'opération peu désirée.

“To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.”

“This device has been designed to operate with the antennas listed below, and having a maximum gain of 6 dBi. Antennas not included in this list or having a gain greater than 6 dBi are strictly prohibited for use with this device. The required antenna impedance is 50 ohms.”

Cushcraft	S8963B	5 dBi gain	dipole
Astron	918-2	6 dBi gain	yagi

OEM Installation and Compliance Labeling

The DNT900 module is labeled with its own FCC ID number, and, if the FCC ID is not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed transmitter module.

This exterior label can use wording such as the following:

“Contains Transmitter Module FCC ID: HSW-DNT900” or

“Contains FCC ID: HSW-DNT900”

Any similar wording that expresses the same meaning may be used. The Grantee may either provide such a label, an example of which must be included in the application for equipment authorization, or, must provide adequate instructions along with the module which explain this requirement. In the latter case, a copy of these instructions must be included in the application for equipment authorization.

The antenna connections from the module to the certain antennas approved with this device are not unique and require Professional installation.

See section 3.8 of this manual for regulatory notices and labeling requirements. Changes or modifications to a DNT900 not expressly approved by RFM may void the user's authority to operate the module.

Table of Contents

1.0	Introduction	5
11	Why Spread Spectrum?.....	5
12	Frequency Hopping versus Direct Sequence.....	6
2.0	DNT900 Radio Operation	7
21	Network Synchronization and Registration	7
2.2	Transparent and Protocol Serial Port Modes.....	8
23	RF Data Communications.....	8
24	RF Transmission Error Control	9
2.5	Network Configurations	9
25.1	Point-to-Point Network Operation.....	9
25.2	Point-to-Multipoint Network Operation	10
2.6	Full-Duplex Serial Data Communications	10
27	Channel Access	10
27.1	CSMA Modes.....	11
27.2	TDMA Modes	12
2.8	Network Configuration Planning	13
2.9	Serial Port Operation	15
2.10	Sleep Modes.....	16
211	Encryption.....	18
3.0	DNT900 Hardware.....	19
31	Specifications	20
32	Module Interface	21
3.3	Input Voltages	22
3.4	ESD and Transient Protection	22
3.5	Interfacing to 5 V Logic Systems	23
3.6	Power-On Reset Requirements	23
37	Mounting and Enclosures	23
38	Connecting Antennas	23
3.9	Labeling and Notices	24
4.0	Protocol Messages.....	25
41	Protocol Message Formats.....	25
4.1.1	Message Types	25
4.1.2	Message Format Details	26
4.1.2	Escape Sequence	27
4.1.3	CFG Select Pin	27
4.1.4	Flow Control	27
4.1.5	Protocol Mode Data Message Example	28
42	Configuration Registers	28
4.2.1	Bank 0 - Transceiver Setup.....	28
4.2.2	Bank 1 - System Settings.....	30
4.2.3	Bank 2 - Status Registers	31
4.2.4	Bank 3 - Serial.....	33
4.2.5	Bank 4 - Host Protocol Settings	34
4.2.6	Bank 5 - I/O Peripheral Registers	35
4.2.7	Bank 6 - I/O Setup.....	36
4.2.8	Bank FF - Special Functions	38
4.2.9	Protocol Mode Configuration/Sensor Message Example.....	38
4.2.10	Protocol Mode Event Message Example.....	39

5.0	DNT900DK Developer's Kit	40
5.1	DNT900DK Kit Contents.....	40
5.2	Additional Items Needed	40
5.3	Developer's Kit Default Operating Configuration	41
5.4	Development Kit Hardware Assembly.....	41
5.5	DNT900 Wizard Utility Program	43
5.6	DNT900 Interface Board Features	50
6.0	Demonstration Procedure	53
7.0	Troubleshooting	54
8.0	Appendices	55
8.1	Ordering Information.....	55
8.2	Technical Support.....	55
8.3	DNT900 Mechanical Specifications.....	56
9.0	Warranty.....	58

1.0 Introduction


The DNT900 series transceivers provide highly reliable wireless connectivity for either point-to-point or point-to-multipoint applications. Frequency hopping spread spectrum (FHSS) technology ensures maximum resistance to multipath fading and robustness in the presence of interfering signals, while operation in the 900 MHz ISM band allows license-free use in the US, Canada, Australia and New Zealand. The DNT900 supports all standard serial data rates for host communications from 1.2 to 460.8 kb/s. On-board data buffering and an error-correcting air protocol provide smooth data flow and simplify the task of integration with existing applications. Key DNT900 features include:

- Multipath fading resistant frequency hopping technology with up to 50 frequency channels (902 to 928 MHz).
- Support for point-to-point or point-to-multipoint applications.
- FCC 15.247 certified for license-free operation.
- 40 mile plus range with omni-directional antennas (antenna height dependent).
- Transparent ARQ protocol with data buffering ensures data integrity
- Selectable 1, 10, 100, 250, 500 or 1000 mW transmit power with a firmware interlock of 85 mW maximum for 500 kb/s operation.
- Optional AES encryption provides protection to eavesdropping
- Nonvolatile memory stores DNT900 configuration when powered off
- Dynamic TDMA slot assignment that maximizes throughput.
- Simple serial interface handles both data and control at up to 460.8 kb/s

1.1 Why Spread Spectrum?

A radio channel can be very hostile, corrupted by noise, path loss and interfering transmissions from other radios. Even in an interference-free environment, radio performance faces serious degradation through a phenomenon known as multipath fading. Multipath fading results when two or more reflected rays of the transmitted signal arrive at the receiving antenna with opposing phases, thereby partially or completely canceling the signal. This problem is particularly prevalent in indoor installations. In the frequency domain, a multipath fade can be described as a frequency-selective notch that shifts in location and intensity over time as reflections change due to motion of the radio or objects within its range. At any given time, multipath fades will typically occupy 1% - 2% of the band. From a probabilistic viewpoint, a conventional radio system faces a 1% - 2% chance of signal impairment at any given time due to multipath fading.


Spread spectrum reduces the vulnerability of a radio system to interference from both multipath fading and jammers by distributing the transmitted signal over a larger region of the frequency band than would otherwise be necessary to send the information. This allows the signal to be reconstructed even though part of it may be lost or corrupted in transmission.

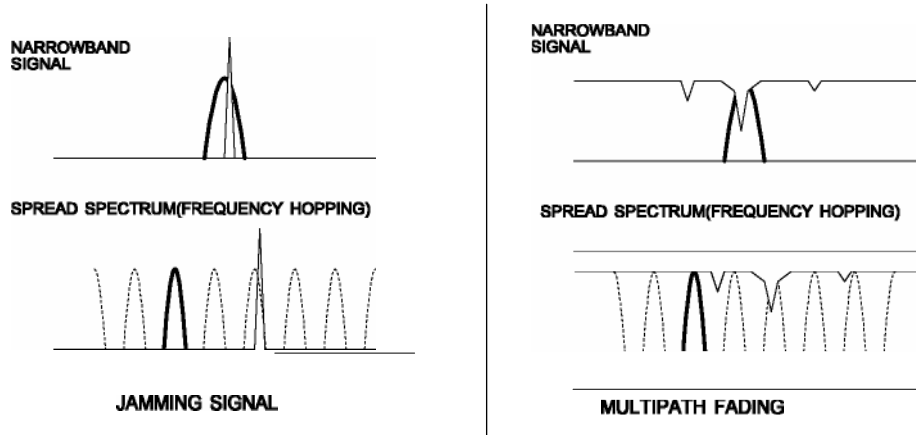

Narrow-band versus spread-spectrum transmission
Figure 1.1.1

1.2 Frequency Hopping versus Direct Sequence

The two primary approaches to spread spectrum are direct sequence spread spectrum (DSSS) and frequency hopping spread spectrum (FHSS), either of which can generally be adapted to a given application. Direct sequence spread spectrum is produced by multiplying the transmitted data stream by a much faster, noise-like repeating pattern. The ratio by which this modulating pattern exceeds the bit rate of the base-band data is called the processing gain, and is equal to the amount of rejection the system affords against narrow-band interference from multipath and jammers. Transmitting the data signal as usual, but varying the carrier frequency rapidly according to a pseudo-random pattern over a broad range of channels produces a frequency hopping spectrum system.

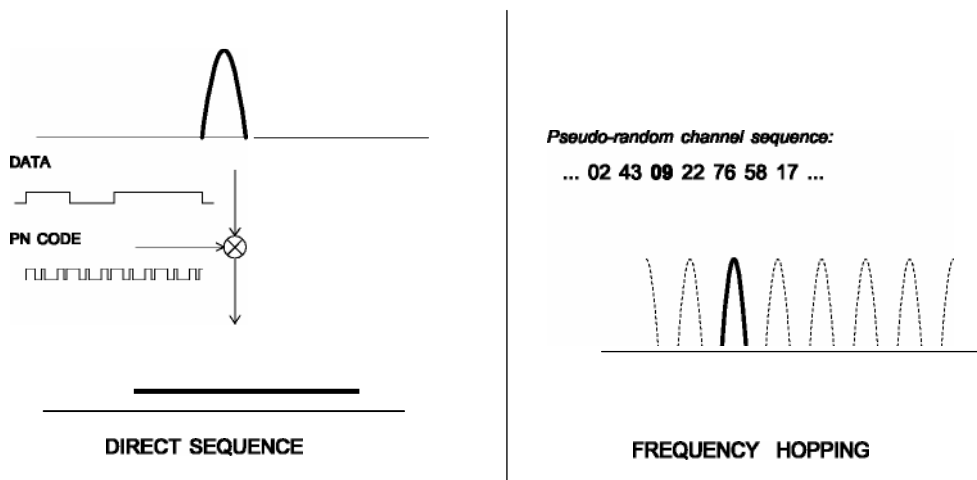

Forms of spread spectrum - direct sequence and frequency hopping
Figure 1.1.2

One disadvantage of direct sequence systems is that due to spectrum constraints and the design difficulties of broadband receivers, they generally employ only a minimal amount of spreading, typically no more than the minimum required by the regulating agencies. For this reason, the ability of DSSS systems to overcome fading and in-band jammers is relatively weak. By contrast, FHSS systems are capable of probing the entire band as necessary to find a channel free of interference. This means that a FHSS system will degrade gracefully as the channel gets noisier, while a DSSS system may exhibit uneven coverage or work well until a certain point and then give out completely.

Because it offers greater immunity to interfering signals, FHSS is often the preferred choice for co-located systems. Since direct sequence signals are very wide, they tend to offer few non-overlapping channels, whereas multiple hoppers may interleave with less interference. Frequency hopping does carry some disadvantage in that as the transmitter cycles through the hopping pattern it is nearly certain to visit a few blocked channels where no data can be sent. If these channels are the same from trip to trip, they can be memorized and avoided. Unfortunately, this is generally not the case, as it may take several seconds to completely cover the hop sequence during which time the multipath delay profile may have changed substantially. To ensure seamless operation throughout these outages, a hopping radio must be capable of buffering its data until a clear channel can be found. A second consideration of frequency hopping systems is that they require an initial acquisition period during which the receiver must lock on to the moving carrier of the transmitter before any data can be sent, which typically takes several seconds. In summary, frequency hopping systems generally feature greater coverage and channel utilization than comparable direct sequence systems. Of course, other implementation factors such as size, cost, power consumption and ease of implementation must also be considered before a final radio design choice can be made.

DNT900 series modules achieve regulatory certification under FHSS rules at air data rates of 38.4, 115.2 and 200 kb/s. At 500 kb/s, the DNT900 series modules achieve regulatory certification under "digital modulation" or DTS rules. At 500 kb/s DNT900 series modules still employ frequency hopping to mitigate the effects of interference and multipath fading, but hop on fewer, more widely spaced frequencies than at lower data rates.

2.0 DNT900 Radio Operation

2.1 Network Synchronization and Registration

As discussed above, frequency hopping radios such as the DNT900 periodically change the frequency at which they transmit. In order for the other radios in the network to receive the transmission, they must be listening to the frequency on which the current transmission is being sent. To do this, all the radios in the network must be synchronized to the same hopping pattern.

In point-to-point or point-to-multipoint networks, one radio module is designated as the base station. All other radios are designated as remotes. One of the responsibilities of the base station is to transmit a synchronization signal to the remotes to allow them to synchronize with the base station. Since the remotes know the hopping pattern, once they are synchronized with the base station, they know which frequency to hop to and when. Every time the base station hops to a different frequency, it immediately transmits a synchronizing signal.

When a remote is powered on, it rapidly scans the frequency band for the synchronizing signal. Since the base station is transmitting on up to 50 frequencies and the remote is scanning up to 50 frequencies, it can take several seconds for a remote to synchronize with the base station.

Once a remote has synchronized with the base station, it will request registration information to allow it to join the network. Registration can be handled automatically by the base station, or it can be controlled by allowing the base station host application to authenticate the remote for registration. When a remote is registered, it receives several network parameters from the base station, including *HopDuration*, *InitialNwkID*, *FrequencyBand* and *Nwk_Key* (see Section 4.2 for parameter details). Note that if a registration parameter is changed at the base station, it will update the parameter in the remotes over the air.

Among other things, registration allows the tracking of remotes entering and leaving a network, up to a limit of 254 remotes. The base station builds a table of serial numbers of registered remotes using their three-byte serial numbers (MAC addresses). To detect if a remote has gone offline or out of range, the registration is “leased” must be “renewed” once every 250 hops. Any transmission from a remote running on a leased registration will renew its lease with the base station.

2.2 Transparent and Protocol Serial Port Modes

DNT900 radios can work in two serial port data modes: transparent and packet protocol. Transparent mode formatting is simply the raw user data. Protocol mode formatting includes a start of packet framing character, length byte, addressing, command bytes, etc. Transparent mode operation is especially useful in point-to-point systems that act as simple cable replacements. In point-to-multipoint systems where the base station needs to send data specifically to each remote, protocol formatting must be used. Protocol formatting is also required for configuration commands and responses, and sensor I/O commands and responses. Protocol formatting details are covered in Section 4.

The DNT900 provides two ways to switch between transparent and protocol modes. If CFG input Pin 18 on the DNT900 is switched from logic high to low, protocol mode is invoked. Or if the ASCII escape sequence “DNT900” is sent (without quotation marks) to the primary serial input following at least a 20 ms pause in data flow, the DNT900 will switch to the protocol mode. When input Pin 18 is switched from logic low to high, or an *ExitProtocolMode* command is sent to the primary serial input, the DNT900 will switch to transparent operation. *Note that if the escape sequence is used to switch to protocol mode, the sequence will be transmitted before protocol mode is invoked.*

When operating in transparent mode, two configuration parameters control when a DNT900 radio will send the data in its transmit buffer. The *MinPacketLength* parameter sets the minimum number of bytes that must be present in the transmit buffer to trigger a transmission. The *TxTimeout* parameter sets the maximum time data in the transmit buffer will be held before transmitting it, even if the number of data bytes is less than *MinPacketLength*. The default value for both the *MinPacketLength* and the *TxTimeout* parameters is zero, so that any bytes that arrive in the DNT900 transmit buffer will be sent on the next hop. As discussed in Section 2.5.2, it is useful to set these parameters to non-zero values in point-to-multipoint systems where some or all the remotes are in transparent mode.

2.3 RF Data Communications

At the beginning of each hop, the base station transmits a synchronizing signal. After the synchronizing signal is sent, the base will transmit any user data in its transmit buffer, unless in transparent mode the *MinPacketLength* and/or *TxTimeout* parameters have been set to non-zero. The maximum amount of data that the base station can transmit per hop is limited by the *BaseSlotSize* parameter, which has a maximum value of 233 bytes. If there is no user data or reception acknowledgements (ACKs) to be sent on a hop, the base station will only transmit the synchronization signal.

The operation for remotes is similar to the base station, but without the synchronizing signal. The *RemoteSlotSize* parameter sets the maximum number of bytes a remote can transmit on one hop, up to a limit of 243 bytes per hop. The *RemoteSlotSize* must be coordinated with the *HopDuration* and *BaseSlotSize* parameters and the number of registered remotes. The *MinPacketLength* and *TxTimeout* parameters operate in a remote in the same manner as in the base station.

2.4 RF Transmission Error Control

The DNT900 supports two error control modes: automatic transmission repeats (ARQ), and redundant transmissions for broadcast packets from the base station. In both modes, the radio will detect and discard any duplicates of messages it receives so that the host application will only receive one copy of a given packet. In the redundant transmission mode, broadcast packets are repeated a fixed number of times based on the value of the *ARQ_AttemptLimit* parameter. In ARQ mode, a packet is sent and an acknowledgement is expected on the next hop. If an acknowledgement is not received, the packet is transmitted again on the next available hop until either an ACK is received or the maximum number of attempts is exhausted. If the *ARQ_AttemptLimit* parameter is set to its maximum value, a packet transmission will be retried without limit until the packet is acknowledged. This is useful in some point-to-point cable replacement applications where it is important that data truly be 100% error-free, even if the destination remote goes out of range temporarily.

2.5 Network Configurations

The DNT900 supports two network configurations: point-to-point and point-to-multipoint. In a point-to-point network, one radio is set up as the base station and the other radio is set up as a remote. In a point-to-multipoint network, a star topology is used with the radio set up as a base station acting as the central communications point and all other radios in the network set up as remotes. In this configuration, each communication takes place between the base station and one of the remotes. Remotes cannot communicate directly with each other. It should be noted that point-to-point operation is a subset of the point-to-multipoint operation, so there is no need to specify one or the other.

2.5.1 Point-to-Point Network Operation

Most point-to-point networks act as serial cable replacements and both the base station and the remote use transparent mode. Unless the *MinPacketLength* and *TxTimeout* parameters have been set to non-zero, the base station will send the data in its transmit buffer on each hop, up to a limit controlled by the *BaseSlotSize* parameter. In transparent mode, if the base station is buffering more data than can be sent on one hop, the remaining data will be sent on subsequent hops. The base station adds the address of the remote, a packet sequence number and error checking bytes to the data when it is transmitted. These additional bytes are not output at the remote in transparent mode. The sequence number is used in acknowledging successful transmissions and in retransmitting corrupted transmissions. A two-byte CRC and a one-byte checksum allows a received transmission to be checked for errors. When a transmission is received by the remote, it will be acknowledged if it checks error free. If no acknowledgment is received, the base station will retransmit the same data on the next hop. Note that acknowledgements from remotes are suppressed on broadcast packets from the base station.

In point-to-point operation, by default a remote will send the data in its transmit buffer on each hop, up to the limit controlled by its *RemoteSlotSize* parameter. If desired, the *MinPacketLength* and *TxTimeout* parameters can be set to non-zero values, which configures the remote to wait until the specified amount of data is available or the specified delay had expired before transmitting. In transparent mode, if the

remote is buffering more data than can be sent on one hop, it will send the remaining data in subsequent hops. The remote adds its own address, a packet sequence number and error checking bytes to the data when it is transmitted. These additional bytes are not output at the base station if the base is in transparent mode. When a transmission is received by the base station, it will be acknowledged if it checks error free. If no acknowledgment is received, the remote will retransmit the same data on the next hop.

2.5.2 Point-to-Multipoint Network Operation

In a point-to-multipoint network, the base station is usually configured for protocol formatting, unless the applications running on each remote can determine the data's destination from the data itself. Protocol formatting adds the address of the destination (remote) and other overhead bytes to the user data. If the addressed remote is using transparent formatting, the destination address and the other overhead bytes are removed. If the remote is using protocol formatting, the destination address and the other overhead bytes are output with the user data.

A remote can operate in a point-to-multipoint network using either transparent or protocol formatting, as the base is always the destination. In transparent operation, a remote adds addressing, a packet sequence number and error checking bytes as in a point-to-point network. When the base receives the transmission, it will format the data to its host according to its formatting configuration. A remote running in transparent mode in a point-to-multipoint network will often have the *MinPacketLength* and *TxTimeout* parameters set to non-zero values to reduce the chance of transmission collisions.

2.6 Full-Duplex Serial Data Communications

From an host application's perspective, DNT900 serial communications appear full duplex. Both the base station host application and each remote host application can send and receive serial data at the same time. At the radio level, the base station and remotes do not actually transmit at the same time. If they did, the transmissions would collide. As discussed earlier, the base station transmits a synchronization signal at the beginning of each hop followed by its user data. After the base station transmission, the remotes can transmit. Each base station and remote transmission may contain all or part of a complete message from its host application. From an application's perspective, the radios are communicating in full duplex since the base station can receive data from a remote before it completes the transmission of a message to the remote and visa versa.

2.7 Channel Access


The DNT900 provides two methods of channel access: CSMA or TDMA. Each method supports several options as shown in the table below. The channel access setting is distributed to all remotes in the base station status packet, so changing it at the base station sets the entire network. Carrier Sense Multiple Access (CSMA) is very effective at handling packets with varying amounts of data and/or packets sent at random times from a large number of remotes. The DNT900 includes a CSMA polling mode for coordinated remotes and a CSMA contention mode for uncoordinated and/or reporting remotes. Time Division Multiple Access (TDMA) provides a scheduled time slot for each remote to transmit on each hop. The default DNT900 access mode is TDMA dynamic mode.

Access Mode	Description	Max Number of Remotes	Slot Size
0	CSMA polling	1024	manual
1	CSMA contention	1024	manual
2	TDMA dynamic slots	up to 16	automatic
3	TDMA fixed slots	up to 16	automatic
4	TDMA with PTT	up to 16	automatic

Table 2.7.1

2.7.1 CSMA Modes

When using CSMA, each remote with data to send listens to see if the channel is clear and then transmits. If the channel is not clear, a remote will wait a random period of time and listen again. CSMA works best when a large or variable number of remotes transmit infrequent bursts of data. There is no absolute to the number of remote radios that can be supported in this mode. For a DNT900 network, a maximum of 254 remotes can be supported if base station join-leave tracking is required, or a maximum of 1024 remotes is suggested if base station join-leave tracking is not required. Figure 2.7.1 .1 below compares TDMA to CSMA operation.

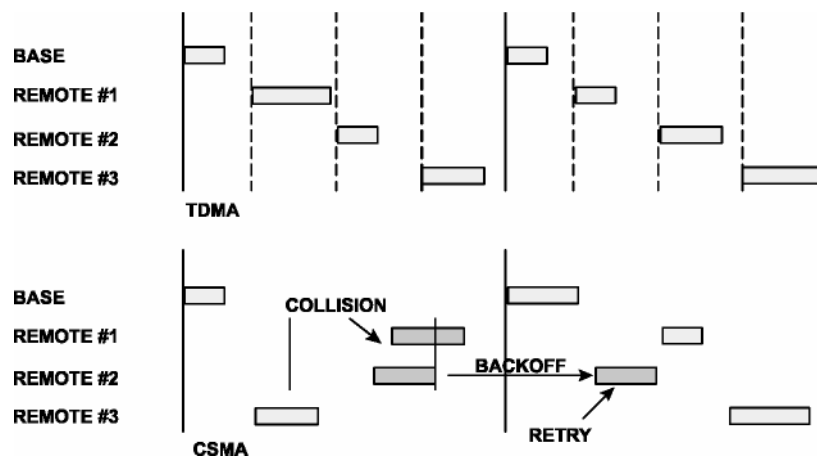

TDMA and CSMA operation
Figure 2.7.1.1

There are two important parameters related to CSMA operation. The *CSMA_MaxBackoff* parameter defines the maximum time that a remote will wait after a collision before attempting to send the packet again (back-off interval). The *CSMA_Predelay* parameter controls the maximum time that a remote will randomly backoff when it finds the channel available before transmitting.

CSMA polling (Mode 0) - is used for point-to-point systems and point-to-multipoint systems where only one remote at a time can receive data to transmit (ModBus, etc.). Since only one remote will attempt to transmits at a time, the *CSMA_Predelay* parameter is ignored on the first transmission attempt and no predelay is used for minimum latency. This mode provides maximum throughput since there is no contention between remotes and the entire portion of the hop frame following the base station transmission is available for a remote to transmit. The user can set *CSMA_MaxBackoff*, *BaseSlotSize* and *RemoteSlot-Size* parameters when using this mode. Note that a *CSMA_Delay* parameter setting of 0x00 would lead to collisions if more than one remote tried to transmit. Applications where more than one remote can receive

serial data to transmit at a time, or where periodic reporting and/or event reporting are enabled should not use this mode.

CSMA Contention (Mode 1) - provides classical CSMA channel access, and gives the user control over both the *CSMA_MaxBackoff* and *CSMA_Predelay* parameters. This mode is well-suited for large numbers of uncoordinated remotes, and/or where periodic/event reporting is used. In addition to *CSMA_MaxBackoff* and *CSMA_Predelay*, the user can set the *BaseSlotSize* and *RemoteSlotSize* parameters when using this mode. The following guidelines are suggested for setting *CSMA_Predelay*:

- ◆ For lightly loaded CSMA contention networks, decrease *CSMA_Predelay* to 0x20 or less to reduce latency.
- ◆ For heavily loaded CSMA contention networks, increase *CSMA_Predelay* to 0x80 or more for better throughput.

As an option, the CSMA modes allow the base station to directly track remotes entering and leaving the network for up to 254 remotes. The base station is operated in protocol mode and is configured to generate a CONNECT message for its host when a remote registers, and a DISCONNECT message when the remote's registration lease expires.

The base station in a CSMA network can generate CONNECT messages for more than 254 remotes. This allows the host application to track remotes entering and leaving a large CSMA network by creating a table of MAC addresses and periodically sending a *GetRemoteRegister* command to each remote in the table. Failure to answer a *GetRemoteRegister* command indicates the remote is no longer active in the network.

CSMA modes work well in many applications, but CSMA has some limitations, as summarized below:

- ◆ Bandwidth is not guaranteed to any remote.
- ◆ Marginal RF links to some remotes can create a relatively high chance of collisions in heavily loaded networks.

2.7.2 TDMA Modes

The TDMA modes provide guaranteed bandwidth to some or all of the remotes in the network. Remotes that register with the base station receive several special parameters, including ranging information and a specific channel access slot assignment. TDMA registrations are always leased and must be renewed every 250 hops. The DNT900 provides three different modes of TDMA access, as discussed below.

TDMA Dynamic Slots (Mode 2) - is used for general-purpose TDMA applications where scaling the capacity per slot to the number of active remotes is automatic. Each remote that registers with the base receives an equal time slice. As new remotes join, the size of the TDMA slots shrink accordingly. The number of slots, individual slot start times, and the *RemoteSlotSize* are computed automatically by the DNT900 network in this mode. The user should note that the bandwidth to each remote will change immediately as remotes join and leave the network. When running in protocol mode, care must be taken not to format packets too long to be sent in a single hop due to automatic *RemoteSlotSize* reduction.

TDMA Fixed Slots (Mode 3) - is used for applications that have fixed data throughput requirements, such as isochronous voice or streaming telemetry. The slot start time and the *RemoteSlotSize* are computed automatically by the DNT900 network in this mode. The user must set the number of slots.

TDMA with PTT (Mode 4) supports remotes with a "push-to-talk" feature, also referred to as "listen-mostly" remotes. This mode uses fixed slot allocations. Remotes can be registered for all but the last slot. The last slot is reserved for the group of remotes that are usually listening, but occasionally need to transmit. In essence, the last slot is a shared channel for this group of remotes. When one of them has data to send it keys its transmitter much like a walkie-talkie, hence the name push-to-talk (PTT).

The slot start time and the *RemoteSlotSize* are computed automatically by the DNT900 network in this mode. The user must specify the number of slots. The last slot is reserved for the PTT remotes. The user must configure PTT remotes individually to select Mode 4 operation. The network makes no guarantee that PTT remote transmissions will not collide in the shared slot. The user's application must ensure that no more than one PTT remote at a time is using the slot.

2.8 Network Configuration Planning

Some planning is necessary for a DNT900 network to coordinate the *RF_DataRate*, *HopDuration*, *BaseSlotSize*, *RemoteSlotSize*, *MinPacketLength*, *TxTimeout* and *TDMA_MaxNumSlots* parameters to achieve a practical configuration. This is true even for modes that automatically compute some of these parameters. Each parameter has a limited range of usable values, as shown in the Table 2.8.1 below:

Parameter	Useable Range	Value
<i>RF_DataRate</i>	0..3	500, 200, 115.2 and 38.4 kb/s
<i>HopDuration</i>	40..4095	2. .204.75 ms (0.05 ms/count)
<i>TDMA_MaxNumSlots</i>	1 ..16	max number of TDMA slots (MNS) for remotes
<i>BaseSlotSize</i>	6..233	max number of user data bytes transmitted per hop
<i>RemoteSlotSize</i>	3..243	max number of user data bytes transmitted per hop
<i>MinPacketLength</i>	0..255	0. .255 bytes
<i>Tx Timeout</i>	0..255	0. .255 ms (1 ms/count)

Table 2.8.1

The highest RF data rate, 500 kb/s, provides the highest throughput and the most flexibility with respect to the other parameters. The maximum RF power that can be used at 500 kb/s is 85 mW. The three lower data rates can run up to 1 W of RF power, and the receiver becomes progressively more sensitive as the data rate is lowered. So for greatest range, one of the three lower RF data rates should be used.

The maximum DNT900 *HopDuration* setting is about 200 ms regardless of the RF data rate chosen. For a given data rate, FHSS operation tends to become more robust as hop duration is reduced. However, running with a shorter hop duration may require setting the *BaseSlotSize* and *RemoteSlotSize* parameters well below their maximum values at the lower RF data rates. The equation below calculates the minimum hop duration needed at a given RF data rate for a specific number of remote slots and *BaseSlotSize* and *RemoteSlotSize* parameter settings. Support for optimizing a DNT900 configuration for a specific application is also available from RFM's Technical Support Group. See Section 10.3. for technical support contact information.

The minimum required hop duration for a DNT900 configuration is:

$$T_{HD} = T_{BRO} + N_{RS} \cdot T_{RO} + T_{RFB} \cdot (B_{BSS} + N_{RS} \cdot B_{RSS})$$

Where:

- T_{HD} is the minimum required hop duration in milliseconds
- T_{BRO} is the base and registration request overhead time for each hop (RF data rate dependent)
- N_{RS} is the number of remote slots
- T_{RO} is the remote overhead time for each hop (RF data rate dependent)
- T_{RFB} is the transmission time for one user byte (RF data rate dependent)
- B_{BSS} is the *BaseSlotSize* parameter in bytes
- B_{RSS} is the *RemoteSlotSize* parameter in bytes

The constants in the equation for each RF data rate are given in the following table:

RF Data Rate kb/s	T_{BRO} ms	T_{RO} ms	T_{RFB} ms
38.40	11.620	4.817	0.2080
115.2	4.953	2.039	0.0694
200	3.540	1.450	0.0400
500	2.388	0.970	0.0160

Table 2.8.2

For example, consider a point-to-point CSMA Mode 0 system operating at 38.4 kb/s with the *BaseSlotSize* parameter set to 133 bytes and the *RemoteSlotSize* parameter set to 128 bytes. The minimum hop duration needed to support one-hop transmissions of full slot size messages in both directions for this configuration is:

$$\begin{aligned}
 &= 11.620 + 1 \cdot 4.817 + 0.2080 \cdot (133 + 1 \cdot 128) \\
 &= 16.437 + 0.2080 \cdot 261 \\
 &= 70.725 \text{ ms}
 \end{aligned}$$

The closest programmable hop duration is 70.750 ms.

It should be noted that the base station operating system will commandeer 5 bytes from the *BaseSlotSize* allocation in Mode 0 and up to 13 bytes in Mode 1 to send reception acknowledgements (ACKs) back to the remotes. The *BaseSlotSize* should be sized accordingly. In the above example, the *BaseSlotSize* parameter is set five bytes larger than the *RemoteSlotSize* parameter to accommodate the ACK bytes.

When running a point-to-multipoint network with uncoordinated remotes using CSMA Mode 1, it is useful to set N_{RS} to a value of 3 or higher in the equation. Although CSMA does not create reserved time slots for remotes, extending the hop duration this way allows several uncoordinated transmissions of user data and/or periodic/event reports to arrive in the same slot with a relatively few collisions.

The performance of a CSMA Mode 1 system can often be helped by setting the *MinPacketLength* and *TxTimeout* parameters on any remotes running transparent mode to non-zero values, especially if host messages only contain a few bytes each and transmission latency is not critical. For starting point values, set the *MinPacketLength* equal to one-half the *RemoteSlotSize* and *TxTimeout* to at least three times the hop duration. This will help avoid excessive transmission collisions due to having many packets transmitted, each carrying only a small amount of user data on top of the relatively large packet overhead

structure. As an example, consider a TDMA Mode 2 or 3 system operating at 500 kb/s. Up to 10 registered remotes need to be accommodated. A *BaseSlotSize* of 138 bytes is needed, and each remote needs enough slot time to support a *RemoteSlotSize* of 64 bytes. The minimum hop duration needed to support this configuration is:

$$\begin{aligned}
 &= 2.388 + 10 \cdot 0.970 + 0.0160 \cdot (138 + 10 \cdot 64) \\
 &= 12.088 + 0.0160 \cdot 778 \\
 &= 24.536 \text{ ms}
 \end{aligned}$$

The closest programmable hop duration is 24.550 ms.

In all TDMA modes, the base station operating system will commandeer one byte from the *BaseSlotSize* allocation for each registered remote to send ACKs to the remotes. The *BaseSlotSize* and *MinPacketLength* should be sized accordingly.

2.9 Serial Port Operation

DNT900 networks are often used for wireless communication of serial data. The DNT900 supports serial baud rates from 1.2 to 460.8 kb/s. Listed in the table below are the supported data rates and their related byte data rates and byte transmission times for an 8N1 serial port configuration:

Baud Rate kb/s	Byte Data Rate kB/s	Byte Transmission Time ms
1.2	0.12	8.3333
2.4	0.24	4.1667
4.8	0.48	2.0833
9.6	0.96	1.0417
19.2	1.92	0.5208
38.4	3.84	0.2604
115.2	11.52	0.0868
230.4	23.04	0.0434
460.8	46.08	0.0217

Table 2.9.1

To support continuous full-duplex serial port data flow, an RF data rate much higher than the serial port baud rate is required for FHSS. Radios transmissions are half duplex, and there are overheads related to hopping frequencies, assembling packets from the serial port data stream, transmitting them, sending ACK's to confirm error-free reception, and occasional transmission retries when errors occur.

For example, consider a CSMA Mode 0 transparent data system operating at 500 kb/s with the *BaseSlotSize* parameter set to 133 bytes (128 bytes net after the five byte allocation for sending ACKs) and the *RemoteSlotSize* parameters set to 128 bytes. The minimum hop duration needed to efficiently support this configuration is:

$$\begin{aligned}
 &= 2.388 + 1 \cdot 0.970 + 0.0160 \cdot (133 + 1 \cdot 128) \\
 &= 3.358 + 0.0160 \cdot 261 \\
 &= 7.534 \text{ ms}
 \end{aligned}$$

Setting the hop duration to 7.55 ms, the average full-duplex serial port byte rate that can be supported under error free conditions is:

$$128 \text{ Bytes} / 7.55 \text{ ms} = 16.942 \text{ kB/s, or } 169.42 \text{ kb/s for } 8N1$$

Continuous full-duplex serial port data streams at a baud rate of 115.2 k/bs can be supported by this configuration, provided only occasional RF transmission errors occur. Plan on an average serial port data flow of 75% of the calculated error-free capacity for general-purpose applications, and 50% of the calculated error-free capacity for RF challenging applications such as vehicle telemetry and heavy industrial process environments.

Most applications do not require continuous serial port data flow. The DNT900 transmit and receive buffers hold at least 1024 bytes and will accept brief bursts of data at high baud rates, provided the average serial port data flow such as shown in the example above is not exceeded. It is strongly recommended that the DNT900 host use hardware flow control. The host must send no more than 32 bytes additional bytes to the DNT900 when the DNT900 de-asserts the host's CTS line. In turn, the DNT900 will send no more than one byte following the host de-asserting its RTS line. Three-wire serial port operation is allowed by connecting the DNT900 CTS output to its RTS input. However, three-wire operation should be limited to applications that send small bursts of data occasionally at an average serial port data flow less than 50% of the calculated error-free capacity. Data loss is possible under adverse RF channel conditions when using three-wire serial operation.

2.10 Sleep Modes

To save power in applications where a remote transmits infrequently, the DNT900 supports a hardware sleep mode. Hardware sleep mode is entered by switching DTR Pin 11 on the DNT900 from logic low to high. While in hardware sleep mode, the DNT900 consumes less than 0.5 mA. This mode allows a DNT900 to be powered off while its host device remains powered. After leaving hardware sleep mode (Pin 11 low to high), the radio must re-synchronize with the base station and re-register.

In addition to the sleep mode controlled by the DTR pin, in CSMA mode the DNT900 remotes support an additional sleep mode to support battery-powered applications. When this mode is enabled, the DNT900 is in a low-power state and only wakes up in response to the I/O report triggers. The following list explains the rules that sleeping remotes follow:

- ◆ The DNT900 will wake up when any of the enabled I/O report trigger conditions fire. When any of the ADC triggers are enabled, the radio will also wake up every *ADC_SampleIntvl* long enough to sample the ADCs, and then go back to sleep.
- ◆ When a sleeping radio wakes up, it must acquire and synchronize to its base before it can send or receive any data. To prevent excessive battery use, if the remote is unable to acquire before the *WakeLinkTimeout* elapses, it will cancel any pending event trigger(s) and go back to sleep.
- ◆ If a remote is linking for the first time or if its last attempt to acquire and synchronize was unsuccessful, it will scan and record the entire broadcast system parameter list before it goes back to sleep. Otherwise, in order to conserve battery life, a sleeping remote will update any values that it may hear while it is awake, but is not required to listen to the entire list.

If a remote is linking for the first time or if its last attempt to acquire and synchronize was unsuccessful, it will send a registration request to the base, allowing it to announce its presence to the host. Otherwise, in order to conserve battery life, a sleeping remote will not register each time it reacquires link with its base on successive wakeups.

- After a remote has received an acknowledgement for its I/O report (assuming it is successful), a *WakeResponse Time* timer is started before the remote goes back to sleep. This allows the base host time to send a message to the remote. Note that the only notification that the base host application has that a remote is awake is its report packet. In order to send it data, the base host must ensure that the message is transmitted and received before the remote's *WakeResponseTime* window elapses. If this function is not needed, the *WakeResponse Time* can be set to zero to disabled it.

The lease renewal mechanism is not supported for sleeping remotes. In order to successfully use sleeping remotes, the user must ensure that the system is configured for CSMA mode and that leases are disabled. If these settings are not used, there is no guarantee that the remotes will be able to communicate reliably. Because leases are not supported, there is no built-in mechanism for the base to detect or announce to its host if a remote stops making its I/O reports, is powered down, or otherwise leaves the network.

To summarize, while a remote is awake, the following list of condition checks are used to determine if and when it is allowed to go back to sleep:

- If the remote is linking for the first time or was unsuccessful linking on its last attempt, it will remain awake to record the beacon system parameter list.
- At wakeup, the *WakeLinkTimeout* timer is started. If the remote is unable to acquire link before this elapses, it goes back to sleep.
- If the remote receives an acknowledgement for a data packet it has sent (typically an Event packet, but in theory could be any other type of message), it starts or resets the *WakeResponseTime* timer to remain awake.
- So long as a GPIO for which edge triggered I/O reporting is enabled remains in its asserted state, the remote will remain awake.
- The remote will remain awake while it still has any ARQ attempts left for a queued transmit packet of any type.
- The remote will remain awake while it is has serial characters in its buffer left to transmit to its local host, plus whatever time is required for the last transmitted character to clear the RXD pin.

Sleep functions are controlled by the following registers (see Section 4.2):

- ◆ *SleepMode* - enables/disables sleep mode.
- ◆ *WakeResponse Time* - sets the amount of time that a remote will wait for a response after sending an I/O report.
- ◆ *WakeLinkTimeout* - sets the maximum time that a remote will spend trying to acquire it base before giving up.

Sleep is also affected by the following registers associated with I/O reporting: *IO_ReportTrigger*, *IO_ReportInterval*, *ADC_SampleIntvl*, and *GPIO_Edge Trigger*. The following table indicates how the status and control pins function on sleeping remotes:

Pin	Awake	Sleep
RTS	Normal operation	Hi-Z
CTS	Normal operation	0 V
DCD	Normal operation	0 V
ACTIVITY	3 V	0 V
EXT_SYNC	Not supported	Not supported
DIVERSITY	Normal operation	0 V
TXD	Normal operation	Hi-Z
RXD	Normal operation	0 V

Table 2.10.1

Note that the Activity pin may be used by a local host to detect when a sleeping remote is awake. The behavior of the GPIOs during sleep is governed by the *GPIO_SleepMode*, *GPIO_SleepDir*, and *GPIO_SleepState* configuration registers. Refer to the register definitions in Section 4.2.

2.11 Encryption

The DNT900 supports optional 128-bit AES encryption of data and configuration packets. Encryption is enabled by setting the *EncryptionKey* register to a value other than all zeros (all zeros is a flag that encryption is disabled). A remote without encryption enabled cannot link to an encrypted base, and an encrypted remote will not attempt to link to an unencrypted base. If a remote's encryption key does not match that of the base, it can link but not exchange data. The *EncryptionKey* register can be set over-the-air so it can be changed periodically if desired.

3.0 DNT900 Hardware

DNT900 Block Diagram

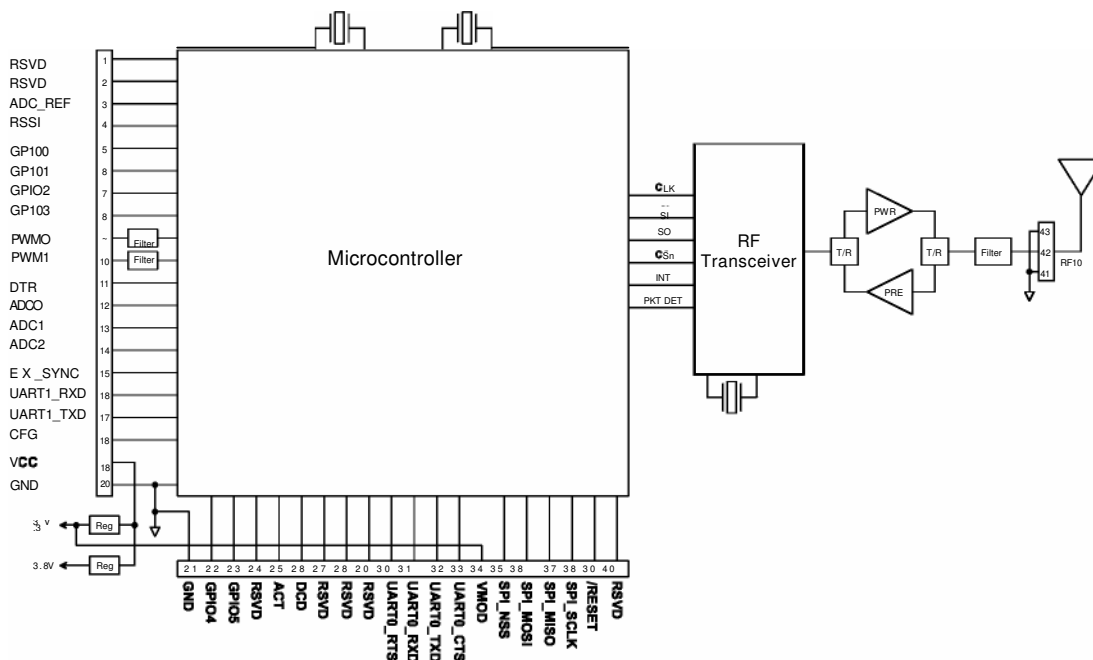


Figure 3.0.1

The major components of the DNT900 include a 900 MHz FHSS transceiver and a low current 32-bit microcontroller. The DNT900 operates in the 902 to 928 MHz ISM band. There are 32 selectable hopping patterns including patterns compatible with frequency allocations in the US, Canadian, Australian and New Zealand. The DNT900 has six selectable RF output power levels: 1, 10, 100, 250, and 500 mW plus 1 W. Also, there are four selectable RF transmission rates: 38.4, 115.2, 200 and 500 kb/s. The power level is firmware interlocked to a maximum of 85 mW at 500 kb/s to assure regulatory compliance.

The DNT900 includes a low-noise preamplifier protected by two SAW filters, providing an excellent blend of receiver sensitivity and out-of-band interference rejection that is especially important in outdoor applications.

The DNT900 provides a variety of hardware interfaces. There are two UART serial ports, one for data and a second for diagnostics. The data port supports baud rates from 1.2 to 460.8 kb/s and the diagnostic port is fixed at 115.2 kb/s. Also included are three 10-bit ADC inputs, two 8-bit PWM outputs, and six general purpose digital I/O ports. Four of the digital I/O ports support an optional interrupt-from-sleep mode when configured as inputs. The radio is available in two mounting configurations. The DNT900C is designed for solder reflow mounting. The DNT900P is designed for plug-in connector mounting.

3.1 DNT900 Specifications

Characteristic	Sym	Minimum	Typical	Maximum	Units
Operating Frequency Range		902.75		927.25	MHz
Number of Hopping Patterns			32		
Hop Dwell Time		5		200	ms
Number of RF Channels				50	
Modulation		FSK			
RF Data Transmission Rates		38.4, 115.2, 200 and 500			kb/s
Receiver Sensitivity					
10 ⁻⁵ BER @ 38.4 kb/s			-108		dBm
10 ⁻⁵ BER @ 500 kb/s			-94		dBm
Transmitter RF Output Power Levels		1, 10, 100, 250, 500, 1000 at 38.4 to 200 kb/s 1, 10, 85 at 500 kb/s			mW
Optimum Antenna Impedance		50			Ω
RF Connection		DNT900P - U.FL Connector DNT900C U.FL Connector or PCB Pad			
Network Topologies		Point-to-Point, Point-to-Multipoint			
Access Schemes		TDMA and CSMA			
Number of Network Nodes					
TDMA				16	
CSMA				1024	
ADC Input Range		0		3.3	V
ADC Input Resolution			10		bits
Signal Source Impedance for ADC Reading				10	KΩ
PWM (DAC) Output Range		0		3.3	V
PWM (DAC) Output Resolution				7	bits
PWM Output Period			20		μs
Primary Serial Port Baud Rates		1.2, 2.4, 4.8, 9.6, 19.2, 38.4, 115.2, 230.4, 460.8			kb/s
Diagnostic Serial Port Baud Rates		115.2			kb/s
Digital I/O:					
Logic Low Input Level		-0.5		0.8	V
Logic High Input Level		2		3.3	V
Logic Input Internal Pull-up Resistor		50		200	KΩ
Logic Input Internal Pull-down Resistor		50		180	KΩ
Power Supply Voltage Range	V _{CC}	+3.3		+5.5	Vdc
Power Supply Voltage Ripple				10	mV _{P-P}
Peak Transmit Mode Current				900	mA
Average Operating Current:					
Base			105		mA
Remote, No Data Transmission			35		mA
Remote, 9.6 kb/s Continuous Data Stream			40		mA
Remote, 115.2 kb/s Continuous Data Stream			53		mA
Sleep Current				50	μA
Operating Temperature Range		-40		85	°C
Operating Relative Humidity Range		10		90	%

Table 3.1.1

3.2 Module Interface

Electrical connections to the DNT900C are made through the I/O pads and through the I/O pins on the DNT900P. The hardware I/O functions are detailed in the table below:

Pad	Name	Description
1	RSVD	Reserved pad. Leave unconnected.
2	RSVD	Reserved pad. Leave unconnected.
3	ADC_REF	ADC supply and external full scale reference voltage input. Voltage range is 2.4 to 3.3 Vdc. Connect pad 34 to this input to reference the ADC full scale reading to the module's 3.3 V regulated supply.
4	RSVD	Reserved pad. Leave unconnected.
5	GPIO0	Configurable digital I/O port 0. When configured as an input, an internal pull-up resistor can be selected and interrupt from sleep can be invoked. When configured as an output, the power-on state is also configurable.
6	GPIO1	Configurable digital I/O port 1. Same configuration options as GPIO0.
7	GPIO2	Configurable digital I/O port 2. Same configuration options as GPIO0.
8	GPIO3	Configurable digital I/O port 3. Same configuration options as GPIO0.
9	PWM0	Pulse-width modulated output 0 with internal low-pass filter. Filter is 1 st order, 159 Hz 3 dB BW.
10	PWM1	Pulse-width modulated output 1 with internal low-pass filter. Filter is 1 st order, 159 Hz 3 dB BW.
11	SLEEP	Default functionality is active high module sleep input. When switched low after sleep, the module executes a power-on reset.
12	ADC0	10-bit ADC input 0. Full scale reading is referenced to the ADC_REF input.
13	ADC1	10-bit ADC input 1. Full scale reading is referenced to the ADC_REF input.
14	ADC2	10-bit ADC input 2. Full scale reading is referenced to the ADC_REF input.
15	RSVD	Reserved pad. Leave unconnected.
16	DIAG_TX	Diagnostic output (for factory use).
17	DIAG_RX	Diagnostic input (for factory use).
18	/CFG	Protocol selection input. Leave unconnected when using software commands to select transparent/protocol mode (default is transparent mode). Logic low selects protocol mode, logic high selects transparent mode.
19	VCC	Power supply input, +3.3 to +5.5 Vdc.
20	GND	Power supply and signal ground. Connect to the host circuit board ground.
21	GND	Power supply and signal ground. Connect to the host circuit board ground.
22	GPIO4	Configurable digital I/O port 4. When configured as an input, an internal pull-up resistor can be selected. When configured as an output, the power-on state is configurable.
23	GPIO5	Configurable digital I/O port 5. Same configuration options as GPIO4.
24	RSVD	Reserved pad. Leave unconnected.
25	ACT	Data activity output, logic high when data is being transmitted or received.
26	/DCD	Default functionality is data carrier detect output, which provides a logic low on a remote when the module is locked to FHSS hopping pattern and logic low on a base station when at least one remote is connected to it.

Pad	Name	Description
27	RSVD	Reserved pad. Leave unconnected.
28	RSVD	Reserved pad. Leave unconnected.
29	RSVD	Reserved pad. Leave unconnected.
30	/UART0 _ RTS	Default functionality is UART flow control input for the module's host. A logic low allows data flow from the module to the host; a logic high blocks data flow from the module to the host.
31	UART0 _ RXD	UART received data output to host from module.
32	UART0 _ TXD	UART host data input to be transmitted by module.
33	/UART0 _ CTS	UART flow control output from the module to the host. A logic low should allow data flow from the host; a logic high should block data flow from the host.
34	VMOD	Module's +3.3 V regulated supply output. Connect to pad 3 to support 3.3 V full scale and/or ratiometric ADC readings, etc. Current drain on this output should be no greater than 5
35	RSVD	Reserved pad. Leave unconnected.
36	RSVD	Reserved pad. Leave unconnected.
37	RSVD	Reserved pad. Leave unconnected.
38	RSVD	Reserved pad. Leave unconnected.
39	/RESET	Active low module hardware reset.
40	RSVD	Reserved pad. Leave unconnected.
41	GND	RF ground (DNT900CC only). Connect to the host circuit board ground plane.
42	RFIO	Alternate RF port to the U.FL connector (DNT900C only). The antenna can be connected to this port with a 50 ohm stripline or coaxial cable. Leave unconnected when using the U.FL connector.
43	GND	RF ground (DNT900C only). Connect to the host circuit board ground plane.

Table 3.2.1

3.3 Input Voltages

DNT900 radio modules can operated from an unregulated DC input (Pad/Pin 19) in the range of 3.3 (trough) to 5.5 V (peak) with a maximum ripple of 5% over the temperature range of -40 to 85 °C. *Applying AC, reverse DC, or a DC voltage outside the range given above can cause damage and/or create a fire and safety hazard. Further, care must be taken so logic inputs applied to the radio stay within the voltage range of 0 to 3.3 V. Signals applied to the analog inputs must be in the range of 0 to ADC_REF (Pad/Pin 3). Applying a voltage to a logic or analog input outside of its operating range can damage the DNT900 module.*

3.4 ESD and Transient Protection

The DNT900C and DNT900P circuit boards are electrostatic discharge (ESD) sensitive. ESD precautions must be observed when handling and installing these components. Installations must be protected from electrical transients on the power supply and I/O lines. This is especially important in outdoor installations, and/or where connections are made to sensors with long leads. *Inadequate transient protection can result in damage and/or create a fire and safety hazard.*

3.5 Interfacing to 5 V Logic Systems

All logic signals including the serial ports on the DNT900 are 3.3 V signals. To interface to 5 V signals, the resistor divider network shown below must be placed between the 5 V signal outputs and the DNT900 signal inputs. The output voltage swing of the DNT900 3.3 V signals is sufficient to drive 5 V logic inputs.

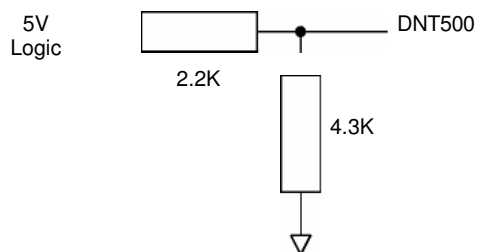


Figure 3.5.1

3.6 Power-On Reset Requirements

The DNT900 has an internal reset circuit that generates and maintains the DNT900 in a reset state until the power supply voltage reaches 3.3 volts for 100 milliseconds. This reset circuit protects the radio and non-volatile memory from brown-out voltage conditions. If devices that communicate with the DNT900 have shorter reset periods, an allowance must be made to allow the DNT900 to come out of reset. Commands and data sent before the DNT900 is out of reset will be ignored.

3.7 Mounting and Enclosures

DNT900C radio modules are mounted by reflow soldering them to a host circuit board. DNT900P modules are mounted by plugging their pins into a set of mating connectors on the host circuit board. Refer to the DNT900 Data Sheet for DNT900P connector details.

DNT900 radio module enclosures must be made of plastics or other materials with low RF attenuation to avoid compromising antenna performance. Metal enclosures are not suitable as they will block antenna radiation and reception. Outdoor enclosures must be water tight, such as a NEMA 4X enclosure.

3.8 Connecting Antennas

A U.FL miniature coaxial connector is provided on both DNT900 configurations for connection to the RFIO port. A short U.FL coaxial cable can be used to connect the RFIO port directly to an antenna. In this case the antenna should be mounted firmly to avoid stressing the U.FL coaxial cable due to antenna mounting flexure. Alternately, a U.FL coaxial jumper cable can be used to connect the DNT900 module to a U.FL connector on the host circuit board. The connection between the host circuit board U.FL connector and the antenna or antenna connector on the host circuit board should be implemented as a 50 ohm stripline. The design details of the stripline are covered in the DNT900 Data Sheet.

3.9 Labeling and Notices

DNT900 FCC Certification - The DNT900 hardware has been certified for operation under FCC Part 15 Rules, Section 15.247. *The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.*

DNT900 FCC Notices and Labels - *This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

A clearly visible label is required on the outside of the user's (OEM) enclosure stating that this product contains a DNT900 transceiver assembly, FCC ID: HSW-DNT900. WARNING: This device operates under Part 15 of the FCC rules. Any modification to this device, not expressly authorized by RFM, Inc., may void the user's authority to operate this device.

Canadian Department of Communications Industry Notice - IC: 4492A-DNT900

This apparatus complies with Health Canada's Safety Code 6 / IC RSS 210.

ICES-003

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le present appareil numerique n'emet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques de Classe B prescrites dans le reglement sur le brouillage radioelectrique edicte par Industrie Canada.

4.0 Protocol Messages

4.1 Protocol Message Formats

The DNT900 is configured and controlled through a series of protocol mode messages. All protocol mode messages have a common header format:

0	1	2	3 ...
SOP	Length	PktType	variable number of arguments ...

Figure 4.1.1

The scale above is in bytes.

The *Start-of-Packet* (SOP) character, 0xFB, is used to distinguish the beginning of a message and to assure synchronization in the event of a glitch on the serial port at startup.

The *Length* byte is defined as the length of the remainder of the message following the length byte itself (or the length of the entire message - 2).

The *Packet Type* (PktType) byte specifies the type of message. It is a bitfield-oriented specifier, decoded as follows:

- Bits 7-6* Reserved for future use
- Bit 5* Event - set to indicate this message is an event
- Bit 4* Reply - set to indicates this message is a reply
- Bits 3-0* Type - indicates the message type/command

As indicated, the lower 4 bits (3-0) specify a message type. Bit 4 is a modifier indicating that the message is a command or a reply. A reply message has the original command type in bits 3:0, with bit 4 set to one.

Arguments vary in size and number depending on the type of message and whether it is a message sent from the host or is a reply from the radio; see Table 4.1.2.1 below for reference. Messages that are generated on the serial interface by the user are referred to as host messages. Messages that are generated by the radio are referred to as reply messages. For many message types, there is a reply message that corresponds to a host message. For example, when the host sends a *TxDData* message, the radio will reply to indicate the status of the transmission, whether it succeeded or failed. Some message types are host-only or reply-only; refer to Table 4.1.2.1 for specifics.

4.1.1 Message Types

Each message generally has two forms, a command from the host and a reply from the radio. Depending on the direction, they have different arguments as shown in Table 4.1.2.1. Event messages from the radio such as receive data packets or status announcements make up a third category of messages. To assist in interpreting the command-reply data flow, the direction is indicated by the high nibble in the message type. For example, an *EnterProtocolMode* command from the host is message type 0x00, and the *EnterProtocolModeReply* from the radio is message type 0x10. Event messages, including *RxDData*, *RxEvent* and *Announce* packets are indicated by 0x20 in the high nibble of the type byte. If multiple arguments are to be provided, they are to be concatenated in the order shown. Little-Endian byte format is used for all

multi-byte arguments, where the lowest order byte is the left byte of the argument and the highest order byte in the right-most byte of the argument.

4.1.2 Message Format Details

Com-mand	Reply	Event	Description	Direction	Arguments
0x00	-	-	EnterProtocolMode	<i>from Host</i>	DNT900 (ASCII characters)
-	0x10	-	EnterProtocolModeReply	<i>from Radio</i>	<i>none</i>
0x01	-	-	ExitProtocol Mode	<i>from Host</i>	<i>none</i>
-	0x1 1	-	ExitProtocolModeReply	<i>from Radio</i>	<i>none</i>
0x02	-	-	SoftwareReset	<i>from Host</i>	BootSelect
-	0x1 2	-	SoftwareResetReply	<i>from Radio</i>	<i>none</i>
0x03	-	-	GetRegister	<i>from Host</i>	Reg, Bank, Span
-	0x1 3	-	GetRegisterReply	<i>from Radio</i>	Reg, Bank, Span,Val
0x04	-	-	SetRegister	<i>from Host</i>	Reg, Bank, Span, Val
-	0x14	-	SetRegisterReply	<i>from Radio</i>	<i>none</i>
0x05	-	-	TxDData	<i>from Host</i>	Addr, Data
-	0x1 5	-	TxDDataReply	<i>from Radio</i>	TxStatus, Addr, RSSI
-	-	0x26	RxDData	<i>from Radio</i>	Addr, RSSI, Data
-	-	0x27	Announce	<i>from Radio</i>	AnnStatus, additional fields
-	-	0x28	RxEEvent	<i>from Radio</i>	Addr, RSSI, Reg, Bank, Span,Val
0x0A	-	-	GetRemoteRegister	<i>from Host</i>	Addr, Reg, Bank, Span
-	0x1A	-	GetRemoteRegisterReply	<i>from Radio</i>	If command successful: TxStatus, Addr, RSSI, Reg, Bank, Span, Val If command failed: TxStatus, Addr
0x0B	-	-	SetRemoteRegister	<i>from Host</i>	Addr, Reg, Bank, Span, Val
-	0x1 B	-	SetRemoteRegisterReply	<i>from Radio</i>	TxStatus, Addr, RSSI
-	-	0x2F	Instrumentation	<i>from Radio</i>	DiagInfo

Table 4.1.2.1

Arguments:

Reg = Register location (*1 byte*)

Bank = Register bank, which provides logical isolation from other data regions (*1 byte*)

Span = Number of bytes of register data to get or set; must align to a parameter boundary (*1 byte*)

Val = Value to read/write to/from register (*see table 4.1.2.1 for size and acceptable range*).

Data = User data (*variable size, 0 to 232 bytes*)

MacAddr = MAC address of the sender for reply, or event or recipient for a command (*3 bytes*)

Addr = same as MAC address

NwkAddr = Network address (*1 byte*)

TxStatus = Result of last TxData operation (*1 byte*)

0 = Acknowledgement received

1 = No acknowledgement received

2 = Not linked (remote)

3 = No ACK due to recipient holding for flow control

RSSI = 2's complement value in dBm, with a range of -128 (0x80) to +125 (0x7D) dBm (1 byte); large positive RSSI values will not occur under ordinary circumstances. RSSI values 126 (0x7E) and 127 (0x7F) have special meaning:

0x7F = No RSSI measured because no ACK was received

0x7E = reserved for future use

NwkID = Network identifier of network joined (1 byte).

BaseMacAddr = MAC address of base that the remote joined (3 bytes).

AnnStatus = Status announcement (1 byte). Additional fields are also reported

depending on the status code:

<u>Status code</u>	<u>Additional fields</u>
A0 = Radio has completed startup initialization	none
A2 = Base: a remote has joined me	MacAddr (0xFF if none)
A3 = Remote: joined a network, ready for data.	NwkID, BaseMacAddr, Range
A4 = Remote: exited network (base is out of range)	NwkID
A7 = Base: remote has left the network.	Addr
<u>Status codes for error conditions</u>	<u>Additional fields</u>
E0 = Protocol error -- invalid message type	none
E1 = Protocol error -- invalid argument	none
E2 = Protocol error -- general error	none
E3 = Protocol error -- parser timeout	none
E4 = Protocol error -- register is read-only	none
E8 = UART receive buffer overflow	none
E9 = UART receive overrun	none
EA = UART framing error	none

Range = Range measurement of radio joining. (1 byte).

BootSelect = Code indicating whether to do a normal reset or a reset to the bootloader (1 byte)
(0 = normal reset, 1 = reset to bootloader, 2 = activate OTA bootloader)

4.1.3 Escape Sequence

The escape sequence is a series of bytes that the user can input in transparent mode to switch the radio to configuration mode. In the DNT900, we define the *EnterProtocolMode* command as the ASCII escape sequence "DNT900" (quotation marks are not part of the sequence). A radio that is already in protocol mode will respond to this command the same way as a radio that is in transparent mode. For the escape sequence to be recognized, byte flow must pause at least 20 ms before the escape sequence is sent.

4.1.4 CFG Select Pin

A falling edge on the CFG pin is the equivalent of entering the escape sequence to invoke the protocol mode. A rising edge on the CFG pin is the equivalent to sending the exit protocol command. The input to the CFG pin is de-bounced to make it compatible with a mechanical switch or jumper.

4.1.5 Flow Control

There are two flow control signals between the radio and the host, RTS and CTS. See Section 2.9 for flow control details.

4.1.6 Protocol Mode Data Message Example

In this example, ASCII text *Hello World* is sent from the base station to a remote using a *TxData* command. The MAC address of the remote is 0x0001 02. The protocol formatting for the host message is:

```
0xFB 0x0F 0x05 0x02 0x01 0x00 0x48 0x65 0x6C 0x6C 0x6F 0x20 0x57 0x6F 0x72 0x6C 0x64
```

There are 15 bytes following the length byte, so the length byte is set to 0x0F. Note that the 0x000102 MAC address is entered in Little-Endian byte order 0x02 0x01 0x00.

When an ACK to this message is received from the remote, the base station outputs a *TxDataReply* message to its host:

```
0xFB 0x06 0x15 0x00 0x02 0x01 0x00 0xC4
```

The 0x00 *TxStatus* byte value indicates the ACK reception from the remote. The *RSSI* value is 0xC4 (-60 dBm).

If the remote is in protocol mode, the message is output in the following format:

```
0xFB 0x1 0 0x26 0x02 0x01 0x00 0xC4 0x48 0x65 0x6C 0x6C 0x6F 0x20 0x57 0x6F 0x72 0x6C 0x64
```

The message is output as an 0x26 event. Note that the *RSSI* value 0xC4 is inserted between the remote's MAC address and the *Hello World* user data.

4.2 Configuration Registers

The configuration registers supported by the DNT900 are described below. Registers are sorted into banks according to similar functions. Default register values are in **bold**.

4.2.1 Bank 0 - Transceiver Setup

<u>Bank</u>	<u>Loc'n</u>	<u>Name</u>	<u>R/W</u>	<u>Size in bytes</u>	<u>Range</u>	<u>Default, Options</u>
00	00	DeviceMode	R/W	1	0..2	0 = Remote , 1 = Base, 2 = PTT Remote
00	01	RF_DataRate	R/W	1	0..4	0 = 500, 1 = 200, 2 = 115.2, 3 = 38.4 kb/s, 0xFF = auto
00	02	HopDuration	R/W	2	4..4000	10 ms (0x00C8)
00	04	InitialNwkID	R/W	1	0..255	0xFF = broadcast
00	05	SecurityKey	R/W	16	0..2 ¹²⁸	0 = security disabled
00	15	SleepMode	R/W	1	0..1	0 = off , 1 = timer, 2 = interrupt
00	16	WakeResponseTime	R/W	1	0..255	1 = 50 ms , 0 to disable
00	17	WakeLinkTimeout	R/W	1	0..255	5 s
00	18	TxPower	R/W	1	0..5	0 = 1 mW ; 1 = 10 mW, 2 = 100 mW 3 = 250 mW, 4 = 500 mW, 5 = 1000 mW
00	19	Reserved				
00	1A	Reserved				
00	1B	JoinPermit	R/W	1	0..1	0 = no join, 1 = remotes (default), 2 = any
00	1C	UserTag	R/W	16		"DNT900"

Note: These settings are individual to each module.

DeviceMode - selects the operating mode for the radio: remote, base, or PTT remote (listen mostly remote). Note that the setting takes effect immediately.

RF_DataRate - this sets the over-the-air RF data rate. DNT900's with different RF data rates cannot intercommunicate. The following codes are defined:

0x00 = 500 kb/s
0x01 = 200 kb/s
0x02 = 115.2 kb/s
0x03 = 38.4 kb/s
0xff = auto (default)

A setting of "auto" will cause a remote to scan all 4 possible RF rates for a network to join. A base set to "auto" will run at the maximum rate of 500 kb/s. A change to this setting on the base will trigger a reboot of the network.

HopDuration - this sets the duration of the hop frame. The duration is set as a 12-bit value, 0.05 ms/count.

InitialNwkID - selects the initial network ID that the radio will start (if a base) or join (if a remote). A value of 0xFF instructs a remote to operate in 'promiscuous mode' and join any network it finds (if set for a base, this will select the default network of 0x00.) The network ID also sets the base frequency at which the hopping pattern starts, as illustrated by the following equation:

$$\text{FrequencyIndex}[n] = \text{HoppingPattern}[n + 2 * \text{NetworkID} \bmod 32]$$

This allows the user to coordinate frequency spacing of co-located networks to maintain a constant separation as they hop.

SecurityKey - this sets the 128-bit AES encryption key that will be used. The intent is for this to act like a password that all radios in the network are configured with. To protect the key, this is a write-only parameter for the user (always reads back as 0x2A). Refer to the Section 2.11 for further information.

SleepMode - this parameter enables sleep mode, which may be used in conjunction with the automatic I/O reporting feature to wake up on specified triggers. Sleep mode is only available for remotes, and the channel access mode for the network must be one of the CSMA modes.

WakeResponse Time - this parameter sets the length of time that a remote in sleep mode will wait for a response after sending an I/O report before going back to sleep, from a minimum of 10 ms to a maximum of 2.5 seconds in 10 ms units. This time interval is set to allow the base host application to respond to a remote with a packet before the remote returns to sleep. If this parameter is set to 0, the remote will stay awake indefinitely after sending an I/O report.

WakeLinkTimeout - this parameter sets the maximum length of time that a remote in sleep mode will spend trying to acquire a link to its base station before going back to sleep, from a minimum of 100 ms to 25.5 s in 100 ms units. If this value is set to 0, the remote will stay awake and continue trying to link to its base station indefinitely.

TxPower - Sets the transmit power level:

0 = 0 dBm or 1 mW (default)
1 = 10 dBm or 10 mW
2 = 20 dBm or 100 mW
3 = 24 dBm or 250 mW
4 = 27 dBm or 500 mW
5 = 30 dBm or 1000 mW (1 W)

When the data rate is set to 500 kb/s, the firmware interlocks the transmit power level to 19 dBm (85 mW) or less to comply with FCC regulations.

JoinPremit - valid parameter on a base only. Controls whether remote nodes are permitted to join the base. Parameter values are 0 = no joining permitted, 1 = remotes only may join, 2 = remotes or routers may join (future function).

UserTag - this is a user definable field intended for use as a location description or other identifying tag such as a "friendly name".

4.2.2 Bank 1 - System Settings

<u>Bank</u>	<u>Loc'n</u>	<u>Name</u>	<u>R/W</u>	<u>Size in bytes</u>	<u>Range</u>	<u>Default; Options</u>
01	00	FrequencyBand	R/W	1	0..1	0x00 = North America; 0x01 = Australia, 0xFF = auto
01	01	AccessMode	R/W	1	0..4	2 = TDMA Dynamic Slots
01	02	BaseSlotSize	R/W	1	6..233	20 bytes
01	03	LeasePeriod	R/W	1	0..250	5 s (0 to disable)
01	04	ARQ_Mode	R/W	1	0..1	0 = ARQ , 1 = redundant broadcast
01	05	ARQ_AttemptLimit	R/W	1	0..63	5 attempts
01	06	TDMA_MaxSlots	R/W	1	0..15	8 slots
01	07	CSMA_Predelaty	R/W	1	0..255	0x03
01	08	CSMA_MaxBackoff	R/W	1	0..255	0x0A
01	09	MaxPropDelay	R/W	1	0..255	0x0D (3.8 mi, 6 km)
01	0A	EpochMode	R/W	1	0..2	0 = use previous ; 1 = increment 2 = random
01	0B	CSMA_RemtSlotSize	R/W	1	1 ..255	50
01	0C	CSMA_BusyThreshold	R/W	1	1..255	20
01	0D	RangingInterval	R/W	1	0..255	0 (disable)

FrequencyBand - this parameter sets the range of frequencies over which the radio will operate. Two settings are defined: North America (902-928 MHz) and Australia-New Zealand (915-928 MHz).

AccessMode - this sets the channel access mode that remotes will use to communicate with the base:

<u>Access Mode</u>	<u>Description</u>	<u>Max # of Remotes</u>	<u>Remote Slot Size</u>
0	CSMA polling	1024	manual
1	CSMA contention	1024	manual
2 (default)	TDMA dynamic slots	up to 16	automatic
3	TDMA fixed slots	up to 16	automatic
4	TDMA with PTT	1024	automatic

BaseSlotSize - This parameter set the maximum number of bytes allocated to user messages and their RF headers. This value must be set by the user for all access modes (default value is 20 bytes).

LeasePeriod - this sets the duration in seconds for network address leases that remotes may receive from the base. If a period of zero is specified, then lease and network address functions are disabled. The minimum valid lease period is two seconds. Remotes will attempt to renew their leases at an interval equal to half the lease period. For example, if the lease period is set to four seconds, remotes will renew their leases every two seconds.

ARQ_Mode - this sets the ARQ mode for delivery of application messages. In ARQ mode, an ACK is expected from the receiving radio for each message addressed and sent to it. If no ACK is received, up to *ARQ_AttemptLimit*, efforts to send the data will be made, after which the message is discarded. In redundant broadcast mode, each broadcast message is sent exactly *ARQ_AttemptLimit* times. No ACKS are sent or expected. The following bit options control this function:

bits 7..2 Not used
 bit 1 If set to 0, the base can pass a new *ARQ_AttemptLimit* to the remotes
 If set to 1, the remotes use the existing *ARQ_AttemptLimit in Bank 1*
 bit 0 ~~Set to 1 to enable ARQ retries~~
 instead of once.

ARQ_AttemptLimit - this sets the maximum number of attempts that will be made to send a data packet on the RF link. Setting this parameter to the maximum value of 63 is a flag value indicating that there should be no limit to the number of attempts to send each packet (infinite number of attempts). This mode is intended for point-to-point networks in serial data cable replacement applications where absolutely no packets can be lost.

TDMA_MaxNumSlots - in TDMA access modes, this sets the number of slots that are allowed. In fixed slot mode, this allocates the number of slots directly. In dynamic slot mode, this sets the maximum number of slots that may be allocated according to the number of remotes that are registered.

CSMA_Predelay - in CSMA mode, this parameter sets the maximum delay between the time a remote senses a clear channel and it starts a transmission. Refer to Section 2.7.1 for more information.

CSMA_MaxBackoff - in CSMA mode, this sets the maximum length of time that a remote will back off for after a failed transmit attempt. Refer to Section 2.7.1 for more information.

MaxPropDelay - this is the maximum propagation delay that remotes and base will use in their slot timing calculations, in units of 3.1 μ s. This is used to pad the amount of time dedicated to the signup slot. Increasing this value will subtract slightly from the overall slot time available to remotes for sending data. Note that the free-space round trip propagation delay for one mile is 10.72 μ s. Each increment of *MaxPropDelay* thus corresponds to a maximum radius from the remote to the base of 0.29 mi (0.46 km).

EpochMode - this is a base-only parameter that governs how the base will select an epoch number at startup when it creates a network. In mode 0, the base will read the epoch number from NVRAM. In mode 1, it reads the value from NVRAM and increments it (and stores the result). In mode 2, it will generate a random epoch number at every startup.

4.2.3 Bank 2 - Status Registers

<i>Bank</i>	<i>Loc'n</i>	<i>Name</i>	<i>R/W</i>	<i>Size in bytes</i>	<i>Range</i>	<i>Default</i>
02	00	MacAddress	R	3	0..2 ²⁴	fixed value
02	03	CurrNwkAddress	R	1	0..255	as set as set
02	04	CurrNwkID	R	1	0..255	as set as set
02	05	CurrRF_DataRate	R	1	0..4	current status
02	06	CurrFreqBand	R	1	0..1	as set
02	07	LinkStatus	R	1	0..1	as set
02	08	RemoteSlotSize	R	1	0..243	reserved
02	09	TDMA_NumSlots	R	1	0..16	current slot
02	0A	Reserved	R	1	0..255	0x00 = DNT900 rev A
02	0B	TDMA_CurrSlot	R	1	0..16	current firmware load
02	0C	HardwareVersion	R	1	0..255	current firmware load
02	0D	FirmwareVersion	R	1	0..255	as set
02	0E	FirmwareBuildNum	R	2	0..2 ¹⁶	current value
02	10	Epoch	R	1	0..255	as set
02	11	SuperframeCount	R	1	0..255	as set
02	12	RSSI_Idle	R	1	0..255	as set
02	13	RSSI_Last	R	1	0..255	as set
02	14	CurrTxPower	R	1	0..255	as set
02	15	CurrAttemptLimit	R	1	0..255	as set
02	16	CurrRangeDelay	R	1	0..255	

MacAddress - returns the radio's unique 24-bit MAC address.

CurrNwkAddress - returns the radio's current network address, if any. Some special values should be noted. The base always reports 0x00. If a remote does not have a network address, either because lease mode is not enabled or it has not yet received one, it reports 0xFF.

CurrNwkID - This returns the network ID of the network that the radio is currently assigned to or connected to. A value of 0xFF means the radio is scanning for a network but has not yet joined one.

CurrRF_DataRate - this returns the RF data rate of the network that the radio is currently assigned to or connected to. A value of 0xFF means the radio is scanning for a network but has not yet joined one.

CurrFreqBand - this returns the frequency band of the network that the radio is currently assigned to or connected to. A value of 0xFF means the radio is scanning for a network but has not yet joined one.

LinkStatus - this returns the radio's current connection status to the network. The following codes are defined:

LinkStatus	Remote Status	Base Status
0	initializing	initializing
1	unlinked, scanning for network	not used
2	linked, acquiring network parameters	not used
3	linked, registering with base	not used
4	linked and registered	ready for data transfer

RemoteSlotSize - returns the current remote slot size, defined as the maximum number of bytes allocated to user messages and their RF headers. In the three user selectable TDMA modes the slot size is automatically computed, this value is read-only. In the CSMA modes, this value must be set by the user.

TDMA_NumSlots - in TDMA access modes, this returns the number of slots currently allocated.

TDMA_CurrSlot - returns the current TDMA slot number in modes where the slot position is automatically computed. In modes where this number is not applicable, the value is read as 0xFF.

Hardware Version - returns an identifier indicating the type of radio. A value of 0x00 is defined for the DNT900 Rev A hardware.

Firmware Version - returns the firmware version of the radio in 2-digit BCD format.

FirmwareBuildNum - returns the firmware build number, in binary format.

Epoch - returns the current epoch number.

SuperframeCount - returns the current superframe count. The count increments every 64 hops.

RSSI_Idle - returns the last measurement of RSSI made during a time when the RF channel was idle. May be used to detect interferers.

RSSI_Last - returns the last measurement of RSSI made during receipt of an RF packet with a valid CRC. Used for network commissioning and diagnostic purposes.

CurrTxPower - returns the current transmitter power setting, allowing the automatic transmitter power setting to be tracked. This parameter is the nominal output power setting in dBm, and is a 2's complement value.

CurrAttemptLimit - this returns the value of *ARQ_AttemptLimit* currently in use (depending on the selected *ARQ_Mode*, it may not always match the local EEPROM value).

CurrRangeDelay - returns the current propagation delay for this remote as measured from the base (applies to remote nodes only).

4.2.4 Bank 3 - Serial

<u>Bank</u>	<u>Loc'n</u>	<u>Name</u>	<u>R/W</u>	<u>Size in bytes</u>	<u>Range</u>	<u>Default</u>
03	00	SerialRate	R/W	2	0..2 ¹⁶	115.2 kb/s (0x0004)
03	01	SerialParams	R/W	1	0..7	8N1
03	03	SerialControls	R/W	1	0..7	0X07

SerialRate - sets the serial rate divisor according to the following formula:

$$\text{Serial rate in b/s} = 460800 / \text{SerialRate}$$

Serial rate division setting for commonly used baud rates are:

<u>Setting</u>	<u>Serial rate</u>
0x0000	460.8 kb/s
0x0001	460.8 kb/s
0x0002	230.4 kb/s
0x0004	115.2 kb/s (default)
0x0006	76.8 kb/s
0x0008	57.6 kb/s
0x000C	38.4 kb/s
0x0010	28.8 kb/s
0x0018	19.2 kb/s
0x0030	9.6 kb/s
0x0060	4.8 kb/s
0x00C0	2.4 kb/s
0x0180	1.2 kb/s

Note that if a value of 0x0000 is specified, the maximum data rate of 460.8 kb/s will be selected.

SerialParams - sets the serial mode options for parity and stop bits:

<u>Setting</u>	<u>Mode</u>
0x00	No parity, 8 data bits, 1 stop bit
0x01	No parity, 8 data bits, 2 stop bits
0x02	Reserved
0x03	Reserved
0x04	Even parity, 8 data bits, 1 stop bit
0x05	Even parity, 8 data bits, 2 stop bits
0x06	Odd parity, 8 data bits, 1 stop bit
0x07	Odd parity, 8 data bits, 2 stop bits

Note that 8-bit data with no parity is capable of carrying 7-bit data with parity for compatibility without loss of generality for legacy applications that may require it.

SerialControls - this parameter affects the way the radio responds to the various serial control lines. Enabling or disabling response to some serial control signals can facilitate communicating with devices that support only a reduced serial interface. The parameter is defined as a bitmask, with the following options:

- bits 7..3* Reserved
- bit 2* Base DCD mode:
 - 1 = The base will only assert DCD when at least one remote is registered (default).
 - 0 = The base always asserts DCD, regardless of whether any remotes are attached. **#**
- RTS enable:
 - 1 = Radio will respond to changes on the RTS control line (default).
 - 0 = Radio ignores the RTS pin and assumes flow control is always asserted.
- bit 0* DTR/SLEEP enable.
 - 1 = Radio will respond to changes on the SLEEP (DTR) control line (default)
 - 0 = Radio ignores the SLEEP (DTR) pin and is always in the awake state.

4.2.5 Bank 4 - Host Protocol Settings

<u>Bank</u>	<u>Loc'n</u>	<u>Name</u>	<u>R/W</u>	<u>Size in bytes</u>	<u>Range</u>	<u>Default; Options</u>
04	00	ProtocolMode	R/W	1	0..1	0 = transparent ; 1 = protocol
04	01	ProtocolOptions	R/W	1	0..255	0x05
04	02	TxTimeout	R/W	1	0..255	5 ms
04	03	MinPacketLength	R/W	1	0..255	1 byte
04	04	AnnounceOptions	R/W	1	0..7	0x07 all enabled
04	05	TransLinkAnnEn	R/W	1	0..1	0 = disabled ; 1 = <LINK> announce
04	06	EscapeSequenceEn	R/W	1	0..2	0 = enabled ; 1 = startup, 2 = anytime
04	07	TransPtToPtMode	R/W	1	0..1	0 = multipoint , 1 = point-to-point

ProtocolMode - this parameter selects the host protocol mode. The default is 0, which is transparent mode, meaning the radio conveys whatever characters that are sent to it transparently, without requiring the host to understand or conform to the DNT900's built-in protocol. This setting is recommended for point-to-point applications for legacy applications such as wire replacements where another serial protocol may already exist. Setting this parameter to 1 enables the DNT900 host protocol, which is recommended for point-to-multipoint applications and is preferred for new designs. It is not necessary to define the same protocol mode for all radios in a network. For example, it is frequently useful to configure all the remotes for transparent mode and the base for protocol mode. Note that it is possible for the host to switch the radio from transparent mode to protocol mode and back if desired by transmitting a special "escape sequence" code.

ProtocolOptions - this is a bitmask that selects various options for the protocol mode. The default is 0x05.

- bit 7* Enable output of Instrumentation packets
- bits 6..3* Reserved
- bit 2* Enable output of TxReply packets
- bit 1* Reserved
- bit 0* Enable output of Announce packets

AnnounceOptions - this is a bitmask that enables/disables different types of Announce packets:

- bit 7..3* Reserved
- bit 2* Enable bit for Announce types E0-EA (error notification)
- bit 1* Enable bit for Announce types A1 -A7 (<LINK> notifications)
- bit 0* Enable bit for Announce types A0 (initialization)

Tx Timeout - this parameter sets the transmit timeout used for determining message boundaries in transparent data mode. Units are in milliseconds. The default is that a message boundary is determined whenever there is more than a 5 ms gap detected between consecutive characters.

MinPacketLength - sets the minimum message length used for determining packet boundaries in transparent data mode. The default is one byte.

TransLinkAnnEn - enables a link announcement function for transparent mode. Whenever link is acquired or dropped, the strings "<LINK>" or "<DROP>" are sent to the host.

EscapeSequenceEn - enables or disables the escape sequence which can be used to switch from transparent mode to protocol mode. Enabled by default. Valid settings are 0 = disabled, 1 = one chance at startup, 2 = enabled at any time.

TransPtToPtMode - controls the behavior for addressing packets in transparent mode. When this setting is zero (default), in transparent mode the base will direct packets to the broadcast address. This is useful for point-to-multipoint where the base is sending data to multiple remotes, for instance in applications where a wireless link is replacing an RS-485 serial bus. When this setting is one, in transparent mode the base will direct packets to the last remote that registered with it. This is useful for point-to-point networks where there are only two endpoints, for instance in applications where a simple serial cable is being replaced.

4.2.6 Bank 5 - I/O Peripheral Registers

<i>Bank</i>	<i>Loc'n</i>	<i>Name</i>	<i>R/W</i>	<i>Size in bytes</i>	<i>Range in bits</i>	<i>Default</i>
05	00	GPIO0	R/W	1	1	0
05	01	GPIO1	R/W	1	1	0
05	02	GPIO2	R/W	1	1	0
05	03	GPIO3	R/W	1	1	0
05	04	GPIO4	R/W	1	1	0
05	05	GPIO5	R/W	1	1	0
05	06	ADC0	R	2	10	N/A
05	08	ADC1	R	2	10	N/A
05	0A	ADC2	R	2	10	N/A
05	0C	Event Flags	R	2	10	N/A
05	0E	PWM0	R/W	2	9	0
05	10	PWM1	R/W	2	9	0

GPIO0..5 - writing to these registers sets the corresponding driver for pins that are enabled outputs. Writing to pins that are enabled as inputs enables or disables the internal pull-up. Reading these registers returns the current level detected on the corresponding pins.

ADC0..2 - read-only, returns the current 10-bit ADC reading for the selected register. See the discussion of the *ADC_SampleIntvl* parameter below.

EventFlags - used with the automatic I/O reporting feature, this parameter indicates which I/O events have been triggered since the last report message:

- bits 15..8* Reserved
- bit 7* ADC2 high/low threshold violation
- bit 6* ADC1 high/low threshold violation
- bit 5* ADC0 high/low threshold violation
- bit 4* Periodic timer report
- bit 3* GPIO3 edge transition
- bit 2* GPIO2 edge transition
- bit 1* GPIO1 edge transition
- bit 0* GPIO0 edge transition

PWM0.. 1 - sets the PWM (DAC) outputs. The DC voltage derived from the integrated low-pass filters on the PWM output provides an effective DAC resolution of 7 bits (8 bits achievable with external filtering). The range of this parameter is 0x0000 to 0x00FF.

4.2.7 Bank 6 - I/O setup

<u>Bank Loc'n Name</u>			<u>Size in Range</u>				<u>Default; Options</u>
			<u>R/W</u>	<u>bytes</u>	<u>in bits</u>		
06	00	GPIO_Dir	R/W	1	4	0	(all inputs)
06	01	GPIO_Init	R/W	1	4	0	(all zeros)
06	02	GPIO_Alt	R/W	1	4	0x08	= use GPIO3 for RS485 enable
06	03	GPIO_Edge Trigger	R/W	1	8	0x00	
06	04	GPIO_SleepMode	R/W	1	1	0 = off; 1 = use sleep I/O states	
06	05	GPIO_SleepDir	R/W	1	6	0	(all inputs)
06	06	GPIO_SleepState	R/W	1	6	0	(all zeros)
06	07	PWM0_Init	R/W	2	10	0x0000	
06	09	PWM1_Init	R/W	2	10	0x0000 0x0001	
06	0B	ADC_SampleIntvl	R/W	2	16	(10 ms)	
06	0D	ADC0_ThresholdLo	R/W	2	10	0x0000	
06	0F	ADC0_ThresholdHi	R/W	2	10	0x03FF	
06	11	ADC1_ThresholdLo	R/W	2	10	0x0000	
06	13	ADC1_ThresholdHi	R/W	2	10	0x03FF	
06	15	ADC2_ThresholdLo	R/W	2	10	0x0000	
06	17	ADC2_ThresholdHi	R/W	2	10	0x03FF	
06	19	IO_ReportTrigger	R/W	1	0..1	0x00 = off	
06	1A	IO_ReportInterval	R/W	4	32	0x0000BB8	(every 30 seconds)

GPIO_Dir - this parameter is a bitmask that sets whether the GPIOs are inputs (0) or outputs (1). The default is all inputs.

GPIO_Init - this parameter is a bitmask that sets the initial value for any GPIOs which are enabled as outputs. For GPIOs enabled as inputs, this sets the initial pull-up setting.

GPIO_Alt - provides and alternate function for GPIO3 as an RS-485 driver enable.

GPIO_Edge Trigger - when GPIO triggers are enabled for automatic I/O reporting, this function controls the trigger behavior:

<i>bits 7..6</i>	GPIO3 edge function
<i>bits 5..4</i>	GPIO2 edge function
<i>bits 3..2</i>	GPIO1 edge function
<i>bits 1..0</i>	GPIO0 edge function

The bit values for each GPIO map to the following settings:

Value	GPIO edge behavior
11	Rising edge trigger, neither level keeps remote awake
10	Bidirectional edge trigger, neither level keeps remote awake
01	Rising edge trigger, holding high keeps remote awake
00	Falling edge trigger, holding low keeps remote awake

GPIO_SleepMode - when set to 1, this parameter enables setting of GPIOs to the designated direction and state whenever a device is asleep.

GPIO_SleepDir - when *GPIO_SleepMode* is enabled, this parameter functions as a secondary *GPIO_Dir* to set the direction of the GPIOs during a device's sleep period. This enables the user to provide alternate configurations during sleep that will help minimize current consumption. Bits 0..5 correspond to GPIO0..GPIO5.

GPIO_SleepState - when *GPIO_SleepMode* is enabled, this parameter functions as a bitmask to set the output state of the GPIOs during a device's sleep period. This enables the user to provide alternate configurations during sleep that will help minimize current consumption. Bits 0..5 correspond to GPIO0..GPIO5 respectively.

PWM0_Init - this parameter sets the initial value for PWM0 at startup.

PWM1_Init - this parameter sets the initial value for PWM1 at startup.

ADC_SampleIntvl - this parameter sets the interval between the beginning of one ADC read cycle and the next ADC read cycle. The three ADC inputs are read on each ADC read cycle. An *ADC_SampleIntvl* count equals 10 ms.

ADC0..2_ThresholdLo/Hi - these values define thresholds to trigger an I/O report based on ADC measurements. If I/O reporting is enabled, a single EVENT report containing the contents of the I/O bank is generated when a threshold is crossed. Reporting is "edge-triggered" with respect to threshold boundaries, not "level-triggered"; i.e., if the measurement remains there, additional reports are not triggered until the value crosses the threshold again. The thresholds are met whenever one of the following inequalities are satisfied:

$ADCx < ADCx_ThresholdLo$
 $ADCx > ADCx_ThresholdHi$

IO_Report Trigger - when a selected trigger source is enabled, a trigger event will cause the remote to send an EVENT message to its base containing the entire current values of the I/O Register Bank from GPIO0 up to and including the *EventFlags*, but not the PWM settings which are output-only.

<i>bit 7</i>	ADC2 high/low thresholds
<i>bit 6</i>	ADC1 high/low thresholds
<i>bit 5</i>	ADC0 high/low thresholds
<i>bit 4</i>	Periodic report timer
<i>bit 3</i>	GPIO3 edge
<i>bit 2</i>	GPIO2 edge
<i>bit 1</i>	GPIO1 edge
<i>bit 0</i>	GPIO0 edge

I/O reporting is supported for remotes only, not the base.

IO_ReportInterval - when periodic I/O reporting is enabled, this parameter sets the interval between reports. Units are 10 ms increments, and the default report interval is every 30 seconds.

4.2.8 Bank FF - Special Functions

This bank contains two user functions, UcReset and MemorySave:

<i>Bank</i>	<i>Loc'n</i>	<i>Name</i>	<i>R/W</i>	<i>bytes</i>	<i>Range</i>	<i>Description</i>
FF	00	UcReset	W	1	0..90	00 = reset, 1 = clear status/address and reset, 0x5A = reset with factory defaults
FF	FF	MemorySave	W	1	0..1	0 = load factory defaults, 1 = save settings to EEPROM

UcReset - writing a value of 0x00 to this location forces a software reset of the microcontroller. Writing a value of 0x02 activates the OTA bootloader. To upgrade a remote remotely, set this register value and then begin the OTA firmware download process. Writing any other value to this register returns an error. A reply packet, either local or over-the-air, may not be received when writing a value to this register.

MemorySave - writing a zero to this location clears all registers back to factory defaults. Writing a one to this location commits the current register settings to EEPROM. When programming registers, all changes are considered temporary until this command is executed.

4.2.9 Protocol Mode Configuration/Sensor Message Example

In this example, the host configures the base station to transmit 24 dBm (250 mW) of RF power using the *SetRegister* command, 0x04. The *TxPower* parameter is stored in bank 0x00, register 0x18. A one-byte parameter value of 0x03 selects the 24 dBm (250 mW) power level. The protocol formatting for the command is:

```
0xFB 0x05 0x04 0x18 0x00 0x01 0x03
```

Note the order of the bytes in the command argument: register, bank, span, parameter value. When the base station receives the command it updates the parameter setting and return a *SetRegisterReply* message as follows:

```
0xFB 0x01 0x14
```

In order for this new RF power setting to persist through a base station power down, *MemorySave* must be invoked. This is done by setting a one-byte parameter in register 0xFF of bank 0xFF to 0x01 with another *SetRegister* command:

```
0xFB 0x05 0x04 0xFF 0xFF 0x01 0x01
```

The base station will write the current parameter values to EEPROM and return a *SetRegisterReply* message:

```
0xFB 0x01 0x14
```

In this example, the base station host requests an ADC1 reading from a remote using the *GetRemoteRegister* command, 0x0A. The MAC address of the remote is 0x000102. The current ADC1 measurement is read from register 0x08 in bank 0x05. The ADC reading spans two bytes. The protocol formatting for this command is:

```
0xFB 0x07 0x0A 0x02 0x01 0x00 0x08 0x05 0x02
```


Note the remote MAC address 0x0001 02 is entered in Little-Endian byte order, 0x02 0x01 0x00. The ADC reading is returned in a *GetRemoteRegisterReply* message:

```
0xFB 0x0B 0x1A 0x00 0x02 0x01 0x00 0xC4 0x08 0x05 0x02 0xFF 0x02
```

Substantial information is returned in the message. The last two bytes of the message give the ADC reading in Little-Endian format, 0xFF 0x02. The ADC reading is thus 0x02FF. The RSSI value is the byte following the address, 0xC4 (-60 dBm). The *TxStatus* byte to the right of the *GetRemoteRegisterReply* Packet Type is 0x00, showing the packet was acknowledged on the RF channel.

4.2.10 Protocol Mode Event Message Example

In this example, the *IO_ReportInterval* set to 10 seconds and the *periodic report timer* bit in the *IO_Report Trigger* parameter is set on the remote with MAC address 0x1 23456. This causes event messages to be sent from this remote every 10 seconds. The *IO_ReportInterval* and the *IO_Report Trigger* parameters are loaded using *SetRemoteRegister* commands. The command to set the *IO_ReportInterval* to 10 seconds is:

```
0xFB 0x0B 0x0B 0x56 0x34 0x12 0x1A 0x06 0x04 0xE8 0x03 0x00 0x00
```

The *IO_ReportInterval* parameter starts in location 0x1A of bank 0x06. The report interval is set in 10 ms units, so a 10 second report interval is 1000 units or 0x000003E8 (Little-Endian format E8 03 00 00). The *IO_ReportInterval* parameter is updated and *SetRemoteRegisterReply* is returned:

```
0xFB 0x06 0x1 B 0x00 0x56 0x34 0x1 2 0xC4
```

The command to set the *periodic report timer* bit in *IO_Report Trigger* to is:

```
0xFB 0x08 0x0B 0x56 0x34 0x12 0x19 0x06 0x01 0x10
```

The *periodic report timer* bit in *IO_Report Trigger* is located in bit position four (0001 0000b) or 0x1 0. The *IO_Report Trigger* parameter is updated and *SetRemoteRegisterReply* is returned:

```
0xFB 0x06 0x1 B 0x00 0x56 0x34 0x1 2 0xC4
```

The remote will start sending event messages on 10 second intervals as shown in the log records below:

```
11:20:30.328: RX: FB 16 28 56 34 12 CB 00 05 0E 01 00 00 00 01 01 F9 01 DF 01 C9 01 10 00
11:20:40.328: RX: FB 16 28 56 34 12 B6 00 05 0E 01 00 00 00 01 01 F8 01 DF 01 CC 01 10 00
11:20:50.328: RX: FB 16 28 56 34 12 B3 00 05 0E 01 00 00 00 01 01 F8 01 E0 01 CC 01 10 00
11:21:00.343: RX: FB 16 28 56 34 12 B1 00 05 0E 01 00 00 00 01 01 F9 01 DF 01 C9 01 10 00
11:21:10.406: RX: FB 16 28 56 34 12 AE 00 05 0E 01 00 00 00 01 01 F9 01 DF 01 C8 01 10 00
11:21:20.328: RX: FB 16 28 56 34 12 AD 00 05 0E 01 00 00 00 01 01 F9 01 E1 01 CF 01 10 00
```

IO_Report Trigger generates *RxEvent* messages (*Pkt Type* 0x28). The message payload consists of the first 14 bytes in Bank 5, including the state of GPIO0 through GPIO5, the input voltages measured by ADC0 through ADC2, and the state of the event flags. Note the ADC readings and the event flags are presented in Little-Endian order.

5.0 DNT900DK Developer's Kit

Figure 5.0.1 shows the main contents of a DNT900DK Developer's kit:



Figure 5.0.1

5.1 DNT900DK Kit Contents

The kit contains the following items:

- Two DNT900P Radios
- Two DNT900 Interface Boards
- Two 9 V Wall Plug Power Suppliers, 120/240 VAC
- Two U.FL RF Jumper Cables
- Two RJ-45 to DB-9F Cable Assemblies
- Two A/B USB Cables
- One RJ-11 to DB-9F Cable Assembly
- Two 900 MHz Dipole Antennas
- One DNT900 Documentation and Software CD

5.2 Additional Items Needed

To operate the kit, the following additional items are needed:

- Two PCs with Microsoft WindowsXP or Vista Operating Systems

To fully test the kit's functionality, the PCs should be equipped with high-speed serial ports capable of operation at 460.8 kb/s.

5.3 Developer's Kit Default Operating Configuration

The default operating configuration of the DNT900DK developer's kit is TDMA Mode 2, point-to-point, with transparent serial data at 115.2 kb/s, 8N 1. One DNT900P is preconfigured as a base station and the other as a remote. The defaults can be overridden to test other operating configurations using the DNT Wizard utility discussed in Section 5.5. The default RF power setting is 0 dBm (1 mW), which is suitable for side-by-side operation. The RF power level should be set higher as needed for longer range operation. Note that setting the RF power to a high level when doing side-by-side testing will overload the DNT900P receiver and cause erratic operation.

5.4 Development Kit Hardware Assembly

Observe ESD precautions when handling the kit circuit boards. Referring to Figure 5.4.1, confirm each DNT900P is correctly plugged into an interface board, with the radio oriented so that its U.FL connector is next to the U.FL connector on the interface board. Check each radio's alignment in the socket on the interface board. No pins should be hanging out over the ends of the connector. Next, install the U.FL jumper cables between the U.FL connectors on the radios and the interface boards. Then install the dipole antennas. As shown in Figure 5.4.2, confirm there is a jumper on pins J14. The interface boards can now be powered by the 9 V wall plug transformer power supplies (the interface boards can also be run for a short time from the 9 V batteries for range testing, etc.).

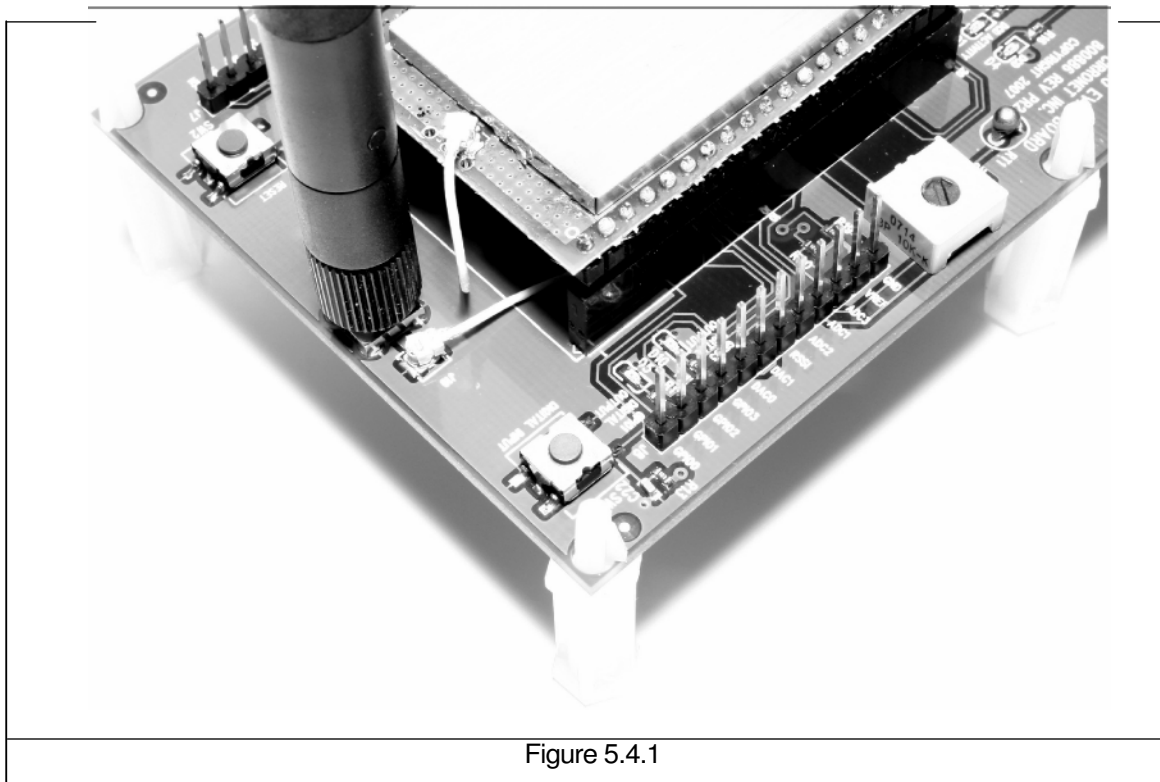


Figure 5.4.1

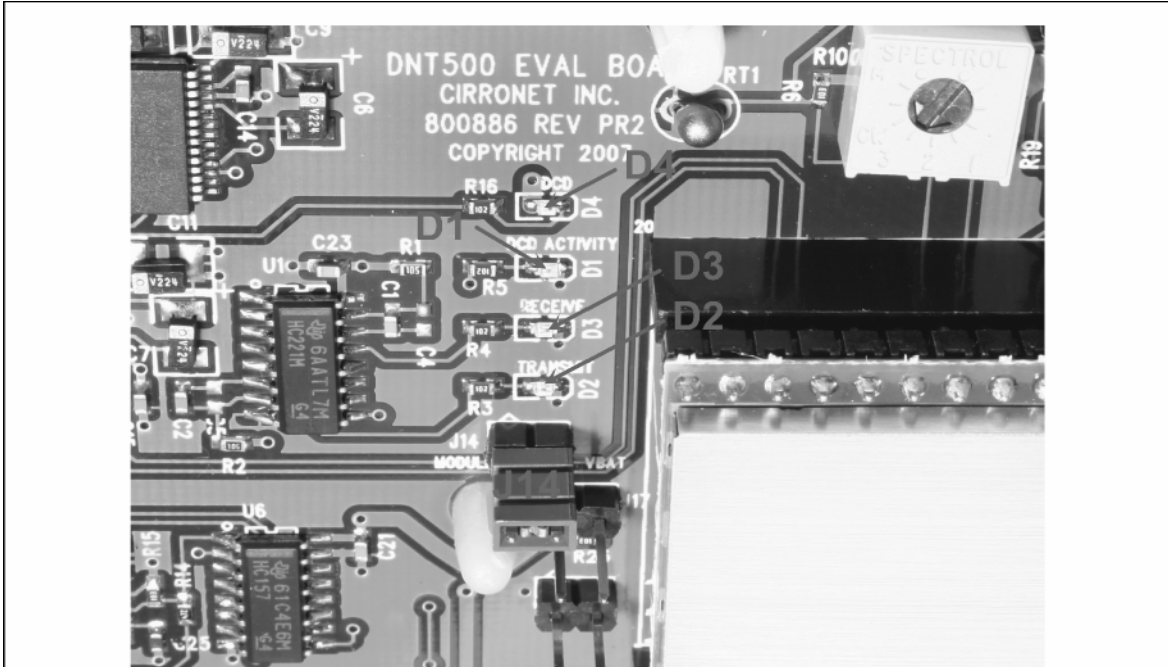


Figure 5.4.2

There are three serial connectors on the interface boards, as shown in Figure 5.4.3. The RJ-45 connector provides a high-speed RS232 interface to the DNT900P's main serial port. The USB connector provides an optional interface to the radio's main serial port. The RJ-11 connector provides a high-speed RS232 interface to the radio's diagnostic port. The DNT Wizard utility program runs on the radio's main port.

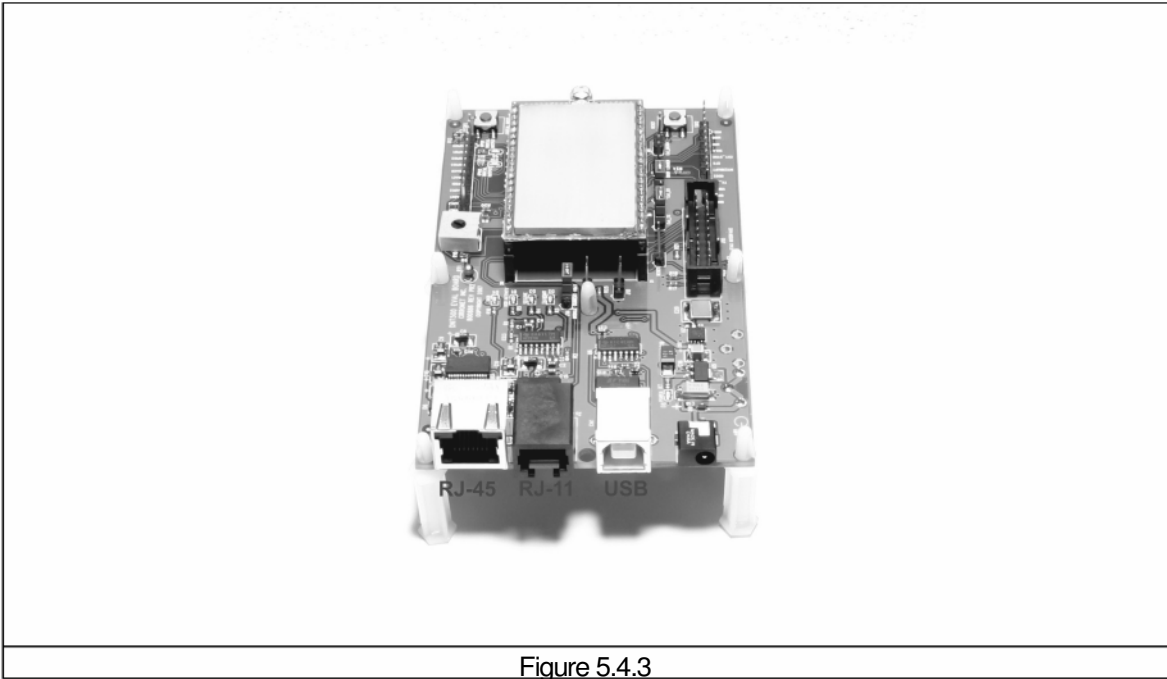



Figure 5.4.3

The preferred PC interface is a serial port card capable of operating up to 460.8 kb/s. Many desktop PCs have a built-in serial port capable of operation at 115.2 kb/s. The kit can be run satisfactorily at the 115.2 kb/s data rate, but not at its fastest throughput. Use the RJ-45 to DB-9F cable assemblies for serial port operation.

Optionally, the kit can be run from the USB port. Plugging in the USB cable automatically switches operation from the RJ-45 connector. The USB interface is based on an FT232RL serial-to-USB converter IC manufactured by FTDI. The driver files for the FT232RL are located in the *USB Driver* folder on the kit CD, and the latest version of the driver can be downloaded from the FTDI website, www.ftdichip.com. The driver creates a virtual COM port on the PC. Power up an interface board with an installed DNT900P using one of the supplied wall plug power supplies. Next connect the interface board to the PC with a USB cable. The PC will find the new USB hardware and open up a driver installation dialog box. Click on the *Browse* button in the dialog box and point to the folder with the FT232R driver files. The driver installation dialog will run *twice* to complete the FT232R driver installation.

5.5 DNT Wizard Utility Program

The DNT Wizard utility program is located in the *PC Programs* folder on the kit CD. The Wizard requires no installation and can simply be copied to the PC and run. The Wizard start-up window is shown in Figure 5.5.1.

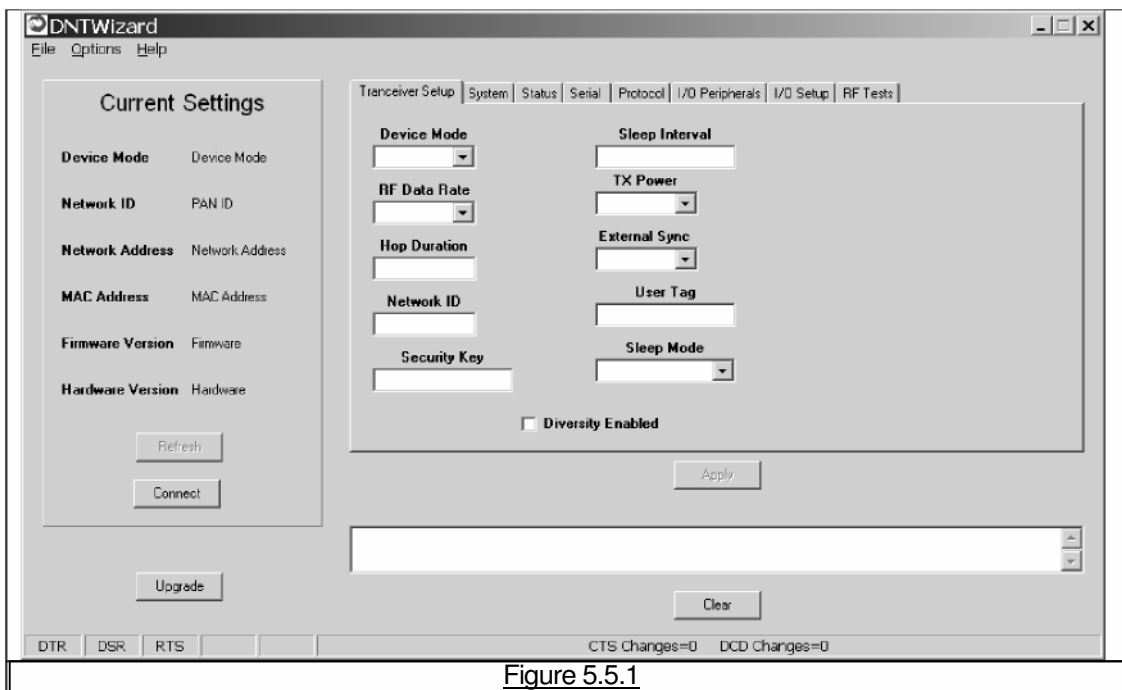

Press the *Connect* button to open the serial port dialog box, as shown in Figure 5.5.2. Set the data rate to 115.2 kb/s (DNT900 default), select the COM port for the DNT900 interface board and press *OK*.

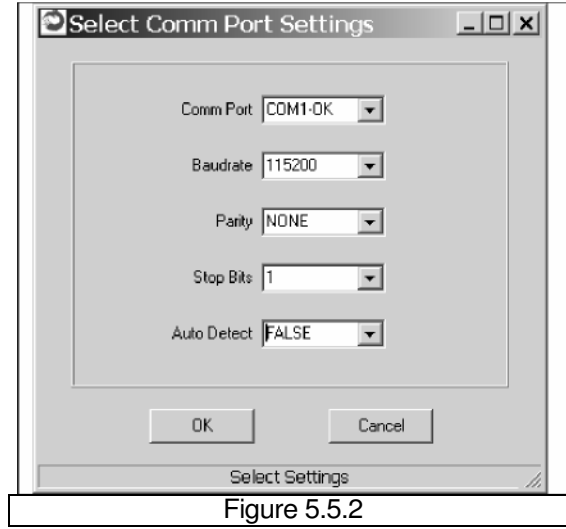


Figure 5.5.2

At this point the Wizard will collect configuration parameters from the DNT900. This data is organized under the first seven tabs, each corresponding to a Bank of register parameters as discussed in Section 4.2. The *Transceiver Setup* Tab is shown in Figure 5.5.3, and corresponds to Bank 0. The current values of each Bank 0 parameter are displayed and can be updated by selecting from the drop down menus or entering data from the keyboard, and then pressing the *Apply* button. Note that data is *displayed and entered into the Wizard in Big-Endian order*. The Wizard automatically reorders multi-byte data to and from Little-Endian order when building or interpreting messages.

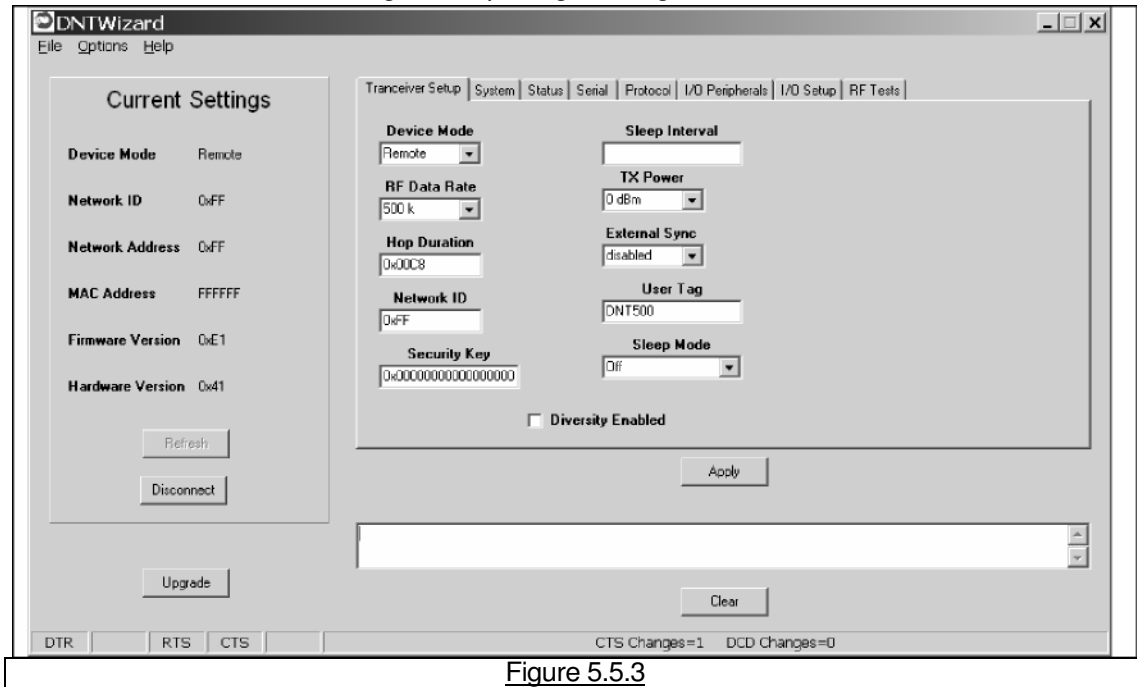


Figure 5.5.3

In addition to conventional mouse and keyboard inputs, the Wizard supports two special function keys, F1 and F2. F1 toggles the serial port DTR line off and on. Pressing F1 the first time after the Wizard is

started will place the DNT900 in power down mode. Pressing the F1 key again will reboot and restart the DNT900. The current status of the DTR line is seen in the lower left corner of the Wizard window. F2 toggles the RTS line. Pressing F2 the first time after the Wizard is started will halt the flow of data from the DNT900. Pressing the F2 key again will re-enable data flow. The current status of the RTS line is also seen in the lower left corner of the Wizard window.

Figure 5.5.4 shows the DNT Wizard *System* tab contents, corresponding to parameter Bank 1. The default parameters under this tab have been modified to change from CDMA to TDMA operation.

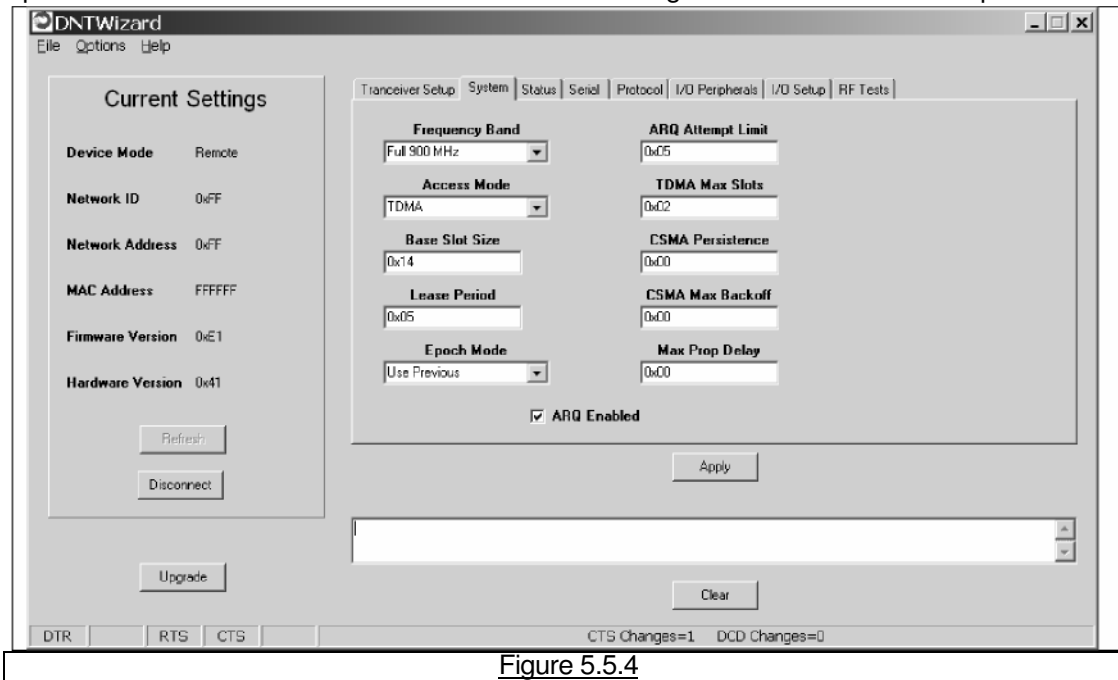


Figure 5.5.4

Figure 5.5.5 shows the DNT Wizard *Status* tab contents, corresponding to parameter Bank 2. Note the *Status* tab contains read-only parameters.

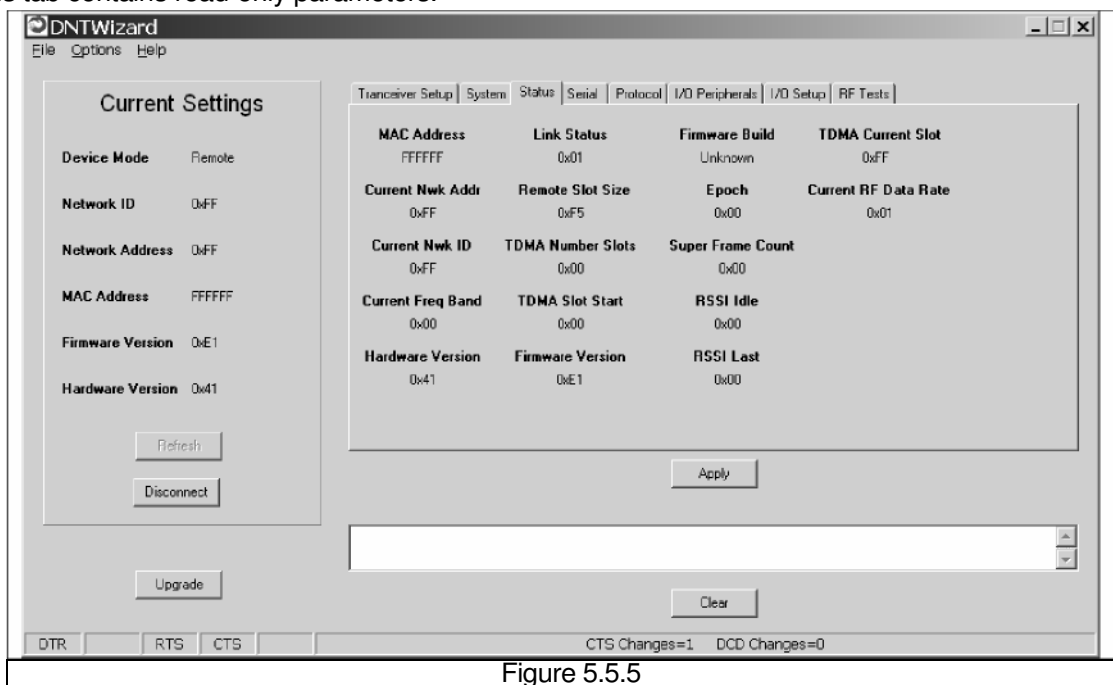


Figure 5.5.5

Figure 5.5.6 shows the DNT Wizard *Serial* tab contents corresponding to parameter Bank 3. The values shown below are the defaults for serial port operation.

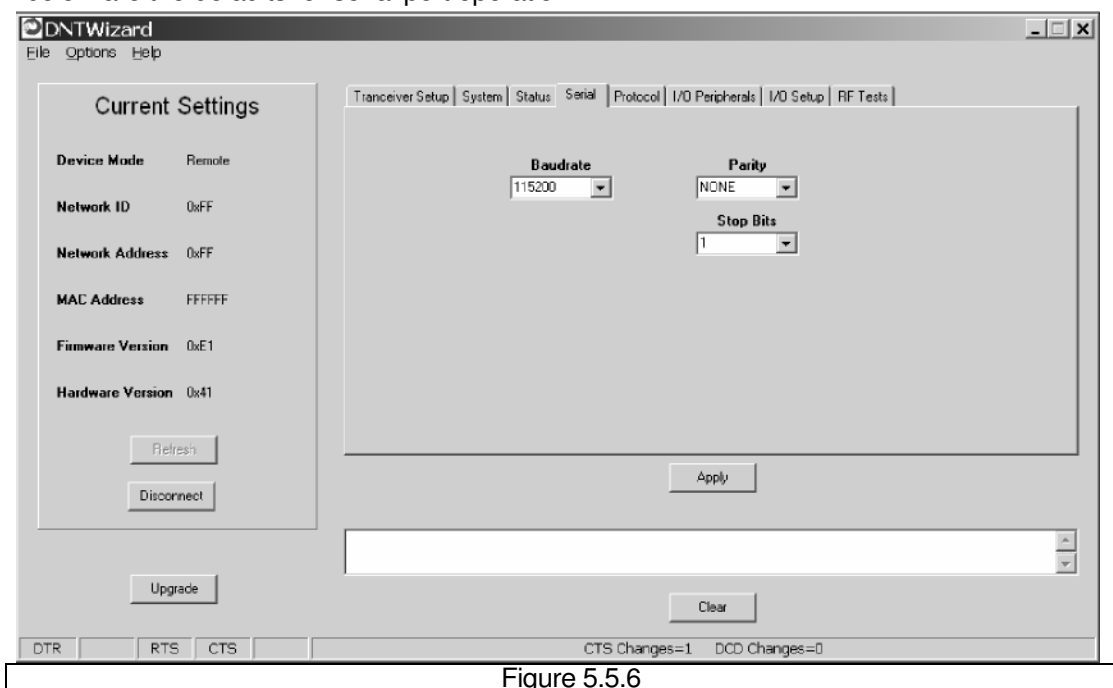


Figure 5.5.6

Figure 5.5.7 shows the DNT Wizard *Protocol* tab contents, corresponding to parameter Bank 4. Transparent data serial communication is currently chosen.

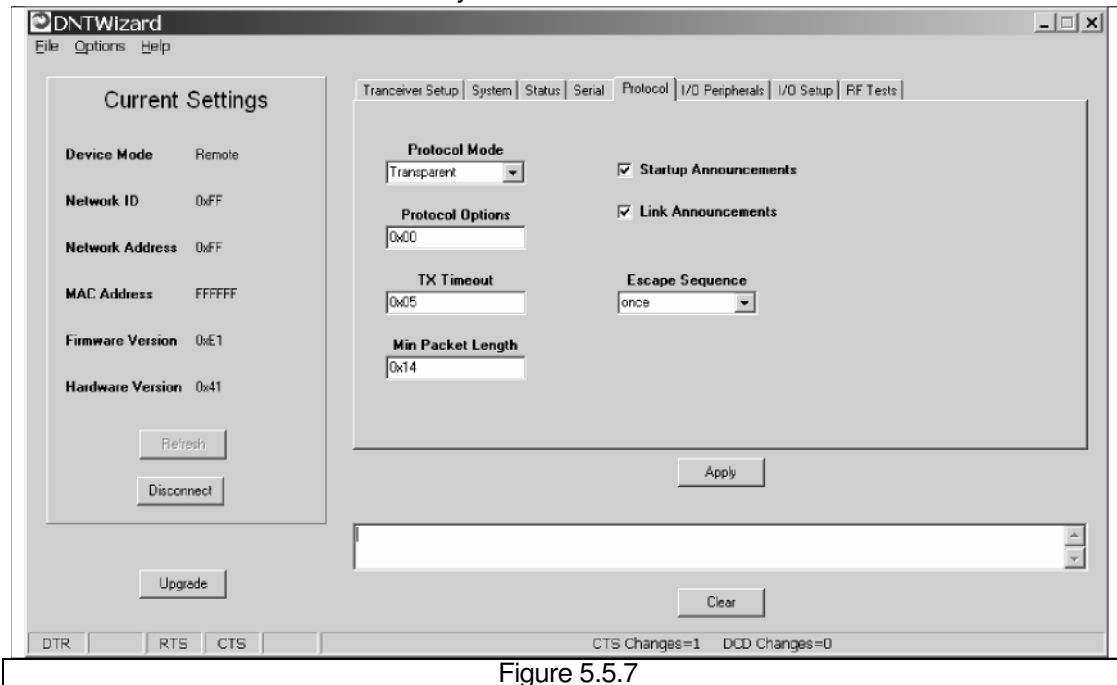


Figure 5.5.7

Figure 5.5.8 shows the DNT Wizard *I/O Peripherals* tab contents, corresponding to parameter Bank 5. GPIO ports 0 - 2 are logic high, GPIO port 3 is logic low. The 10-bit ADC inputs and PWM outputs are given in *Big-Endian* byte order.

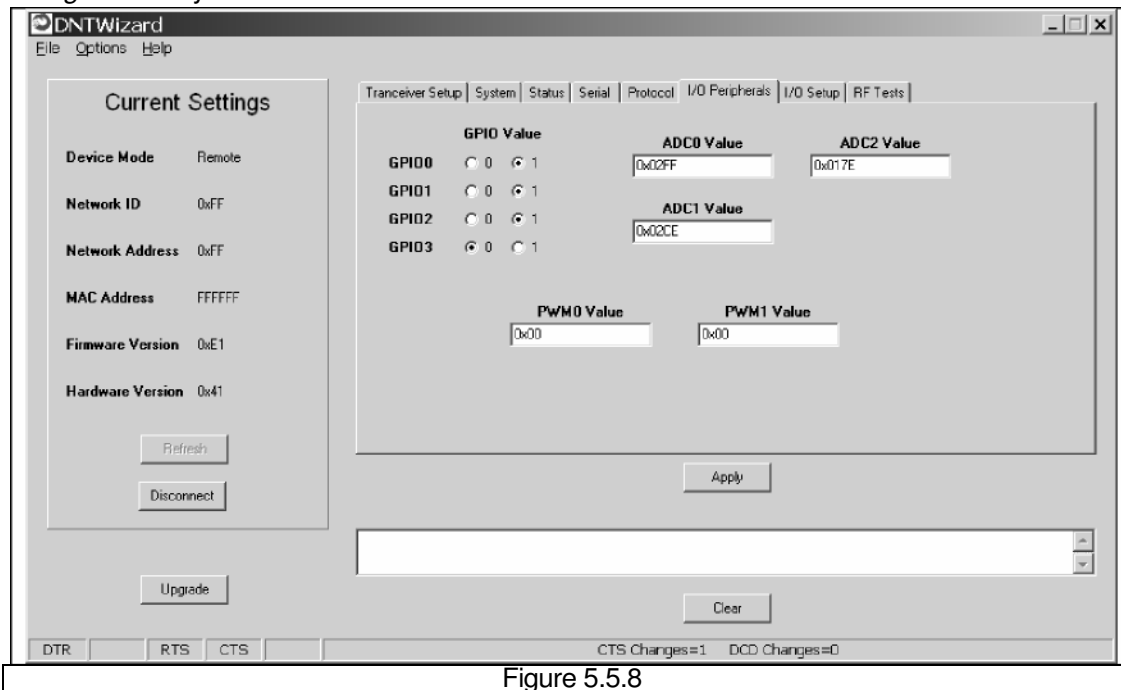


Figure 5.5.8

Figure 5.5.9 shows the DNT Wizard *I/O Setup* tab contents, corresponding to parameter Bank 6. This tab allows the direction of the GPIO ports to be set both for active and sleep mode. The power-up initial values of the GPIO outputs can also be specified, and whether an input can generate a wake-up interrupt. GPIO event messaging and/or periodic reporting and reporting interval can also be specified under this tab. The ADC sampling interval and the high and low thresholds for event reporting on each ADC channel can be set, along with the start-up output values for each PWM (DAC) channel.

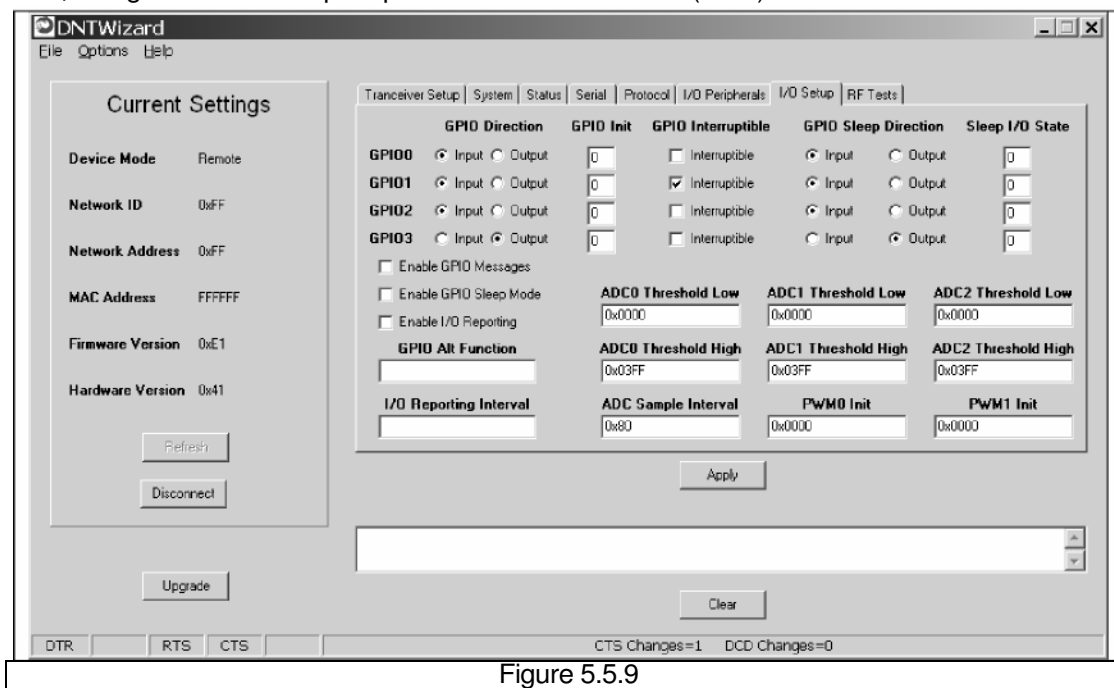


Figure 5.5.9

Figure 5.5.10 shows the DNT Wizard *RF Tests* tab contents. A message placed in the Transmit Window is sent to the specified MAC address each time the *Apply* button is pressed. Messages received are displayed in the lower text box. The receive message text box can be cleared with the *Clear* button. Note that a base station will accept a message from a remote with the MAC address 0x000000 regardless of the base station's actual MAC address.

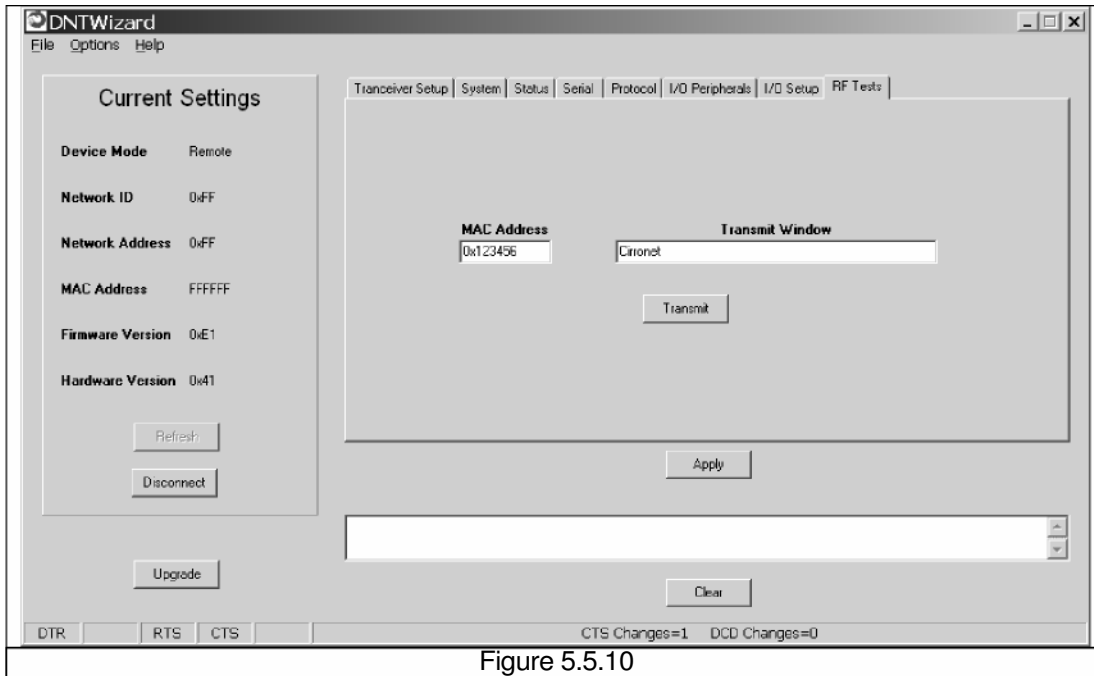


Figure 5.5.10

5.6 DNT900 Interface Board Features

The location of LEDs D1 through D4 and jumper pin sets J14 and J17 are shown in Figure 5.6.1.

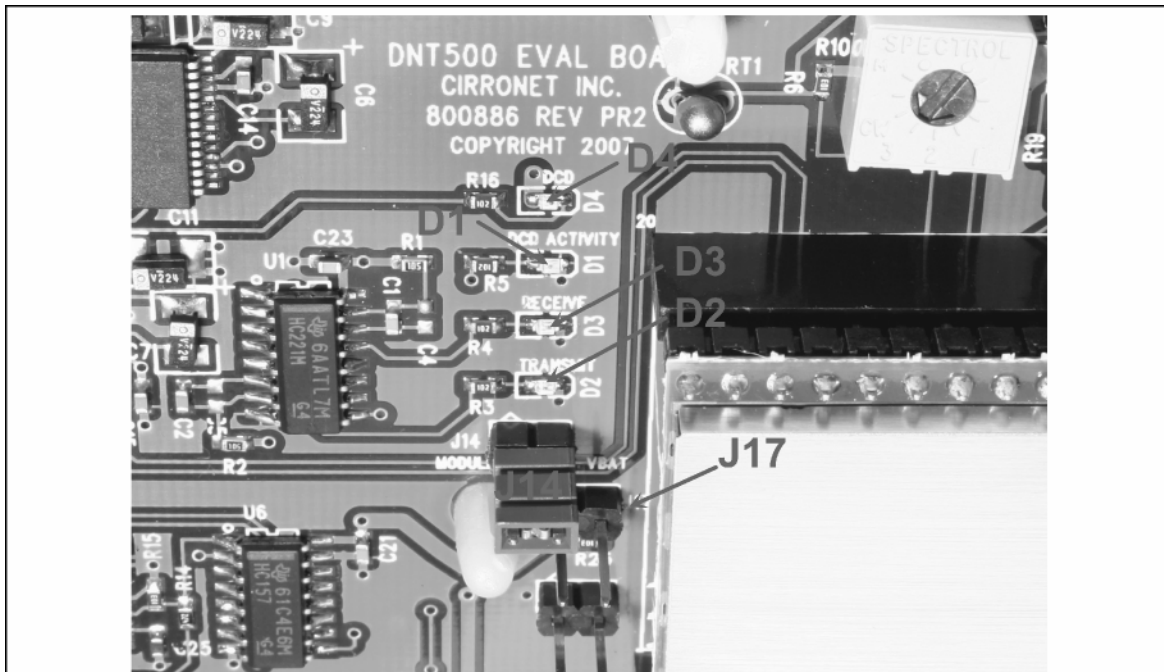


Figure 5.6.1

Amber DCD LED D4 illuminates on a remote to indicate it is registered with the base station and can participate in RF communications. LED D4 illuminates on the base station when one or more remotes are registered to it. Green Activity LED D1 illuminates on a remote when transmitting data, and illuminates on a base when receiving data. Red Receive LED D3 illuminates when sending received data through the serial port to the PC. Green Transmit LED D2 illuminates when the PC sends data through the serial port to be transmitted.

Jumper pin set J14 is provided to allow measurement of the DNT900P current. For normal operation J14 has a shorting plug installed. Jumper pin set J17 allows the DNT900P CFG pin to be grounded by installing a shorting plug. This places the DNT900P in protocol mode.

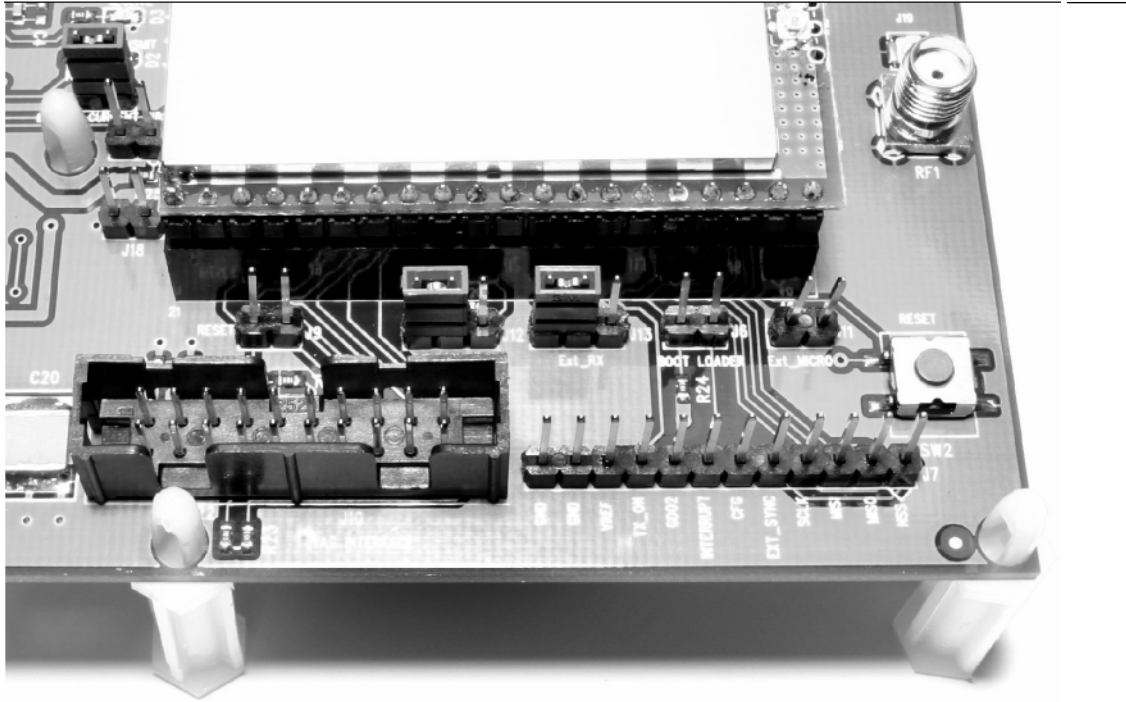


Figure 5.6.2

Figure 5.6.2 shows the connectors to the right of the DNT900P mounting socket. Jumper pin set J9 allow the DNT900P reset line to be routed to JTAG interface connector J10. J18 allows the DNT900P reset line to be grounded. Note that the JTAG operation is usually limited to factory testing. For normal operation pin sets J9 and J18 should *not* have a shorting block installed. Jumper pin sets J12 and J13 normally have shorting plugs installed as shown in Figure 5.6.2, which connects the DNT900P UART0_TXD and UART0_RXD pins to the respective serial data lines on the evaluation board. It is possible to connect directly to UART0_TXD and UART0_RXD by moving the jumpers over. In this case, J1 1-1 is the input for transmitted data and J1 1-2 is the output for received data. *Note this a 3 V logic interface.* Placing a shorting plug on jumper pin set J6 allows the DNT900P to be powered up in boot loader mode. This is used for factory code loads and functional testing. The DNT900 has its own boot loader utility that allows the protocol firmware to be installed with a terminal program that supports YMODEM. Pin strip J7 provides access to various DNT900 pins as shown on the silkscreen. Pressing switch SW2 will reset the DNT900P.

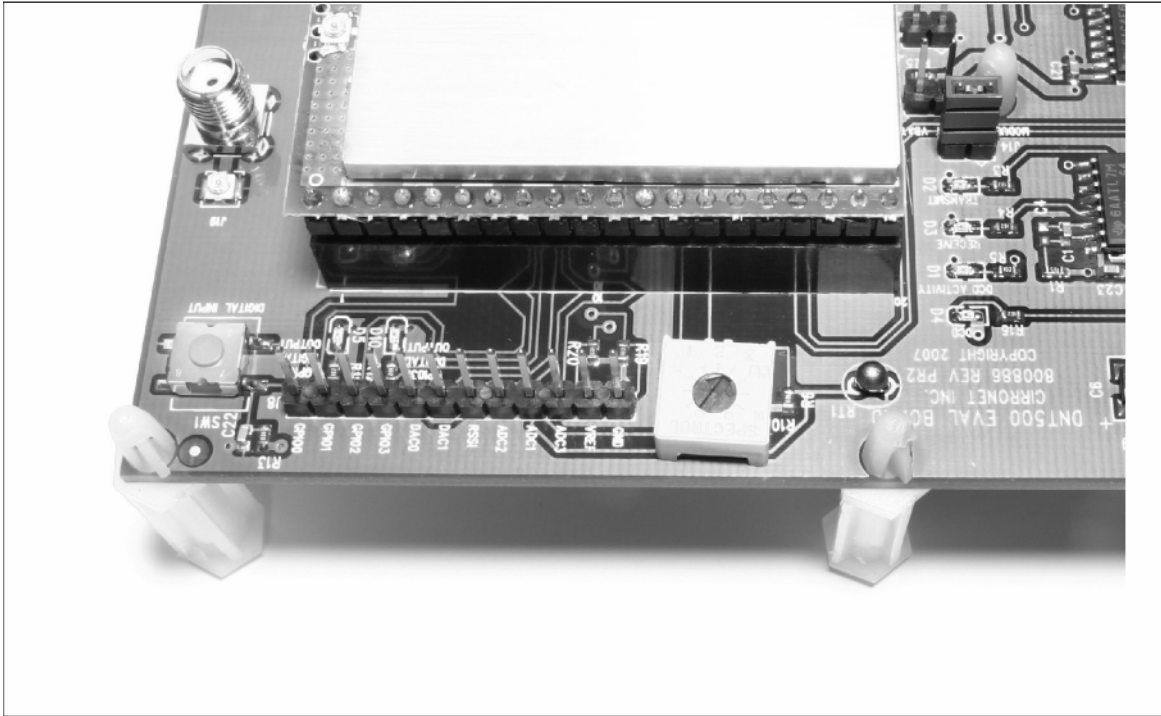


Figure 5.6.3

Figure 5.6.3 shows the connectors to the left of the DNT900P mounting socket. Pressing switch SW2 switches GPIO0 from logic high to logic low. Pin strip J8 provides access to various DNT900 pins as shown on the silkscreen. The wiper of pot R10 drives the input of ADC1. Clockwise rotation of the pot wiper increases the voltage. Thermistor RT1 is part of a voltage divider that drives ADC0. LED D5 illuminates when GPIO1 is set as a logic high output. LED D10 illuminates when GPIO3 is set as a logic high. The DNT900P interface board includes a 5 V regulator to regulate the input from the 9 V wall transformer power supply. Note: do not attempt to use the 9 V wall transformer power supply to power the DNT900P directly. The maximum allowed voltage input to the DNT900P is 5.5 V.

6.0 Demonstration Procedure

The procedure below provides a quick demonstration of the DNT900 using a DNT900DK development kit:

1. Confirm that each DNT900P is installed correctly in an interface board, and that the U.FL jumpers between the DNT900P radios and the interface boards are installed. Also confirm that a dipole antenna is installed on each interface board, and that J14 has a jumper block installed on each interface board. See Figures 5.4.1, 5.4.2 and 5.4.3 above.
2. Attach each transceiver/interface board to a computer with the DNT Wizard program installed.
3. Place the transceivers at least 3 feet (one meter) apart.
4. Start the DNT Wizard program on both computers.
5. On each computer, press the *Connect* button on the Wizard window. This will open a serial port setup dialog box. Set the baud rate to 115.2 kb/s and select the COM port the DNT900 is connected to. Parameter values on the left of the Wizard main window and on the *Transceiver Setup* tab will fill in.
6. Select the *RF Test* tab on the Wizard. A message placed in the Transmit Window is sent to the specified MAC address each time the *Apply* button is pressed. Messages received are displayed in the lower text box. The receive message text box can be cleared with the *Clear* button.

7.0 Troubleshooting

DNT900 not responding - make sure DTR is asserted (logic low) to bring the radio out of sleep mode.

Can not enter protocol mode - make sure the host data rate is correct. The DNT900 defaults to 115.2 kb/s. If using the escape sequence command, make sure a pause of at least 20 ms precedes the escape sequence.

A remote never detects carrier (DCD) - check that the base station is running, and that the remote *InitialNwkID* parameter is the same as the base station, or is set to 0xFF. Also check that remote is receiving an adequate signal from the base station.

Carrier is detected, but no data appears to be received - make sure that RTS is asserted to enable receive character flow. Make sure the RF transmit power is not on a high settings if the nodes are close together.

The DNT900 is interfering with other nearby circuits - It is possible for the RF energy from the DNT900 to be rectified by nearby circuits that are not shielded for RF, manifesting as a lower frequency pulse noise signal. If possible, place the antenna at least 1 foot away from the transceiver module, and 3 feet from other system circuit boards. Place sensitive circuits in a grounded metal casing to keep out RFI.

Range is extremely limited - this is usually a sign of a poor antenna connection or the wrong antenna. Check that the antenna is firmly connected. If possible, remove any obstructions in the near field of the antenna (nominal 3 ft radius).

Transmitting terminal flashes (drops) CTS occasionally - this indicates that the transmitter is unable to reliably get its data across. This may be the result of an interfering signal, but most often is caused by overloading of the network. Adjusting the protocol parameters may increase the network efficiency.

Receiving terminal drops characters periodically - set the number of retries to a high number and send a few characters. Check that the transmitted data can get through under these conditions. Sometimes this symptom is caused by an application that is explicitly dependent on the timing of the received data stream. The nature of an RF channel imposes a degree of uncertainty in end-to-end transmission delay.

8.0 Appendices

8.1 Ordering Information

DNT900C: transceiver module for solder pad mounting
DNT900P: transceiver module for pin-socket mounting

8.2 Technical Support

For DNT900 technical support call RFM at (678) 684-2000 between the hours of 8:30 AM and 5:30 PM Eastern Time.

8.3 DNT900 Mechanical Specifications

DNT900C Outline and Mounting Dimensions

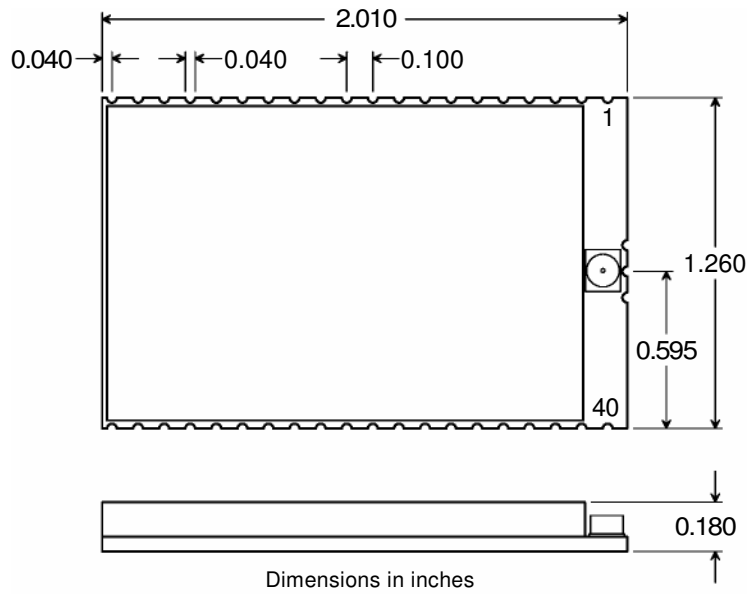


Figure 8.3.1

DNT900P Outline and Mounting Dimensions

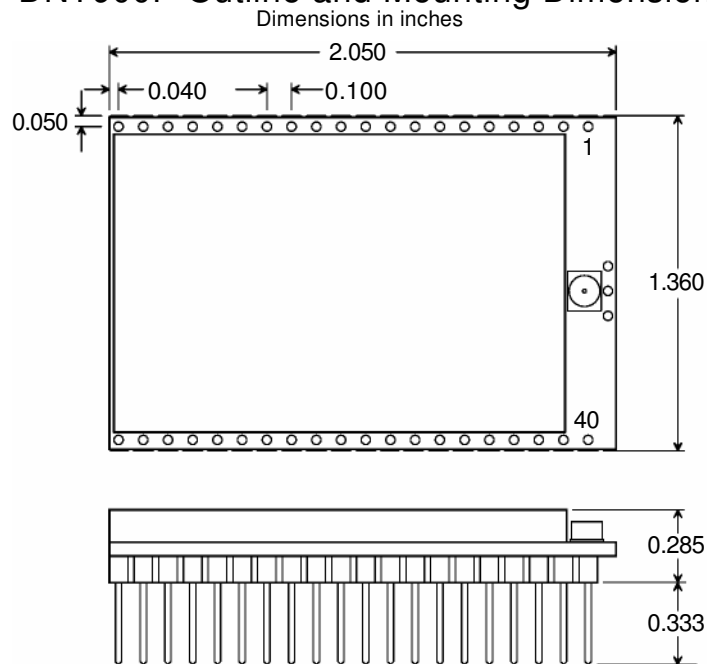


Figure 8.3.2

DNT900P Interface Connector
 PCB Layout Detail
 Connectors are FCI Electronics 75915-420LF or equivalent

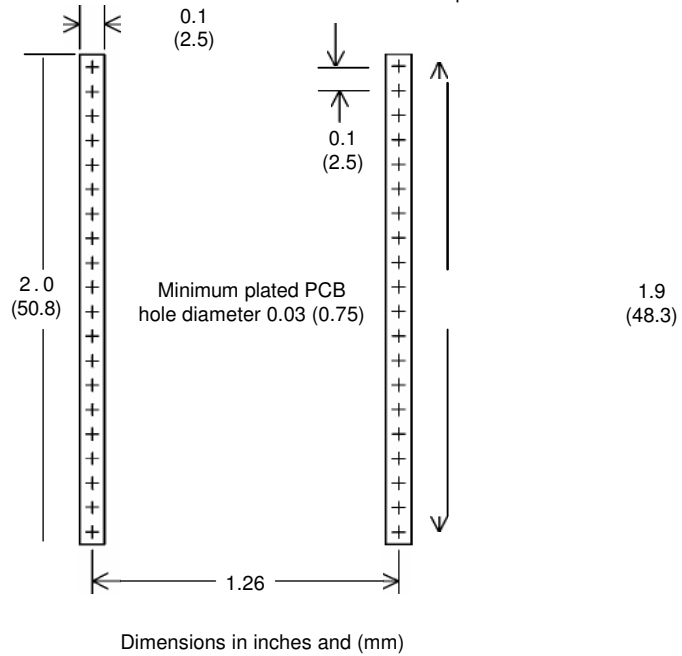


Figure 8.3.3

9.0 Warranty

Seller warrants solely to Buyer that the goods delivered hereunder shall be free from defects in materials and workmanship, when given normal, proper and intended usage, for twelve (12) months from the date of delivery to Buyer. Seller agrees to repair or replace at its option and without cost to Buyer all defective goods sold hereunder, provided that Buyer has given Seller written notice of such warranty claim within such warranty period. All goods returned to Seller for repair or replacement must be sent freight prepaid to Seller's plant, provided that Buyer first obtain from Seller a Return Goods Authorization before any such return. Seller shall have no obligation to make repairs or replacements which are required by normal wear and tear, or which result, in whole or in part, from catastrophe, fault or negligence of Buyer, or from improper or unauthorized use of the goods, or use of the goods in a manner for which they are not designed, or by causes external to the goods such as, but not limited to, power failure. No suit or action shall be brought against Seller more than twelve (12) months after the related cause of action has occurred. Buyer has not relied and shall not rely on any oral representation regarding the goods sold hereunder, and any oral representation shall not bind Seller and shall not be a part of any warranty.

THE PROVISIONS OF THE FOREGOING WARRANTY ARE IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL (INCLUDING ANY WARRANTY OR MERCHANT ABILITY OR FITNESS FOR A PARTICULAR PURPOSE). SELLER'S LIABILITY ARISING OUT OF THE MANUFACTURE, SALE OR SUPPLYING OF THE GOODS OR THEIR USE OR DISPOSITION, WHETHER BASED UPON WARRANTY, CONTRACT, TORT OR OTHERWISE, SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY BUYER FOR THE GOODS. IN NO EVENT SHALL SELLER BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS, LOSS OF DATA OR LOSS OF USE DAMAGES ARISING OUT OF THE MANUFACTURE, SALE OR SUPPLYING OF THE GOODS. THE FOREGOING WARRANTY EXTENDS TO BUYER ONLY AND SHALL NOT BE APPLICABLE TO ANY OTHER PERSON OR ENTITY INCLUDING, WITHOUT LIMITATION, CUSTOMERS OF BUYERS.