

# USER GUIDE



## CHARGING

Before using your sports headsets, please charge it using the micro USB charging cable included in the package.

Note: Most USB chargers are compatible with sports headsets. For optimal AC charging, please use a 1.0A USB charger.

## PAIRING

Power on: Press and hold the multifunctional button for 3 seconds. Blue light will turn on. Bluetooth will enter to pairing mode.

Enable your Bluetooth device such as cell phones, tablets or other Bluetooth media and make sure it is in searching mode.

Select " PROGEAR " in the list shown on the Bluetooth device.

The Bluetooth earbuds will reconnected automatically if your device has been paired.

## ON / OFF

On: Long press multifunctional button for 3s  
Off: Long press multifunctional button for 3s (In case the battery voltage is too low, the headphone will have voice prompt and shut down)

## PLAY / PAUSE

Press multifunctional button for play & pause

## VOLUME UP

Press the + button for volume up.

## VOLUME DOWN

Press the - button for volume down .

## PREVIOUS TRACK

Press and hold the - button for previous track.

## NEXT TRACK

Press and hold the + button for the next track.

## ANSWER CALL

Press multifunctional button once while a call is incoming.


## END CALL

Press multifunctional button again to end call.

## REDIAL

Double press multifunctional button to redial the last number.

## TF Card Using Instructions

When the earbuds in the shutdown mode, long press  3 seconds to turn on, insert TF card, then it will play the music.

## FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.